

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com








PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List and Hardware List

| PIECE | DESCRIPTION | PICTURE | QUANTITY | PIECE | DESCRIPTION | PICTURE | QUANTITY |
|-------|-------------------------------|-------------------------------------------------------------------------------------|----------|-------|--------------------------------|---------------------------------------------------------------------------------------|----------|
| A | Headboard |  | 1X | HW1 | Allen Key 4mm |  | 1X |
| B | Bed End Frame |  | 2X | HW2 | Allen Key 5mm |  | 1X |
| C | Left Acrylic Post- Headboard |  | 1X | HW3 | Steel Hex Bolt 5/16" x 3/4" |  | 16X |
| D | Right Acrylic Post- Headboard |  | 1X | HW4 | Hex Bolt 1/4" x 3/4" |  | 8X |
| E | Acrylic Post- Footboard |  | 2X | HW5 | Hex Bolt 1/4" x 5/8" |  | 26X |
| F | Long Side Frame |  | 2X | HW6 | Hex Bolt 1/4" x 5-1/2" |  | 4X |
| G | Short Side Top Frame |  | 2X | HW7 | Hex Bolt 1/4" x 1-1/4" |  | 4X |
| H | Long Side Top Frame |  | 2X | HW8 | Hex Bolt 1/4" x 1-1/2" |  | 4X |
| I | Cross Slat with Hole |  | 4X | HW9 | Washer 5/16" |  | 16X |
| J | Cross Slat |  | 9X | HW10 | Washer 1/4" |  | 30X |
| K | Center Support Leg |  | 4X | HW11 | Split Washer |  | 16X |

SAFAVIEH
COUTURE

Model# SFV1100A-K

Product Dimension: 79" x 83.07" x 80"H

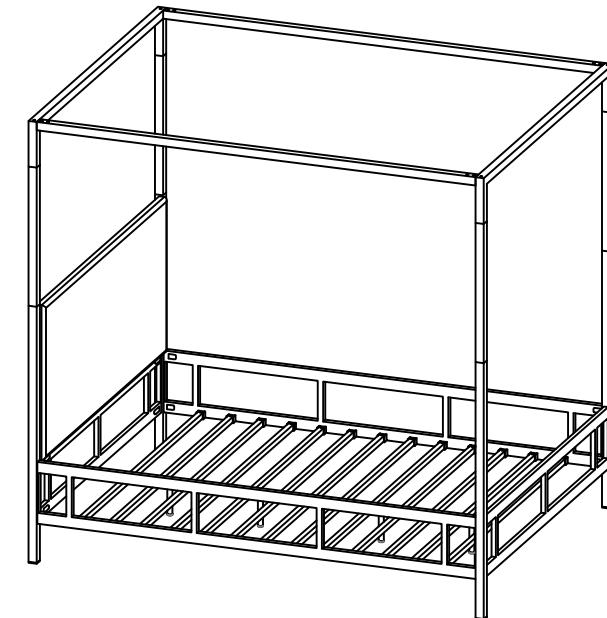


WARNING

Weight Capacity - 550LBS
Warning : Do not stand on the bed.
Warning : Do not over torque bolts.


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

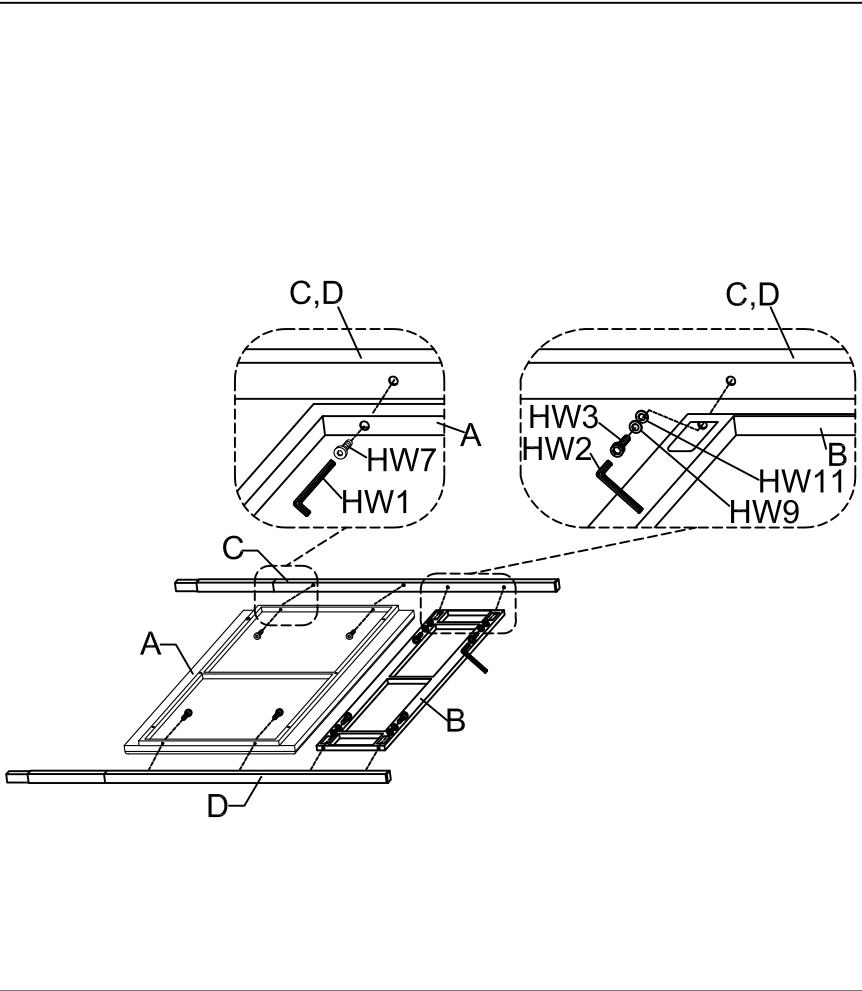

STEP1:

Assemble headboard (A), left acrylic bed post (C) and right acrylic bed post (D) with bolts (HW7) by use of Allen key (HW1) as shown in drawing. Then assemble bed end frame (B) to acrylic bed post (C) and (D) with steel hex bolts (HW3), washer (HW9) and split washer (HW11) and fasten it by Allen key (HW2).

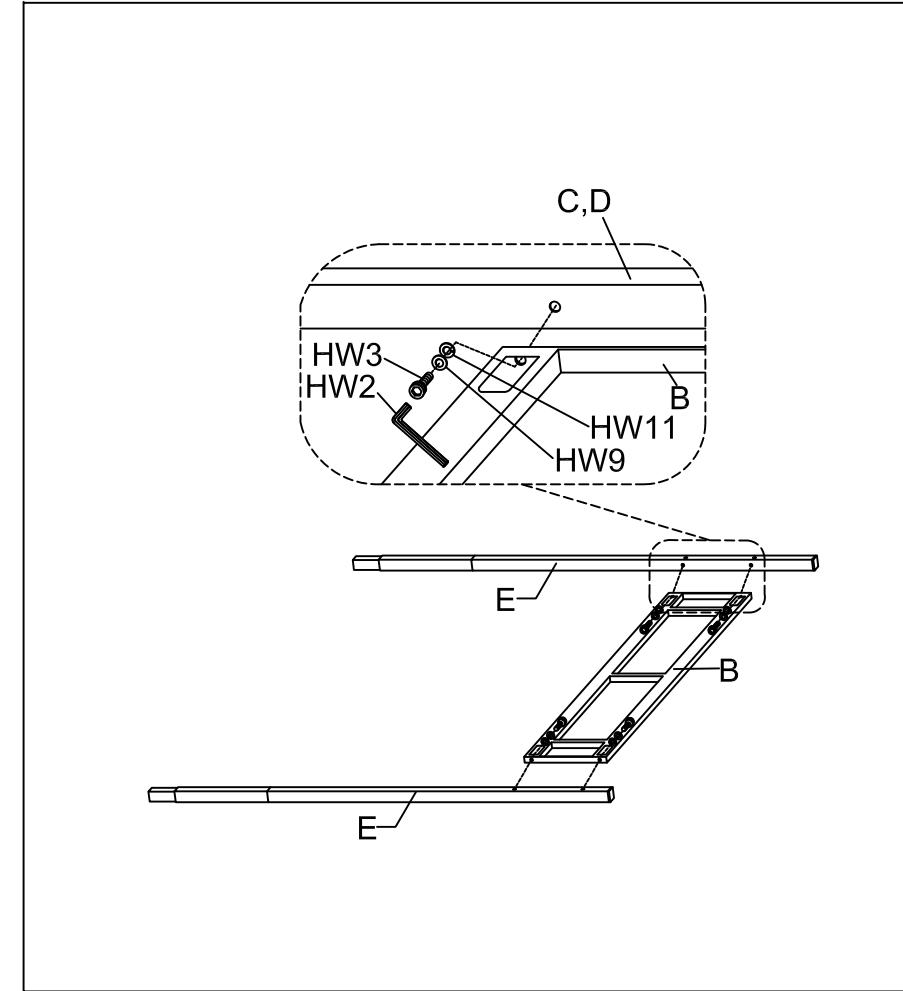


STEP2:

Assemble acrylic bed posts (E) and bed end frame (B) with steel hex bolt (HW3) and washer (HW9) and split washer (HW11) by use of Allen key (HW2).


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

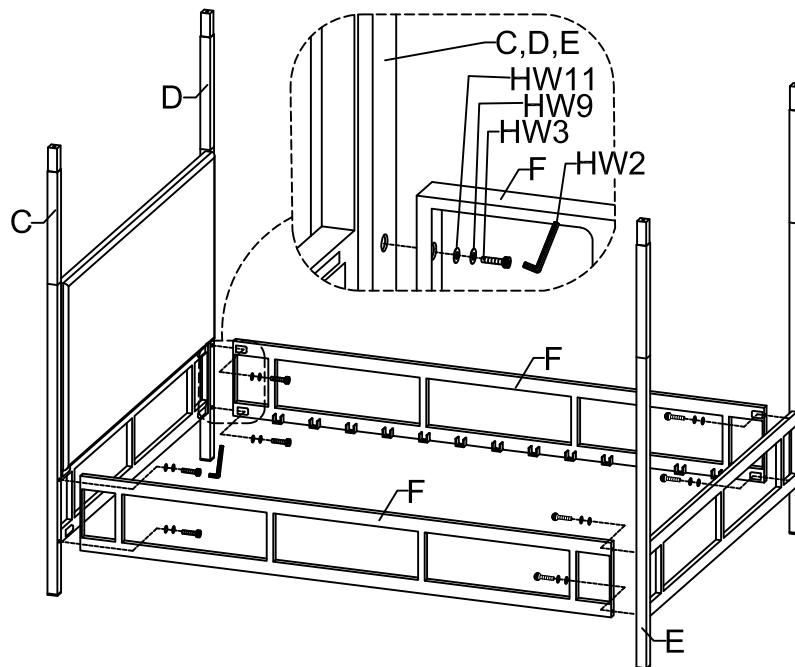

STEP3:

Assemble long side frame (F) with the sub-assembled headboard and footboard in STEP1 and STEP2 with steel hex bolt (HW3) and washer (HW9) and split washer (HW11) by use of Allen key (HW2) as shown in drawing.

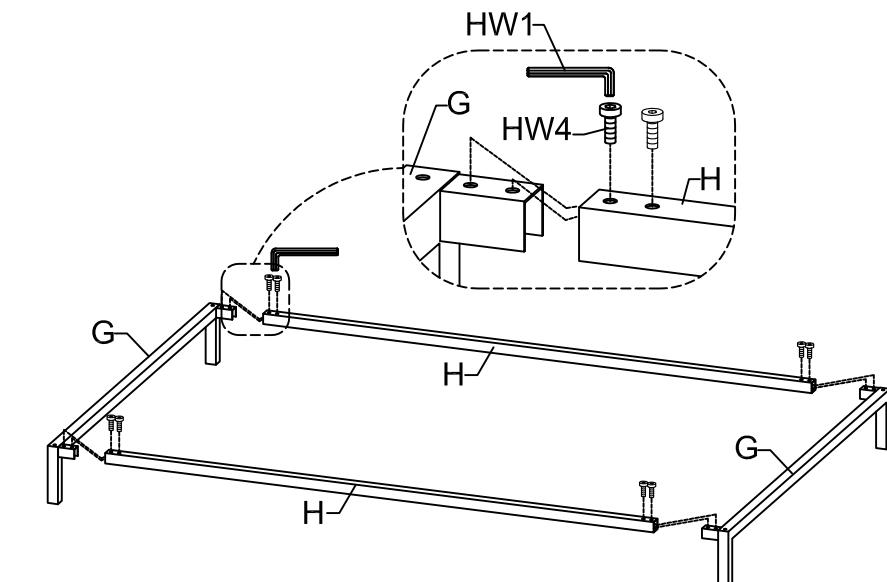


STEP4:

Insert long side top frame (H) into the tab of short side top frame (G) and assemble it by joint connector bolt (HW4). Then fasten it up by use of Allen key (HW1). Now you finish the top frame of the canopy bed.


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

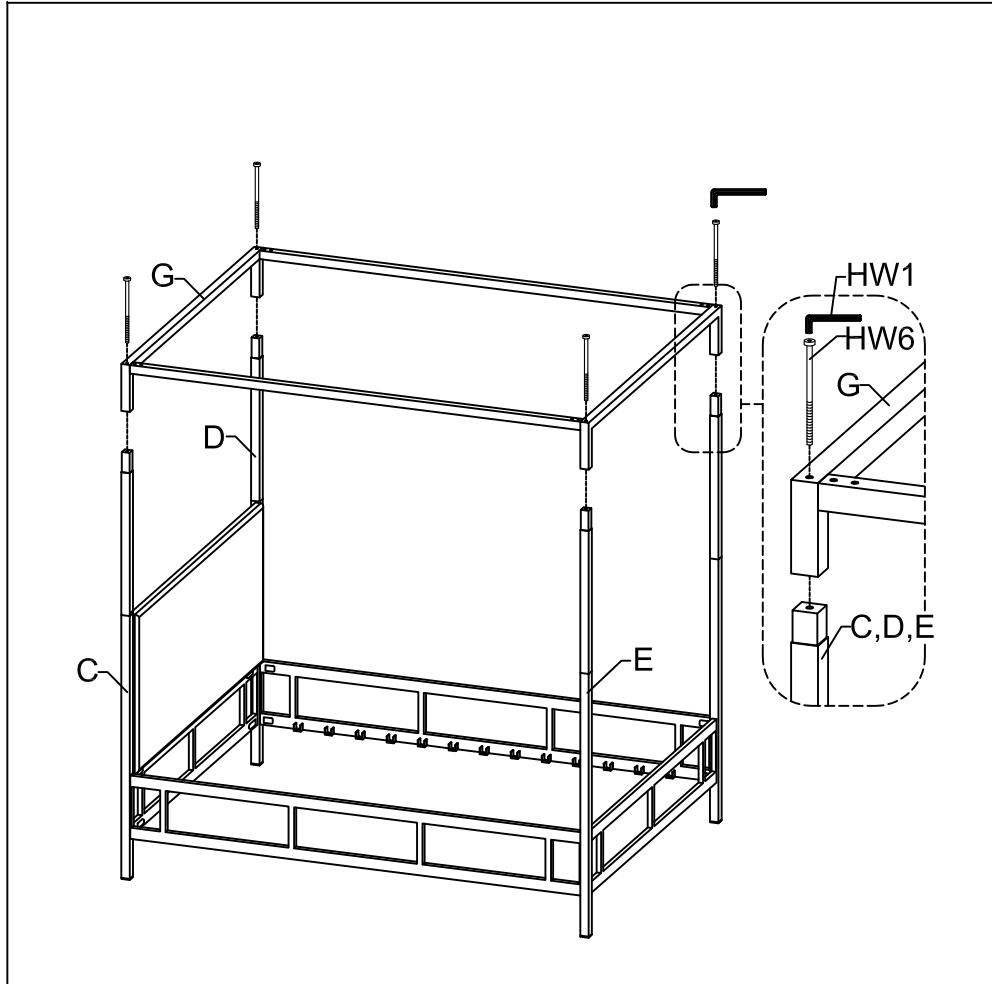

STEP5:

Assemble the subassembly canopy top frame to four corner bedpost assembled ready in STEP3 with bolt (HW6) and fasten up by use of Allen key (HW2) as shown in drawing.

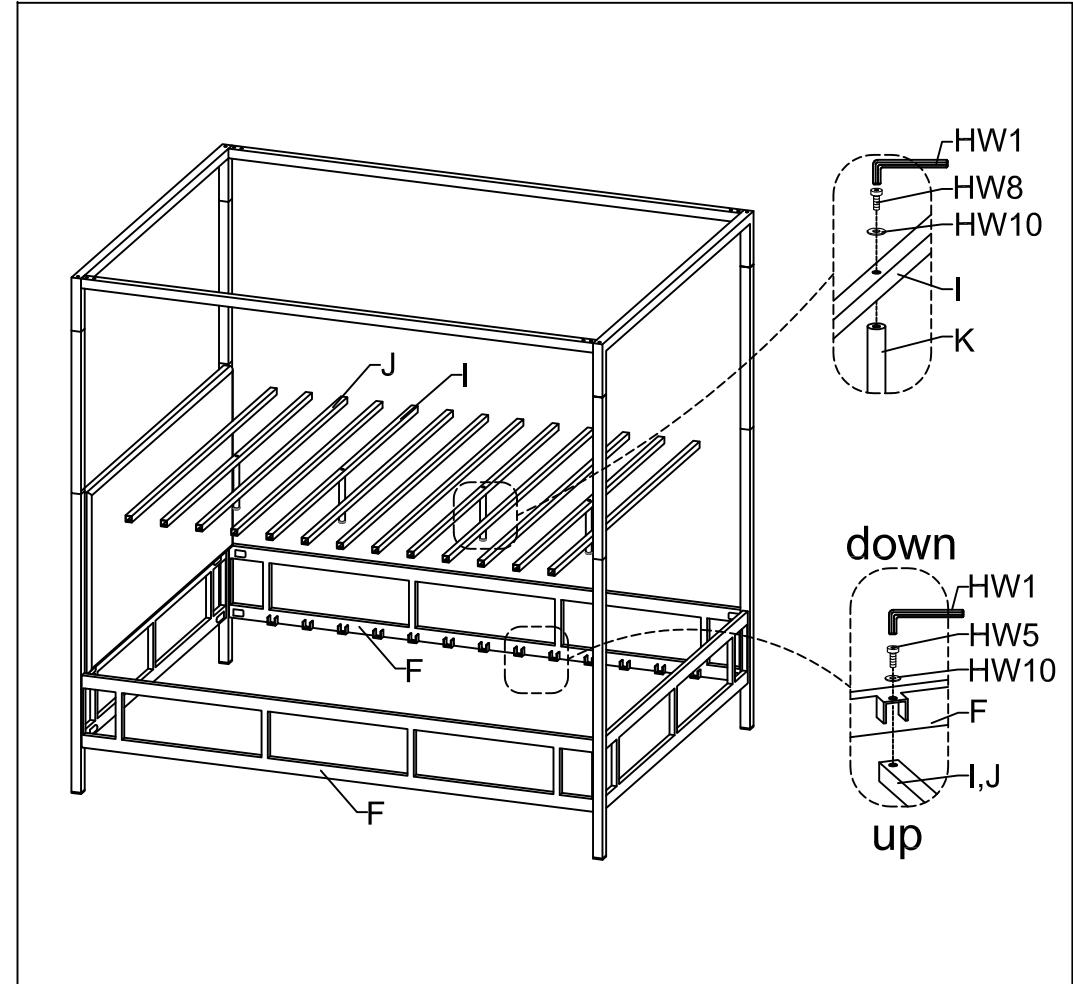

STEP6:

Assemble center support leg (K) to cross slat with hole (I) with bolt (HW8) and washer (HW10) then fastening up by use of Allen key (HW1). Insert cross slat (J) and subassembly cross slat with support leg (I,K) to the tab on the long-side frame (F) with joint connector bolt (HW5) and washer (HW10) by use of Allen key (HW1).