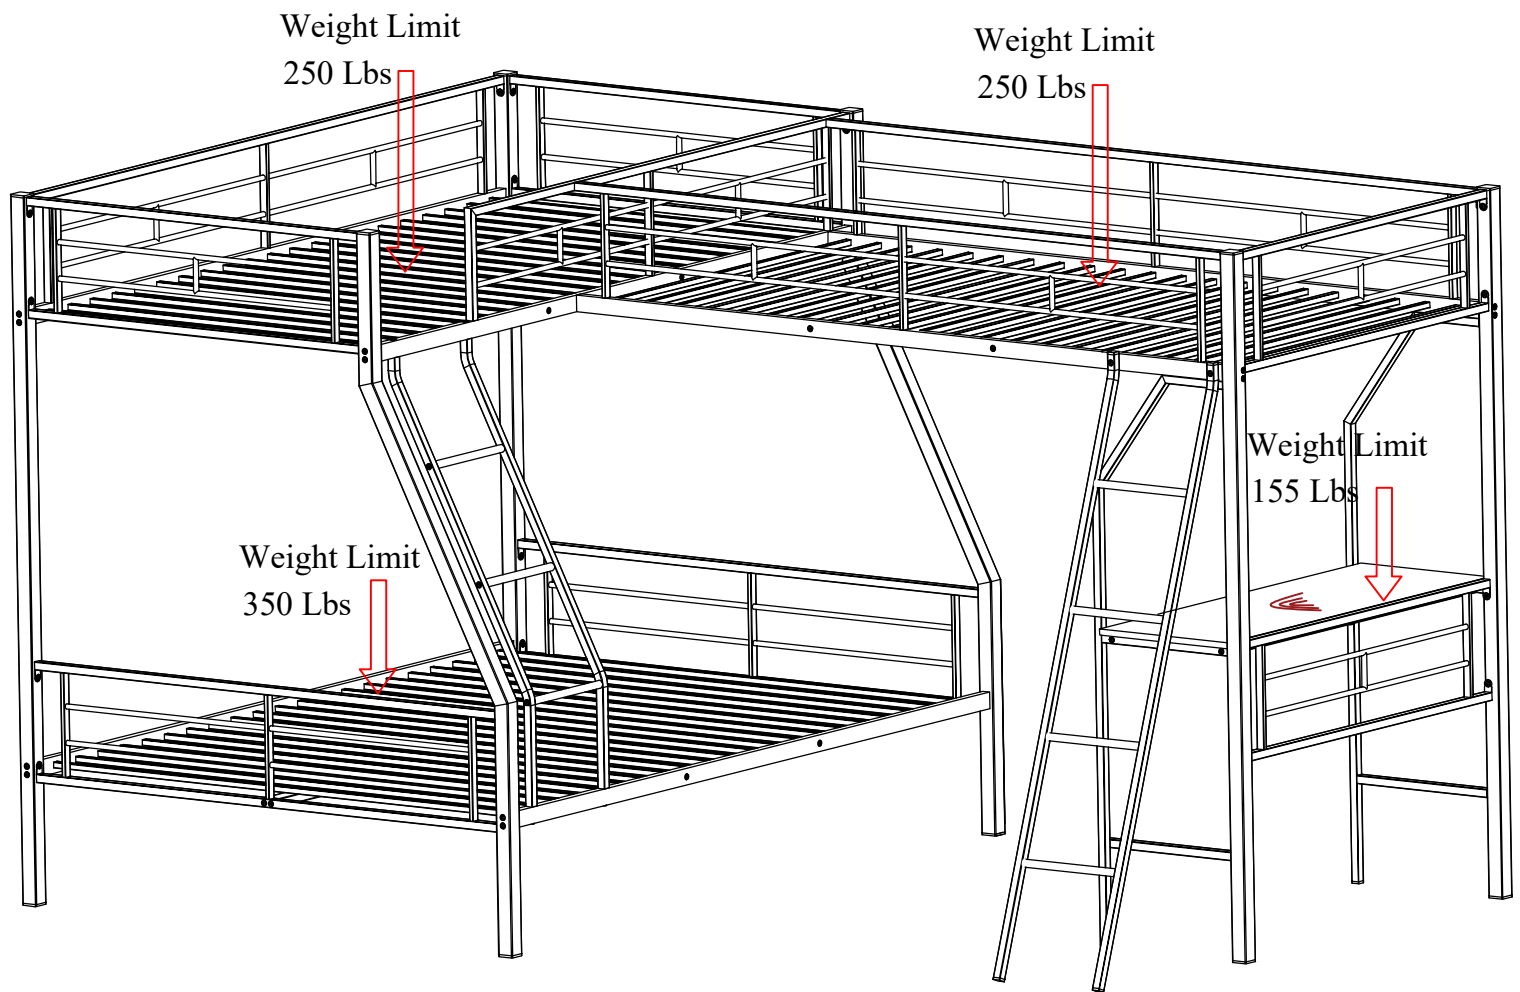


TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802



TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802

SAFETY WARNINGS AND GENERAL NOTES:

1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow children under 6 years of age to use the upper bunk.
4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
5. Do not allow horseplay on or under beds.
6. Always prohibit jumping on the bed.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.
11. Always use guardrails on both long sides of the upper bunk.
12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

13. **STRANGULATION HAZARD-** Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
14. Keep these instructions for future reference.
15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
16. Be certain all staples are out of the box before beginning assembly on the shipping carton.

17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.

Upper bunk (bunk bed and tribed included)

Bed type	Length	Width	Thickness
Twin	74" – 75"	38 ½"	6" max

Lower bunk

Bed type	Length	Width	Thickness
Full	74" – 75"	53"-54"	8"

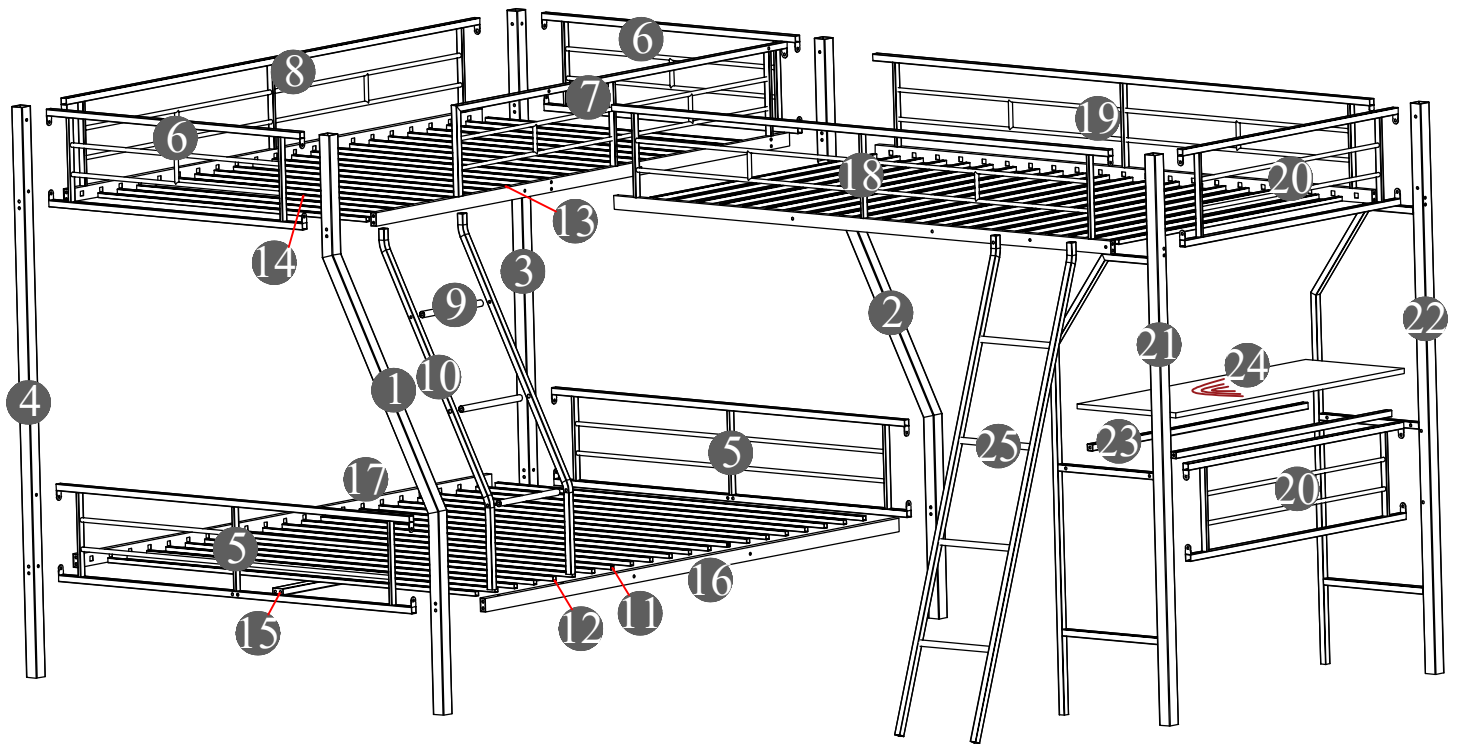
18. SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

19. Replacement Parts:

Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY(USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY, CA, 91748) dealers.

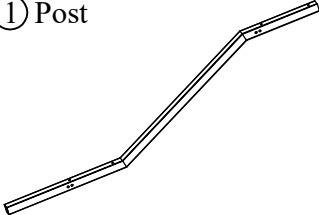
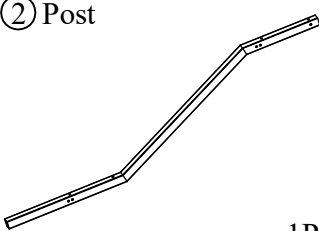
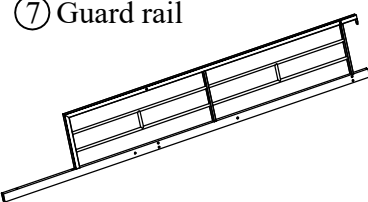
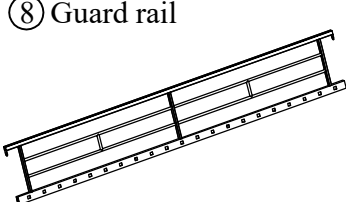

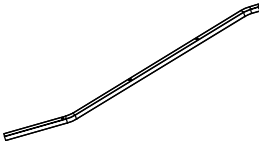
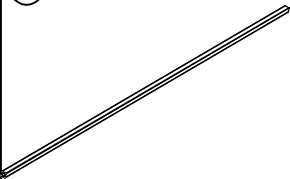
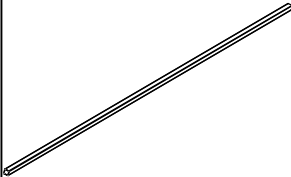
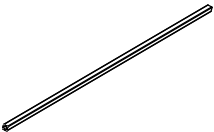
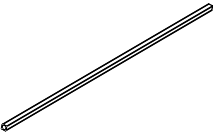
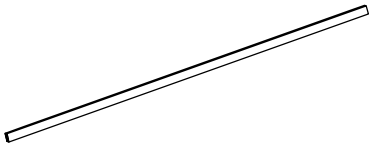
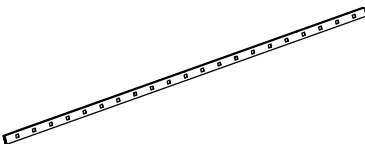
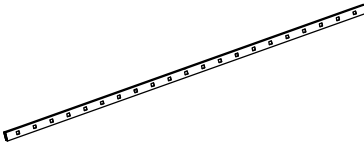
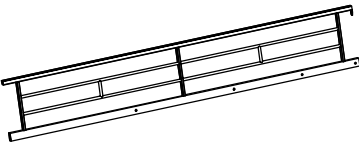
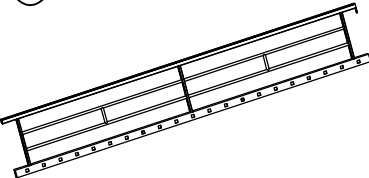
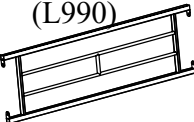

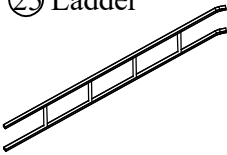
TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802

DETAIL VIEW

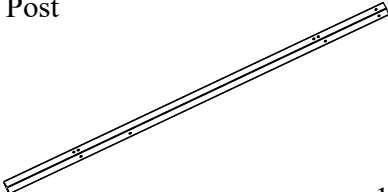
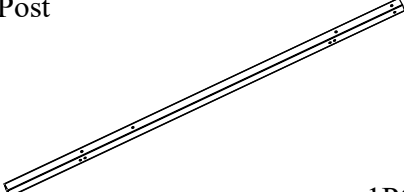
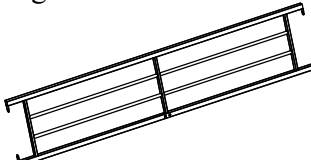
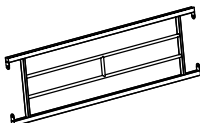
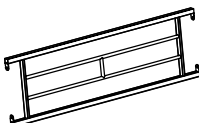
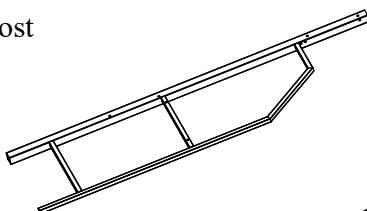
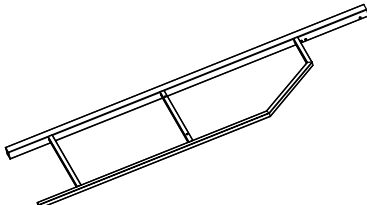
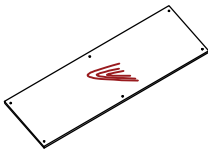


TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802

PART LIST MF199801








<div>① Post</div> <div></div> <div>1PC</div>	<div>② Post</div> <div></div> <div>1PC</div>	<div>⑦ Guard rail</div> <div></div> <div>1PC</div>	<div>⑧ Guard rail</div> <div></div> <div>1PC</div>	
<div>⑨ Horizontal ladder bar</div> <div></div> <div>3PCS</div>	<div>⑩ Vertical ladder bar</div> <div></div> <div>2PCS</div>	<div>⑪ Lower slats</div> <div></div> <div>2PCS</div>	<div>⑫ Lower slats</div> <div></div> <div>19PCS</div>	<div>⑬ Upper slats</div> <div></div> <div>4PCS</div>
<div>⑭ Upper slats</div> <div></div> <div>38PCS</div>	<div>⑮ Center brace</div> <div></div> <div>1PC</div>	<div>⑯ Side rail</div> <div></div> <div>1PC</div>	<div>⑰ Side rail</div> <div></div> <div>1PC</div>	
<div>⑱ Guard rail</div> <div></div> <div>1PC</div>	<div>⑲ Guard rail</div> <div></div> <div>1PC</div>	<div>⑳ End guard rail (L990)</div> <div></div> <div>1PC</div>	<div>㉓ Horizontal bar</div> <div></div> <div>2PCS</div>	<div>㉔ Ladder</div> <div></div> <div>1PC</div>

PART LIST MF199802

<div>③ Post</div> <div></div> <div>1PC</div>	<div>④ Post</div> <div></div> <div>1PC</div>	<div>⑤ End guard rail</div> <div></div> <div>2PCS</div>
<div>⑥ End guard rail (L970)</div> <div></div> <div>2PCS</div>	<div>⑩ End guard rail (L990)</div> <div></div> <div>1PC</div>	<div>㉑ Post</div> <div></div> <div>1PC</div>
<div>㉒ Post</div> <div></div> <div>1PC</div>	<div>㉔ Desk</div> <div></div> <div>1PC</div>	

TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802

HARDWARE LIST MF199801

<div>Ⓐ Bolts</div> <div></div> <div>1/4"*55 24PCS</div>	<div>Ⓑ Bolts</div> <div></div> <div>1/4"*35 22PCS</div>	<div>Ⓒ Bolts</div> <div></div> <div>1/4"*30 6PCS</div>	<div>Ⓓ Bolts</div> <div></div> <div>1/4"*15 41PCS</div>
<div>Ⓔ End cap</div> <div></div> <div>40*40 12PCS</div>	<div>Ⓕ End cap</div> <div></div> <div>20*20 6PCS</div>	<div>Ⓖ Allenkey</div> <div></div> <div>4*59 1PC</div>	

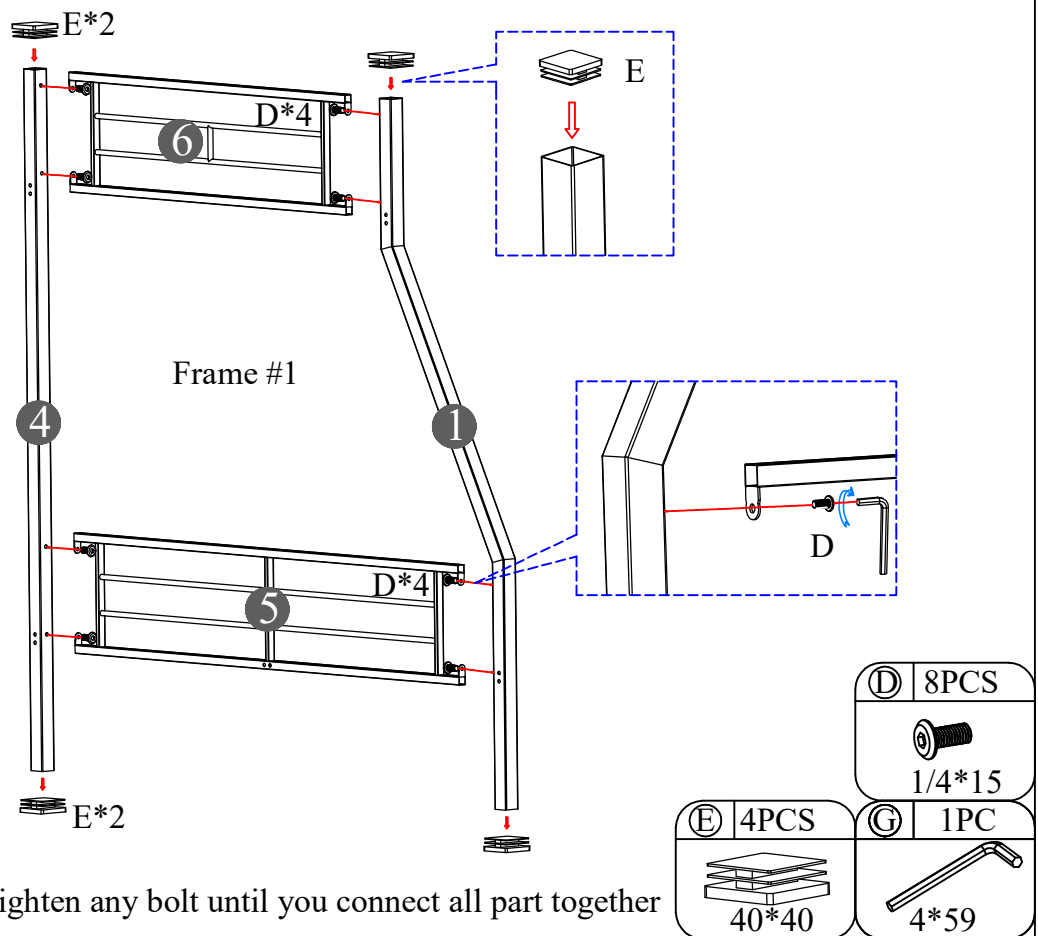
This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team.

TWIN OVER FULL L-SHAPED BUNK & LOFT BED

ASSEMBLY INSTRUCTIONS

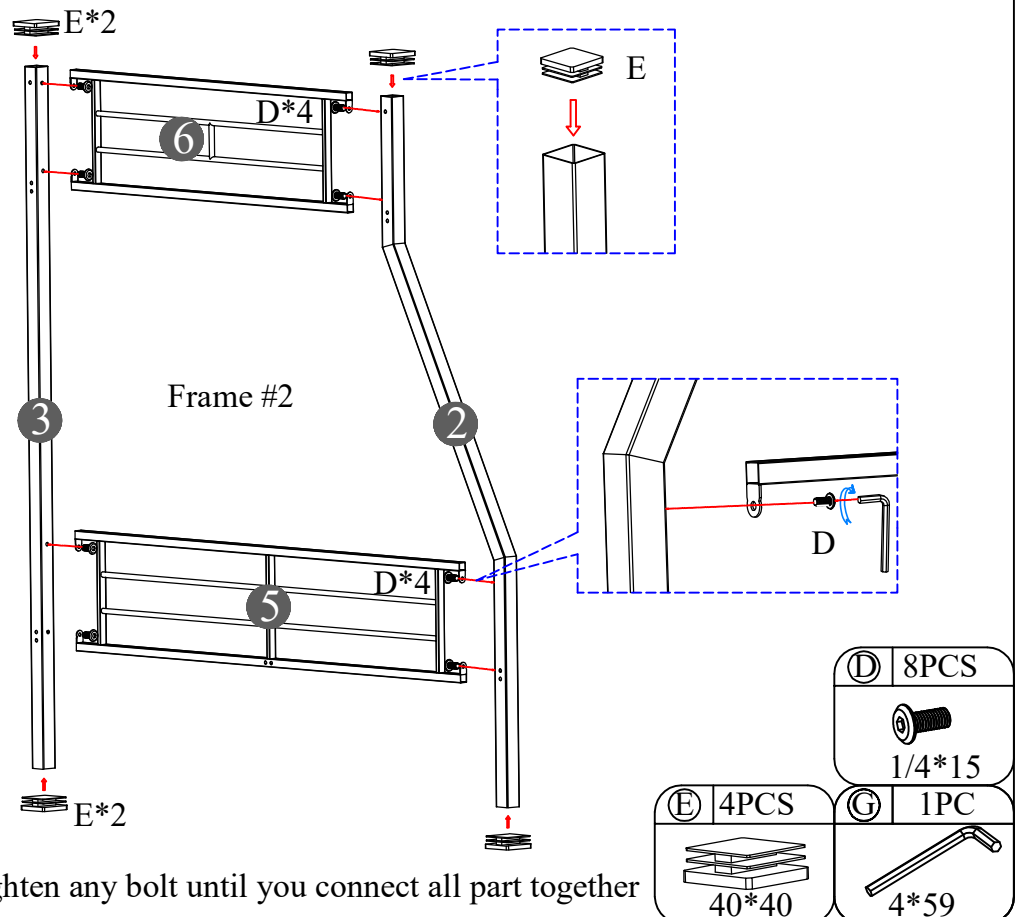
SKU : MF199801/199802

STEP 1 : Following below illustration Assembly Frame # 1. Using hardware #D ,#E connect #1 & #4 with #5, #6 to complete Frame #1.



NOTE:In this step, DO NOT tighten any bolt until you connect all part together

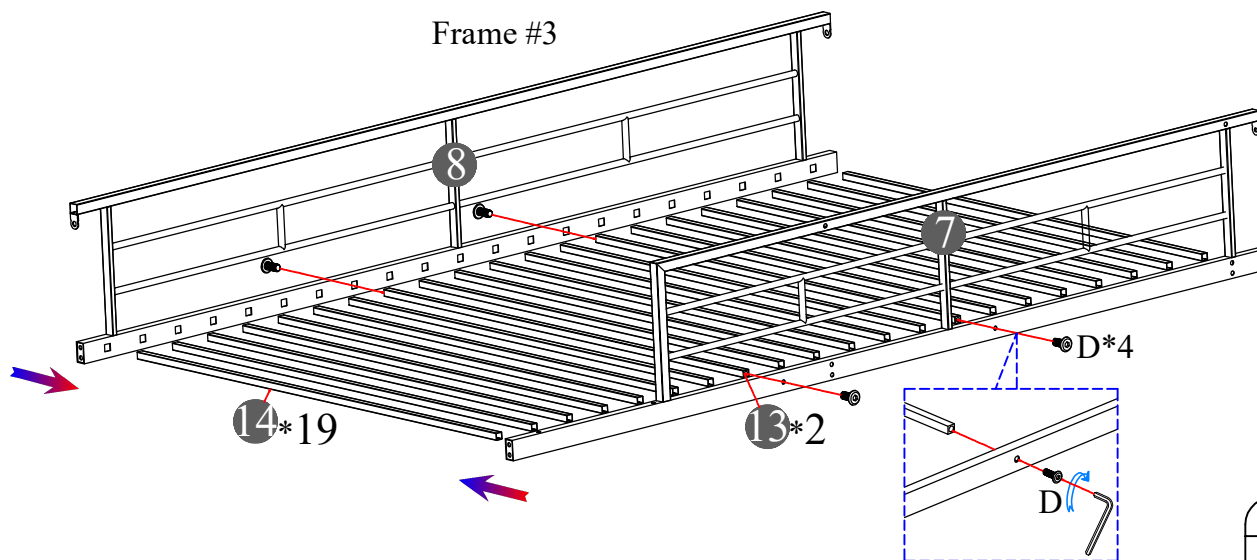
STEP 2 : Following below illustration Assembly Frame # 2. Using hardware #D ,#E connect #2 & #3 with #5, #6 to complete Frame #2.





NOTE:In this step, DO NOT tighten any bolt until you connect all part together

TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802

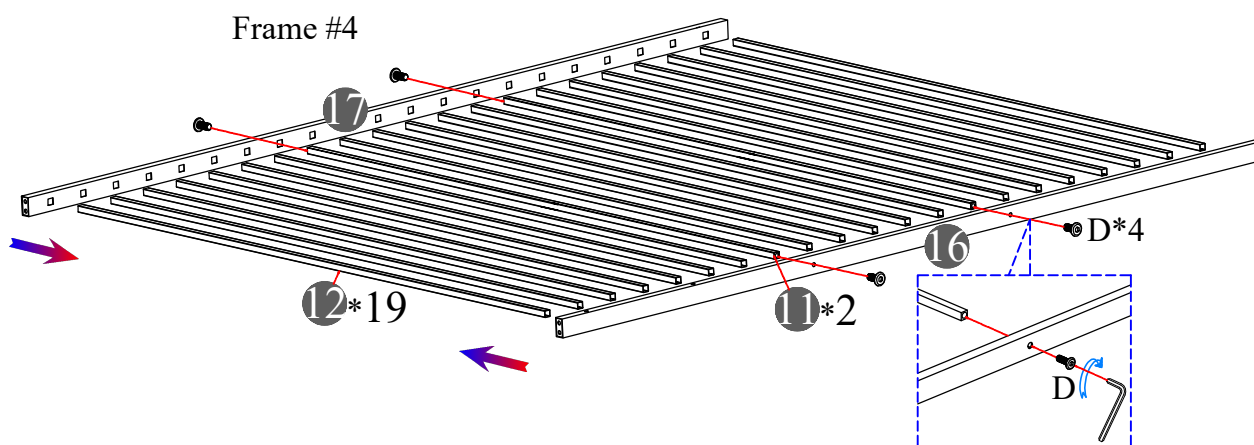
STEP 3 : Following below illustration Assembly Frame #3. Using hardware #D connect #7 & #8 with #13, #14 to complete Frame #3.





Ⓓ	4PCS
	1/4*15
Ⓖ	1PC
	4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

STEP 4 : Following below illustration Assembly Frame #4. Using hardware #D connect #16 & #17 with #11, #12 to complete Frame #4.

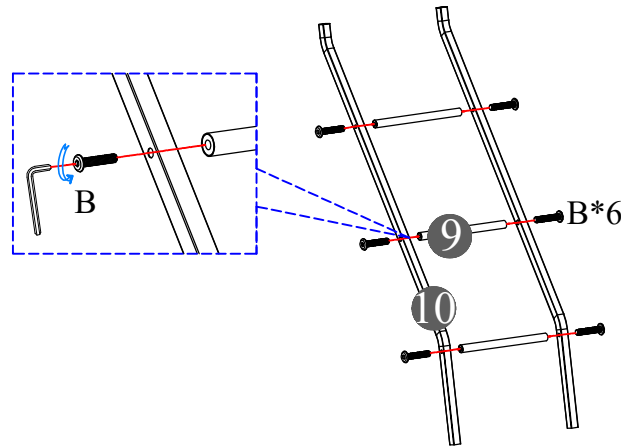


Ⓓ	4PCS
	1/4*15
Ⓖ	1PC
	4*59



NOTE:In this step, DO NOT tighten any bolt until you connect all part together

TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802

STEP 5 : Following below illustration Assembly Frame #5. Using hardware #B connect #9 with #10 to complete Frame #5.

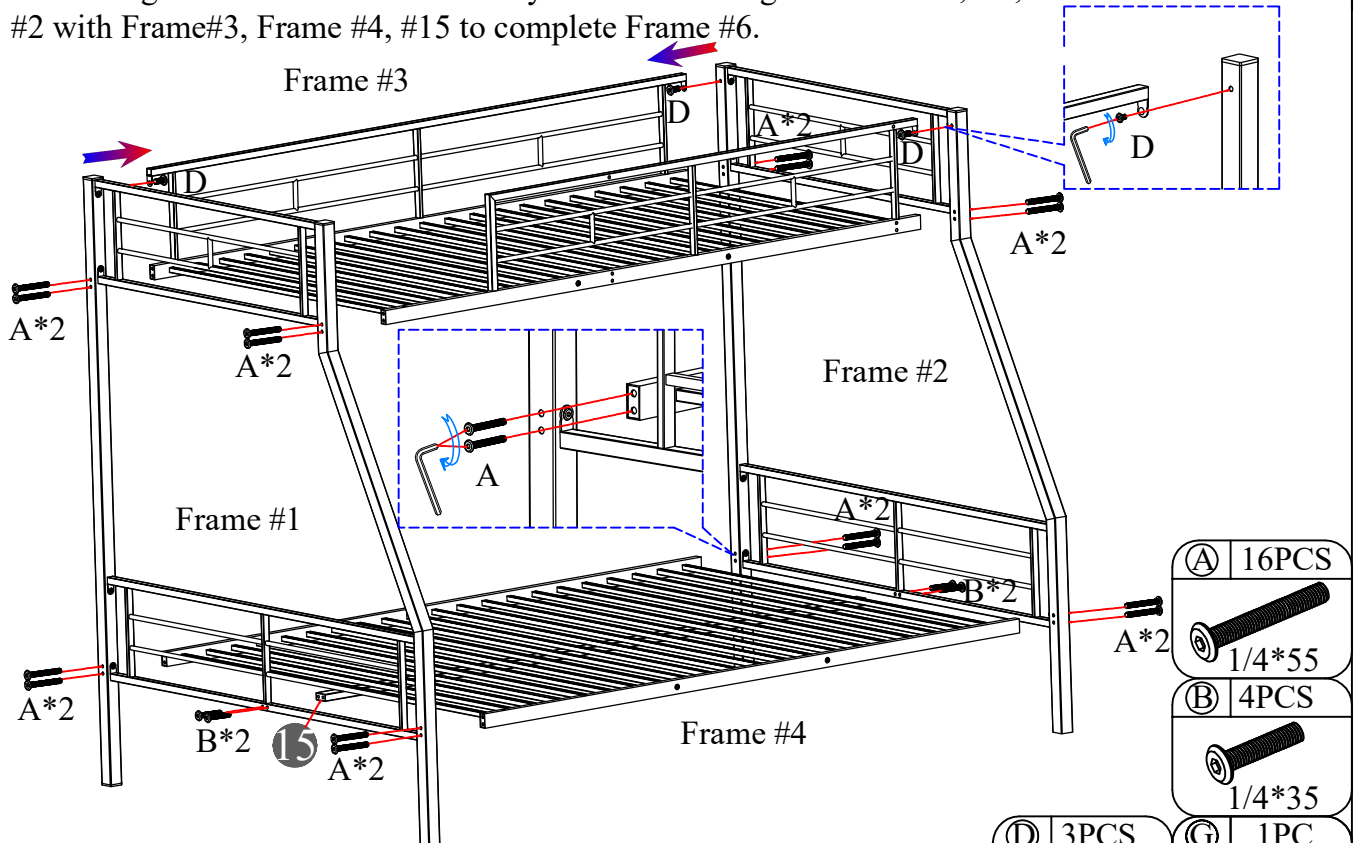






Frame #5

(B)	6PCS
	1/4*35
(G)	1PC
	4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

STEP 6 : Following below illustration Assembly Frame #6. Using hardware #A, #B, #D connect #Frame #1, Frame #2 with Frame#3, Frame #4, #15 to complete Frame #6.

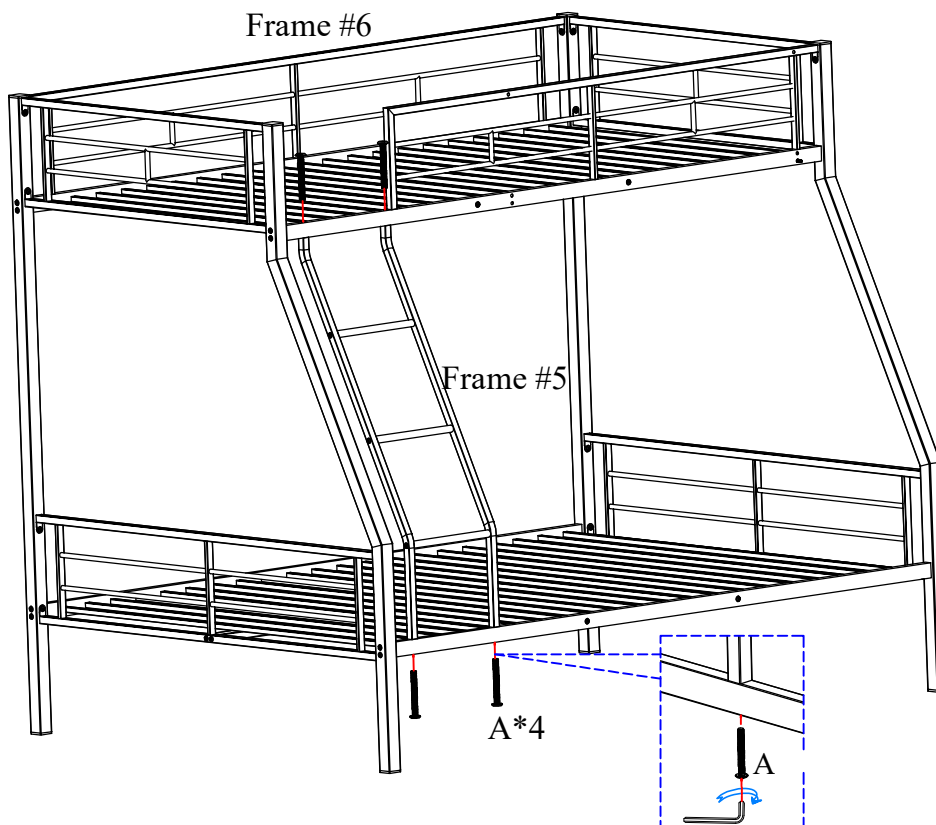


(A)	16PCS
	1/4*55
(B)	4PCS
	1/4*35
(D)	3PCS
	1/4*15
(G)	1PC
	4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802

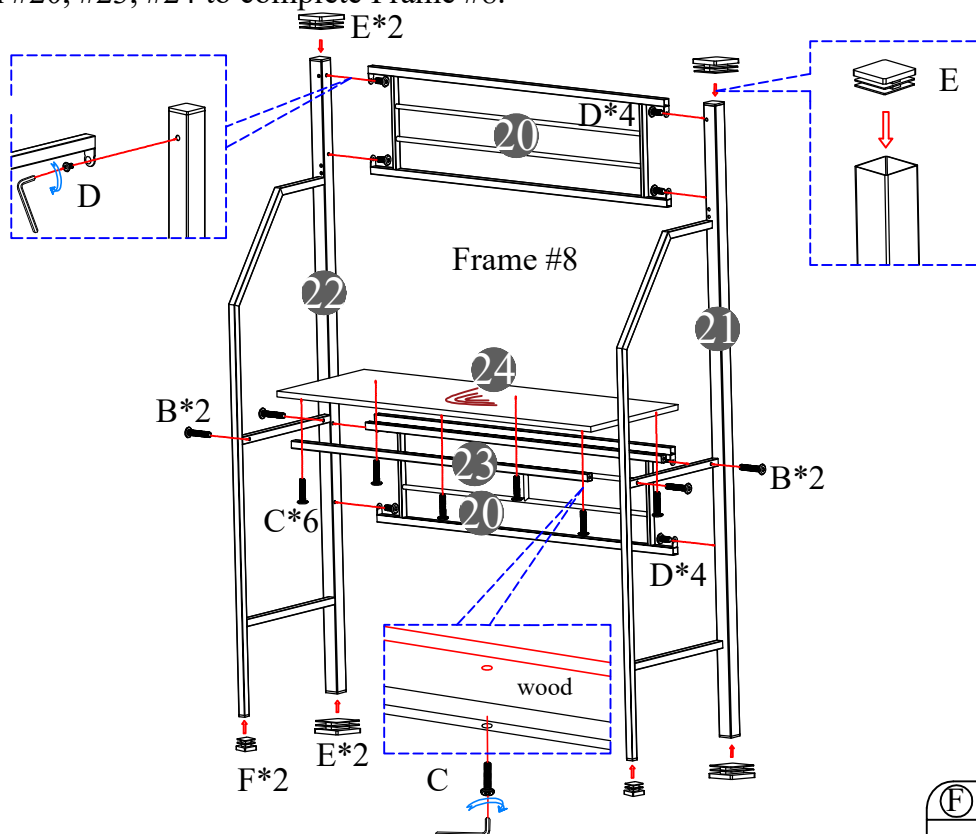
STEP 7 : Following below illustration Assembly Frame #7. Using hardware #A connect #Frame #6 with Frame #5 to complete Frame #7.



(A)	4PCS
(G)	1PC

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

STEP 8 : Following below illustration Assembly Frame #8. Using hardware #B, #C, #D, #E, #F connect #21 & #22 with #20, #23, #24 to complete Frame #8.

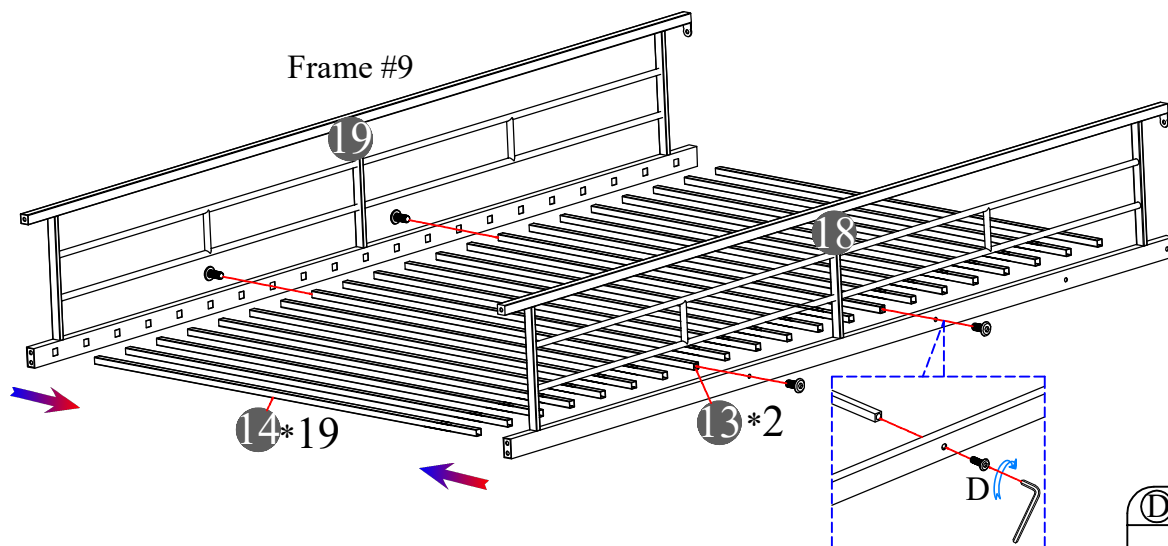


(B)	4PCS
(C)	6PCS
(D)	8PCS
(E)	4PCS
(F)	2PCS
(G)	1PC

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802

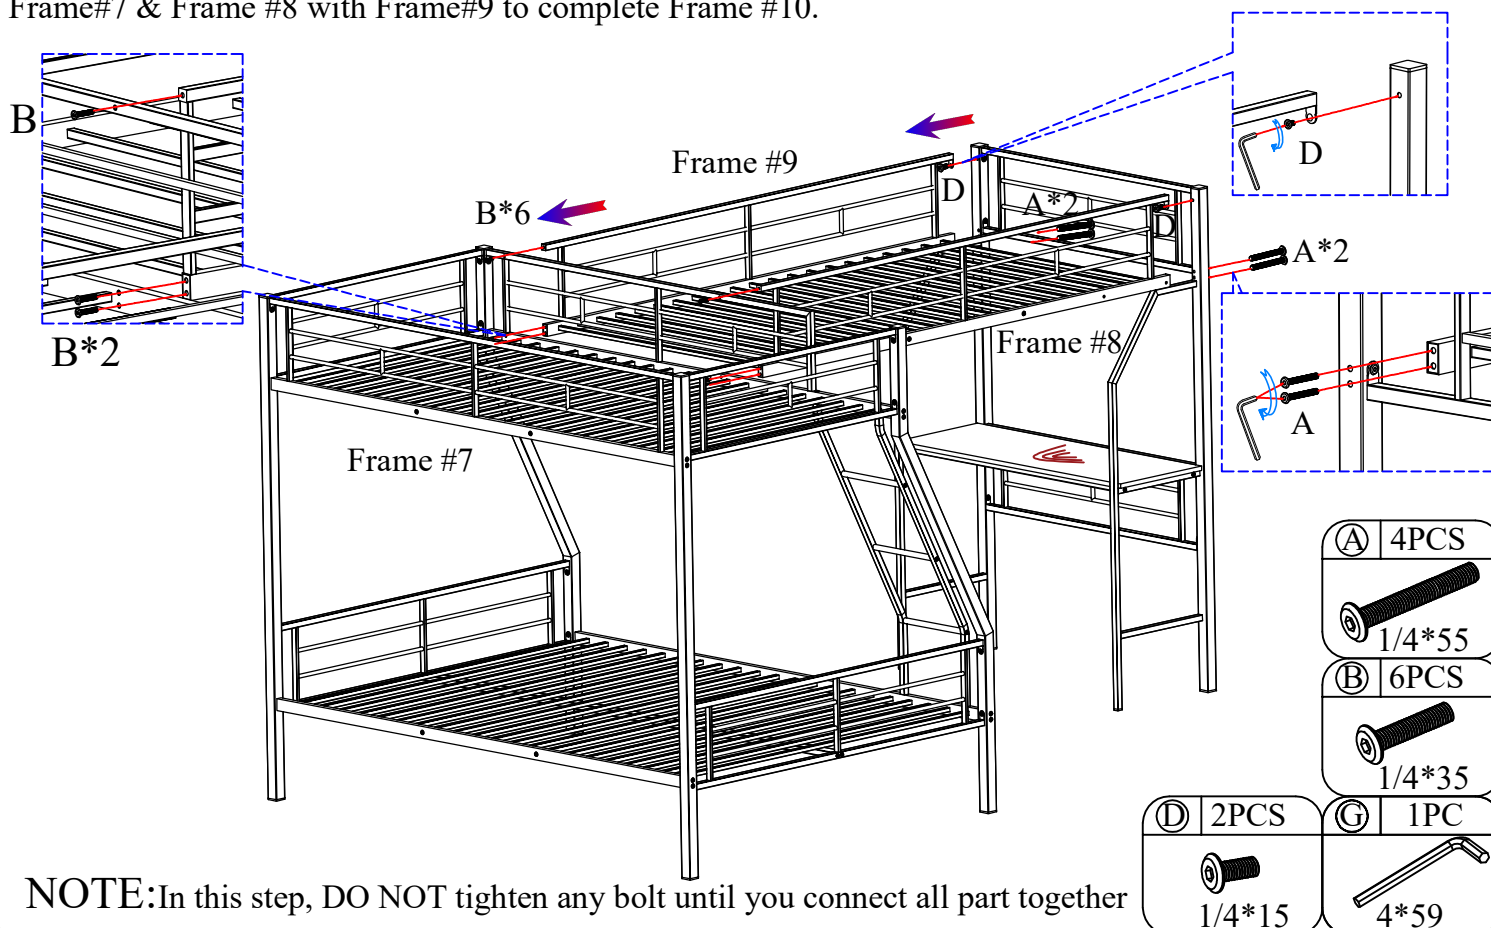
STEP 9 : Following below illustration Assembly Frame #9. Using hardware #D connect #18 & #19 with #13, #14 to complete Frame #9.



①	4PCS
	1/4*15
②	1PC
	4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

STEP 10 : Following below illustration Assembly Frame #10. Using hardware #A, #B, #D, connect Frame#7 & Frame #8 with Frame#9 to complete Frame #10.



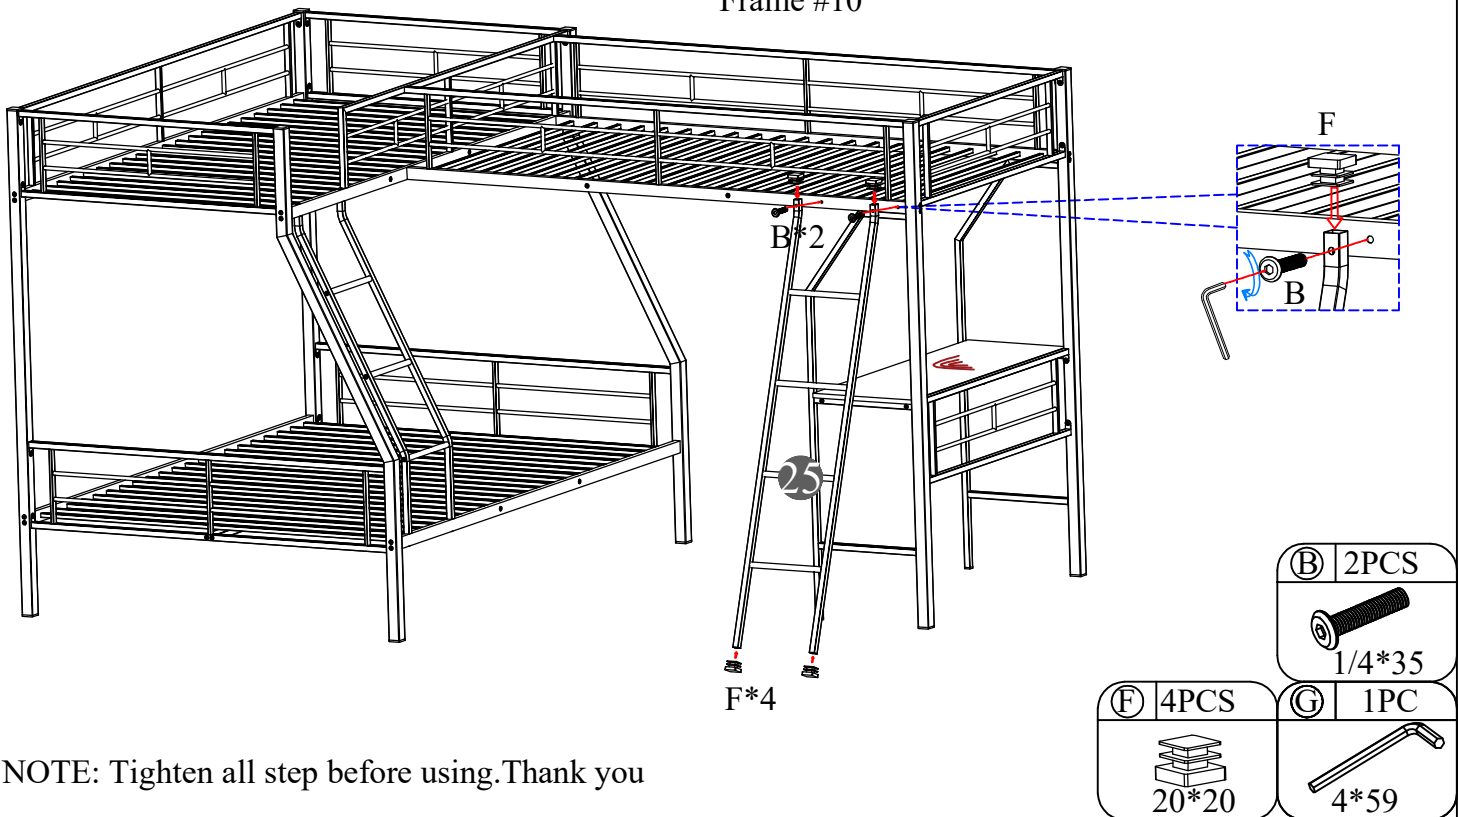
③	4PCS
	1/4*55
④	6PCS
	1/4*35
⑤	2PCS
	1/4*15
⑥	1PC
	4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

TWIN OVER FULL L-SHAPED BUNK & LOFT BED
ASSEMBLY INSTRUCTIONS
SKU : MF199801/199802

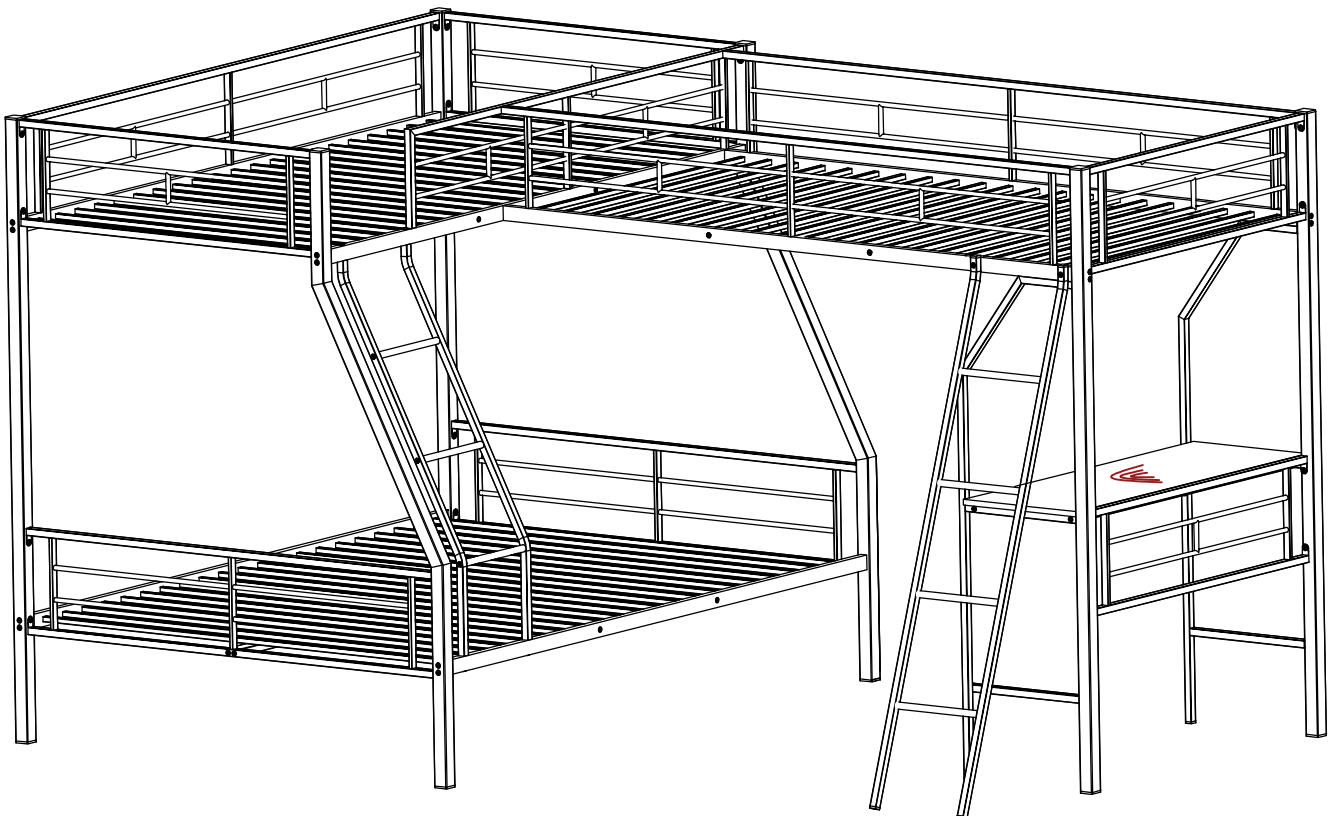
STEP 11 : Following below illustration Assembly Frame #11. Using hardware #B, #F connect Frame #10 with #25 to complete.

Frame #10



NOTE: Tighten all step before using. Thank you

COMPLETE



NOTE: Tighten all step before using. Thank you