


ASSEMBLY INSTRUCTIONS

FULL LOFT BED WITH SHELF

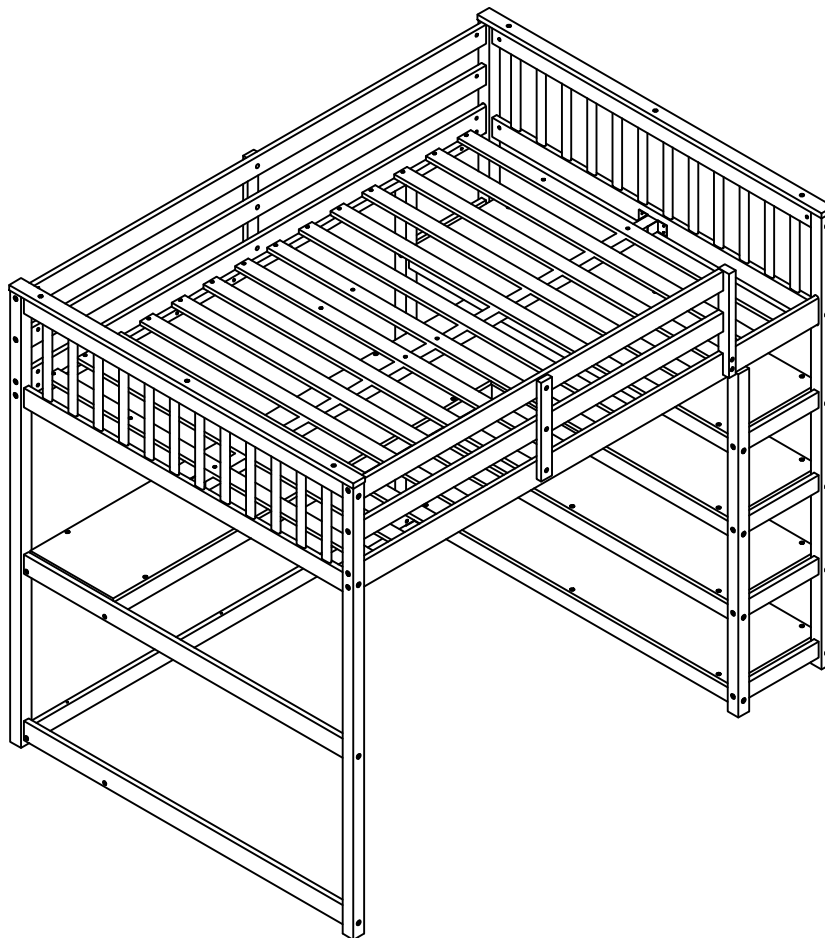

WF291360 / WF291361

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-tight may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


THIS BED IS DESIGNED TO USE A FULL MATTRESSES 54" WIDE X 74"-75" LONG WITH THE TOTAL THICKNESS NOT EXCEEDING 6" FOR UPPER BUNK, FOR THE LOWER FULL-SIZE SHOULD BE 54" WIDE X 74"-75" LONG, WIDE WITH 8" THICKNESS.

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:


















Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

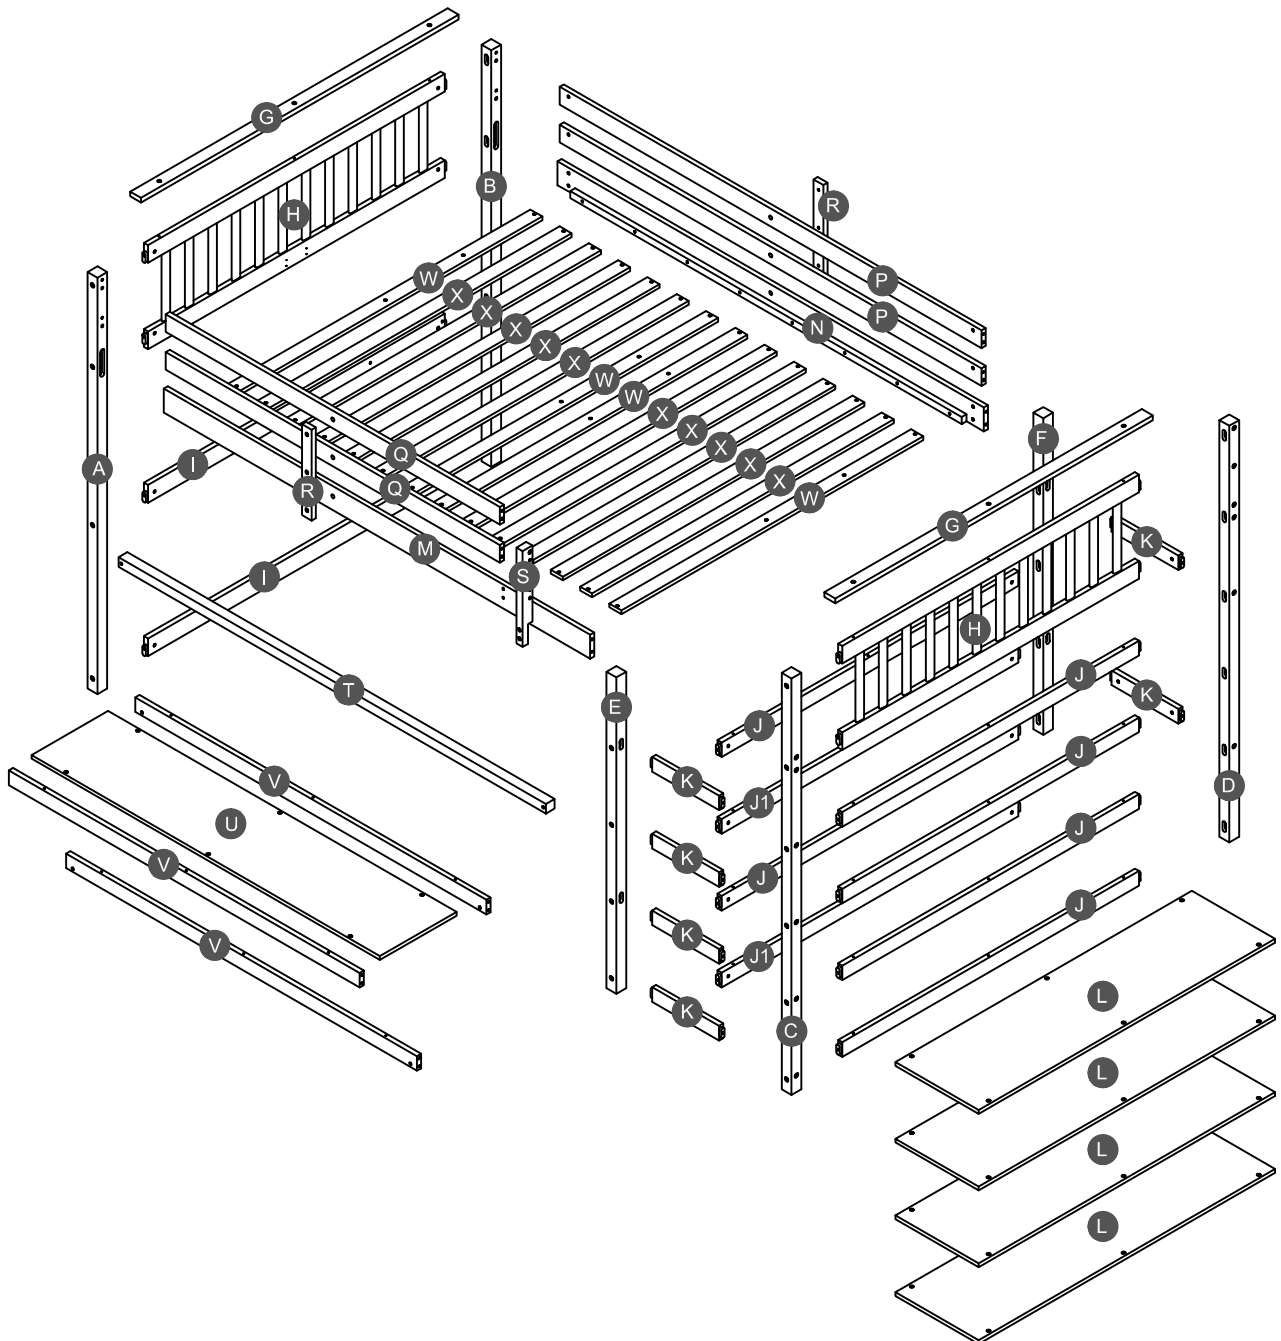Detail View










Part List


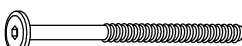










Hardware List WF291360

A		B		C	
	Leg (Left front) - 1pc		Leg (Left back) - 1pc		Leg (Right front) - 1pc
D		E		F	
	Leg (Right back) - 1pc		Leg short (Front) - 1pc		Leg short (Back) - 1pc
G		K		M	
	Cap for upper HB-FB - 2pcs		Step ladder - 6pcs		Side rail (front) - 1pc
N		P		Q	
	Side rail (back) - 1pc		Long guard rail (back) - 2pcs		Short guard rail (front) - 2pcs
R		S		T	
	Vertical guard rail - 2pcs		Support guard rail (Right) - 1pc		Lower support slat - 1pc
U		V			
	Top panel - 1pc		Horizontal bar - 3pcs		


WF291361

H		I		J	
	Frame HB - FB - 2pcs		Horizontal bar HB - 2pcs		Horizontal bar FB - 6pcs
J1		L		W	
	Horizontal bar FB - 2pcs		Shelf - 4pcs		Slat - 4pcs
X					
	Slat - 10pcs				

Hardware List WF291360


1	 Ø8*30mm Wood dowel (6pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (42pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (6pcs)	5	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	6	 (Ø12)1/4"*30mm Hex-Head bolts (6pcs)
7	 1/4"*15 (9.5mm) Horizontal-Hole bolts (62pcs)	8	 (Ø12)1/4"*40mm Hex-Head bolts (36pcs)	9	 (1/4")4.5*58mm Allen key (2pcs)
10	 116*40*27mm Metal bracket (2pcs)	11	 Ø3.5*15mm Wood screws (12pcs)	12	 Ø4*30mm Wood screws (32pcs)
13	 24*28*28*2mm Metal bracket (2pcs)	14	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)	15	 (Ø13)1/4"*14mm Connect bolt (2pcs)
16	 Ø10*40mm Wood dowel (8pcs)				

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !



STEP 1:

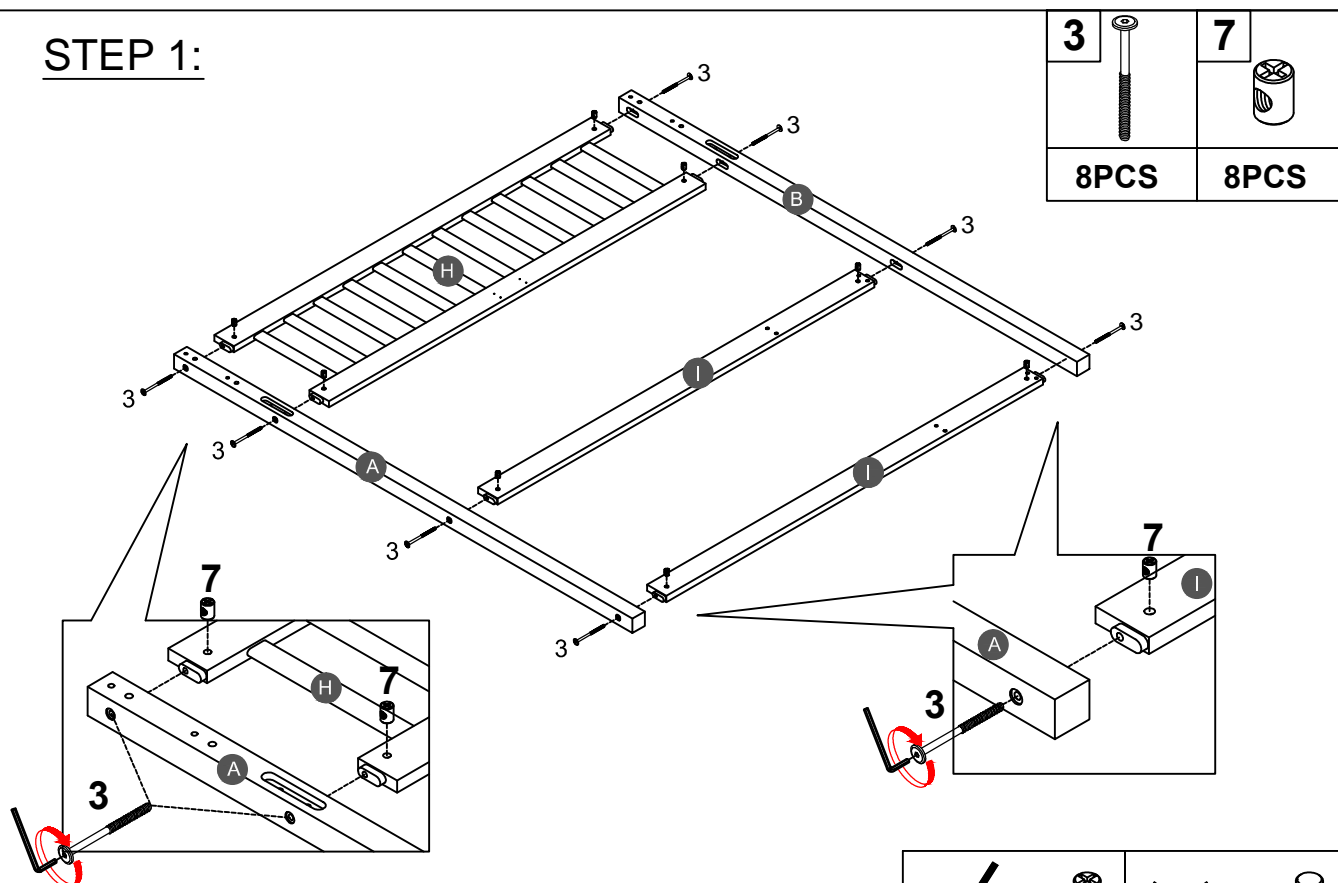

Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened

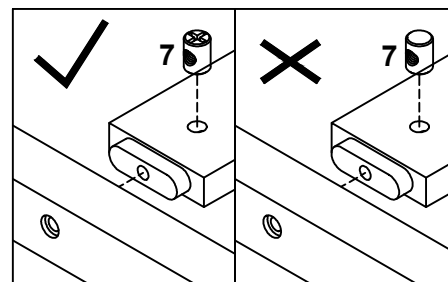

STEP 2:

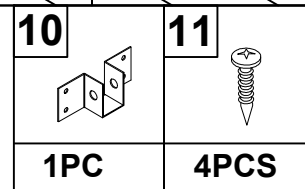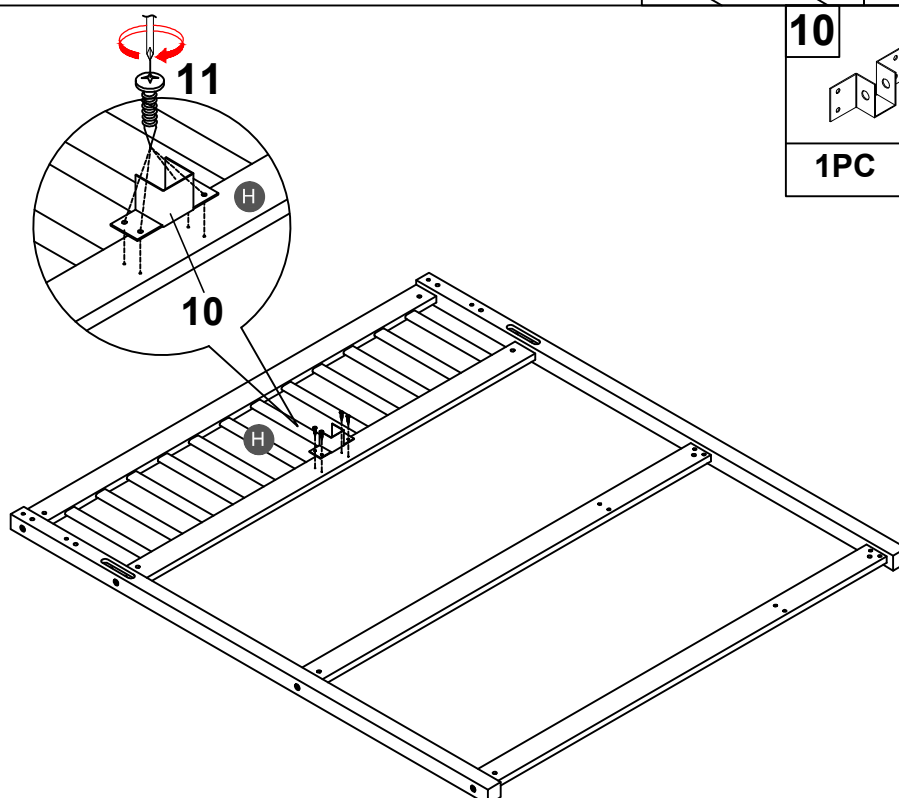


STEP 3:

8




3PCS

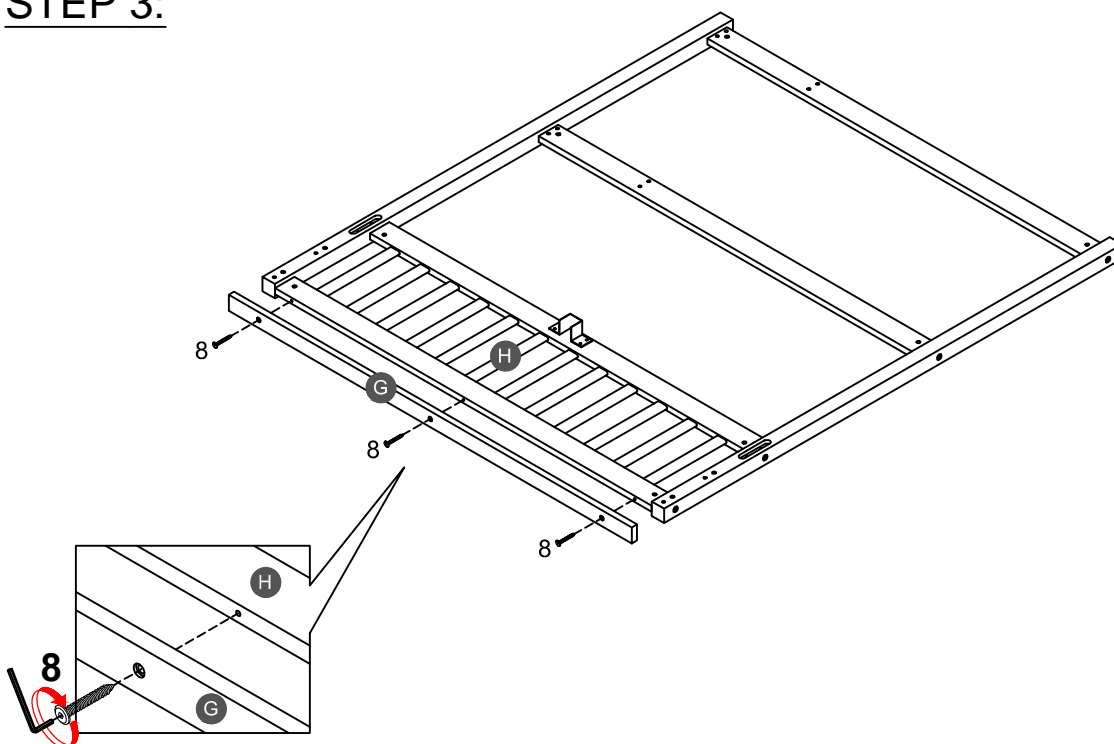

STEP 4:

3




12PCS


7




12PCS

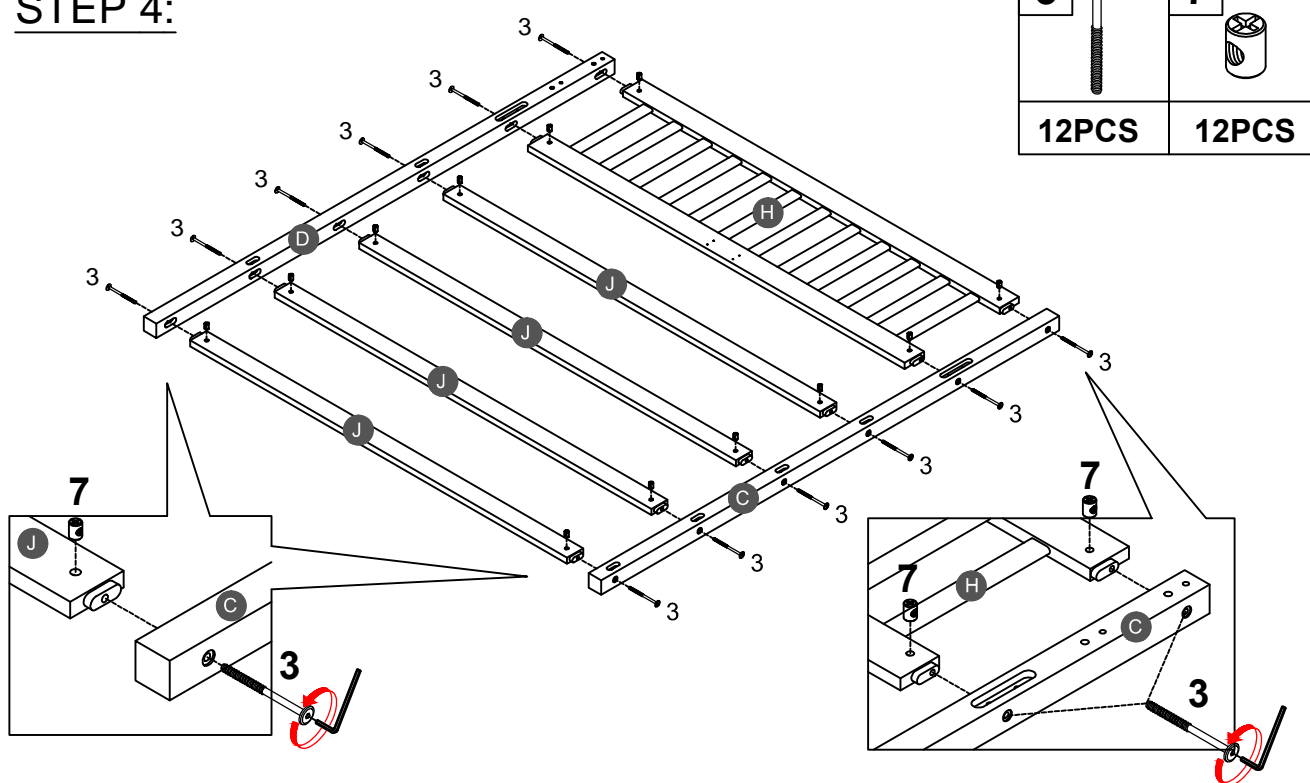



Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened

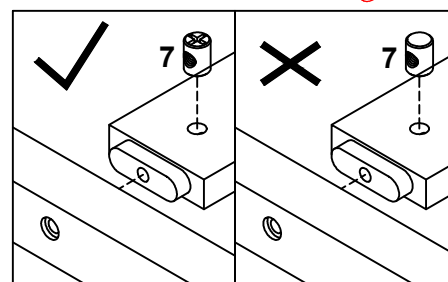



STEP 5:

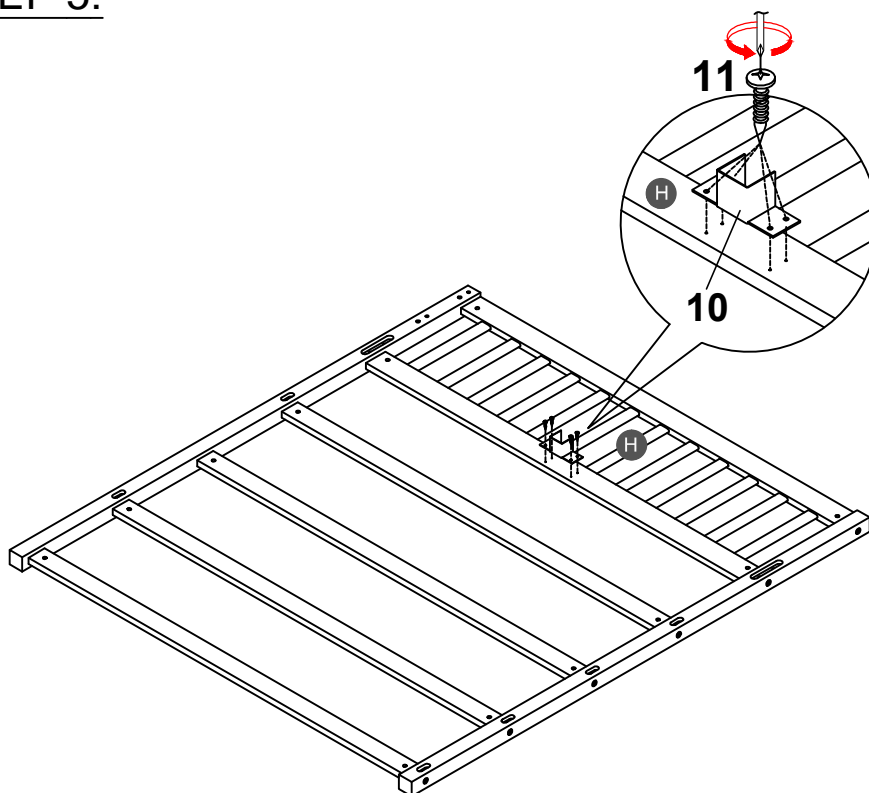


10		11	
1PC		4PCS	


STEP 6:

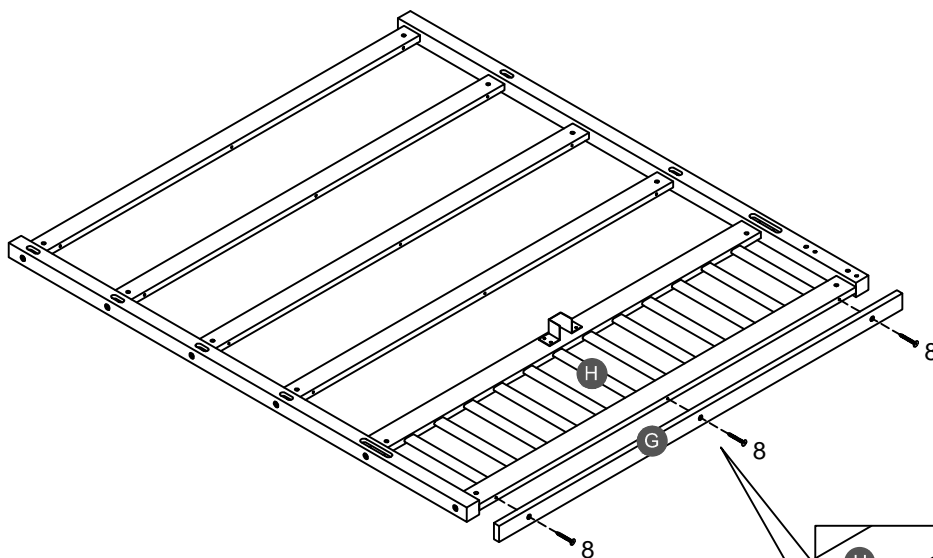

8	
3PCS	

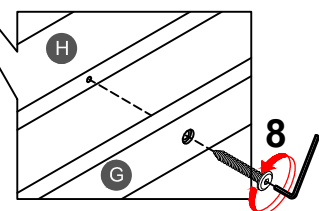


STEP 7:

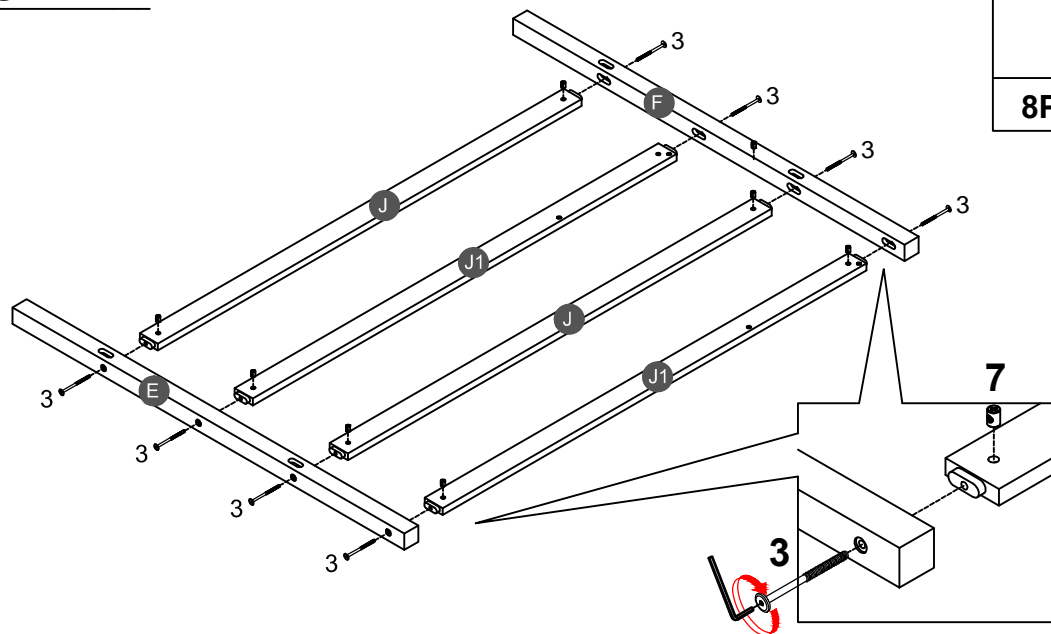


3	7
8PCS	8PCS

Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened

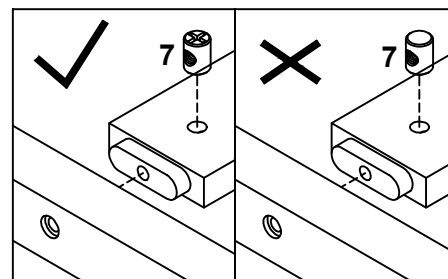


STEP 8:

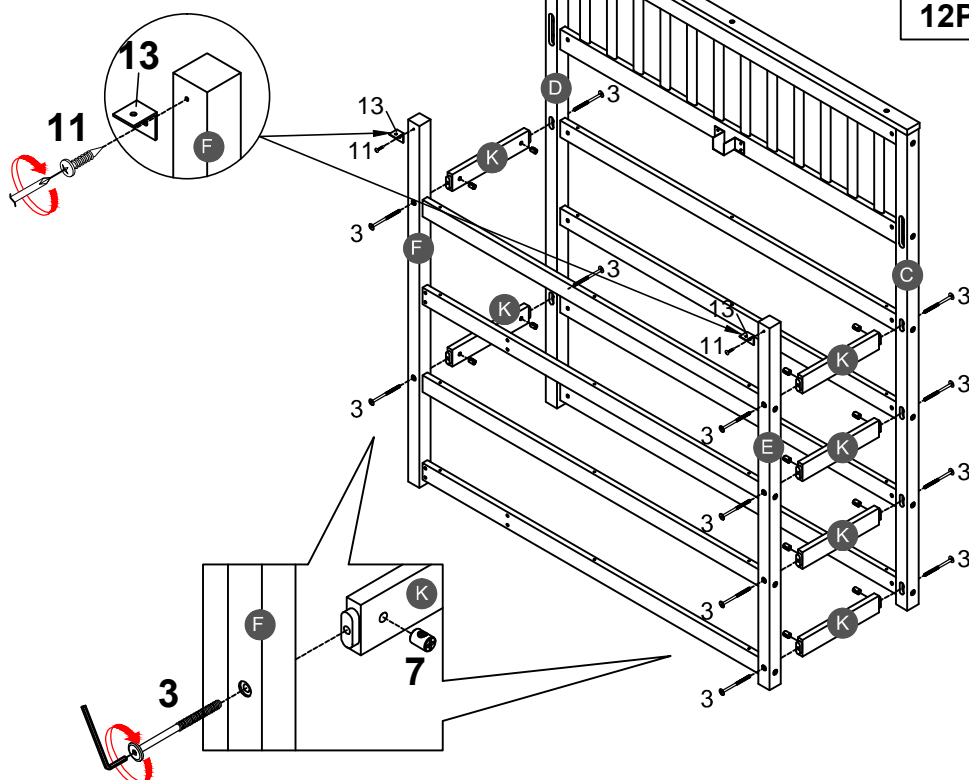


3	7	13
12PCS	12PCS	2PCS
		11
		2PCS


STEP 9:

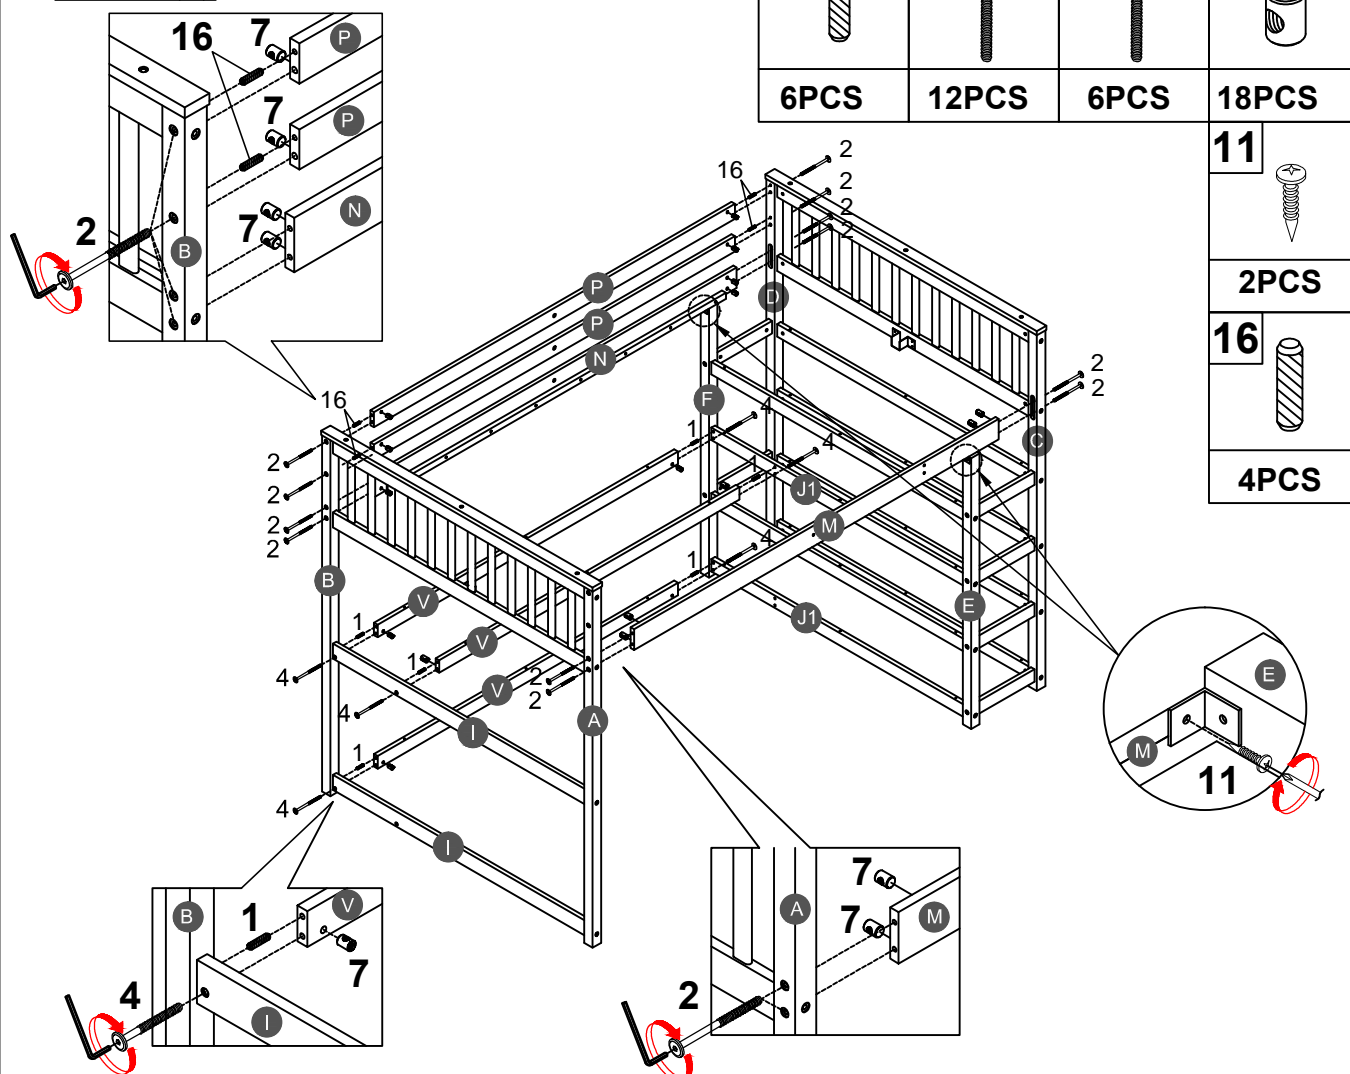

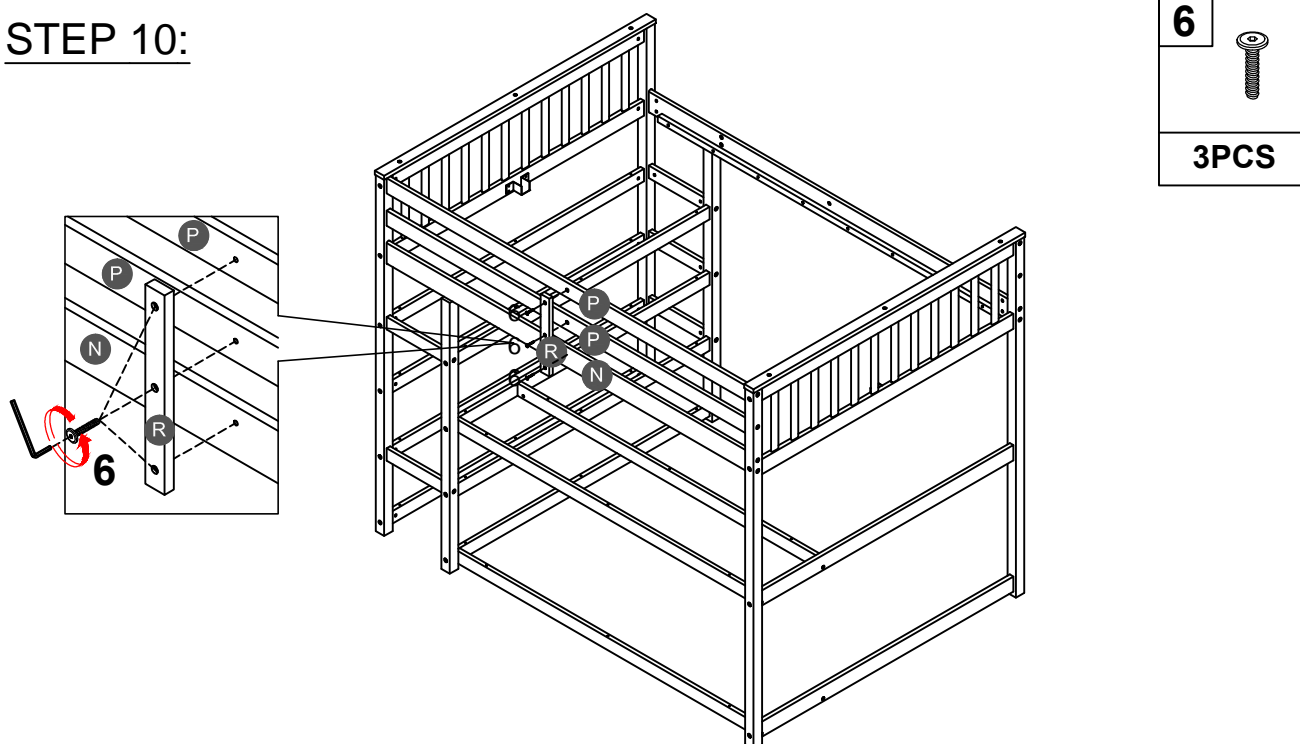


STEP 10:

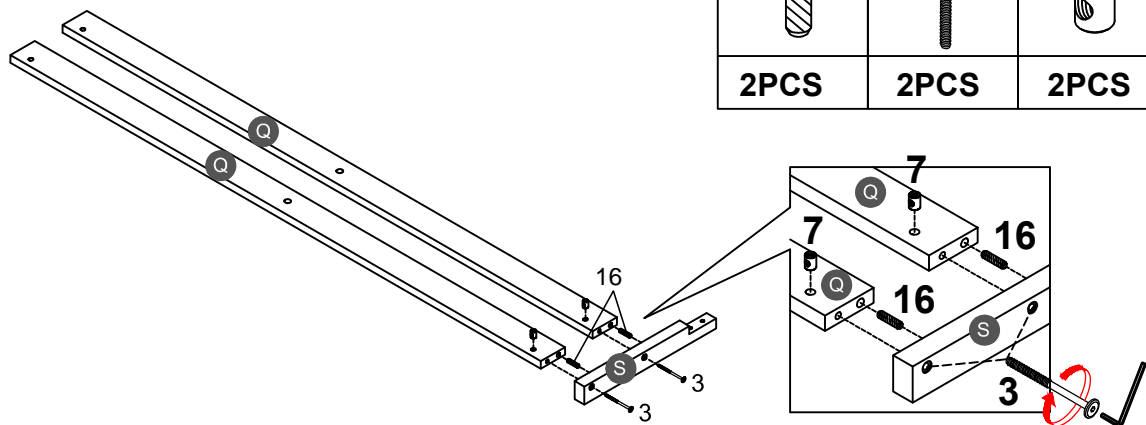



STEP 11:




16	3	7
		
2PCS	2PCS	2PCS

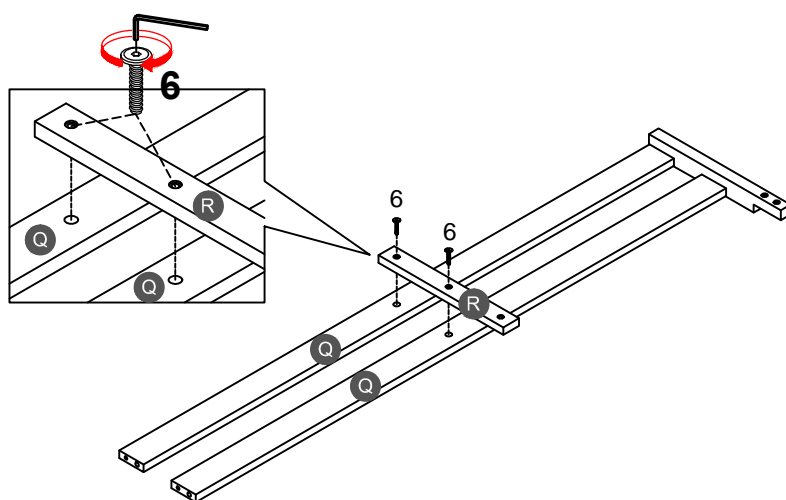


STEP 12:



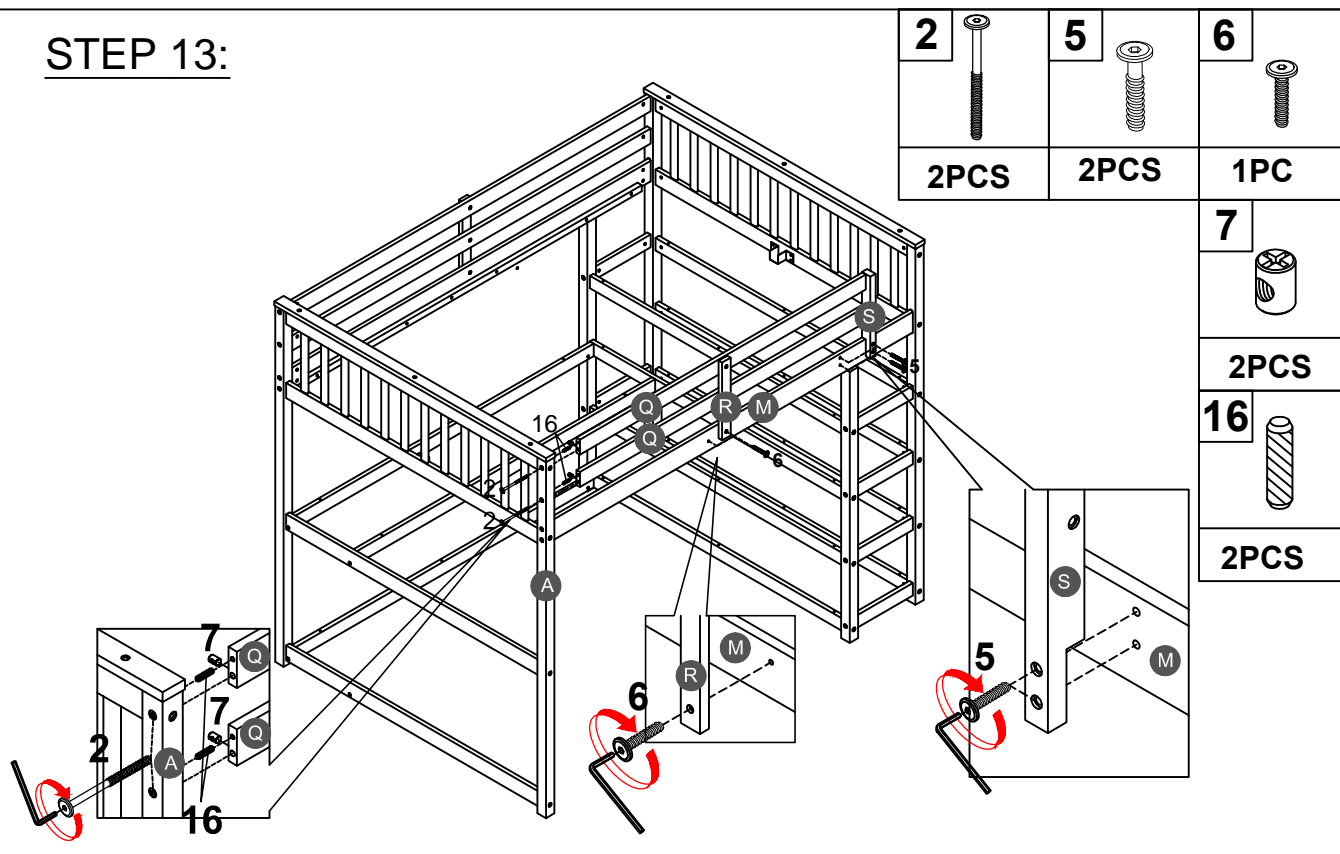

6

2PCS

STEP 13:






2	5	6
		
2PCS	2PCS	1PC


7

2PCS

16

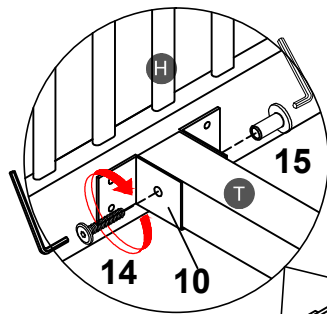2PCS


STEP 14:

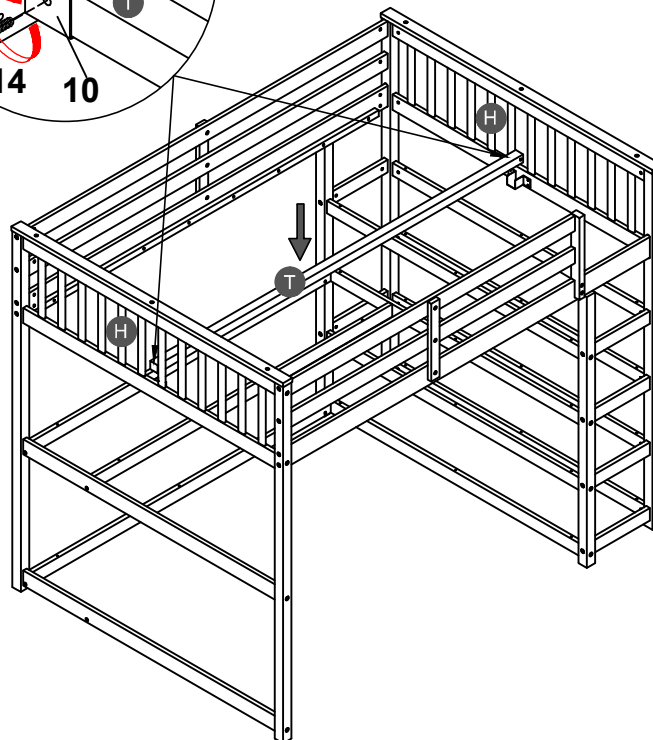

14		15	
	2PCS		2PCS



STEP 15:

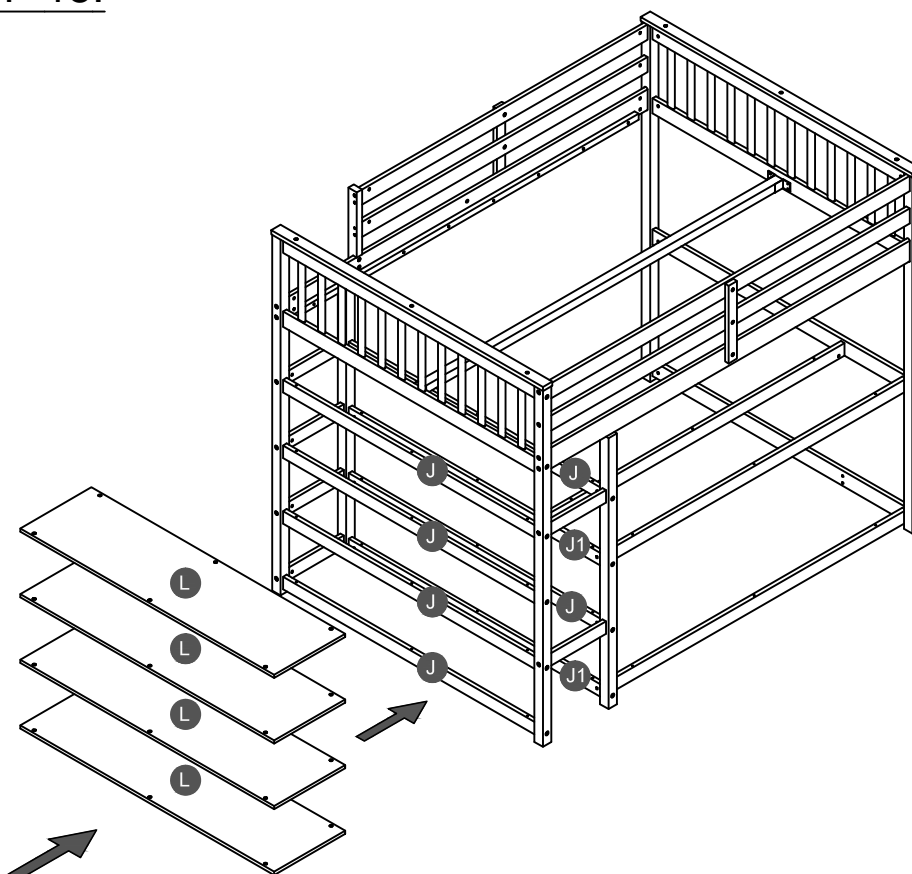


STEP 16:

8



24PCS

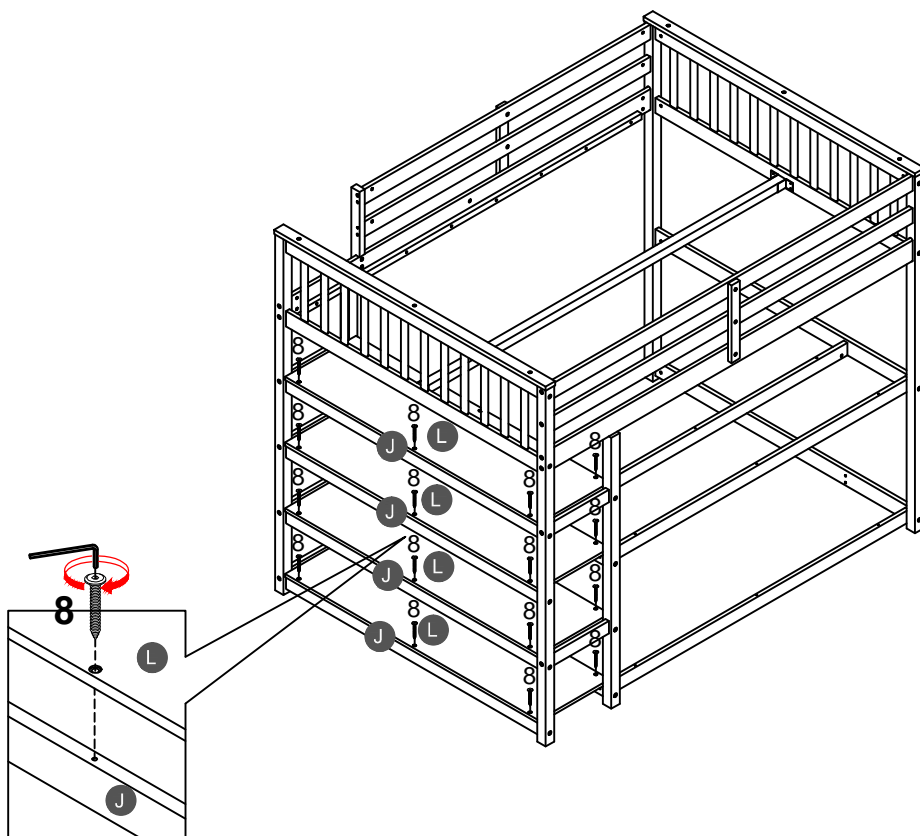


STEP 17:

8



6PCS



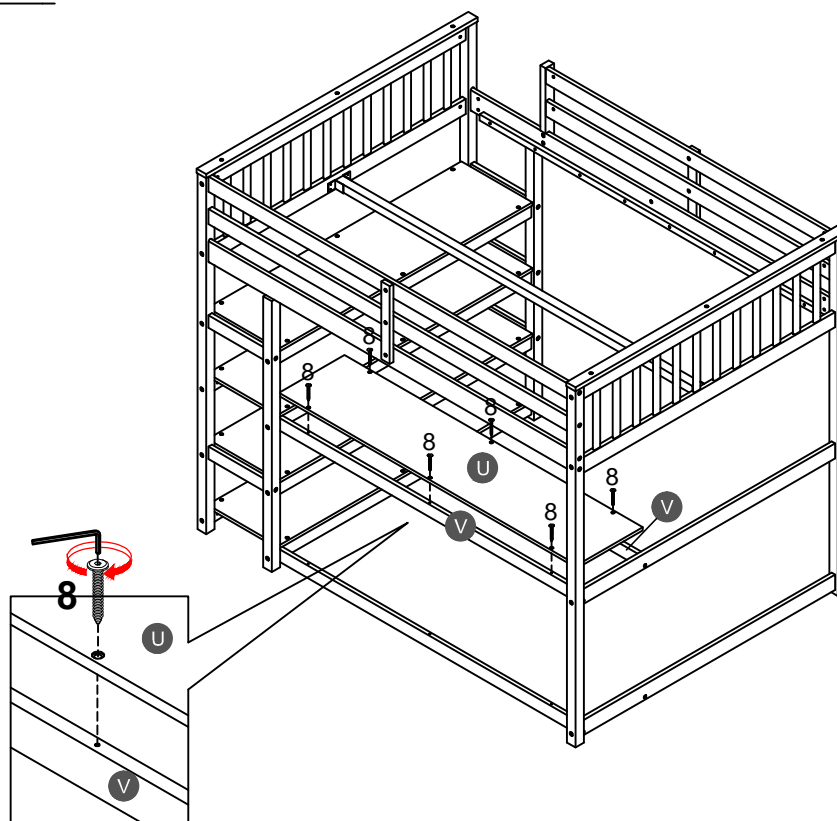


STEP 18:

12



32PCS

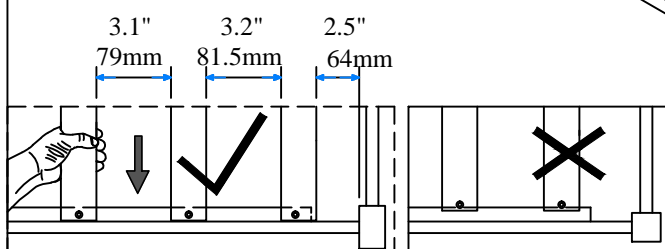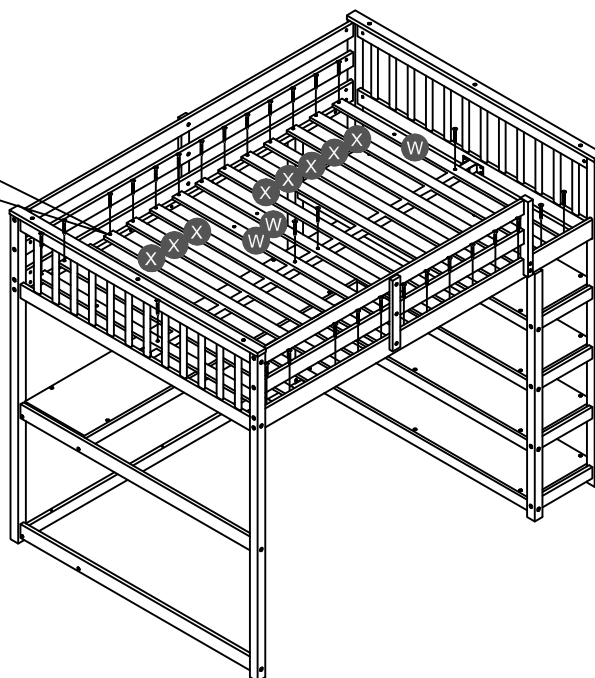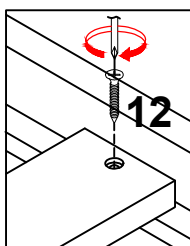

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

