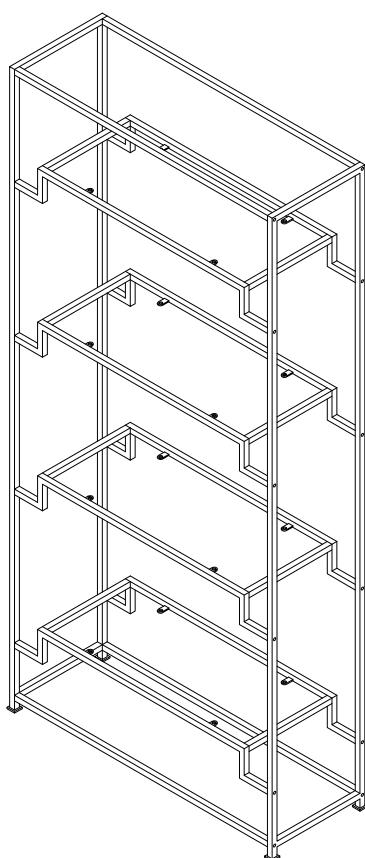



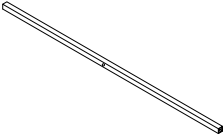
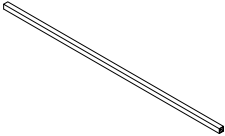
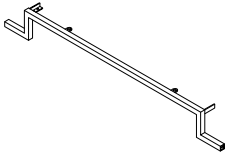
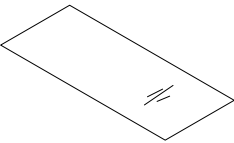
CROSLEY

FURNITURE



Etagere CF1411



PART LIST

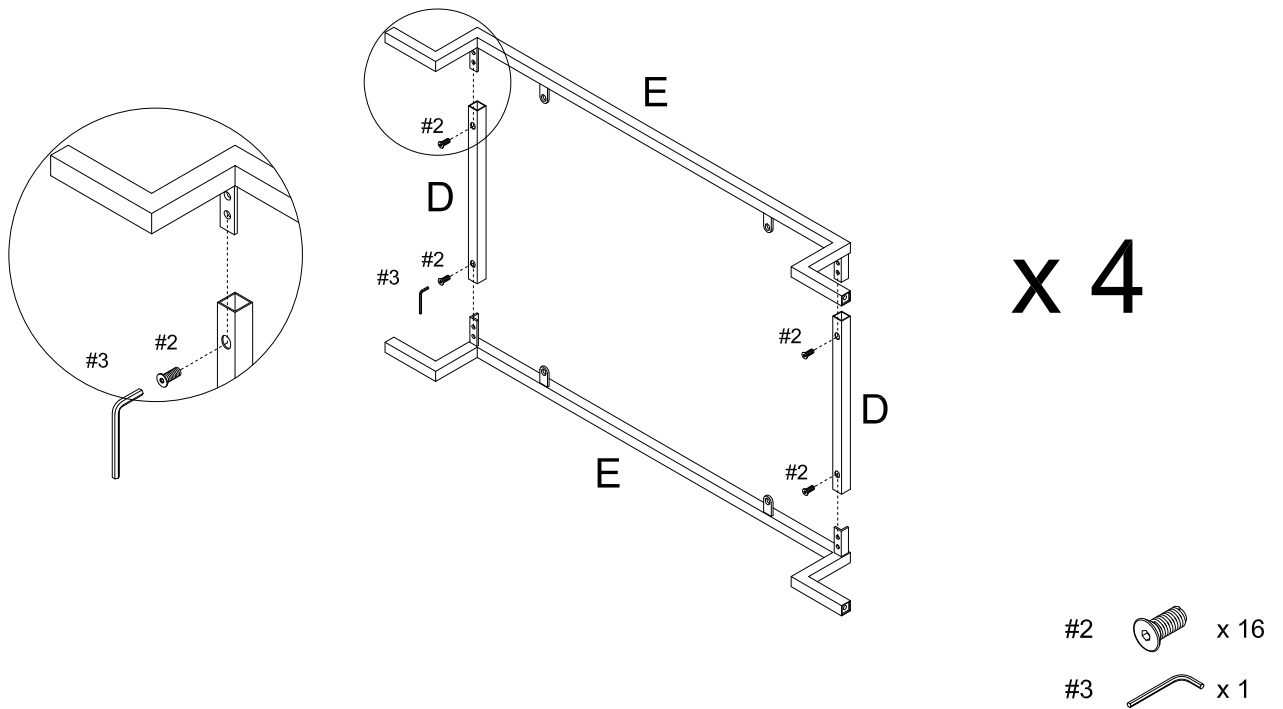
A 	B 	C 	D 	E 
Side Panel 2 PCS	Top Bar 1 PC	Shelf Bar 3 PCS	Short Bar 8 PCS	Z Bar 8 PCS
F  Glass 4 PCS				

HARDWARE LIST

#1  1/4" x 1-1/2"L	#2  1/4" x 1/2"L	#3 	#4 	#5 
Bolt 24 PCS (Extra 1)	Short Bolt 16 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET	Suction Cup Extra 2 PCS

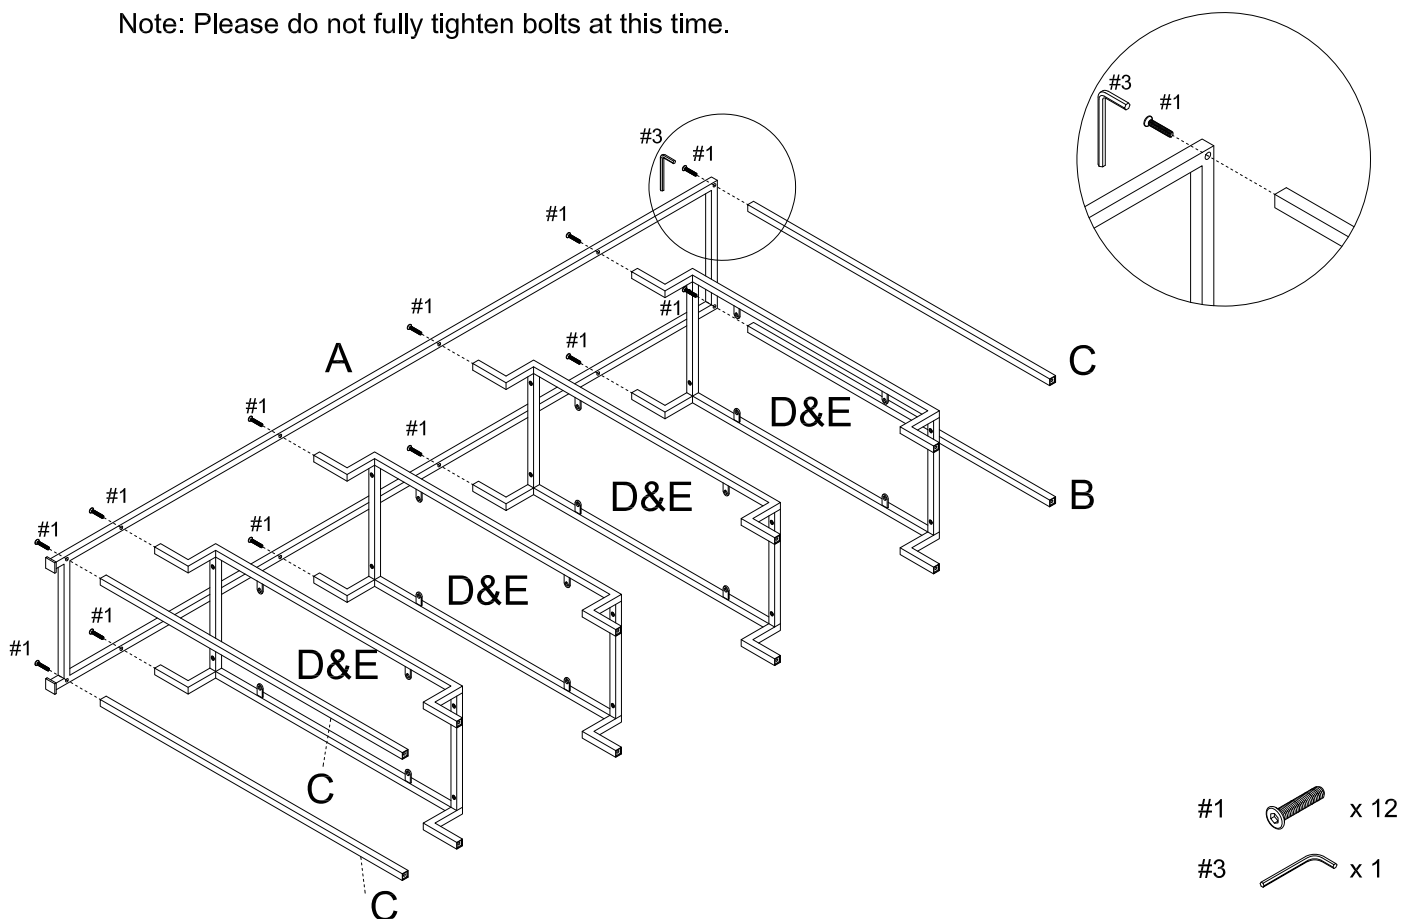
Step 1. Insert Z bars (part E) into short bars (part D) using short bolts (part #2) and allen wrench (part #3).

Note: Please do not fully tighten bolts at this time.



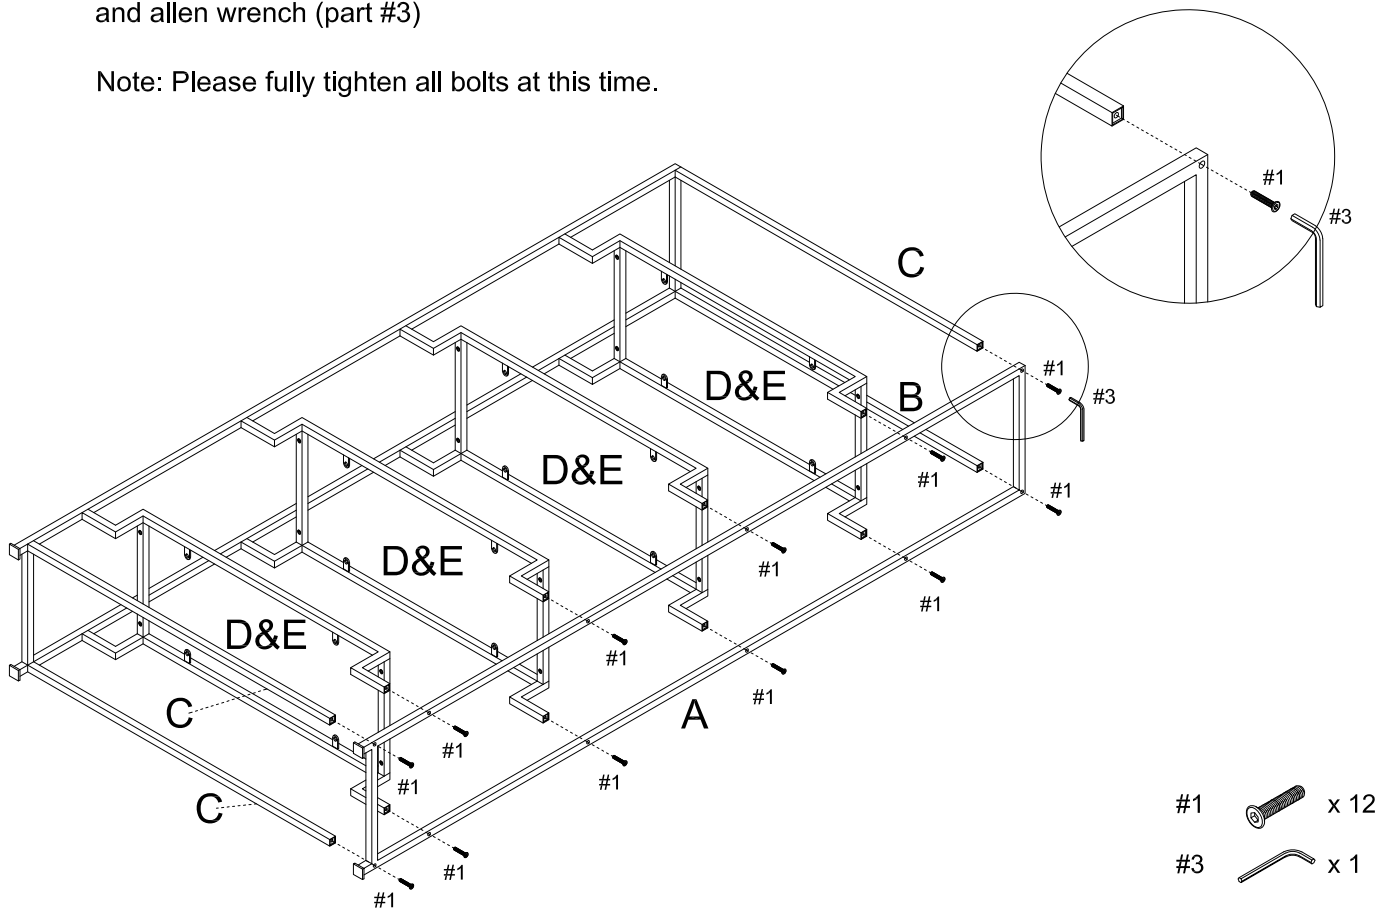
Step 2. Attach top bar (part B) and shelf bars (part C) to side panel (part A) using bolts (part #1) and allen wrench (part #3). Attach assembled units (parts D & E) to side panel (part A) using bolts (part #1) and allen wrench (part #3).

Note: Please do not fully tighten bolts at this time.



Step 3. Attach the remaining side panel (part A) to assembled unit (parts B, C, D & E) using bolts (part #1) and allen wrench (part #3)

Note: Please fully tighten all bolts at this time.

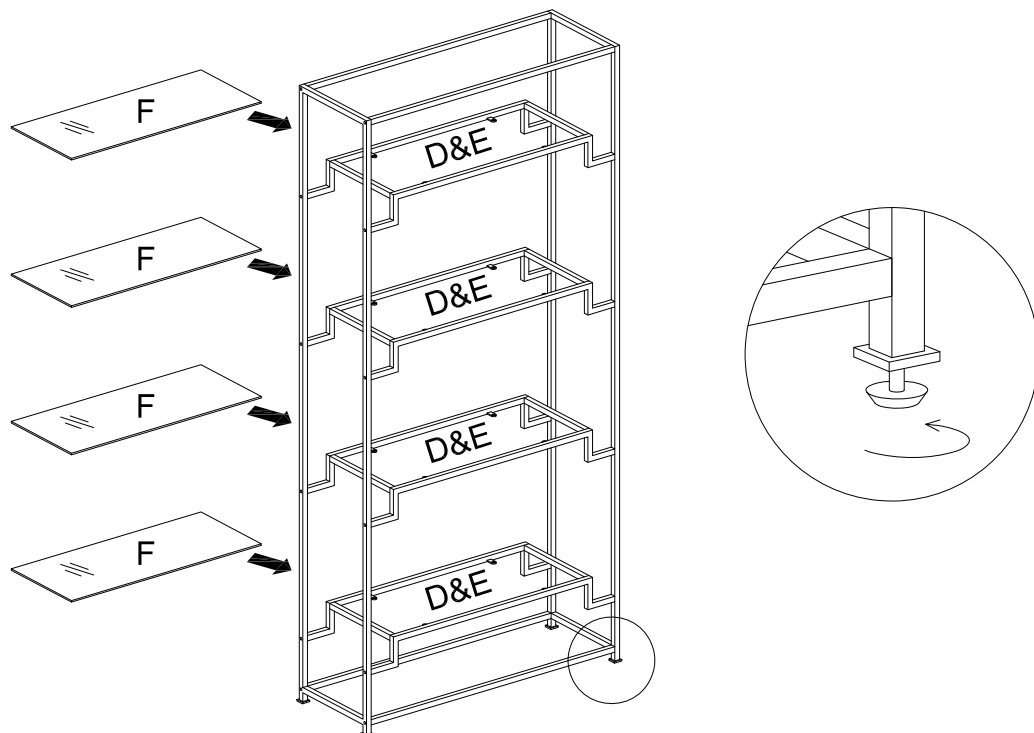


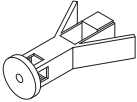
Step 4. Carefully turn unit upright. Insert glasses (part F) into assembled units (parts D & E).

Note: Safety strap kit (part #4) must be installed to prevent tipping, damage and/ or injury.

Note: It is important to adjust levelers once fully assembled and upright.

Extend adjustable levelers until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



#4	A	B	C	D	E
			 D8 x 1-1/2"	 D10 x 1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Hook 2 PCS	Screw 1 PC	Bolt 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Important: Safety strap kit (part #4) must be installed to prevent tipping, damage and / or injury.

1) Insert bolt (D) through hook (B) and attach to predrilled hole in top bar (part B) using a philips head screwdriver.

2) Drill 11/32" hole in the wall where this unit will be secured. The drilled hole will be at the same height as the hole in top bar (part B) where hook (B) was attached. Tap wall anchor (A) into the drilled hole.

3) Insert screw (C) through hook (B) into the wall anchor (A) using a philips head screwdriver.

4) Insert safety wall strap (E) through both hooks (B) and tighten to secure.

Note: This item is not intended for clothing storage use.

