






3737-01 DONHAM DINING TABLE

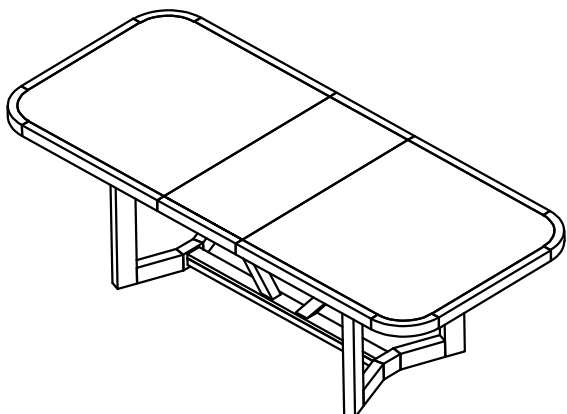


20 MIN

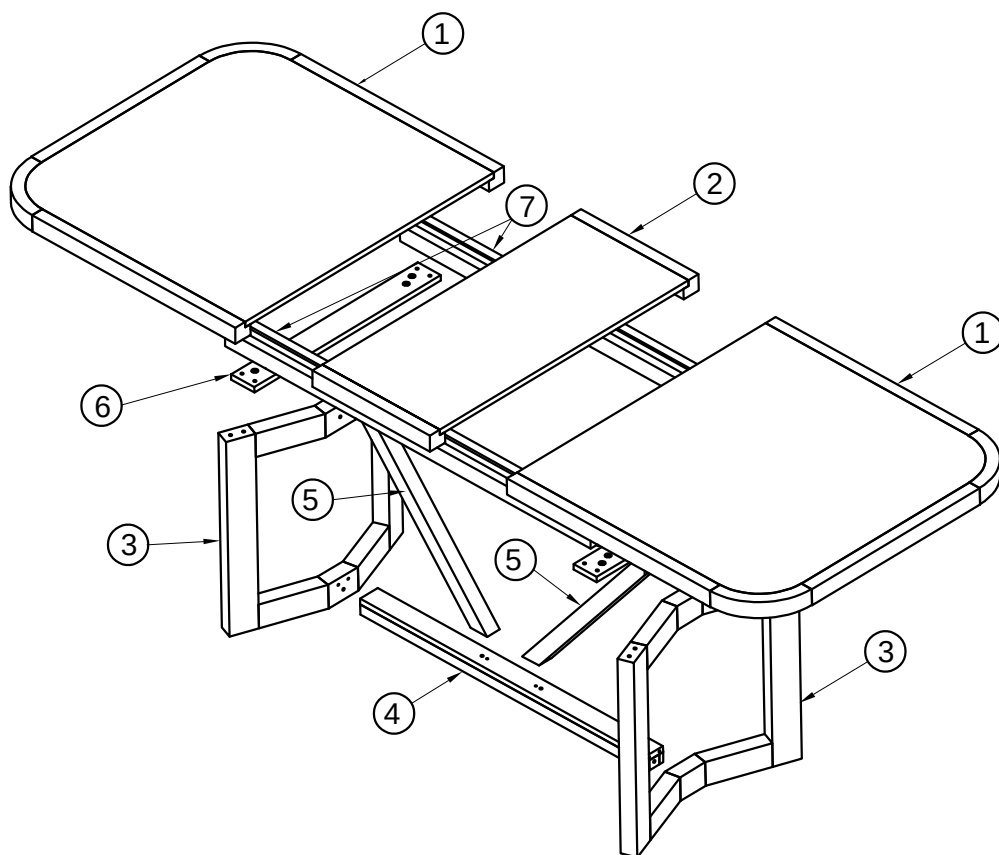

HARDWARES LIST


(A)  14 pcs Ø15 x M8 x 40 mm	(B)  14 pcs 1.2 x M8 x Ø12 mm	(C)  14 pcs 2 x M8 x Ø19 mm	(D)  8 pcs Ø13 x M6 x 40 mm	(E)  8 pcs 1.2 x M6 x Ø11 mm	(F)  8 pcs 2 x M6 x Ø19 mm	(G)  6 pcs Ø8 x 30 mm
(H)  1 pc M4 x 60 mm						

Step 1

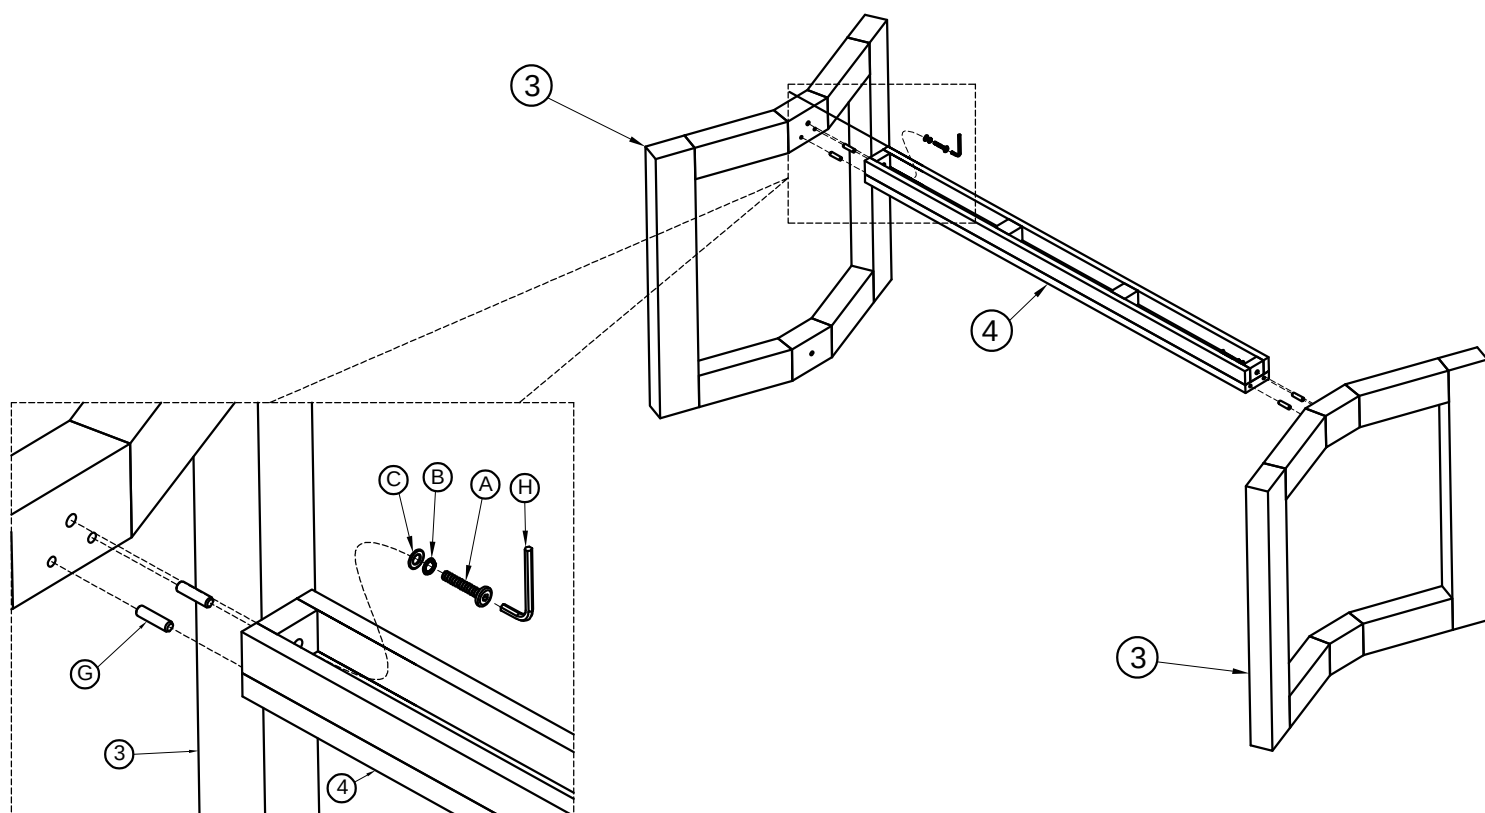


(A) 2 pcs Ø15 x M8 x 40 mm	(B) 2 pcs 1.2 x M8 x Ø12 mm	(C) 2 pcs 2 x M8 x Ø19 mm	(G) 4 pcs Ø8 x 30 mm	(H) 1 pc M4 x 60 mm
---	--	--	---------------------------------------	--------------------------------------


Step 2

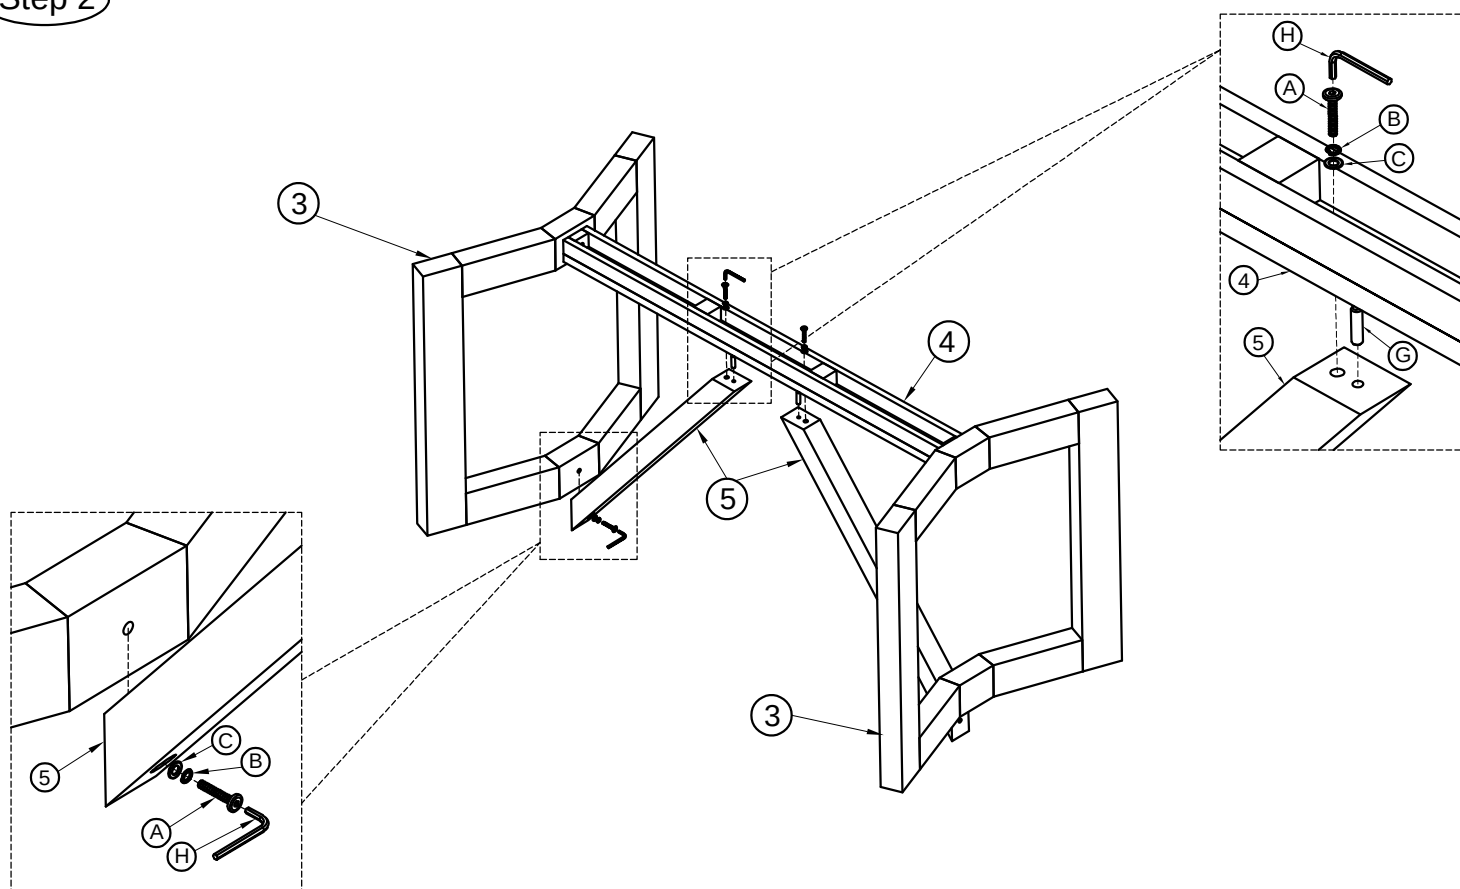


(A) 4 pcs Ø15 x M8 x 40 mm	(B) 4 pcs 1.2 x M8 x Ø12 mm	(C) 4 pcs 2 x M8 x Ø19 mm	(G) 2 pcs Ø8 x 30 mm	(H) 1 pc M4 x 60 mm
---	--	--	---------------------------------------	--------------------------------------

Step 3

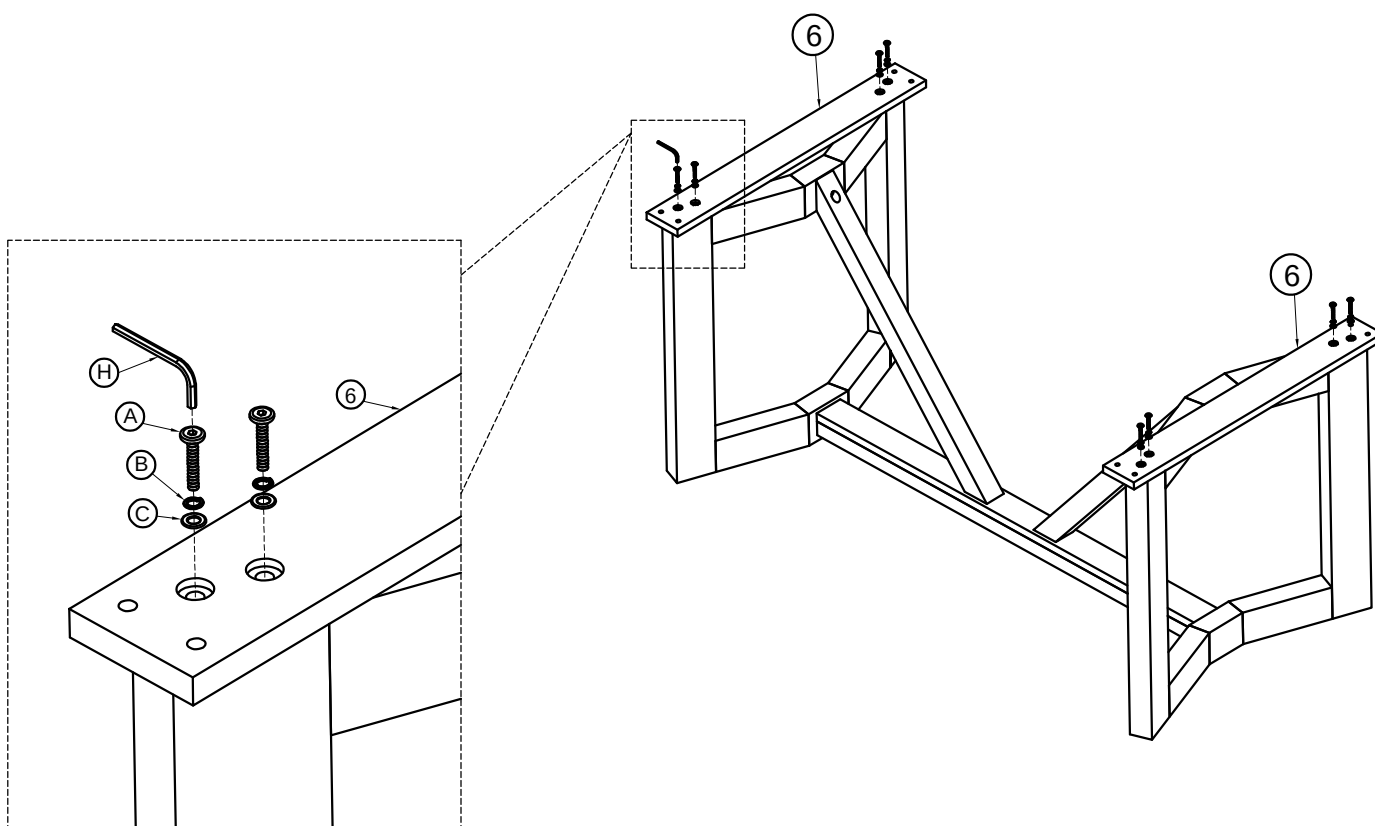


(A)  8 pcs Ø15 x M8 x 40 mm	(B)  8 pcs 1.2 x M8 x Ø12 mm	(C)  8 pcs 2 x M8 x Ø19 mm	(H)  1 pc M4 x 60 mm
---	--	--	--

Step 4

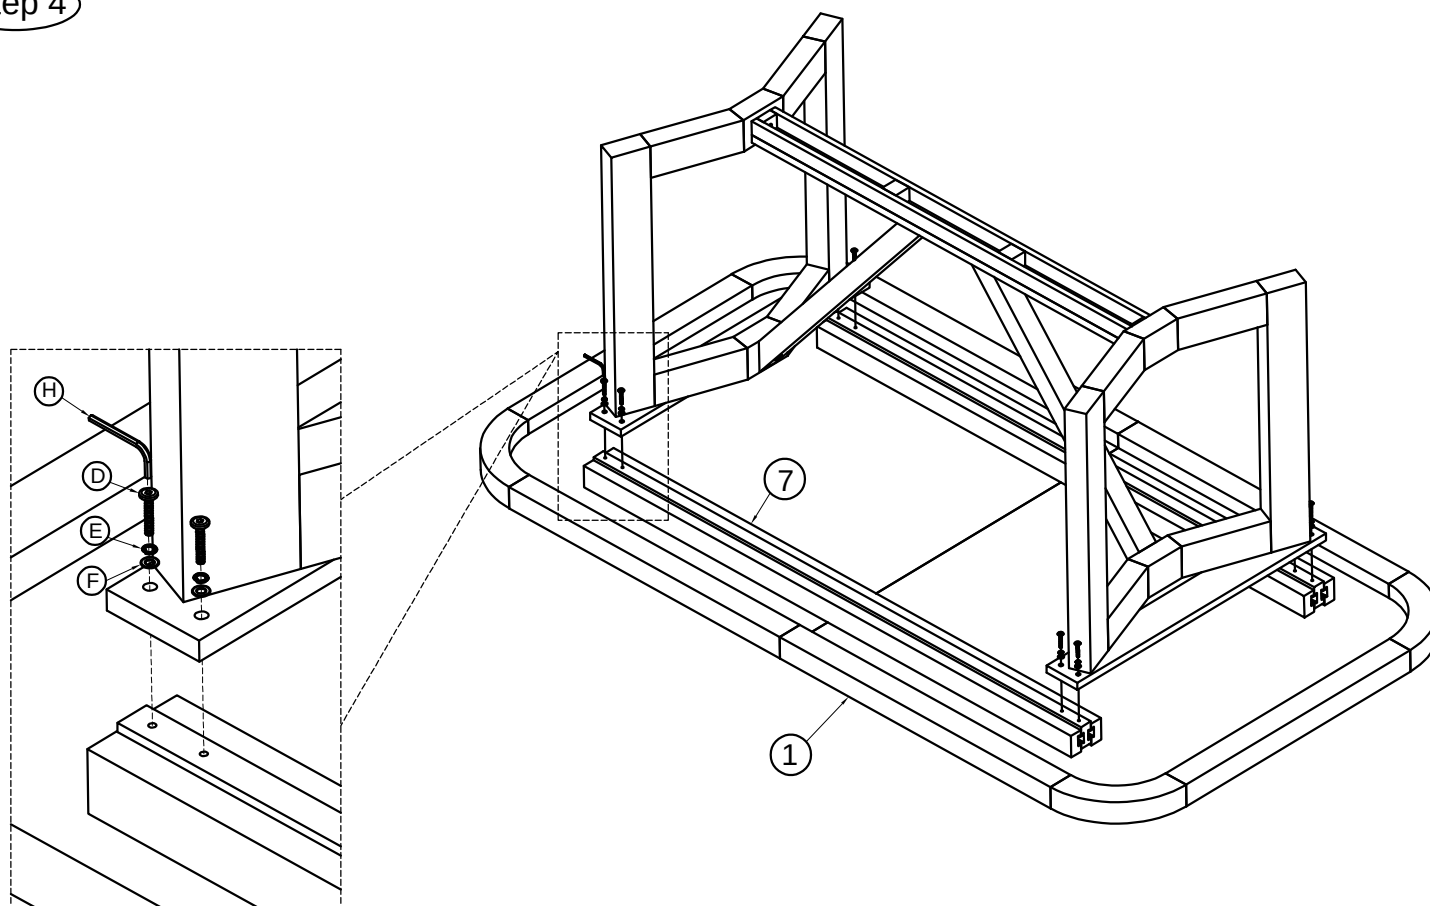


(D)  8 pcs Ø13 x M6 x 40 mm	(E)  8 pcs 2 x M6 x Ø19 mm	(F)  8 pcs 1.2 x M6 x Ø11 mm	(H)  1 pc M4 x 60 mm
---	--	--	--

Step 5 Adjust leaf line up with the side of table top before lock.

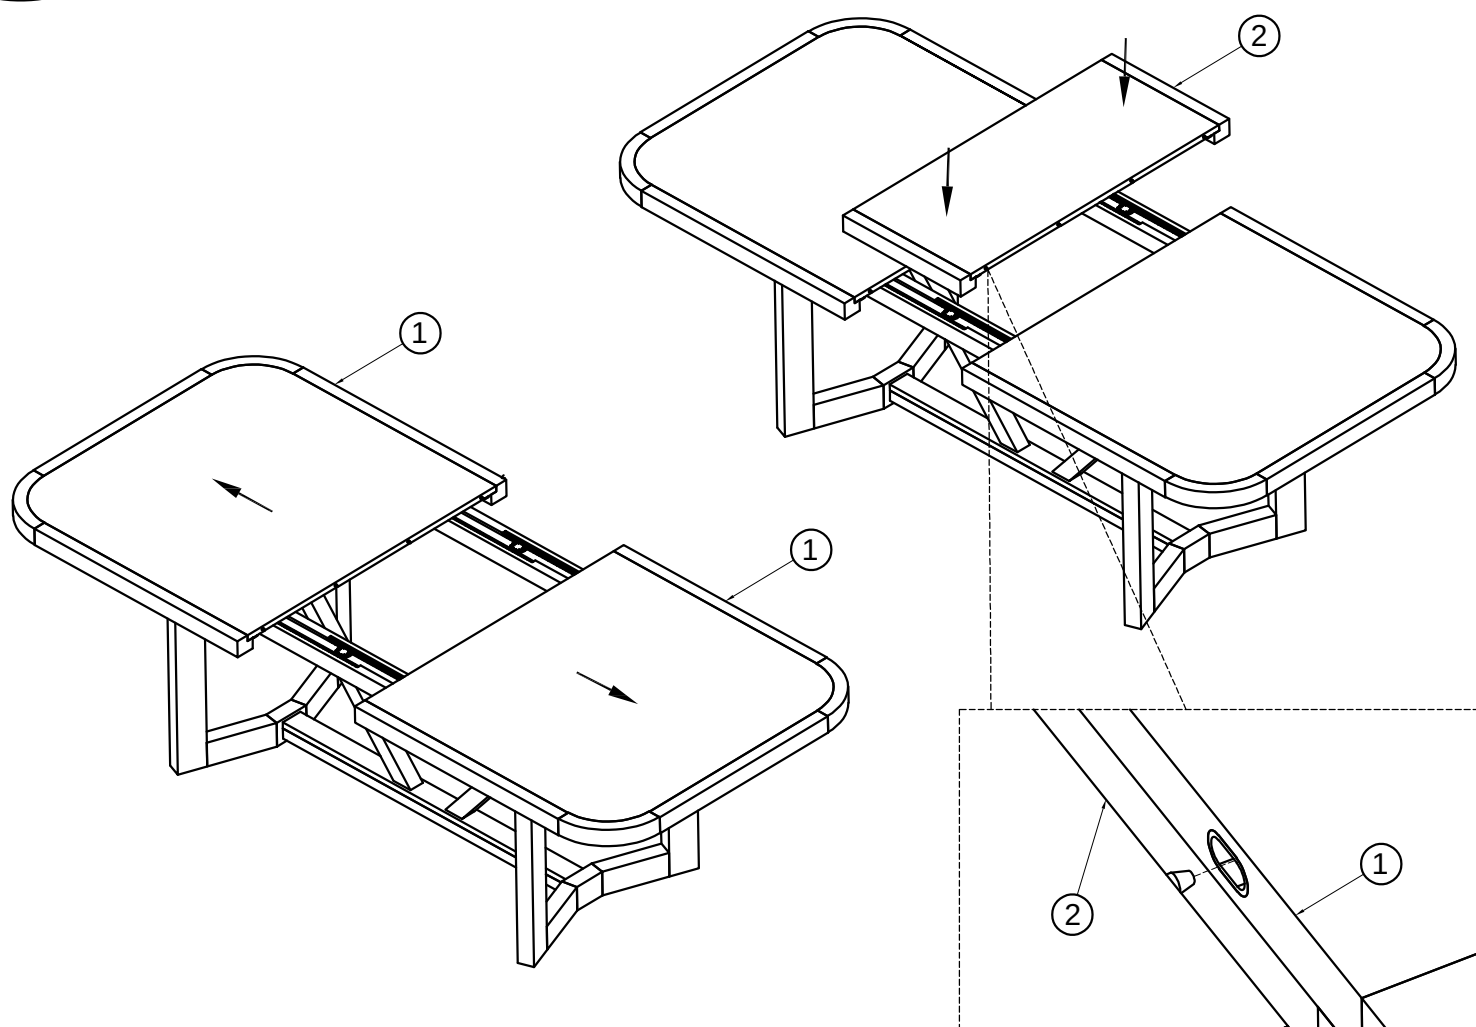

Step 6

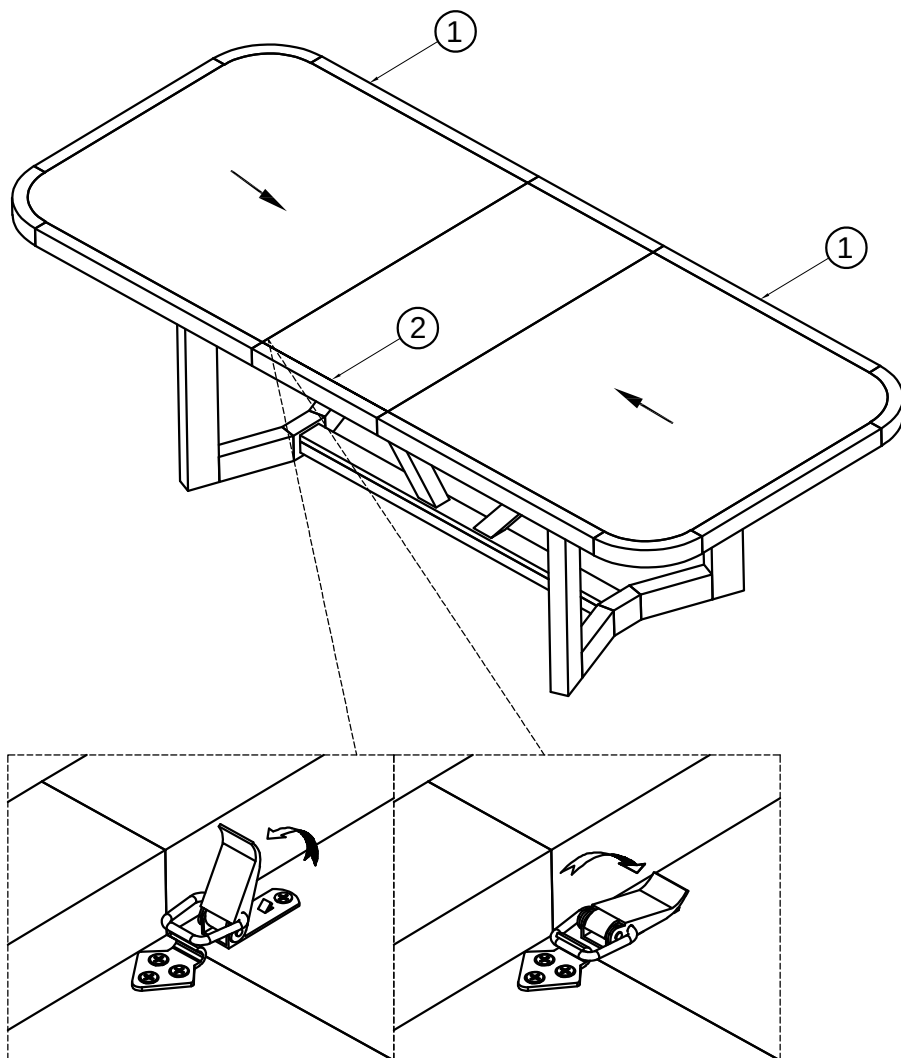

COMPLETE

