


Installation

1.As below, align the cabinet and frame to the hole position



2.Install screws according to the digital identification below

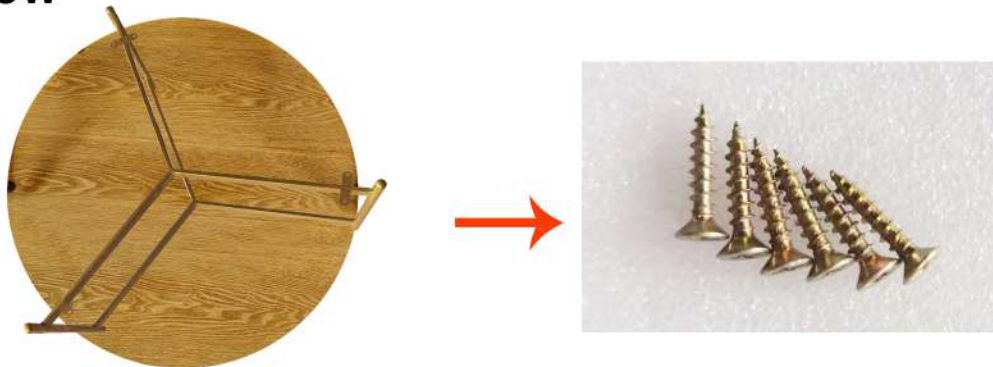

3.Install screws

