





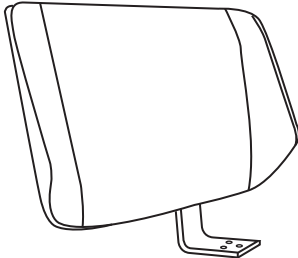


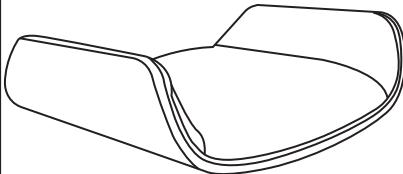

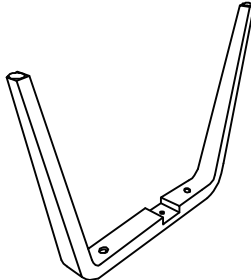


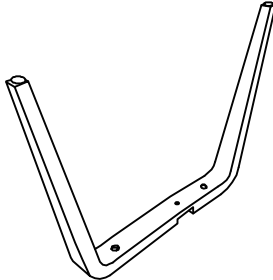


Ax1		Bx1		Cx1		Dx1		Ex1							
															
Fx6+1Ext		Gx6+1Ext		Hx3+1Ext		Ix3+1Ext		Jx2+1Ext		Kx2+1Ext		Lx1		Ix1	
															
M6X30mm		M6X25mm		M6X18X1mm Steel Washer		M6 Spring Washer		10mm thickness Rubber Washer		5mm thickness Rubber Washer				Spare foot pin	


STEP 1



STEP 2

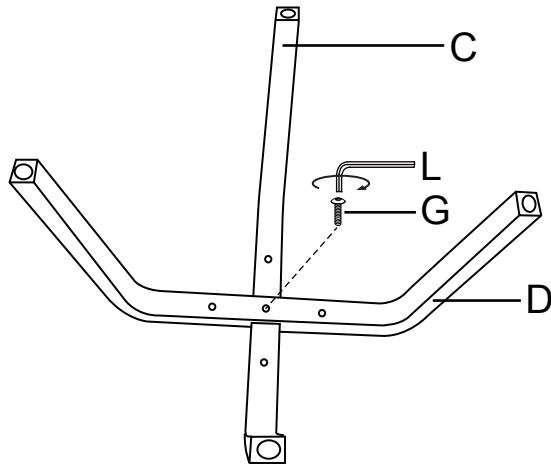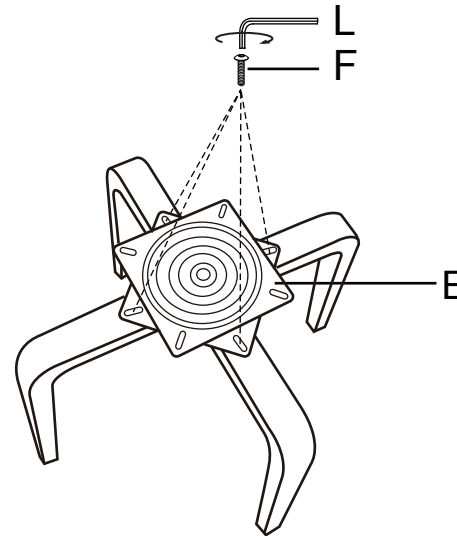


STEP 3

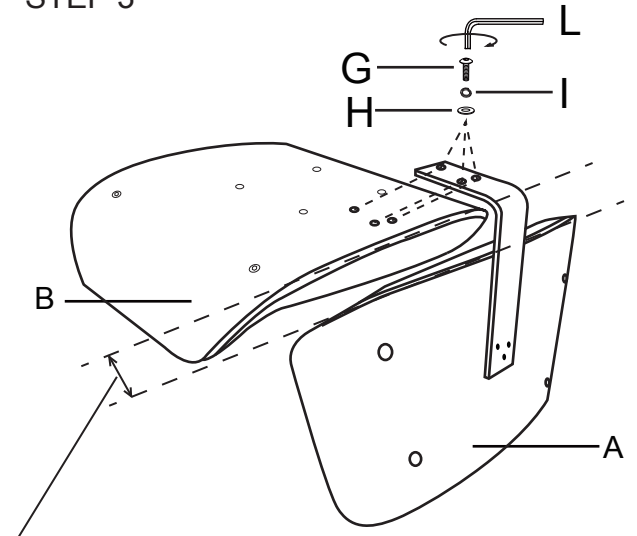

In Step 3, When installing the backrest, please align the parts according to the instructions.

STEP 4

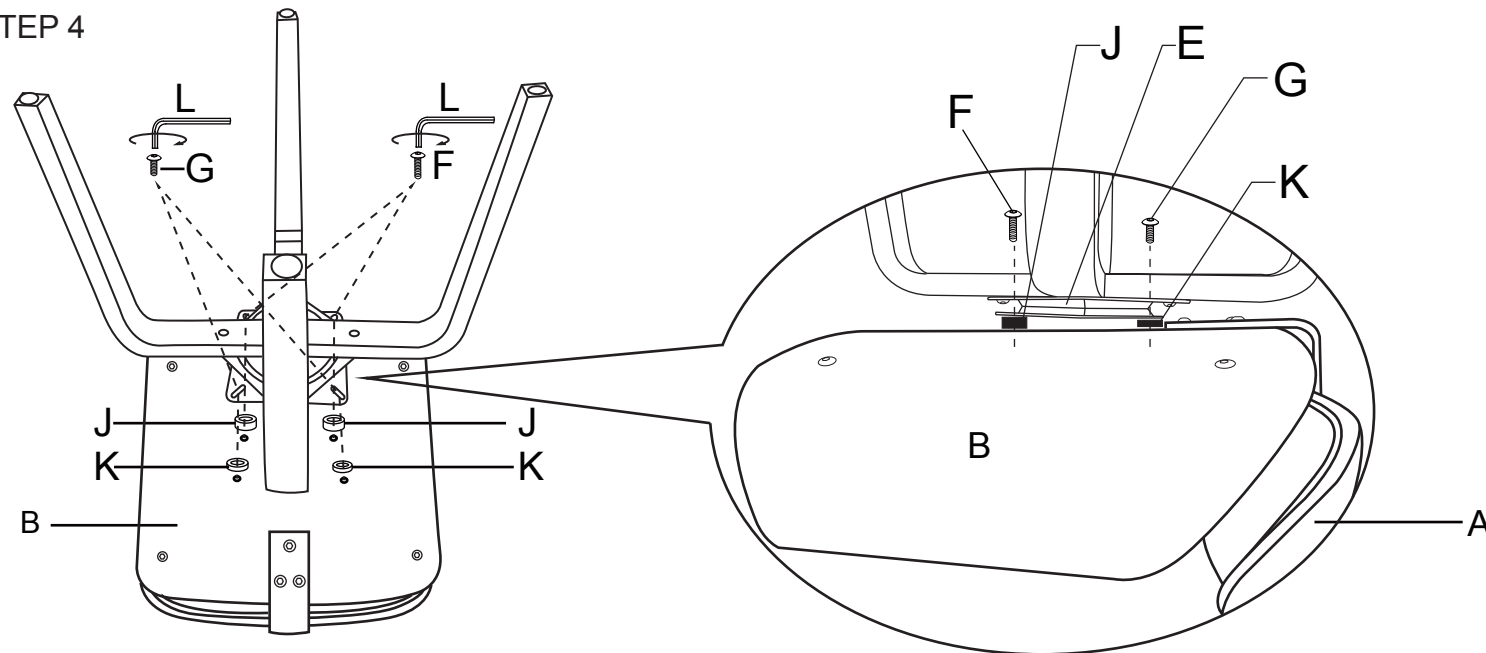

In Step 5, If the chair wobbles, please adjust the foot pins below the chair legs.

