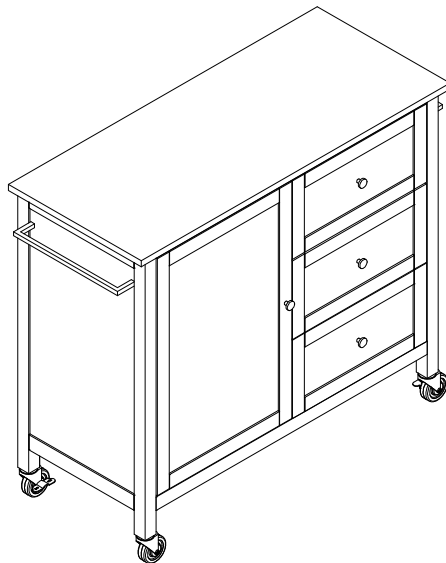


# **CROSLEY**











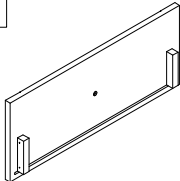
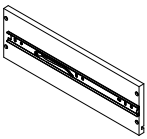
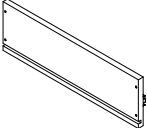
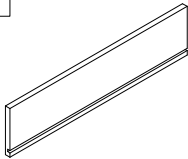

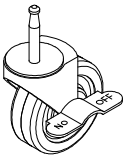

---

## FURNITURE














### Kitchen Island Cabinet CF3040

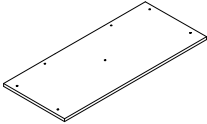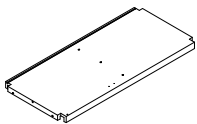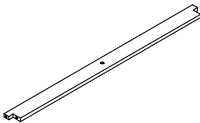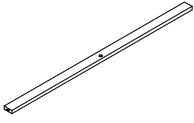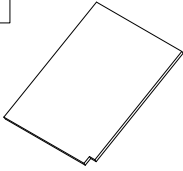

# PART LIST


<b>A</b>  (Ships Separately)	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Top Panel 1 PC	Bottom Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
Front Rail 1 PC	Back Rail 1 PC	Door 1 PC	Adjustable Shelf 1 PC	Back Panel 2 PCS
<b>K</b> 	<b>L</b> 	<b>M</b> 	<b>N</b> 	<b>O</b> 
Drawer Front Panel 3 PCS	Drawer Left Panel 3 PCS	Drawer Right Panel 3 PCS	Drawer Back Panel 3 PCS	Drawer Bottom Panel 3 PCS
<b>P</b> 	<b>Q</b> 			
Locking Caster 2 PCS	Caster 2 PCS			

# HARDWARE LIST

<b>#1</b>  Ø6*34mm	<b>#2</b>  Ø15*12mm	<b>#3</b>  Ø1/4"*1"	<b>#4</b>  Ø8*30mm	<b>#5</b>  Ø8*20mm
Cam Bolt 9 PCS (Extra 1)	Cam Lock 9 PCS (Extra 1)	Bolt 12 PCS (Extra 1)	Long Wood Dowel 5 PCS (Extra 1)	Short Wood Dowel 2 PCS (Extra 1)
<b>#6</b> 	<b>#7</b>  Ø3*16mm	<b>#8</b> 	<b>#9</b>  Ø5/32"*5/8"	<b>#10</b> 
Magnet 2 PCS	Short Screw 4 PCS (Extra 1)	Knob 4 PCS	Round Head Bolt 4 PCS (Extra 1)	Shelf Holder 4 PCS (Extra 1)
<b>#11</b>  Ø3.5*24mm	<b>#12</b> 	<b>#13</b> 		
Screw 24 PCS (Extra 1)	Towel Bar 2 PCS	Allen Wrench 1 PC		

## ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach drawer left panel (part L) and drawer right panel (part M) to drawer front panel (part K) using screws (part #11) and phillips head screwdriver. Slide drawer bottom panel (part O) to assembled unit (parts K, L & M).

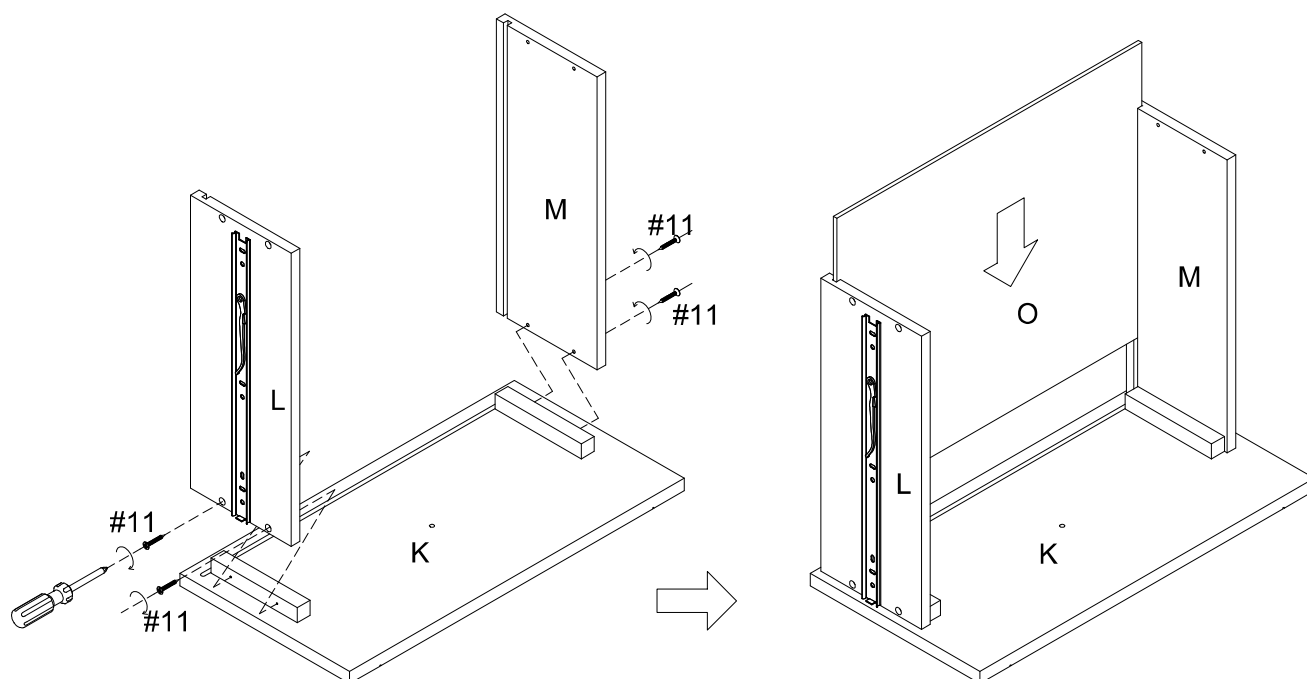

# 11  x 12

Step 2. Attach drawer back panel (part N) to assembled unit (parts L, M & O) using screws (part #11) and phillips head screwdriver. Attach knob (part #8) to drawer front panel (part K) using round head bolt (part #9) and phillips head screwdriver. Repeat steps 1 & 2 for remaining drawers.

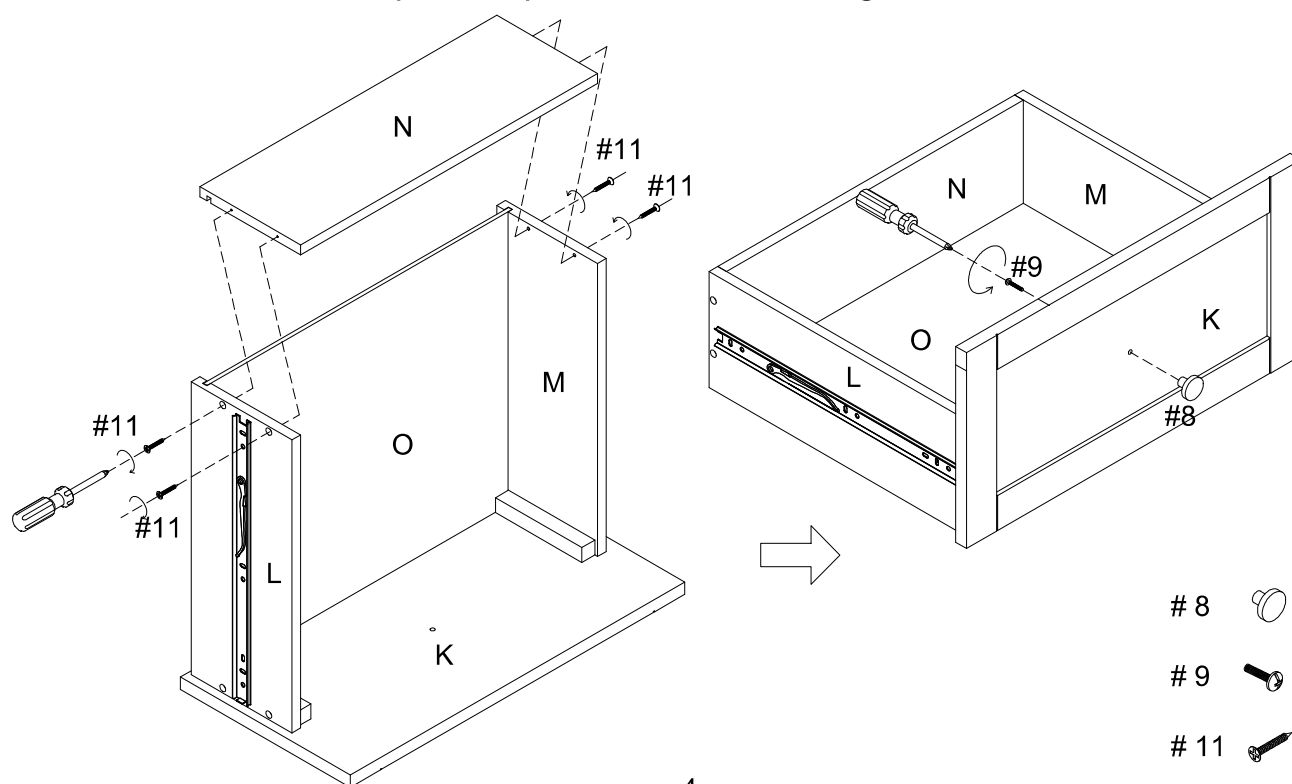


# 8  x 3

# 9  x 3


# 11  x 12

Step 3. Attach knob (part #8) to door (part H) using round head bolt (part #9) and phillips head screwdriver. Attach towel bars (part #12) to panels (parts C & D) using bolts (part #3) and allen wrench (part #13).

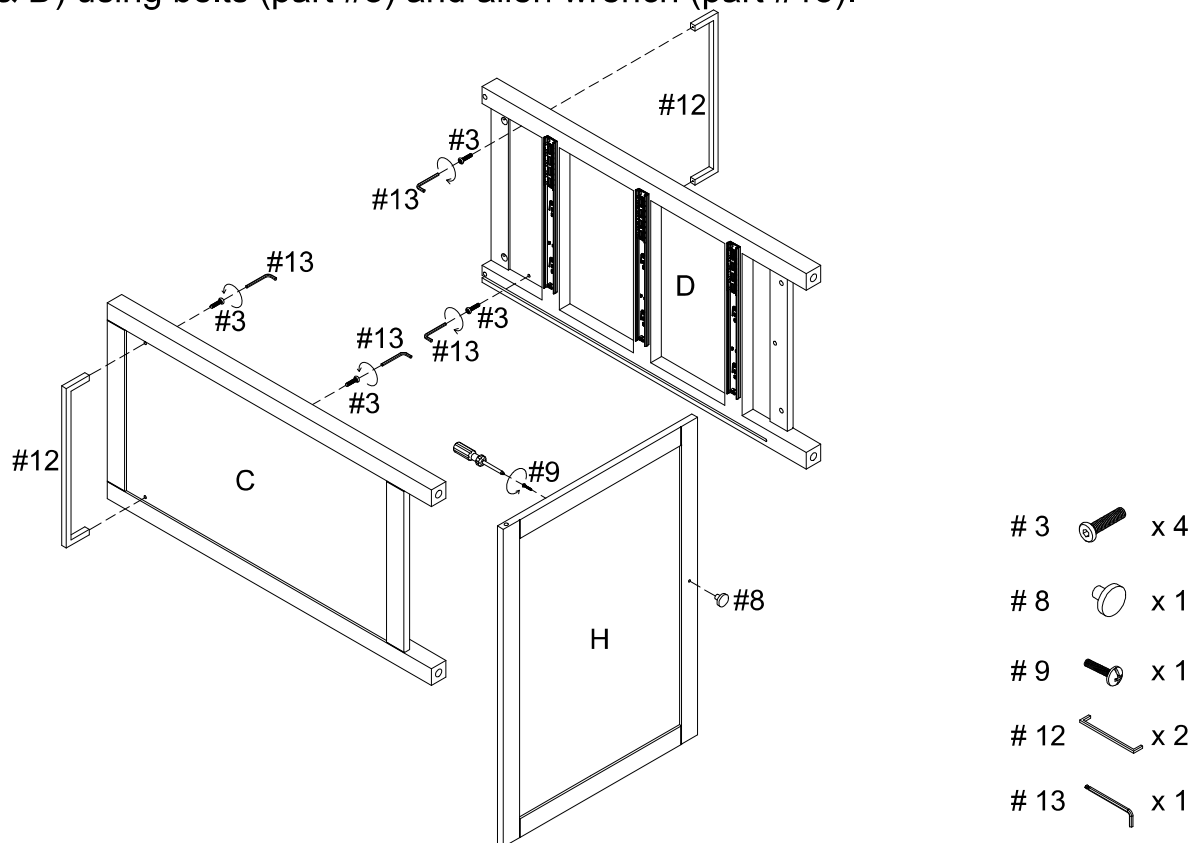


Step 4. Attach cam bolts (part #1) to top panel (part A) and panels (parts C & D) using phillips head screwdriver.


Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

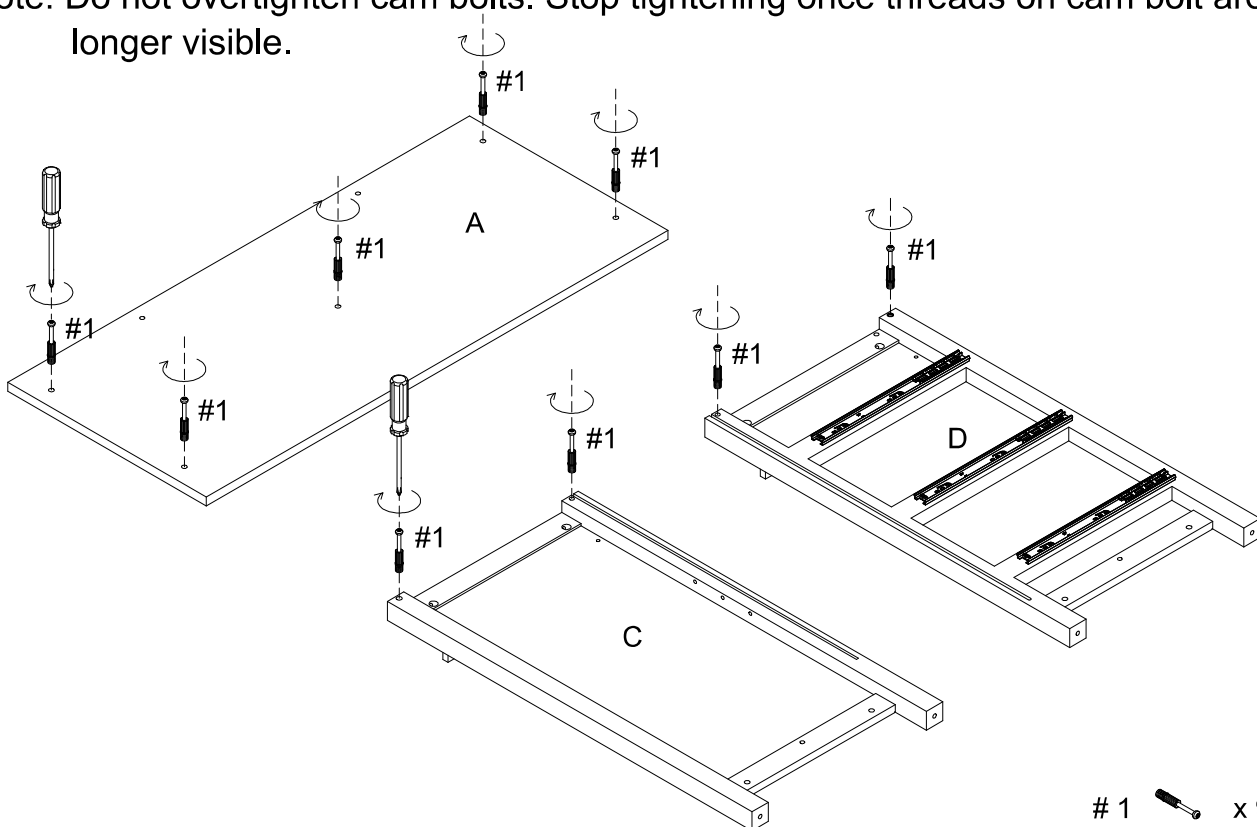


Step 5. Attach magnets (part #6) to front rail (part F) and bottom panel (part B) using short screws (part #7) and phillips head screwdriver.

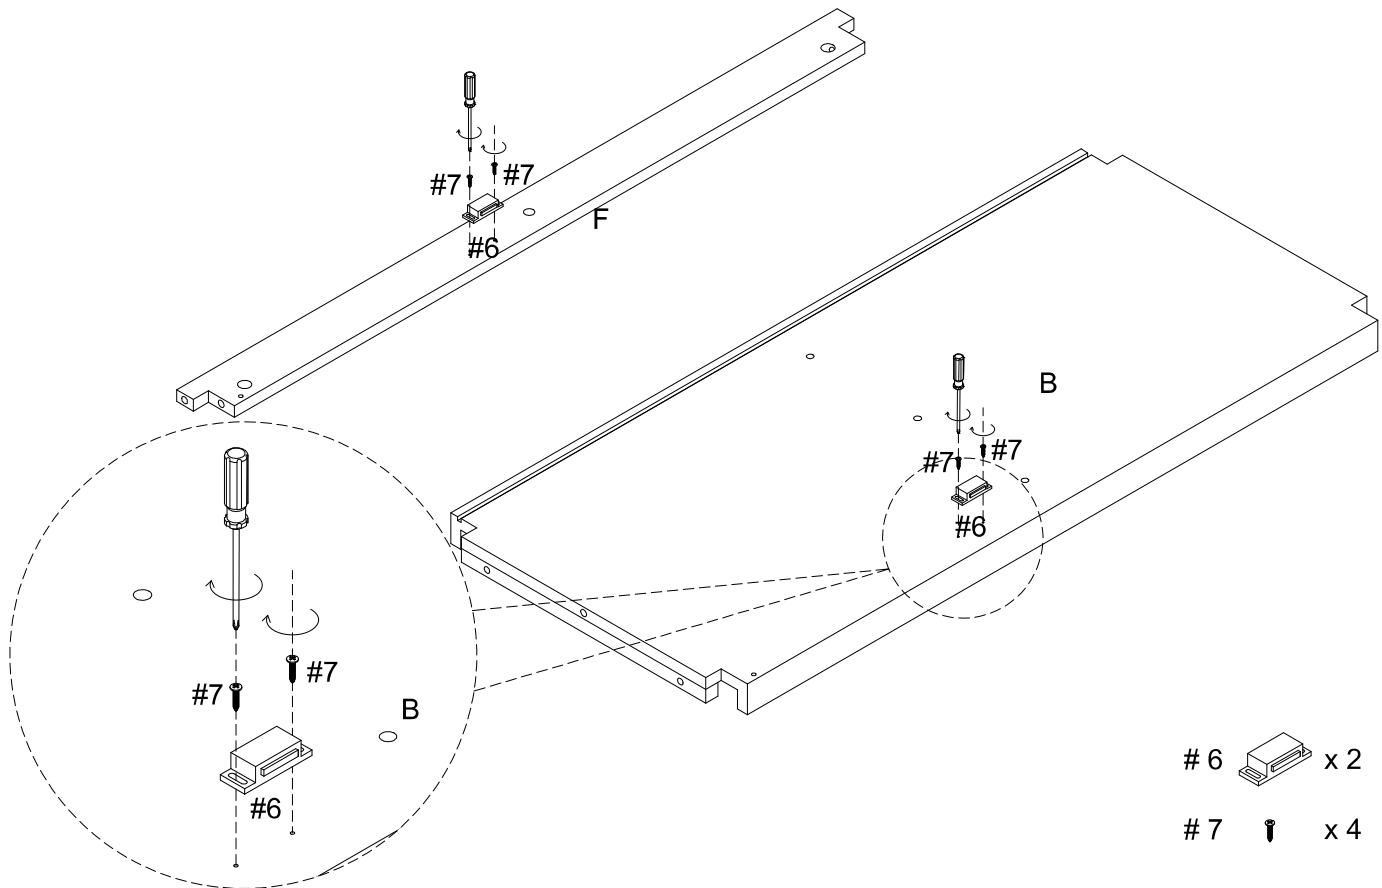

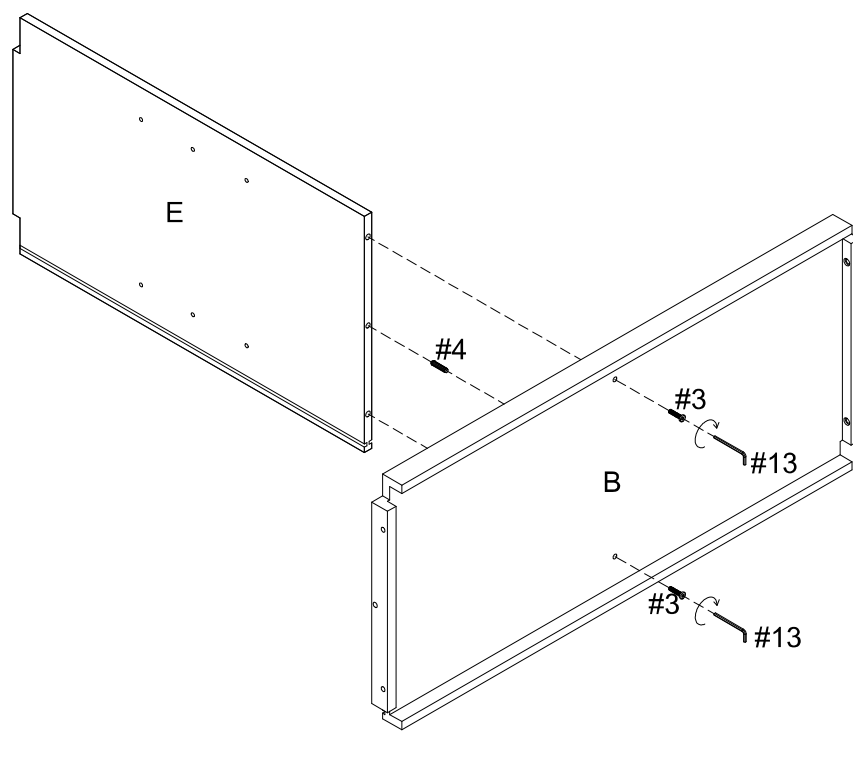

Step 6. Attach bottom panel (part B) to partition panel (part E) using long wood dowel (part #4), bolts (part #3) and allen wrench (part #13).

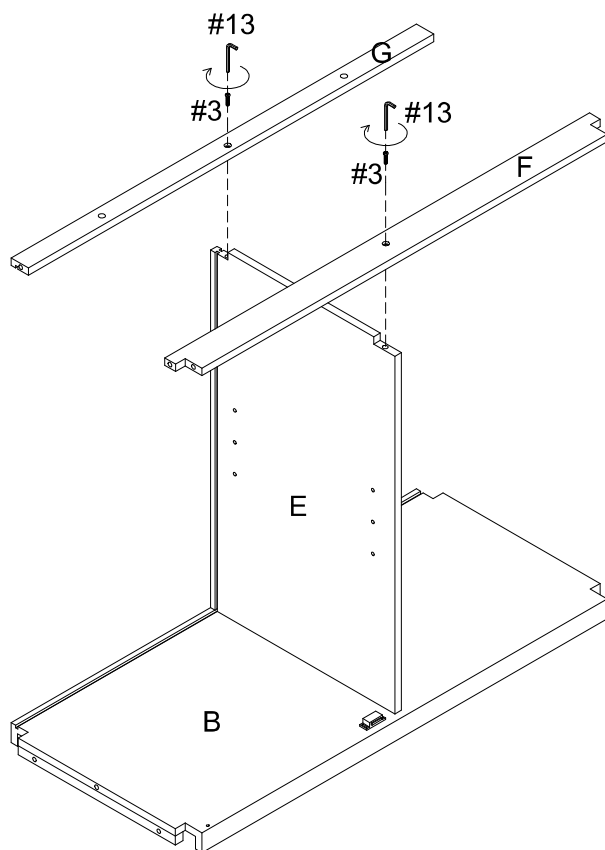


Step 7. Attach rails (parts F & G) to partition panel (part E) using bolts (part #3) and allen wrench (part #13).





# 3  x 2  
# 13  x 1



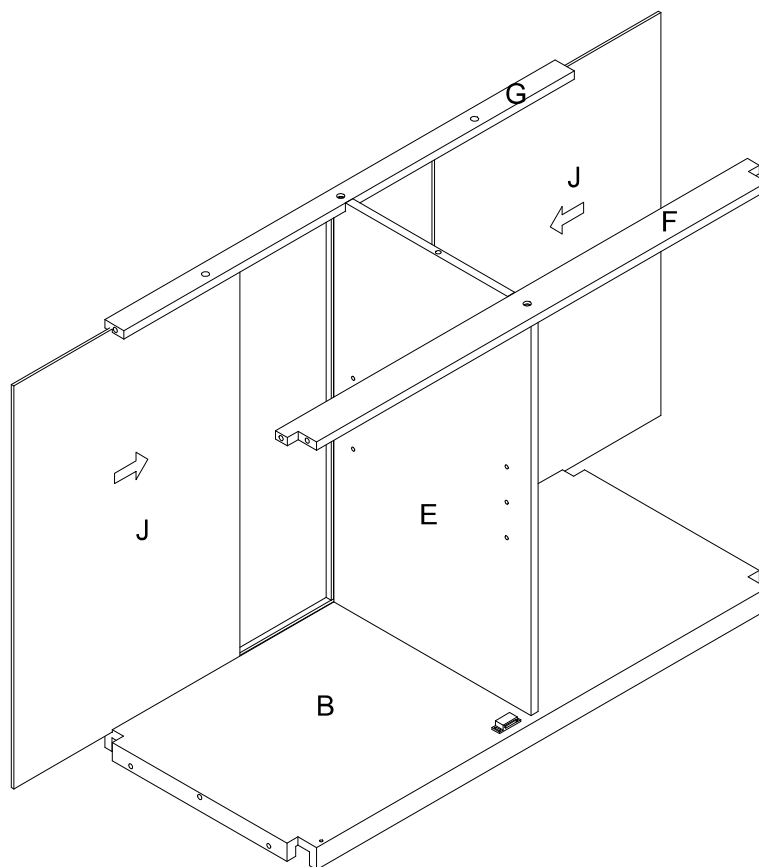

Step 8. Slide back panels (part J) to assembled unit (parts B, E & G).

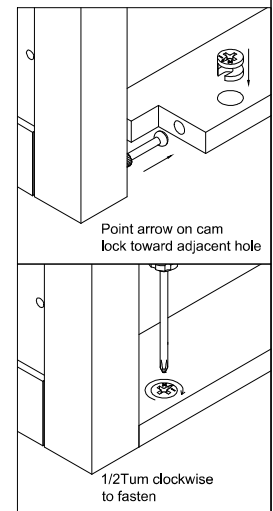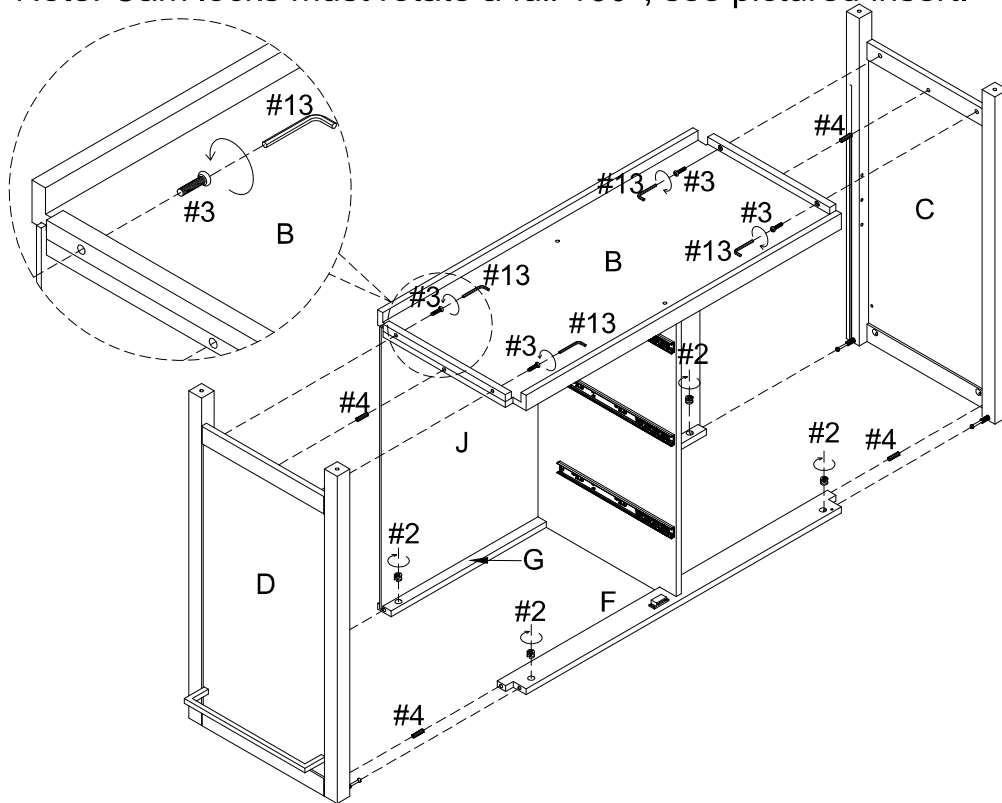


Step 9. Attach panels (parts C & D) to assembled unit (parts B, F, G & J) using cam locks (part #2), bolts (part #3), long wood dowels (part #4), allen wrench (part #13) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°, see pictured insert.



- # 2  x 4
- # 3  x 4
- # 4  x 4
- # 13  x 1


Step 10. Attach casters (parts P & Q) to panels (parts C & D) by inserting into pre-drilled holes and pressing firmly.

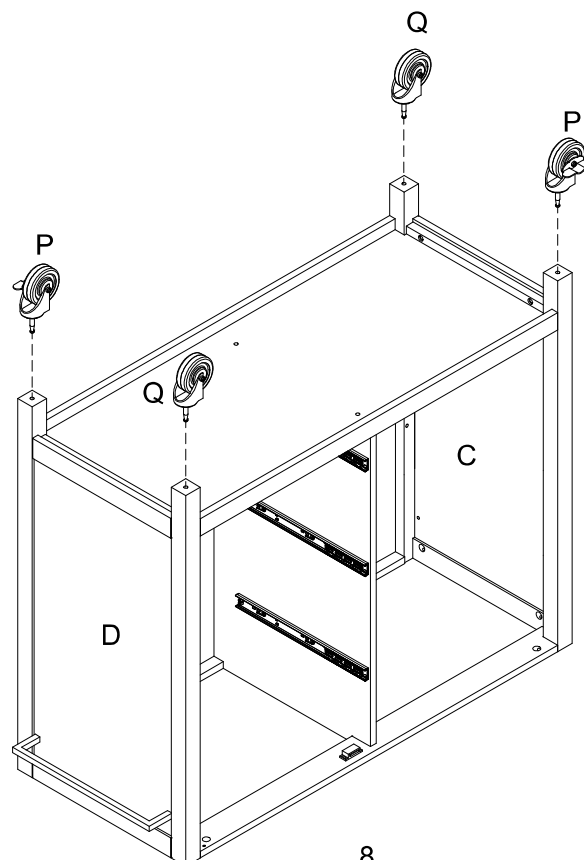




Step 11. Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts C, D, E, F & G) using cam locks (part #2), short wood dowels (part #5) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°, see pictured insert.

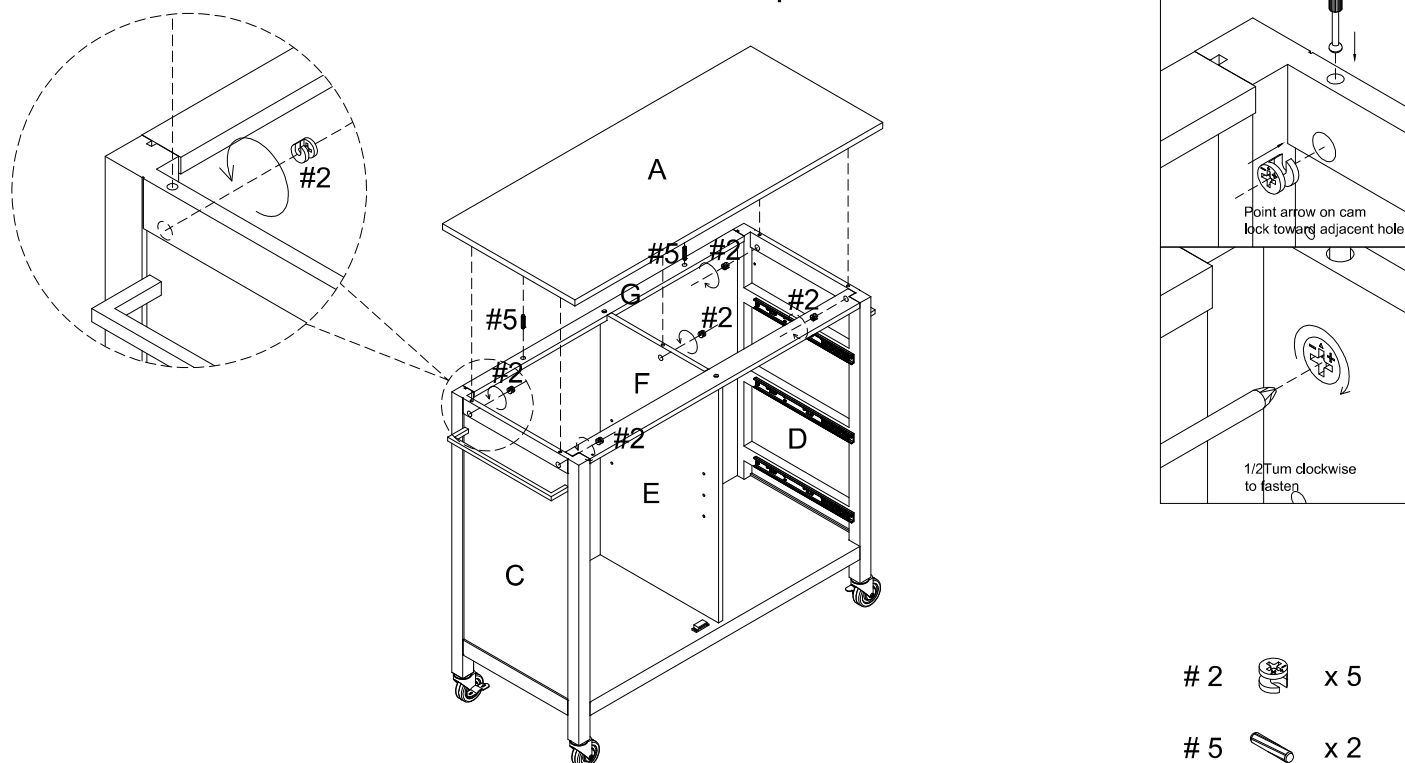


Step 12. Place shelf holders (part #10) into desired position and then slide adjustable shelf (part I) into place.

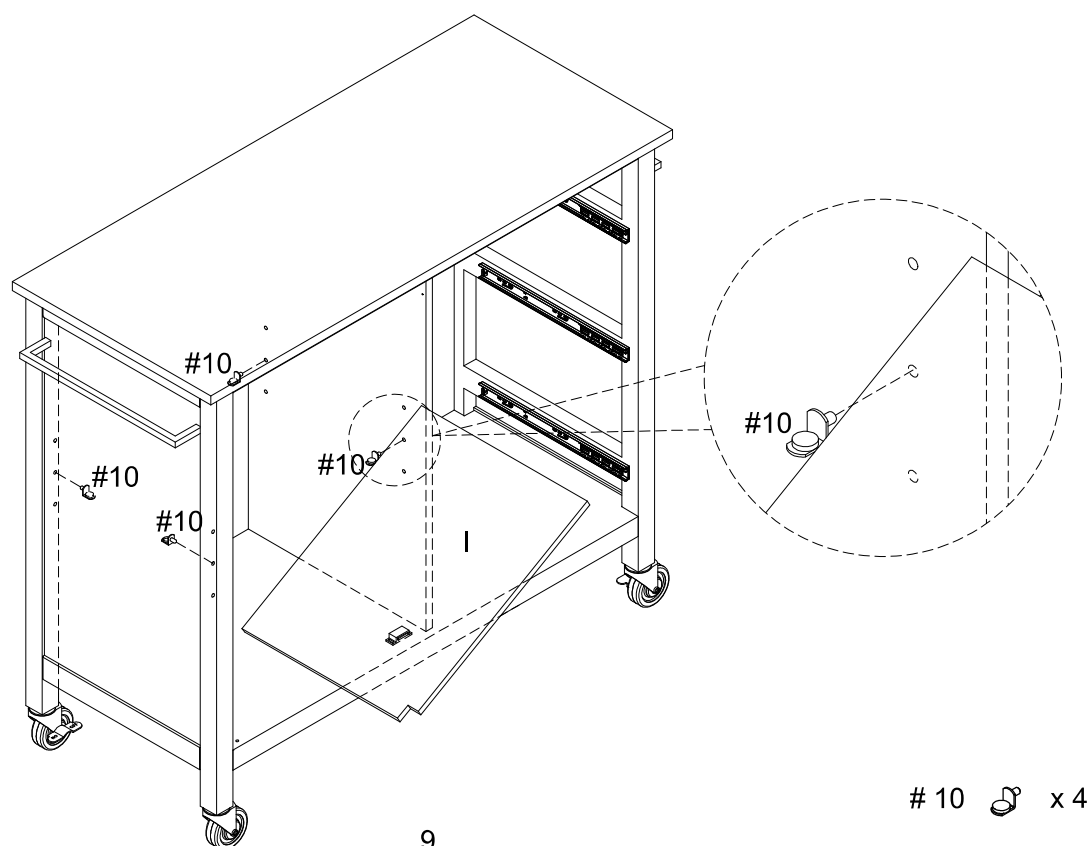

Step 13. Attach door (part H) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part B). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of front rail (part F).

Note: Be sure top and bottom pin hinges are fully extended to secure door in place.

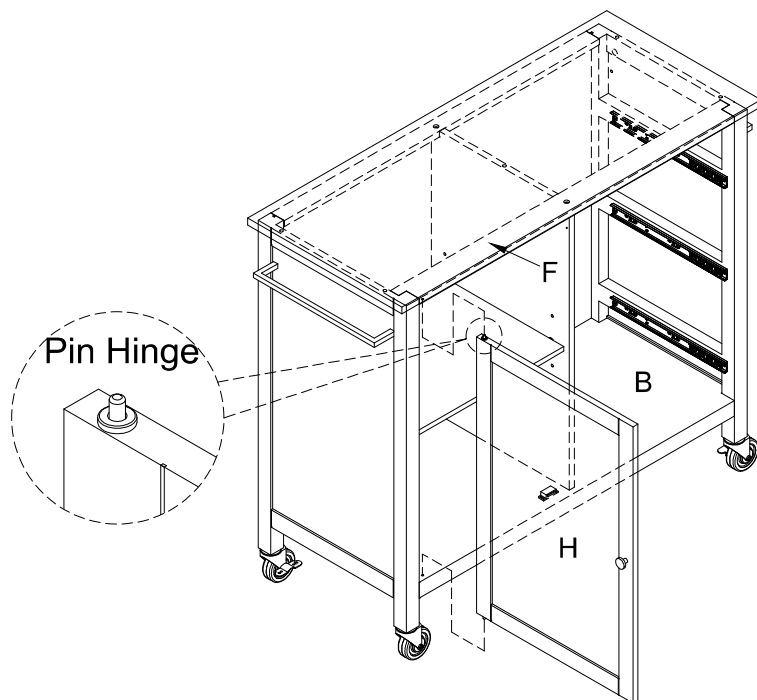

Step 14. Slide assembled drawers into place.

Note: To release trigger disconnect levers push one side up and the other down.

Move the sliders to the front end of rail before sliding the drawer into place.

