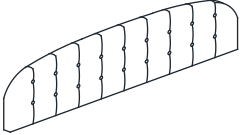
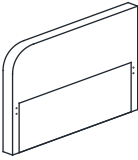
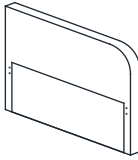
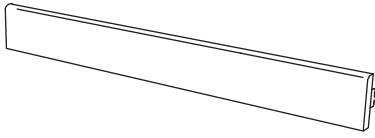
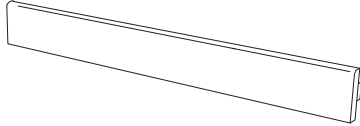


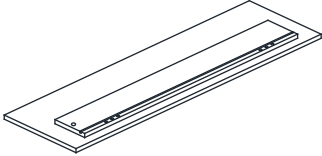
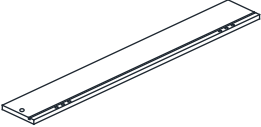

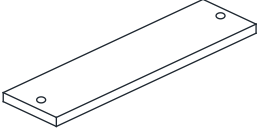
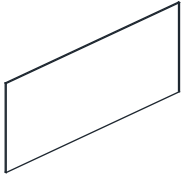






ASSEMBLY INSTRUCTION

ITEM : C5090TS

PARTLIST


1  BACK PANEL x1	2  SIDE PANEL (L) x1	3  SIDE PANEL (R) x1	4  FRONT RAIL x1	5  BACK RAIL x1
6  ROLL SLAT x2	7  WOODEN FOOT x4	8  DRAWER FRONT PANEL x2	9  DRAWER BACK PANEL x2	10  DRAWER SIDE PANEL x4
11  DRAWER SUPPORT x4	12  DRAWER PANEL x2	13  CASTOR x8		

HARDWARE


A  JCBB SCREW M8 x 20MM x8	B  JCBC SCREW M6 x 50MM x4	C  SPRING WASHER M6 x 12MM x4	D  FLAT WASHER M6 x 19MM x4	E  CSK C/B SCREW M4 x 32MM x12
F  CSK C/B SCREW M4 x 16MM x32	G  MINIFIX CAM LOCK x16	H  MINIFIX BOLT x16	I  WOOD DOWEL M6 x 30MM x32	J  L - KEY M4 x 100MM x1
K  L - KEY M5 x 65MM x1				

ASSEMBLY INSTRUCTION


STEP 1

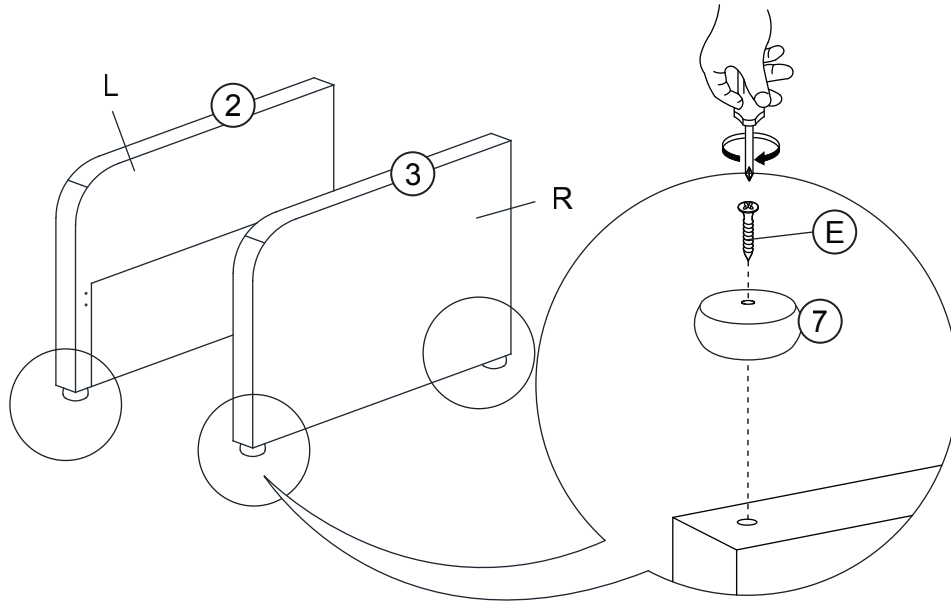


STEP 2

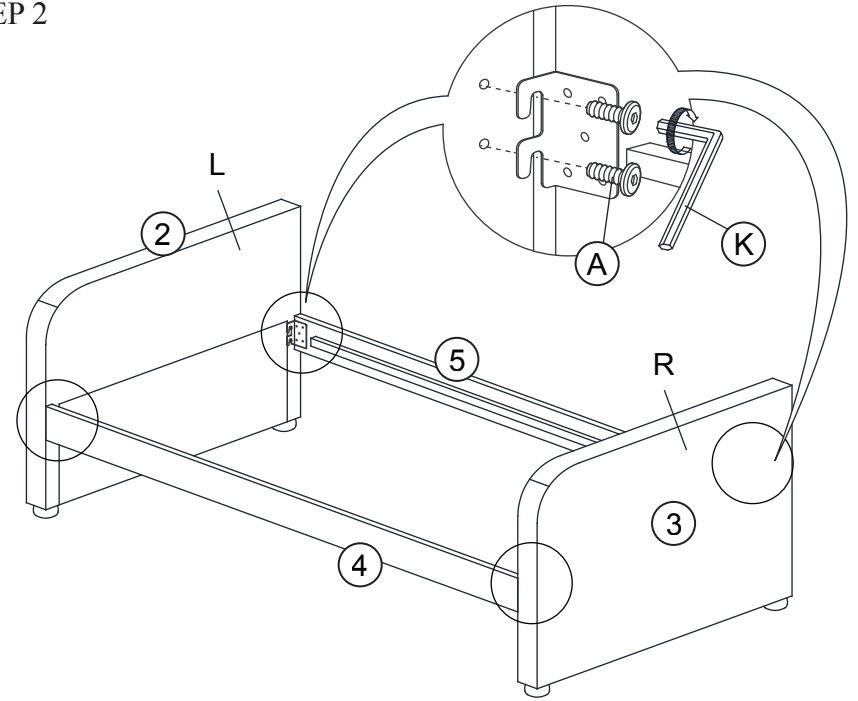

STEP 3

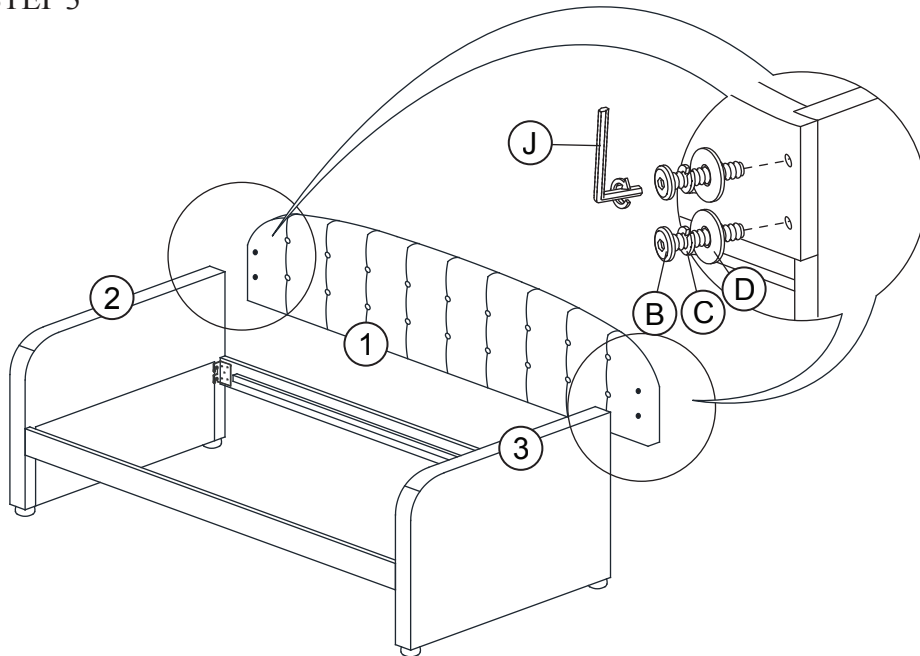


STEP 4

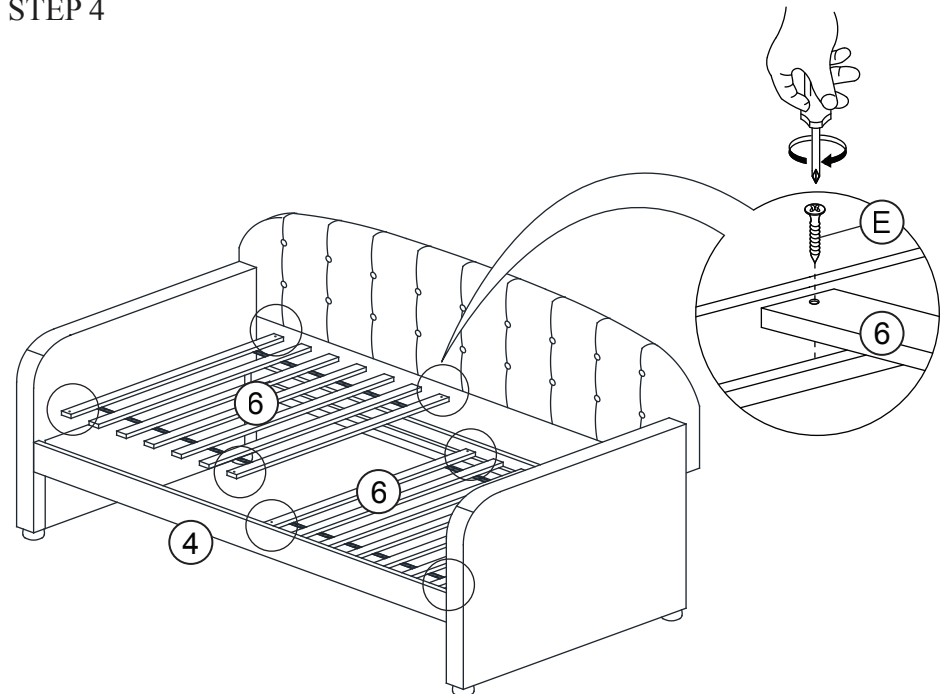


ASSEMBLY INSTRUCTION


STEP 5

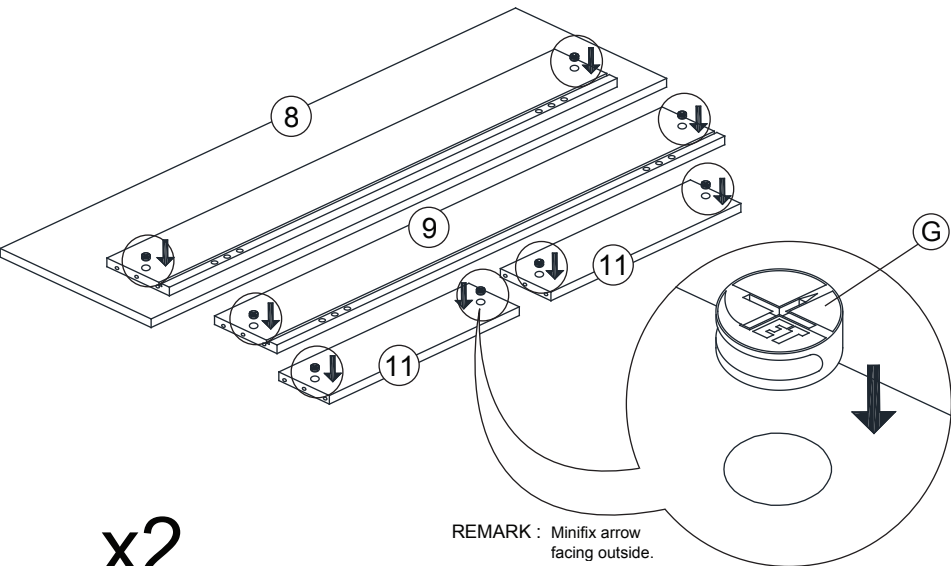


STEP 6

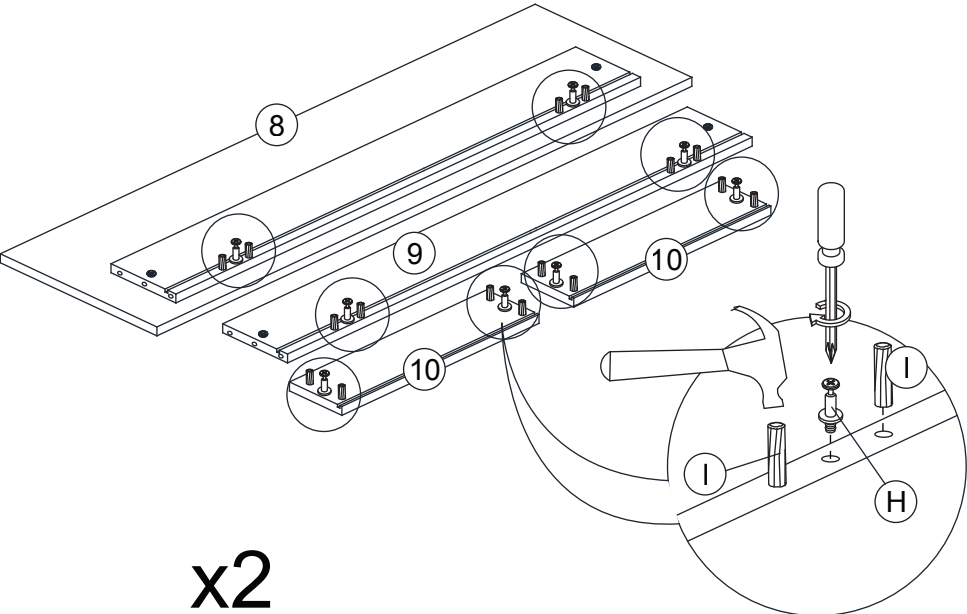

STEP 7

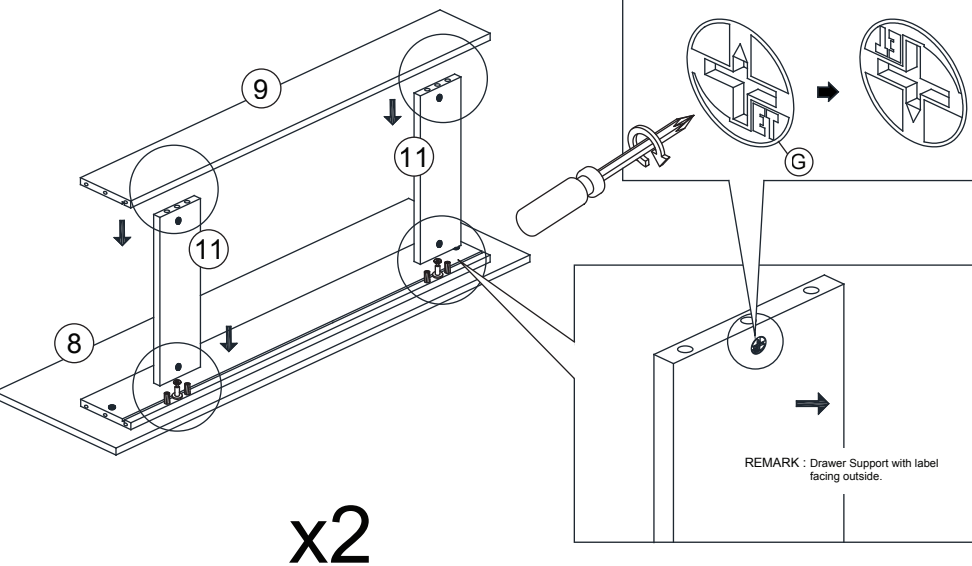


STEP 8

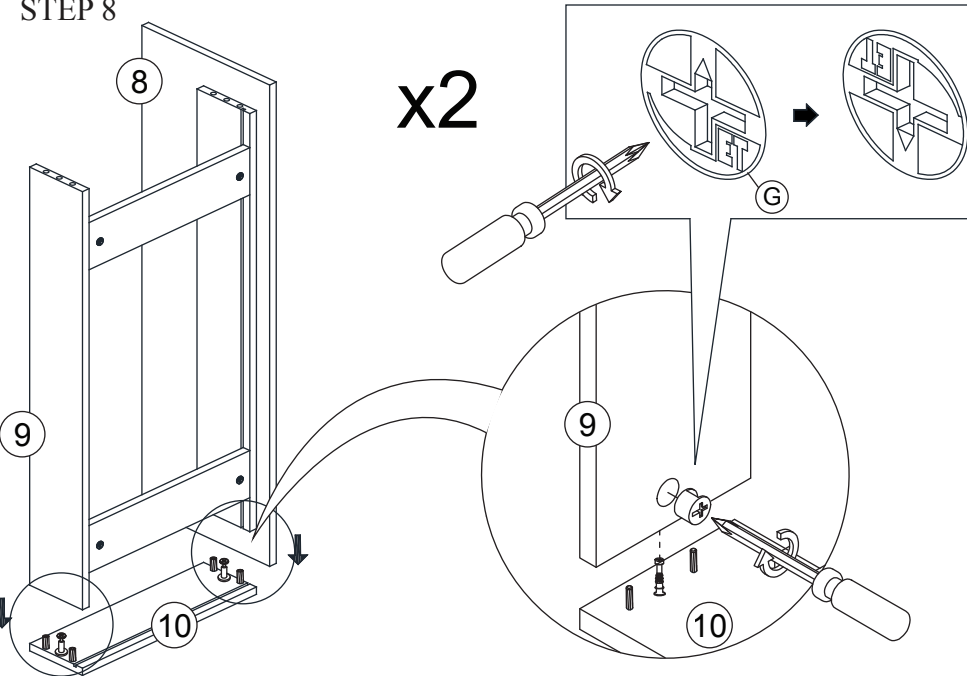


ASSEMBLY INSTRUCTION


STEP 9

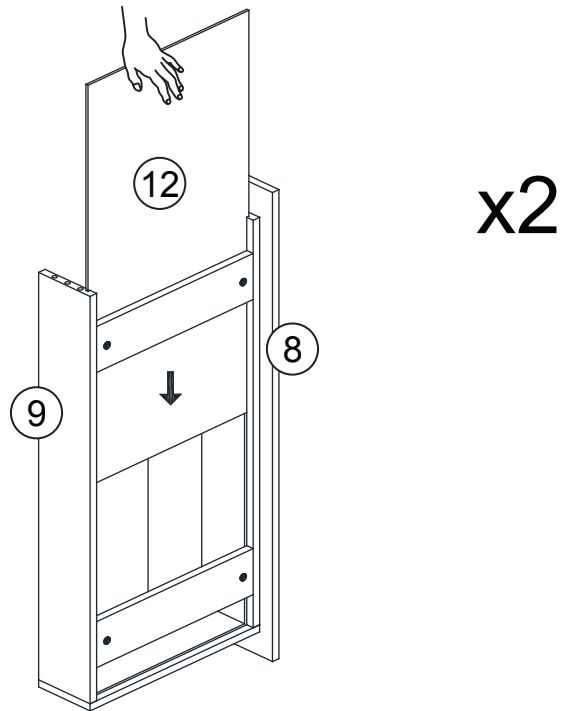


STEP 10

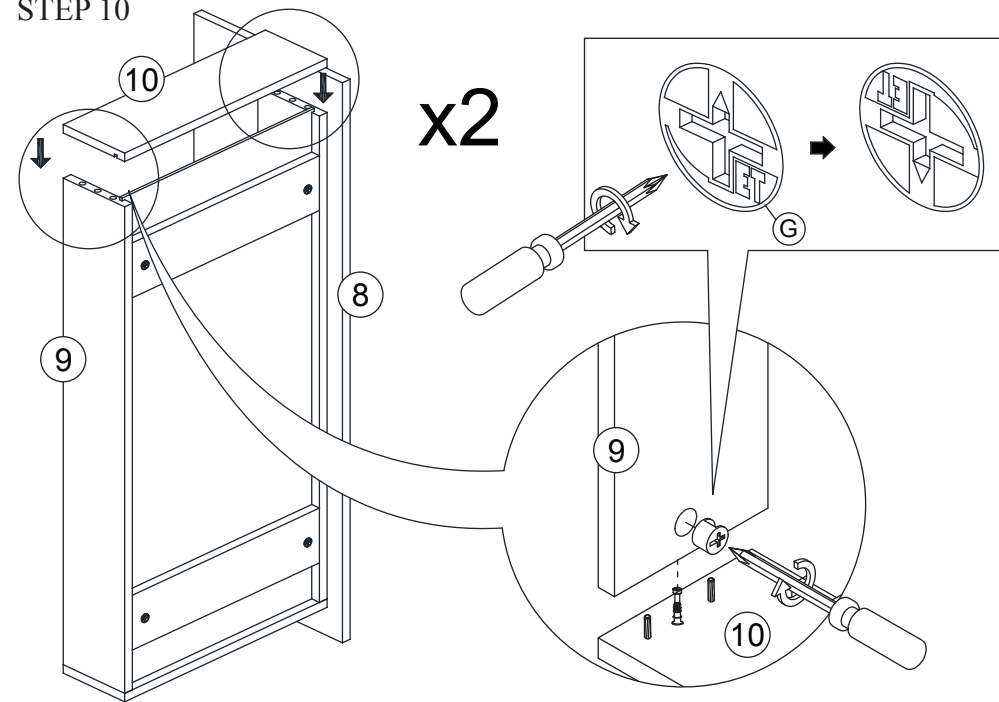

STEP 11

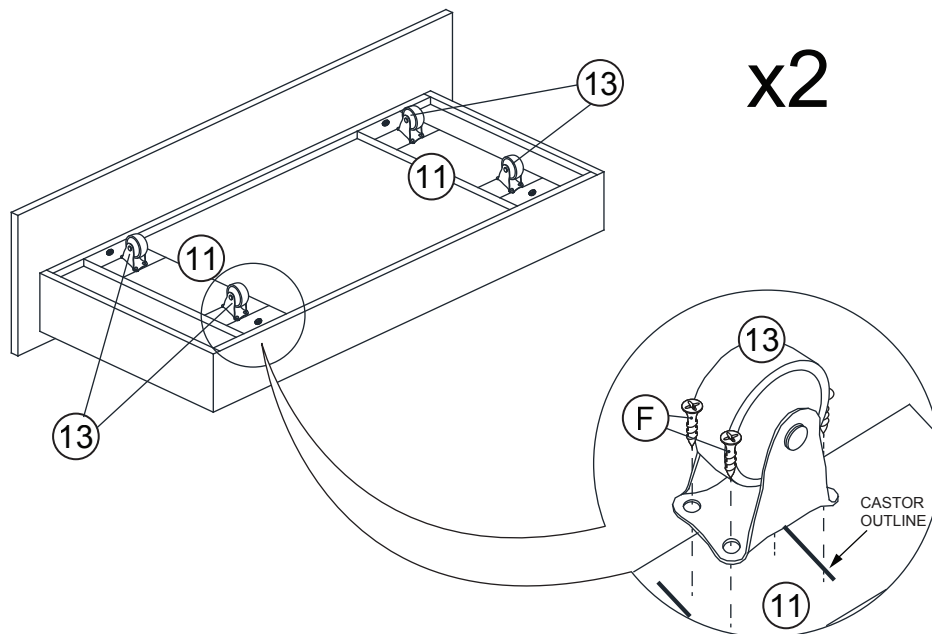

STEP 12

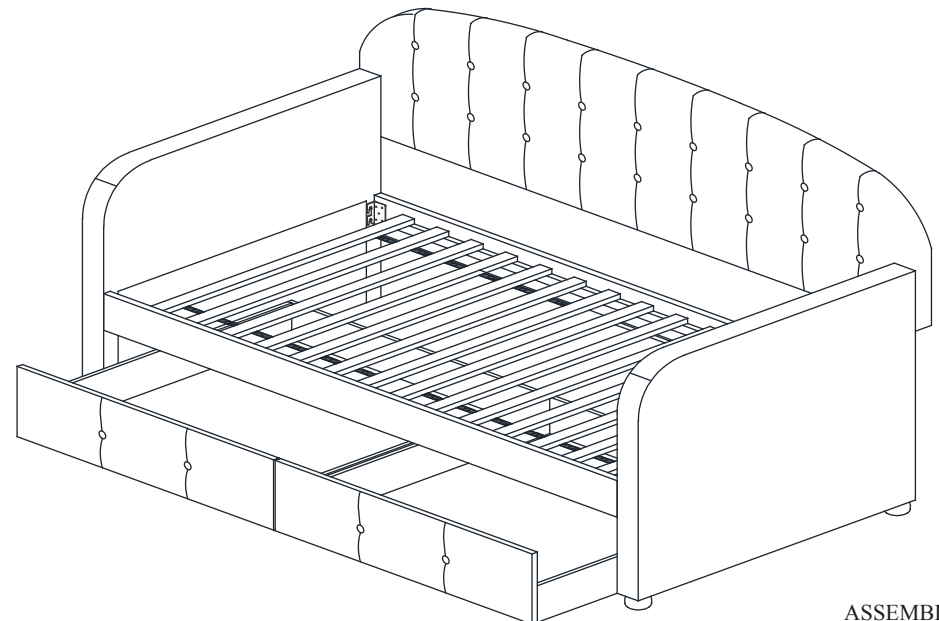

ASSEMBLY
COMPLETED