

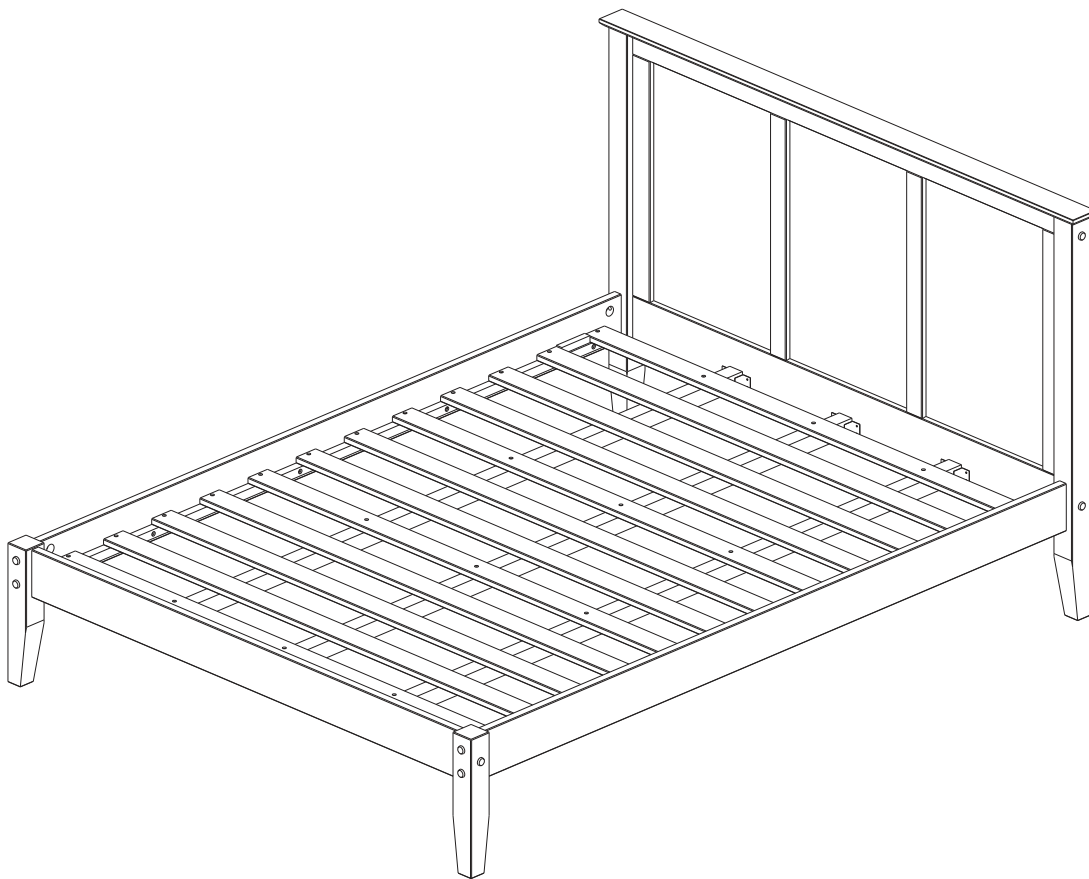
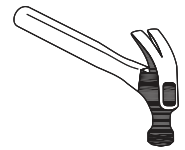



# ASSEMBLY INSTRUCTIONS

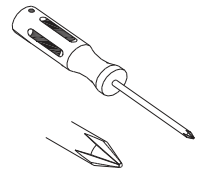


00:45 Hs

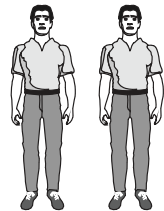


## HARDWARE INCLUDED



**A - 10,0x50 Wood Dowel**  
Qty. 14



**B - 4,0x30 Screw**  
Qty. 04




**C - 3,5x16 Screw**  
Qty. 36



**D - 3,5x35 Screw**  
Qty. 36




**E - Screw Nut**  
Qty. 14




**F - Allen Key**  
Qty. 01




**G - Tap Hole**  
Qty. 14




**H - 1/4x90 Screw**  
Qty. 14



**I - 8,0x30 Wood Dowel**  
Qty. 03




**J - Bed Frame Separator 98mm**  
Qty. 02

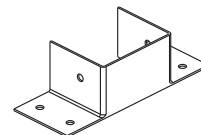


**K - Support Bar**  
Qty. 06


# PARTS INCLUDED

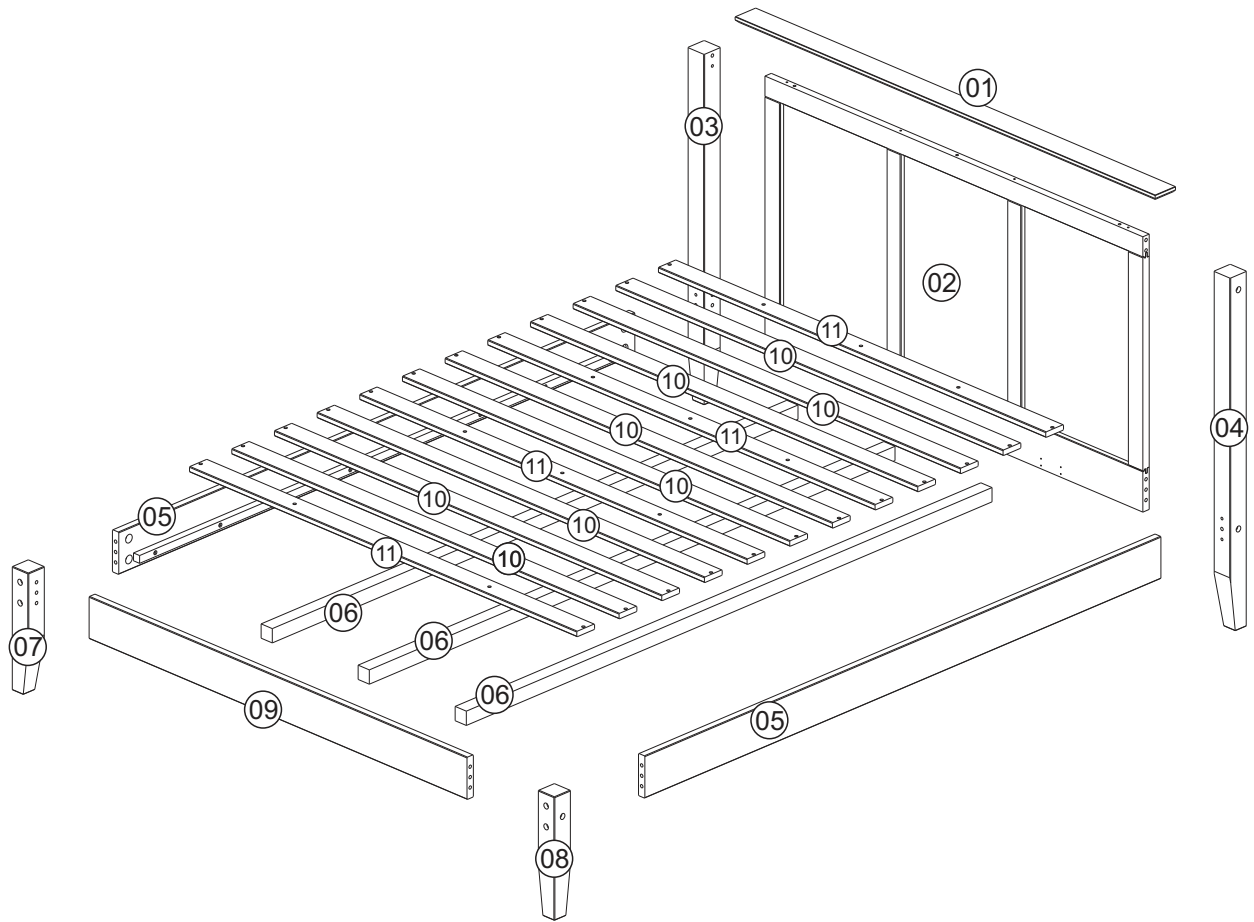


## STEP 1

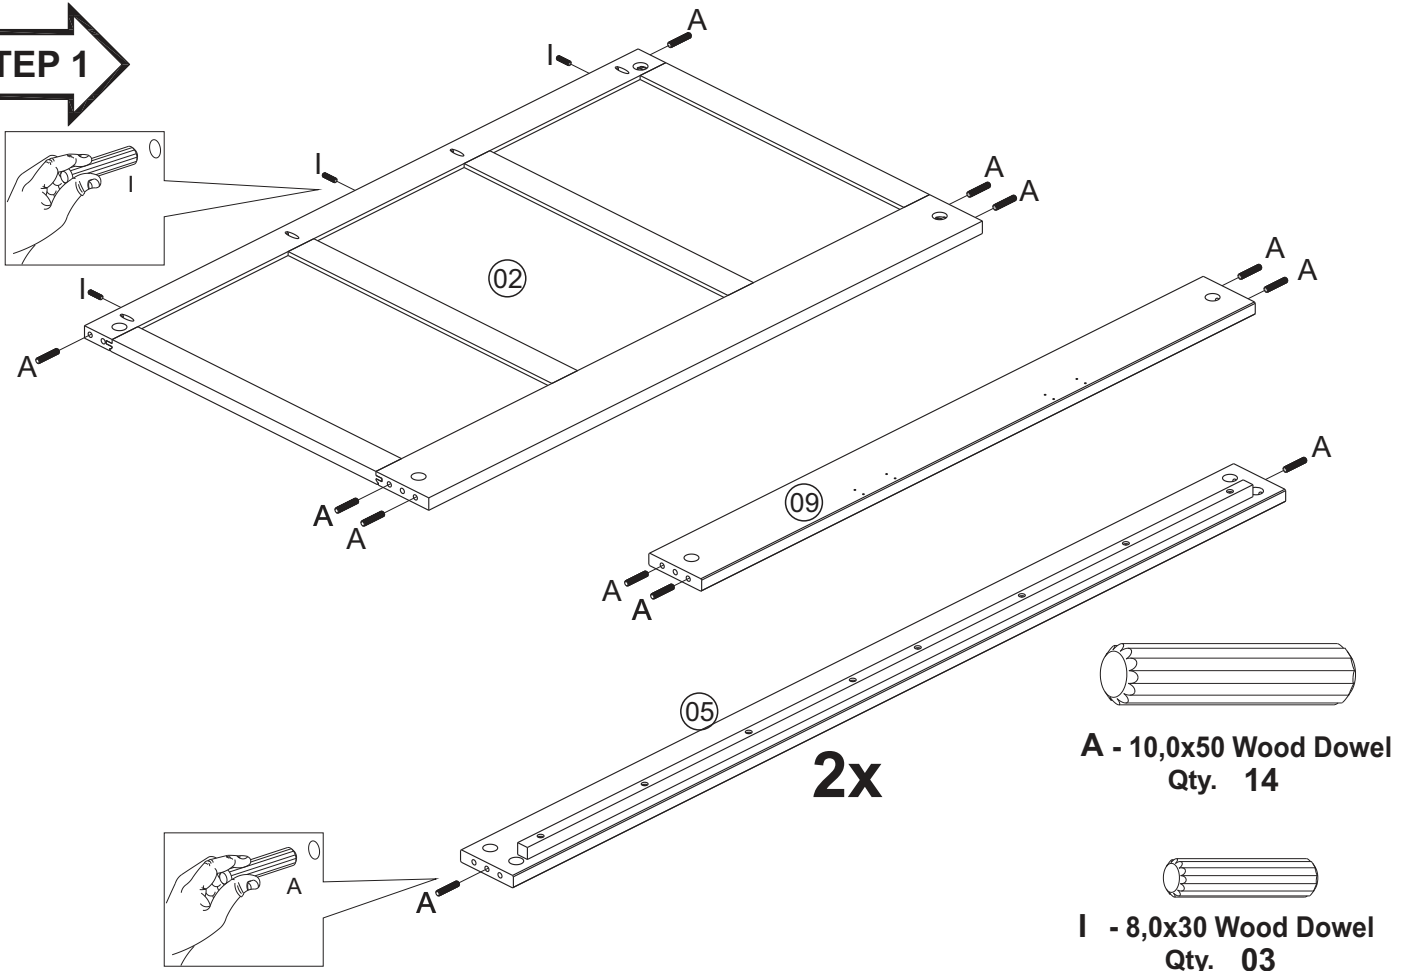

## STEP 2

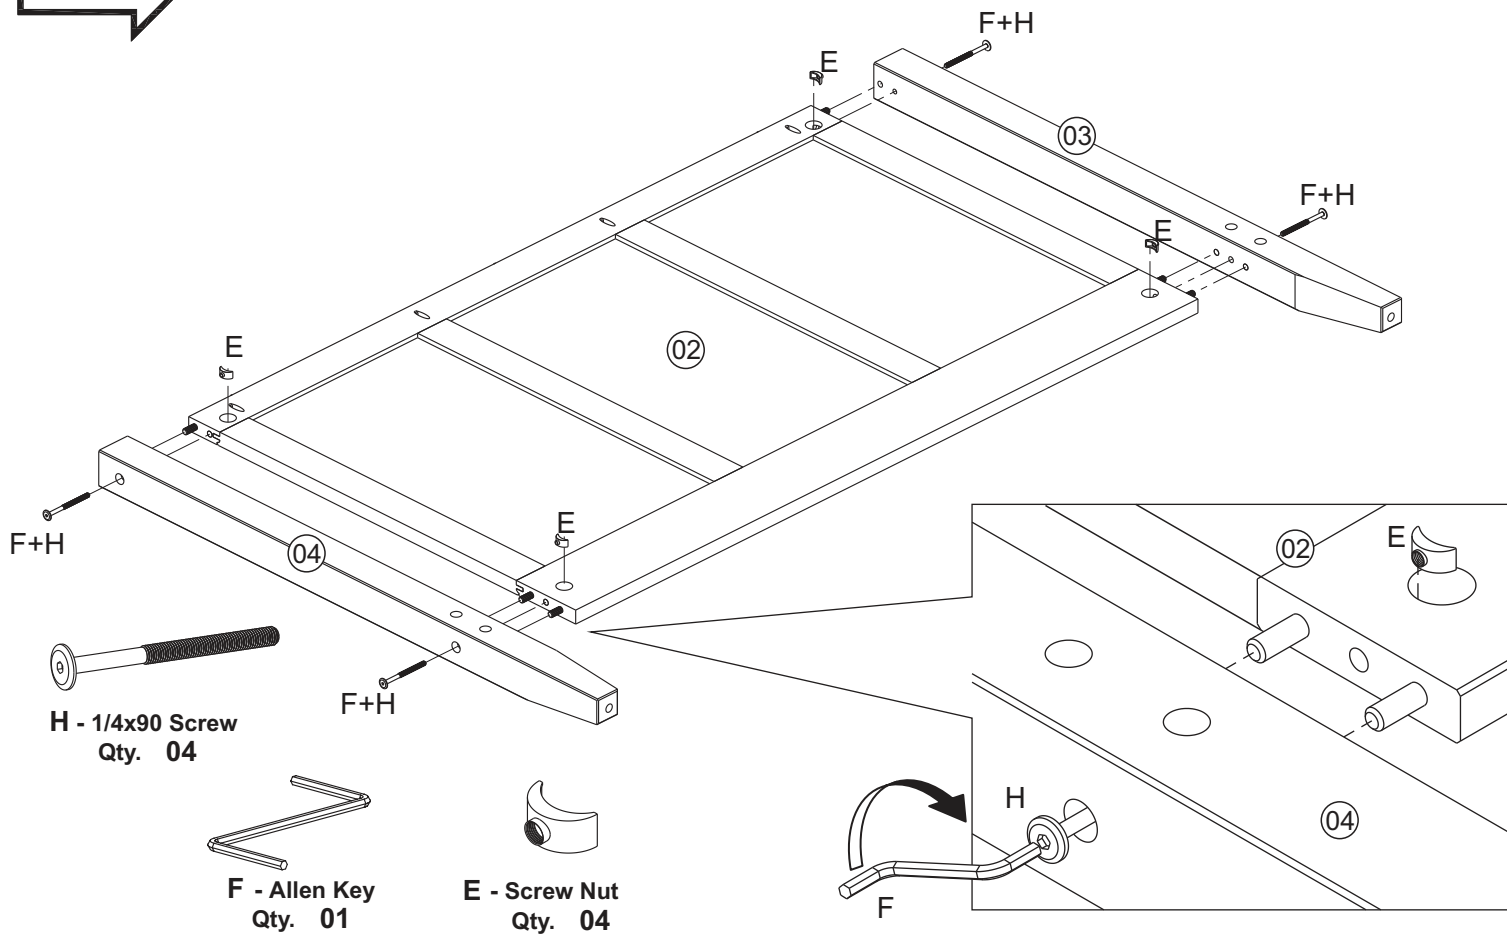


## STEP 3

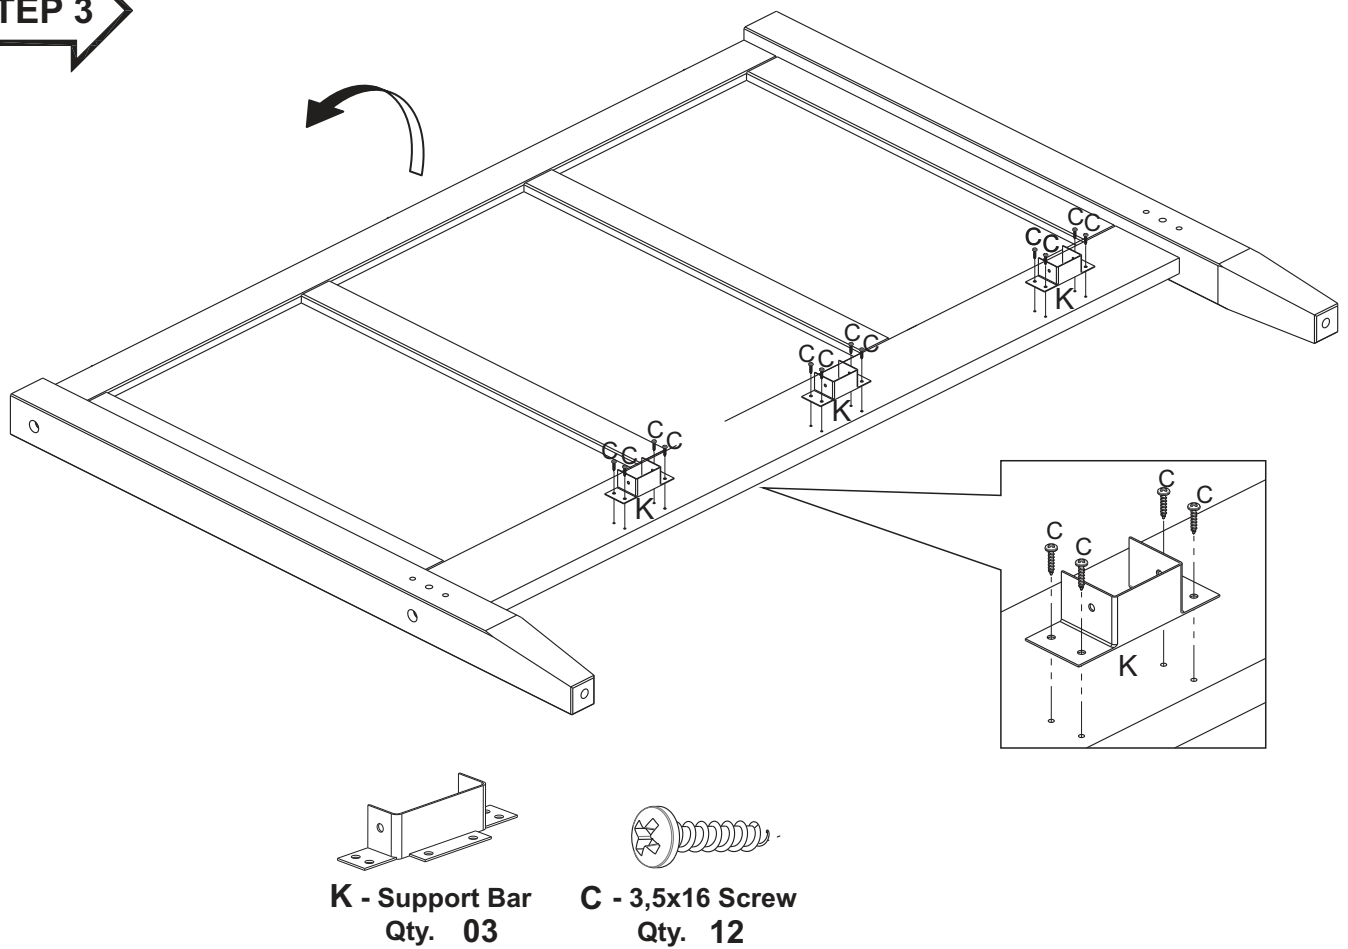


# STEP 4




**H - 1/4x90 Screw**  
Qty. 02





**F - Allen Key**  
Qty. 01

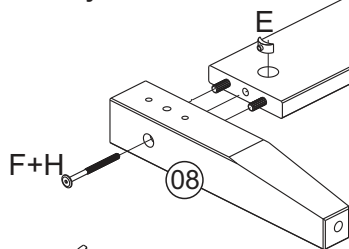


**E - Screw Nut**  
Qty. 02

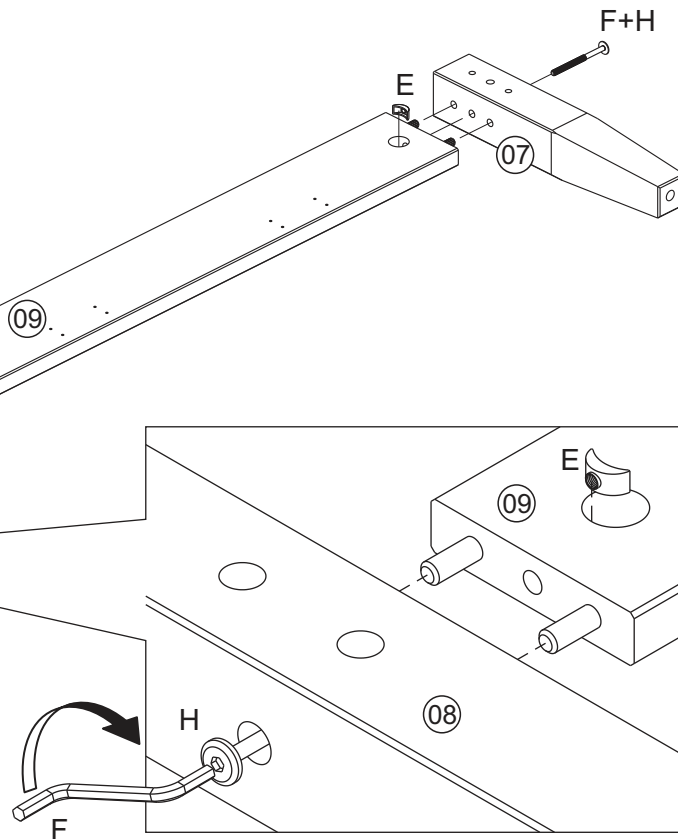

# STEP 5

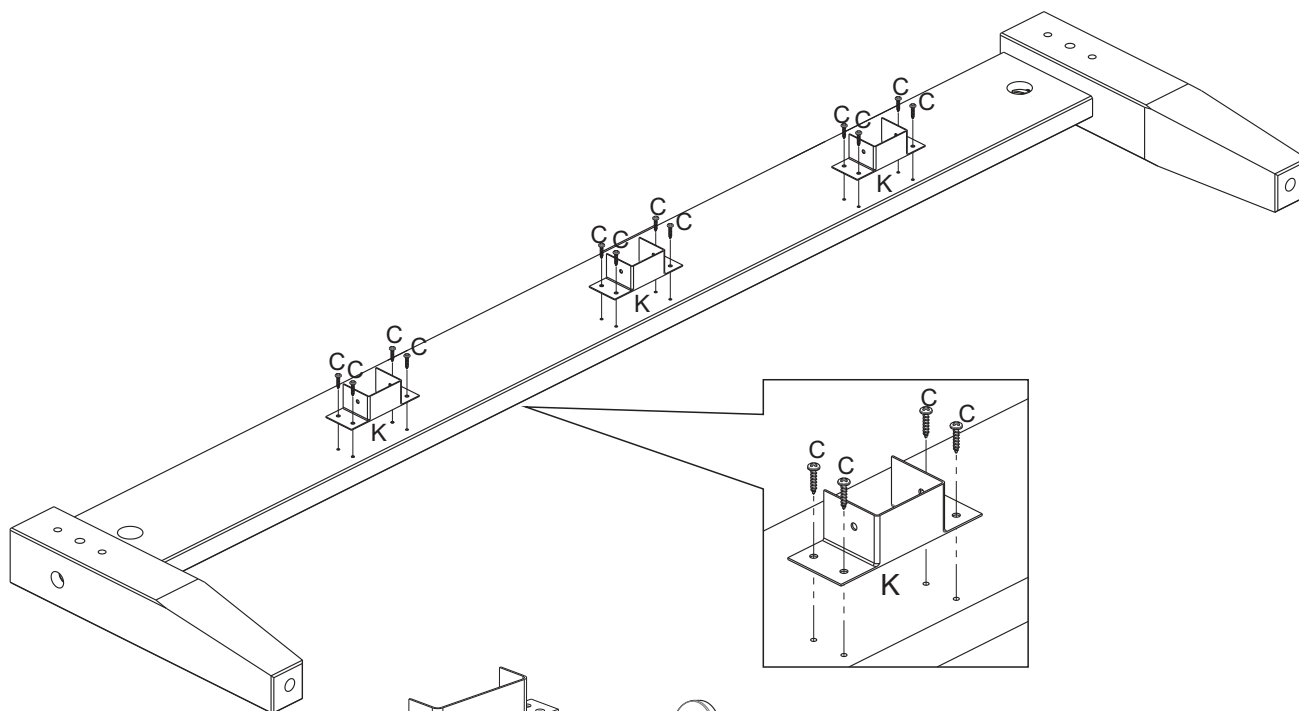


**K - Support Bar**  
Qty. 03




**C - 3,5x16 Screw**  
Qty. 12


# STEP 6

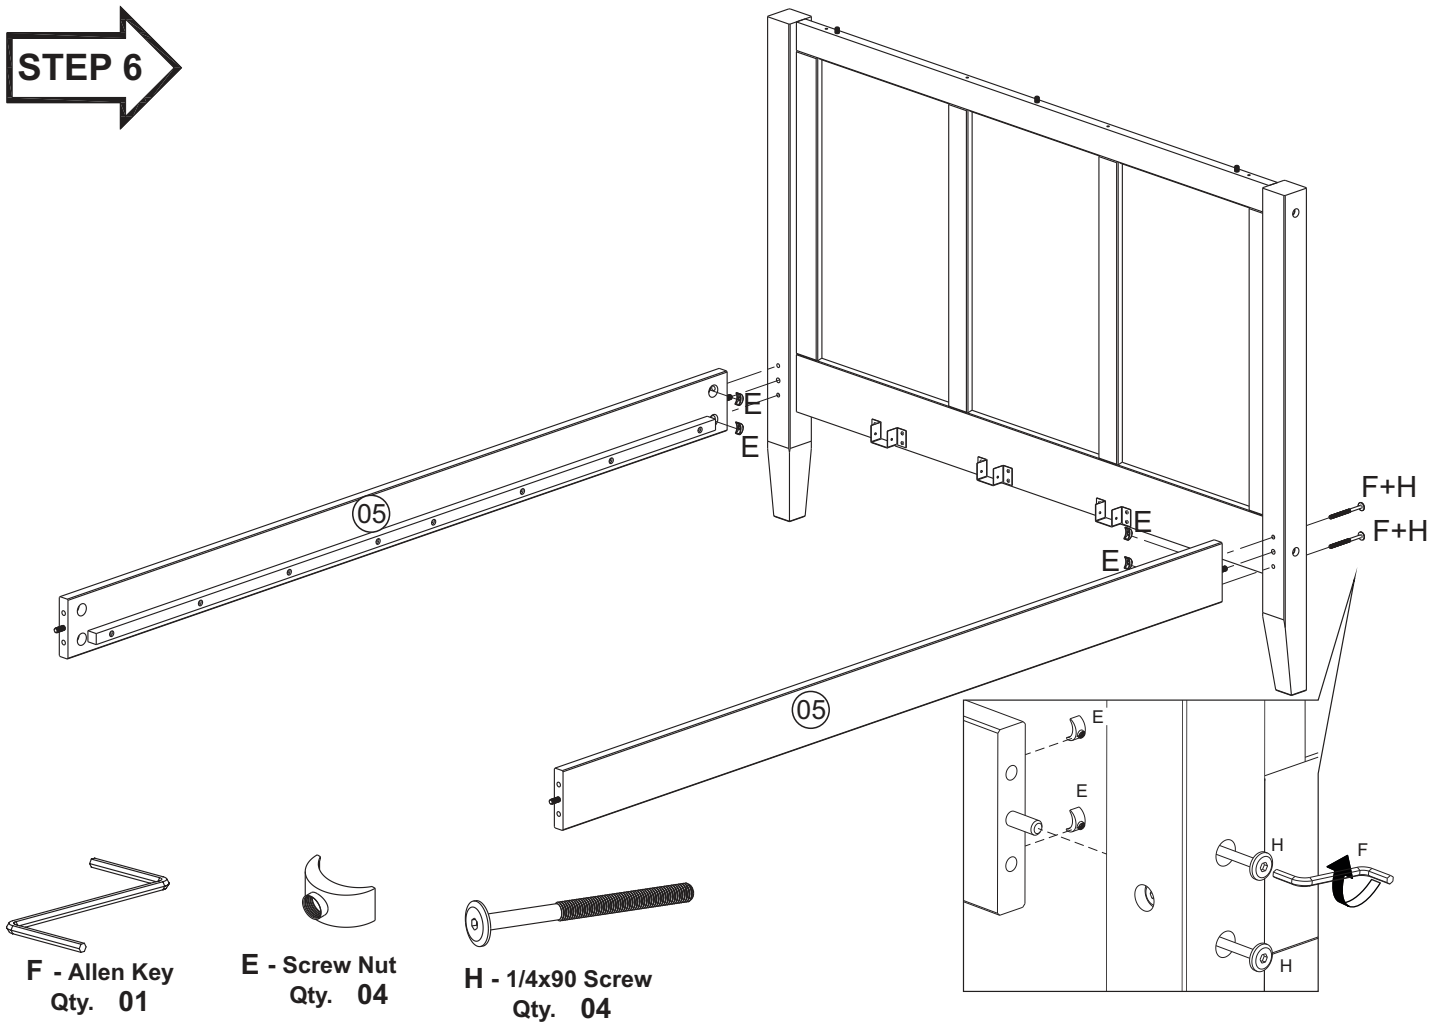

# STEP 7

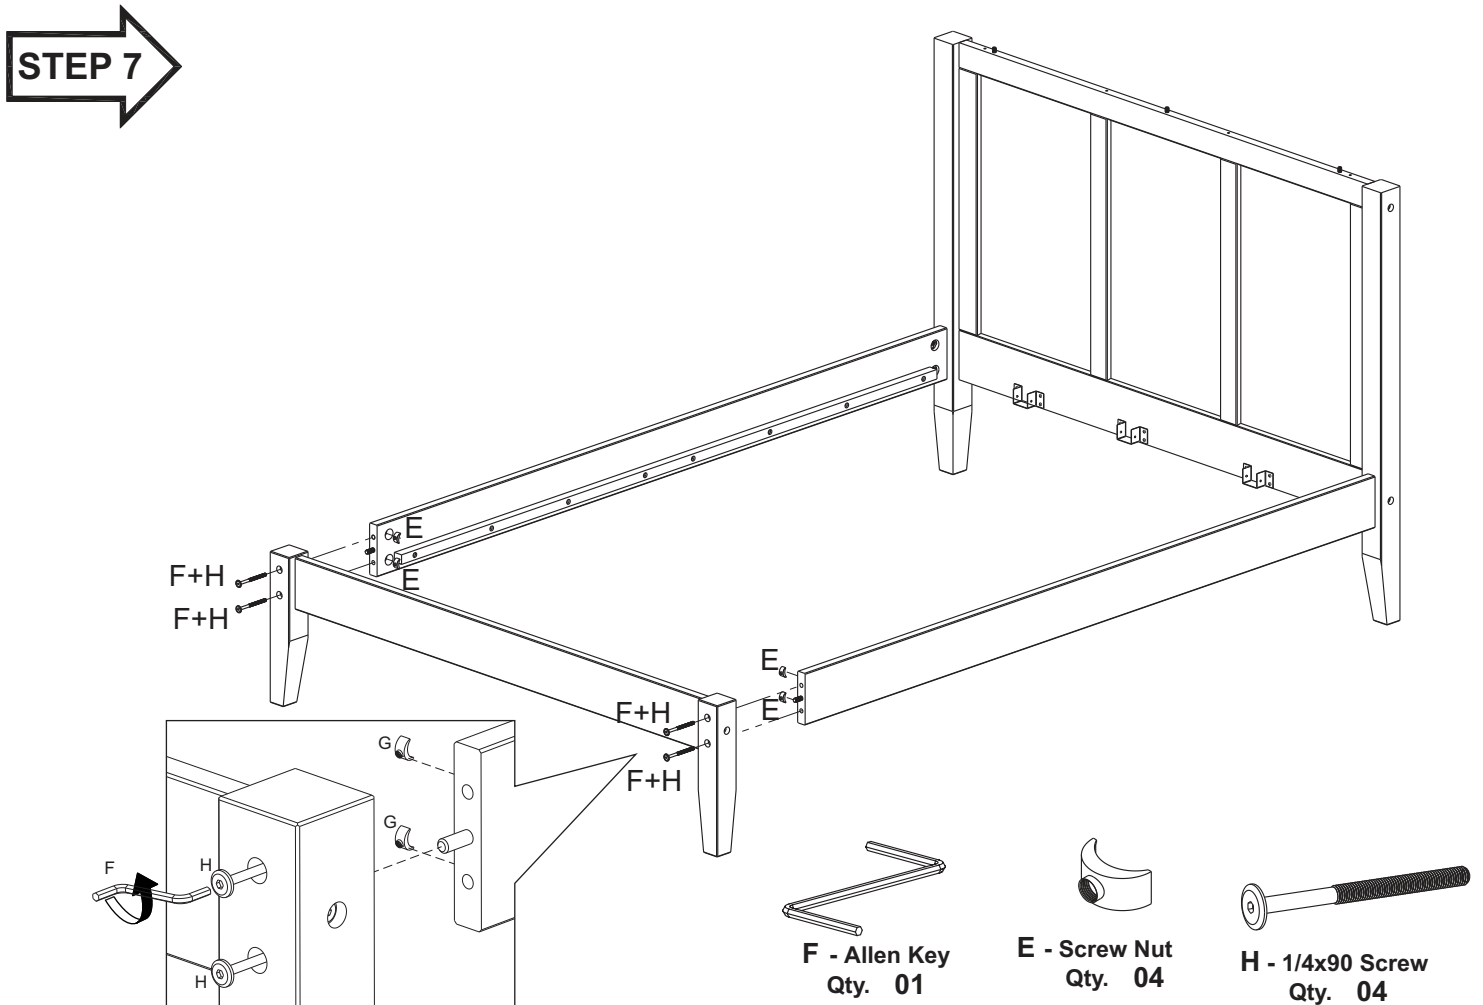


**STEP 8**

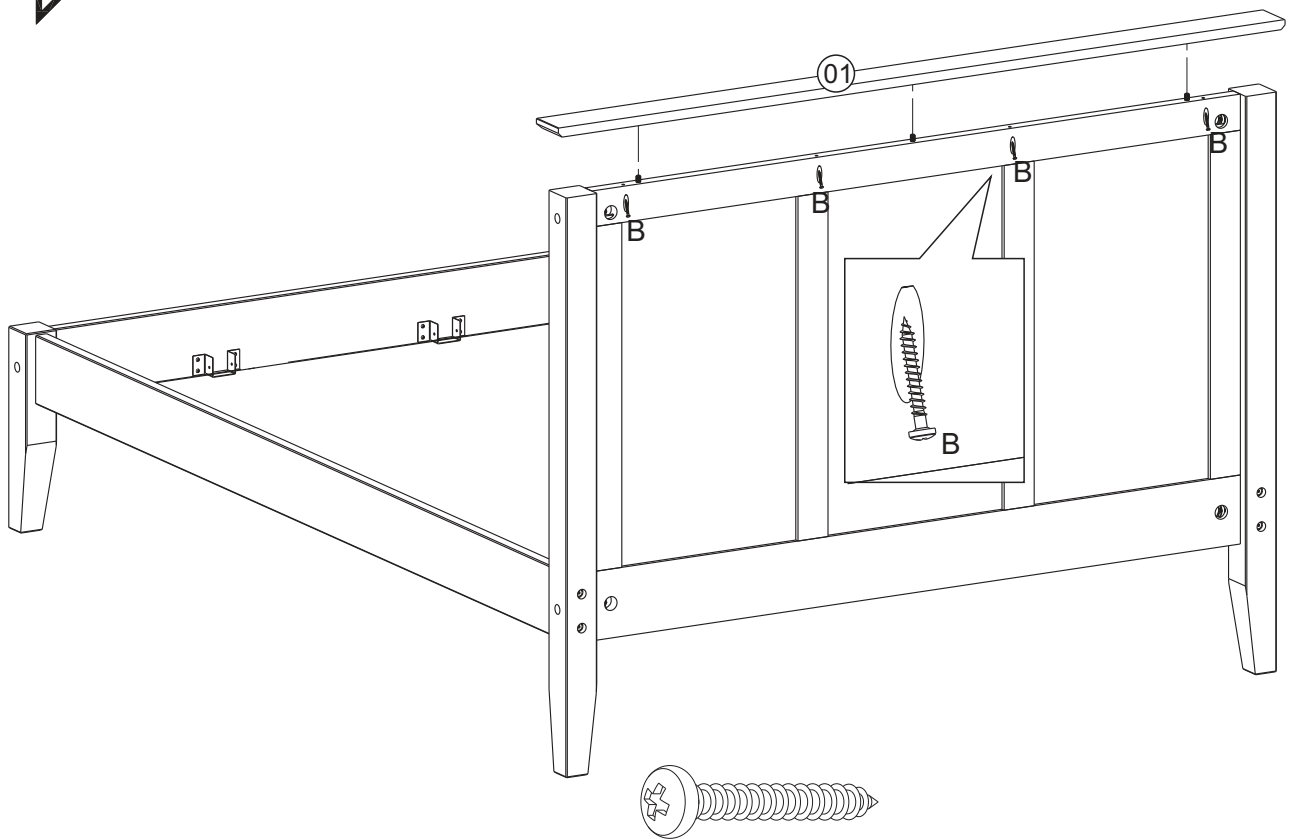


**B - 4,0x30 Screw**  
**Qty. 04**

**STEP 9**

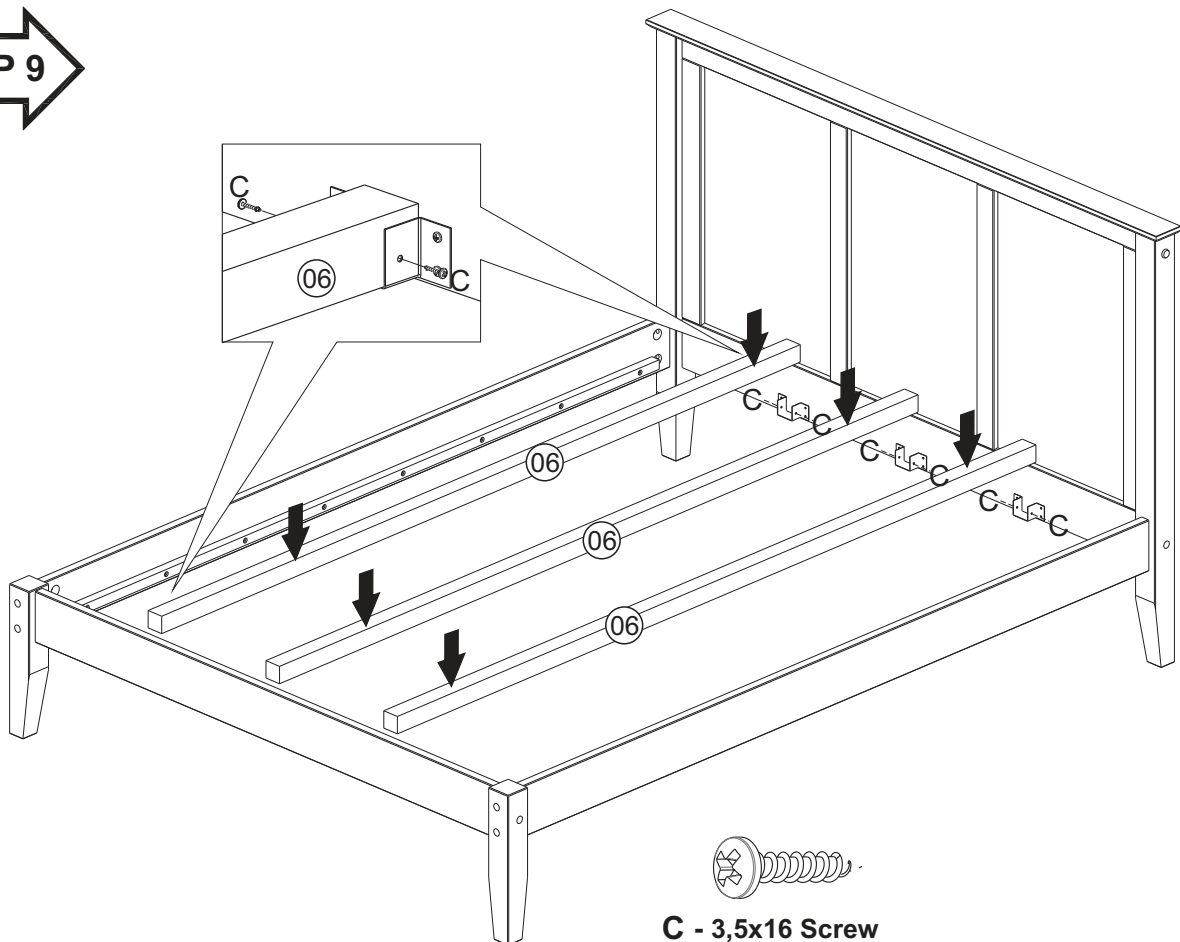

**C - 3,5x16 Screw**  
**Qty. 12**

**STEP 10**

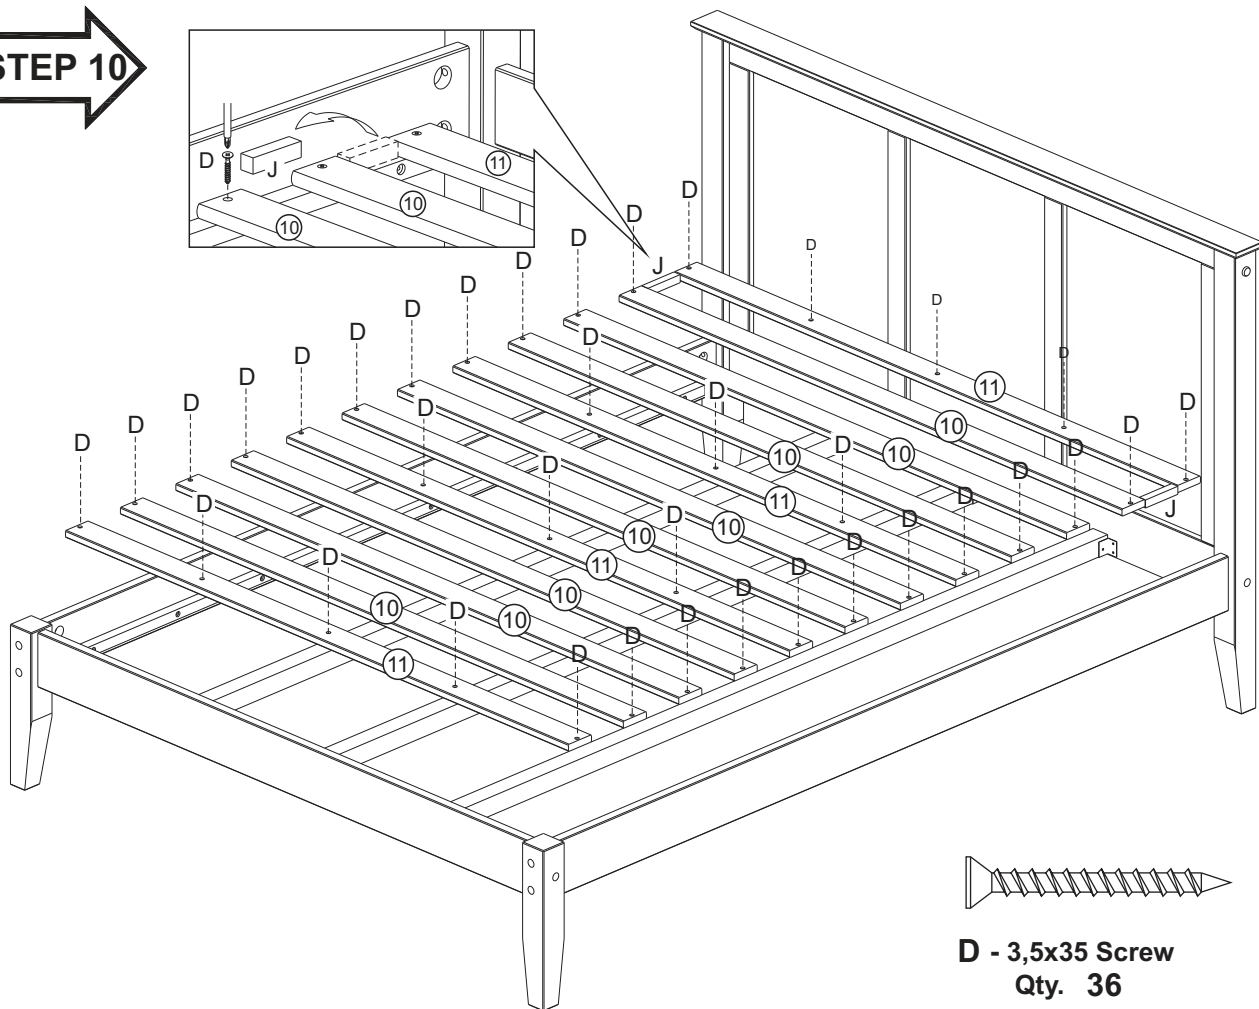

**STEP 11**

