




















Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670


Thank you for purchasing this Luxen Home product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:


①×22	②×22	③×34	④×8	⑤×2	⑥×12
					 M4*12
⑦×1	⑧×1	⑨×2	⑩×1	⑪×2	⑫×2
	 M4*16	 M4*10		 M4*12 Black	
⑬×6	⑭×8	⑮×26	⑯×1	⑰×1	⑱×1
 M3*12	 M4*35	 M2.5*10	 M4*10	 M4*30	
⑲×1					
					

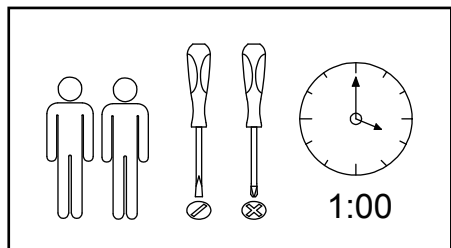

Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)


Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

Panels:

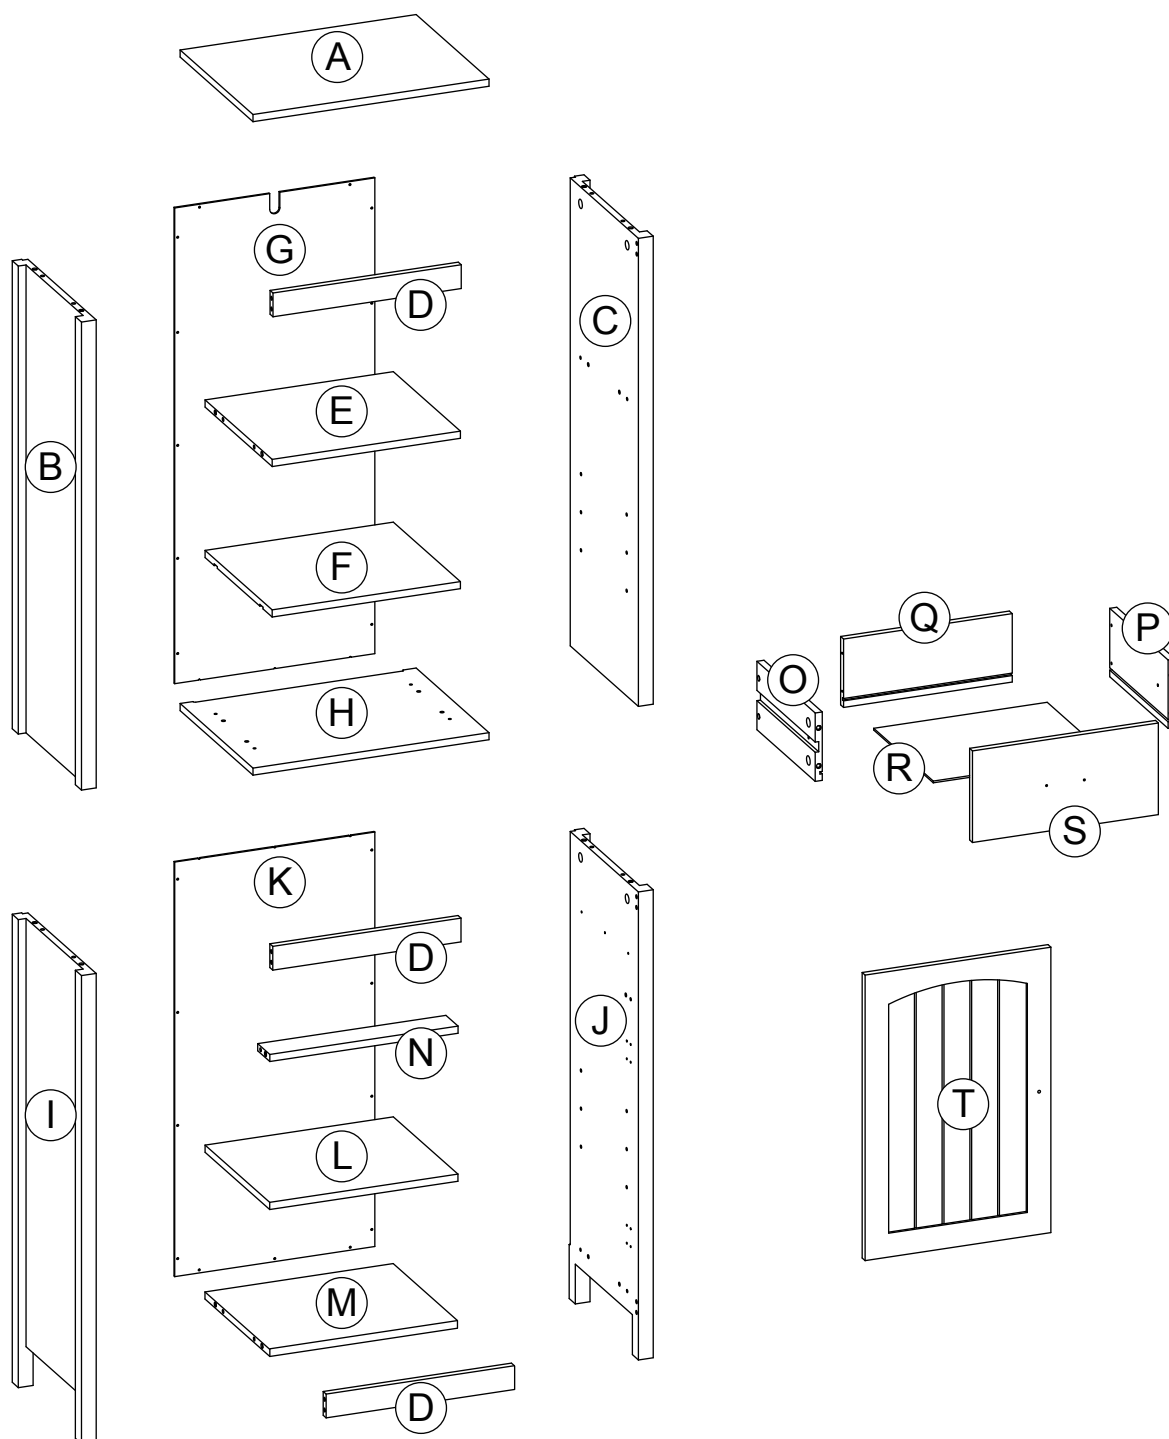

Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

Make sure the pins are installed correctly as shown with the “check mark” below:

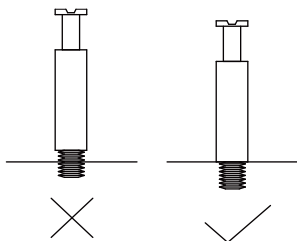

Below shows how the pins are used to assemble the panels together.



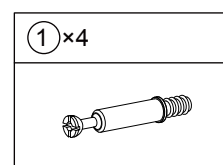


FIGURE A

Step 1



Screw cam bolt (1) to Upper side panel B & C as shown.

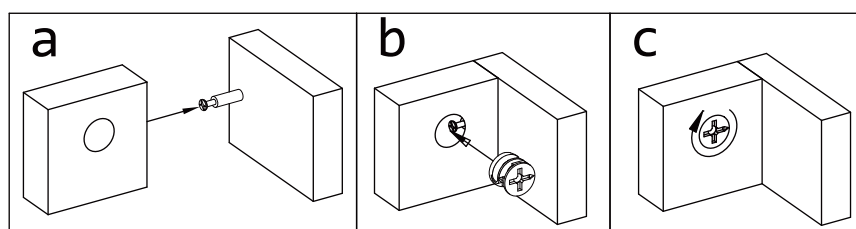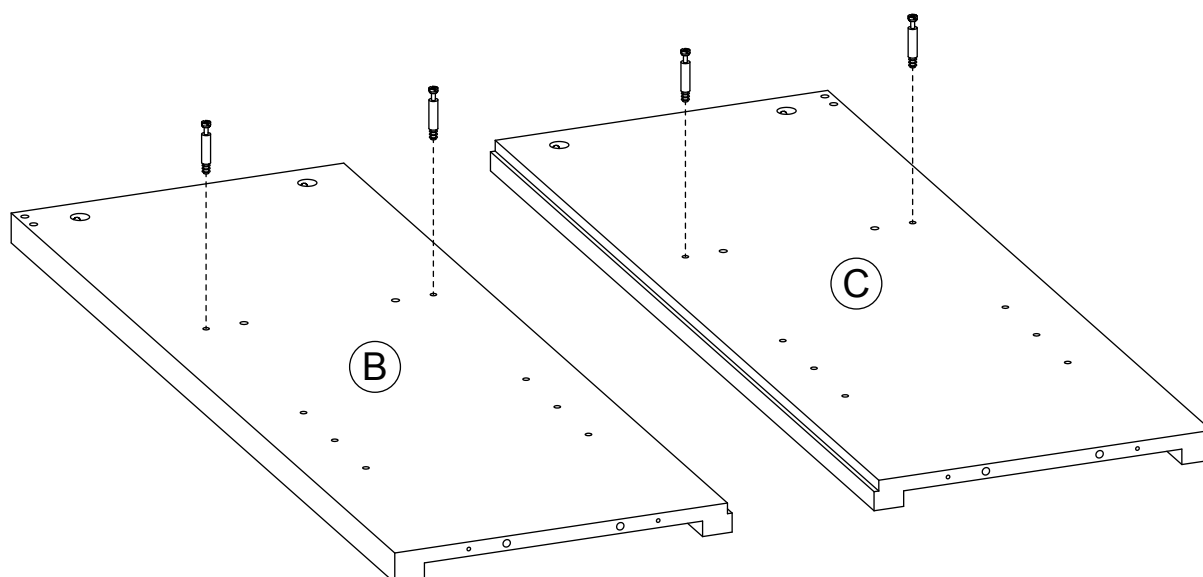


Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

Step 2

Insert wood plug (3) to front rail D & shelf E as shown,
Assemble E & D to Upper side panels B & C, then Insert cam lock (2) and tighten.

②×4

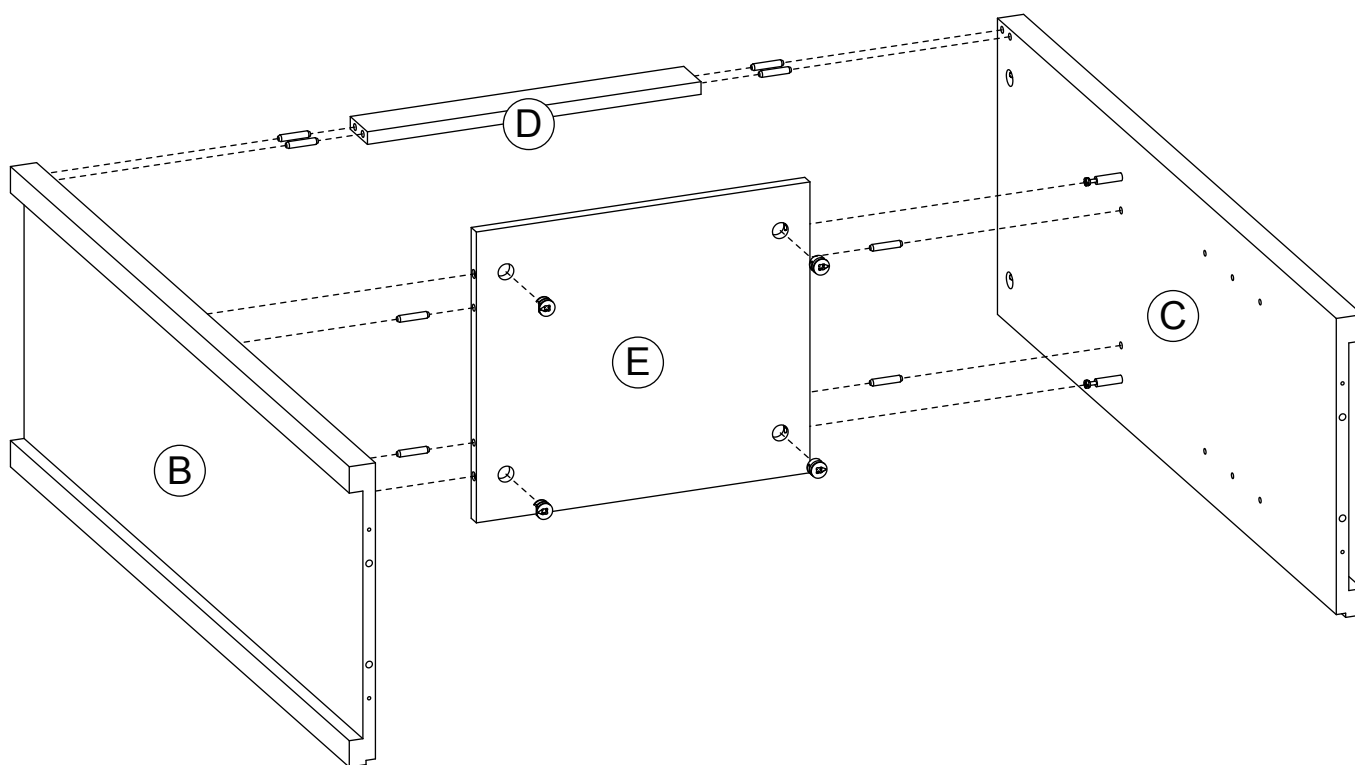③×8


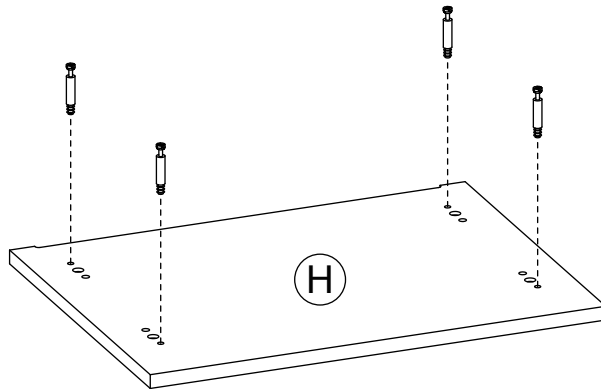


Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670


Step 3

Screw cam bolt (1) to shelf H as shown.






Insert wood plug (3) to Upper side panels B & C. Attach shelf H to unit with screws (14).

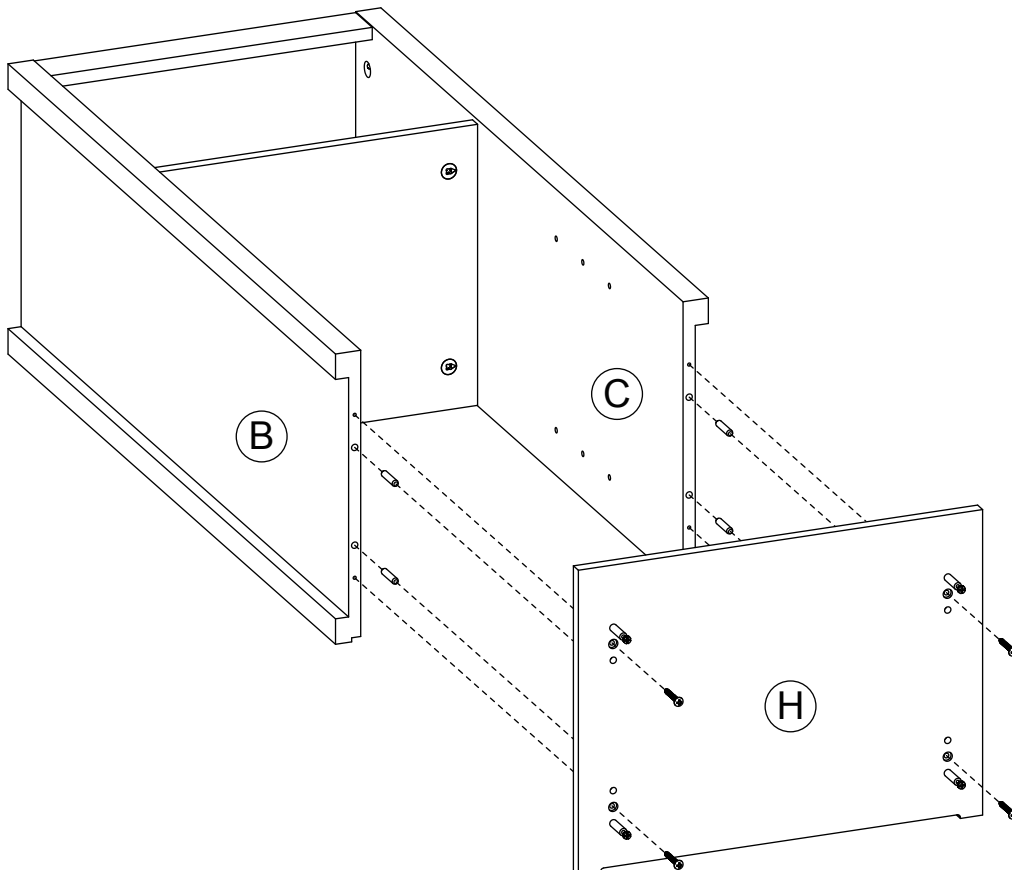

① × 4
③ × 4
⑭ × 4




Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

①×4	②×4	③×4	⑬×1	⑲×1
				

Step 4

Fix Hanger bracket (19) onto top panel A with screw (16). Screw cam bolt (1) to A
 Insert wood plug (3) to Upper side panels B & C.
 Assemble A to unit, then Insert cam lock (2) and tighten.


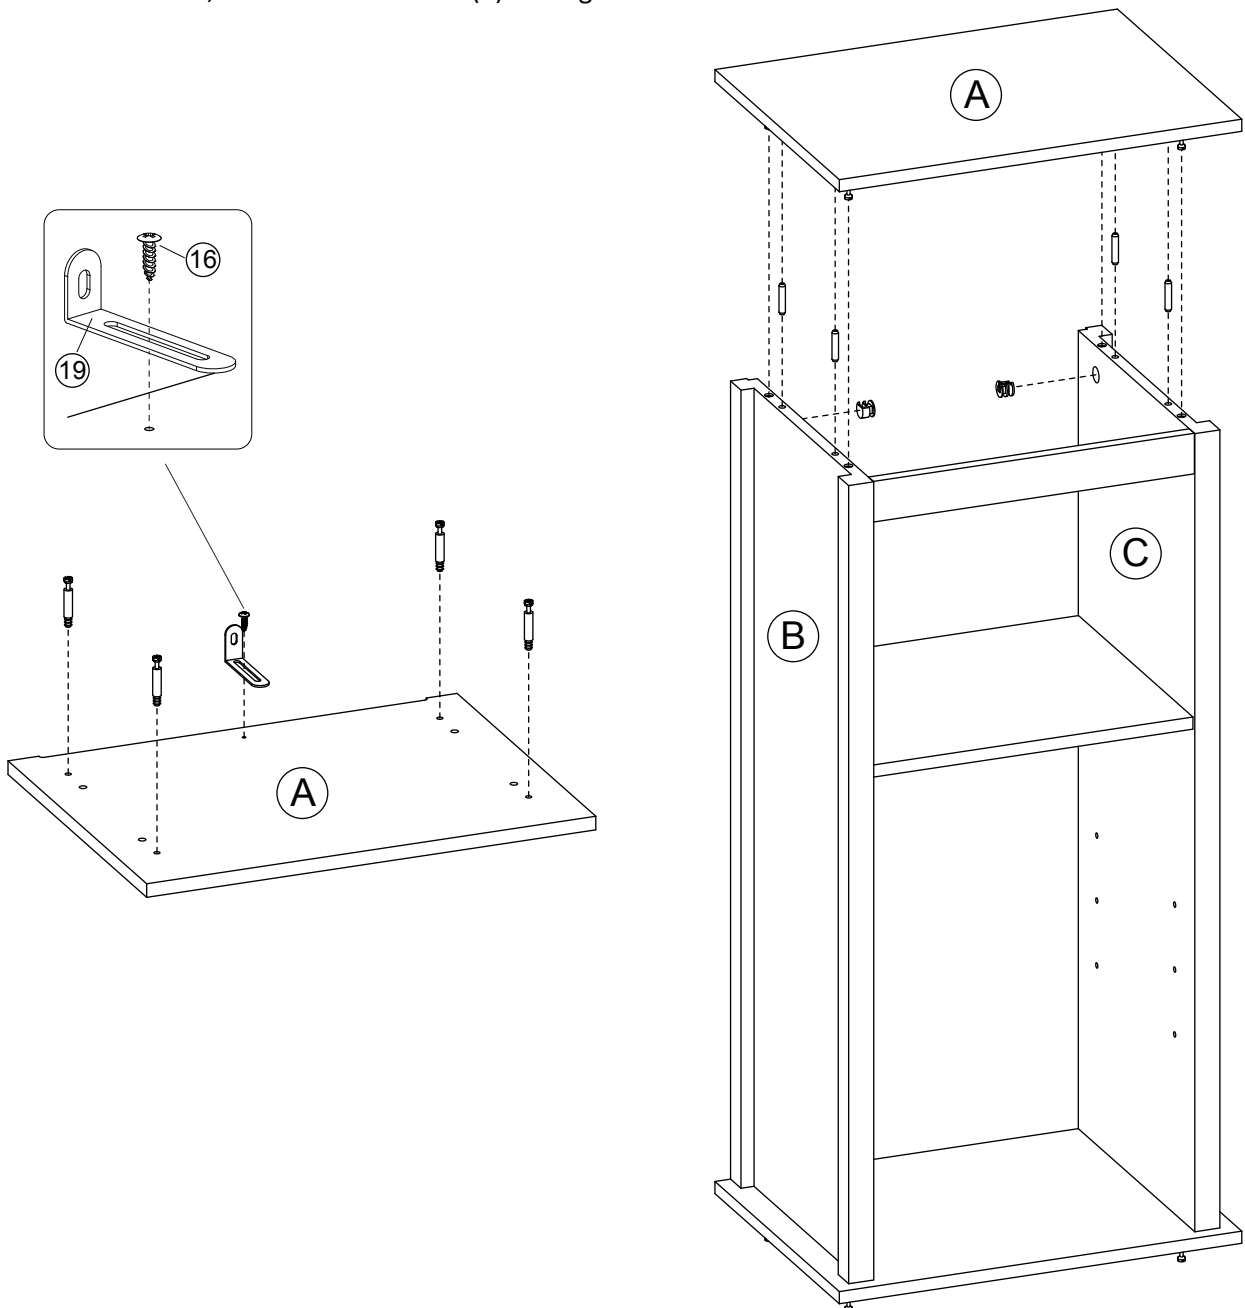



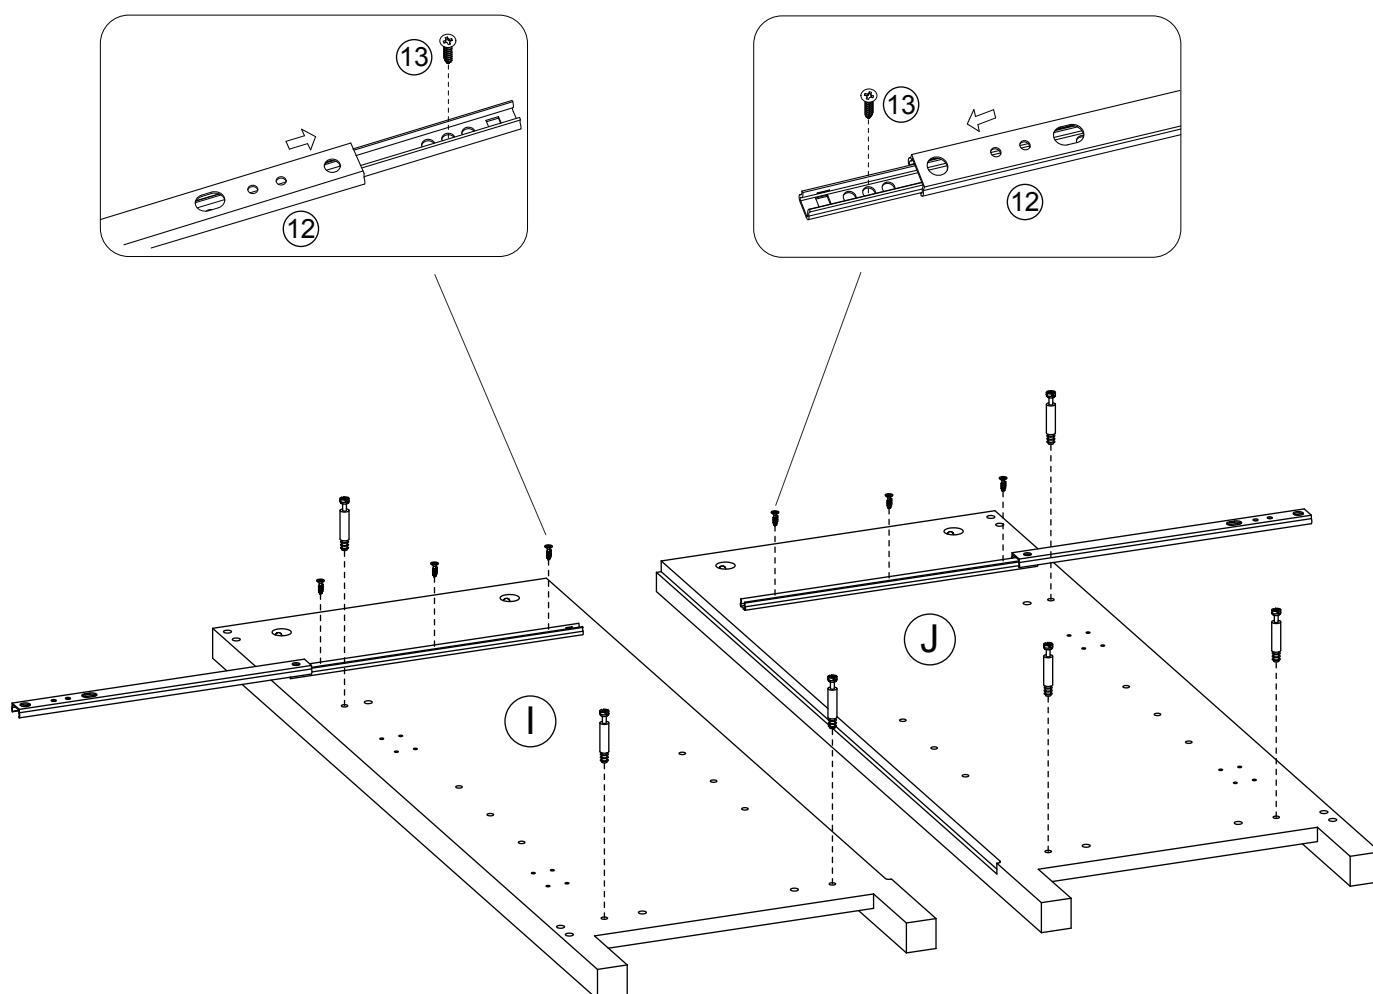
Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

Step 5

Screw cam bolt (1) to Lower side panel I & J.

Fix slider (12) onto I & J with screw (13), Please screw in the correct holes as shown.

①×6

⑫×2

⑬×6


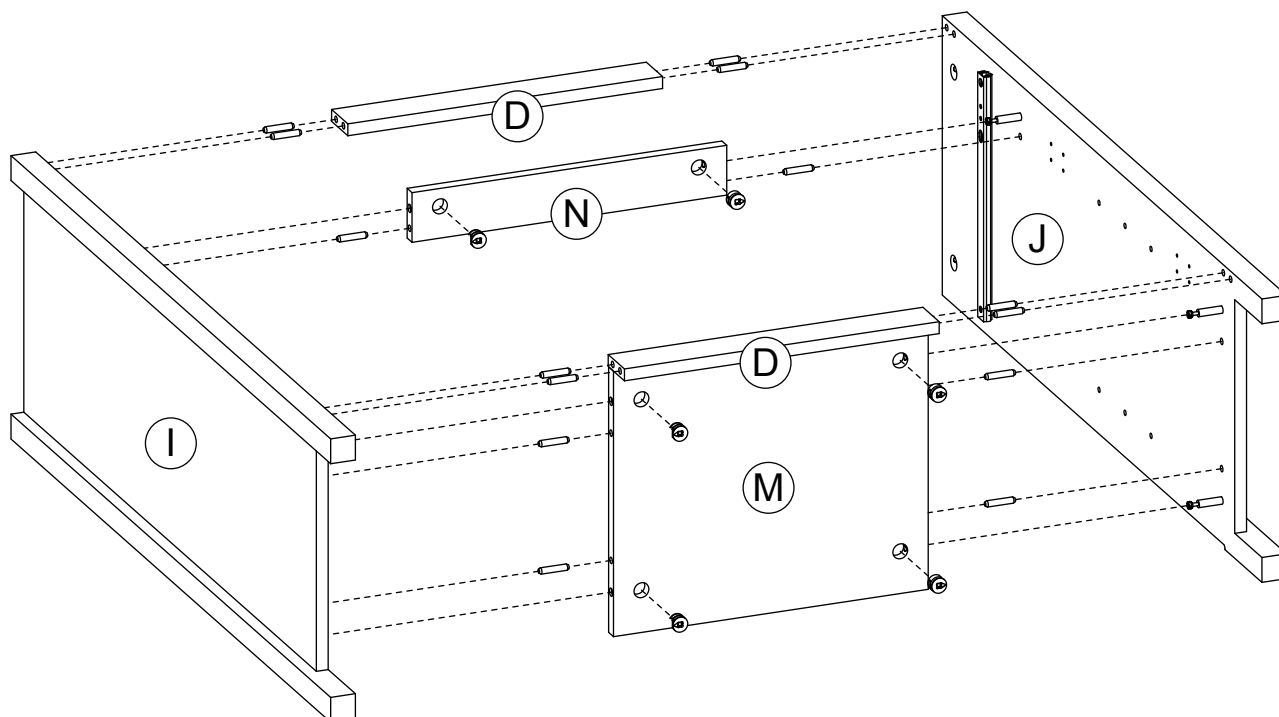
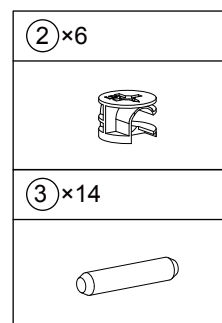


Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670




Step 6

Insert wood plug (3) to rail D,N & bottom panel M as shown.

Assemble D, N & M to Lower side panel I & J. then Insert cam lock (2) and tighten.



Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670



②×4	③×4	⑮×26
		

Step 7

Insert wood plug (3) to Lower side panel I & J.

Assemble Upper unit B&C and Lower unit(I&J) together as shown, then Insert cam lock (2) and tighten.




Fix back panel G&K to unit with screws (15) as shown.

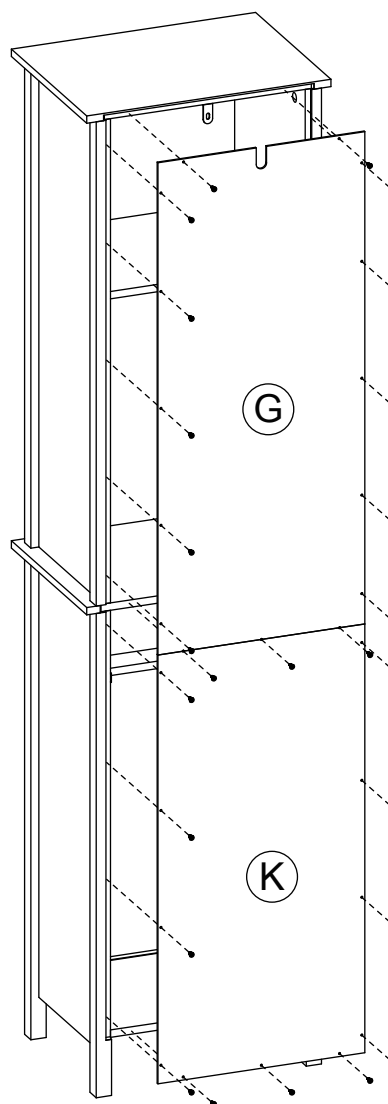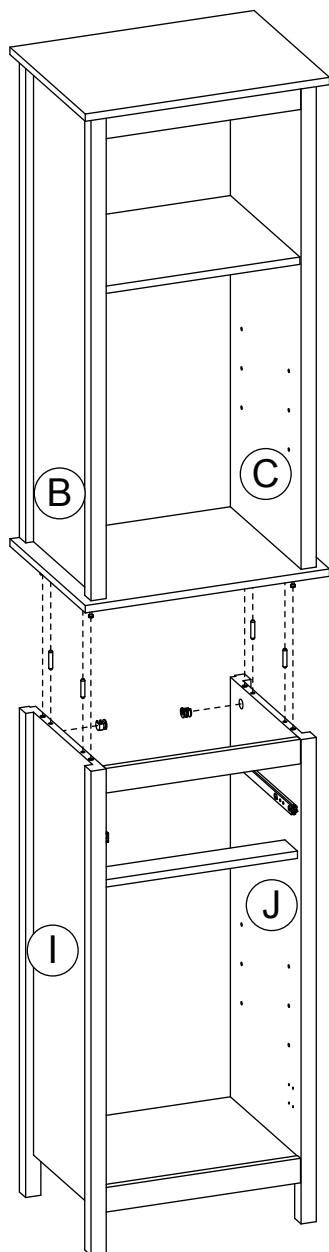






Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

Step 8

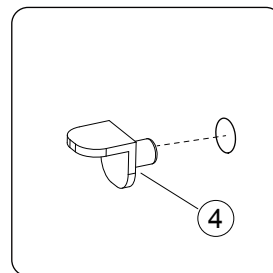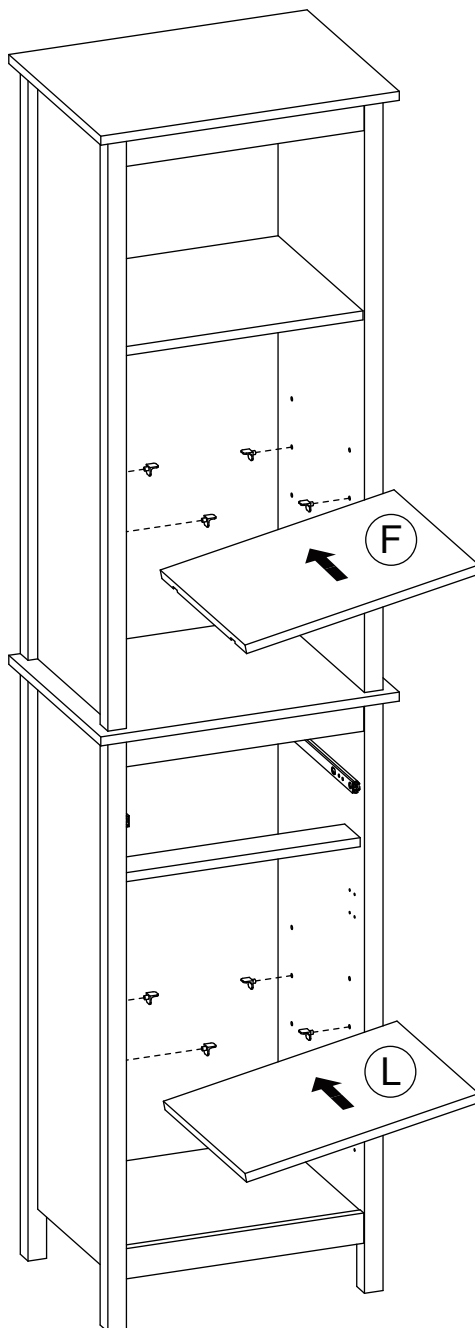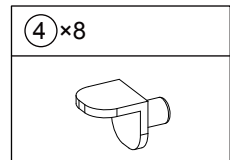Insert layer supports (4) into the side panels. Put adjustable shelves F & L into place.



Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

①×4	②×4	⑩×1	⑪×2	⑭×4
				

Step 9


Screw cam bolt (1) to drawer front S.

Fix drawer side O & P to drawer back Q with screws (14) as shown.

Insert drawer bottom R align with groove.

Fix handle (10) to drawer front with screw (11).



Assemble S to unit, then Insert cam lock (2) and tighten.

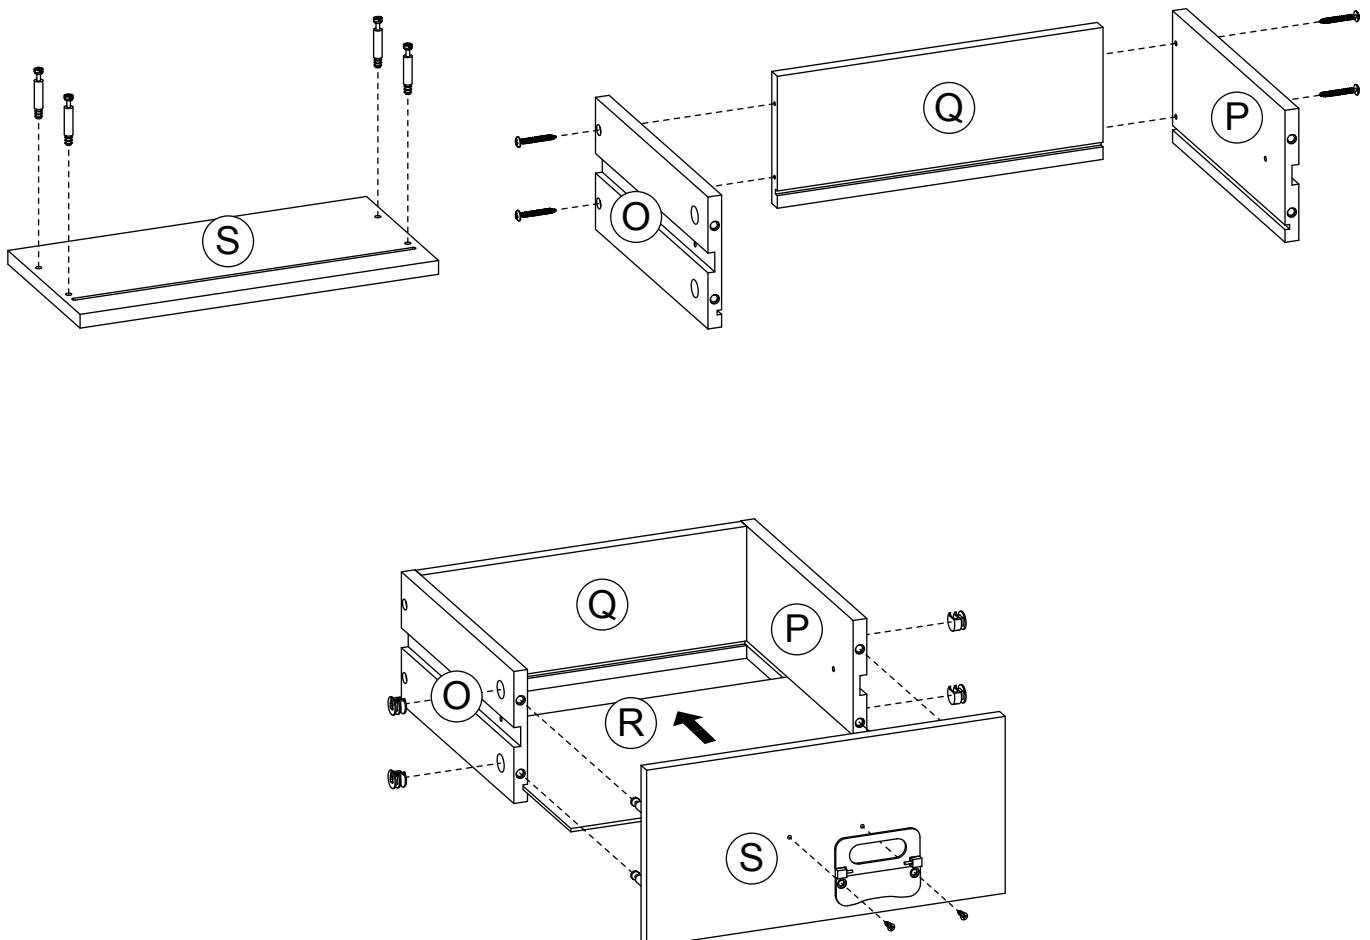

Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

Step 10


Fix the drawer to cabinet with bolt (9).

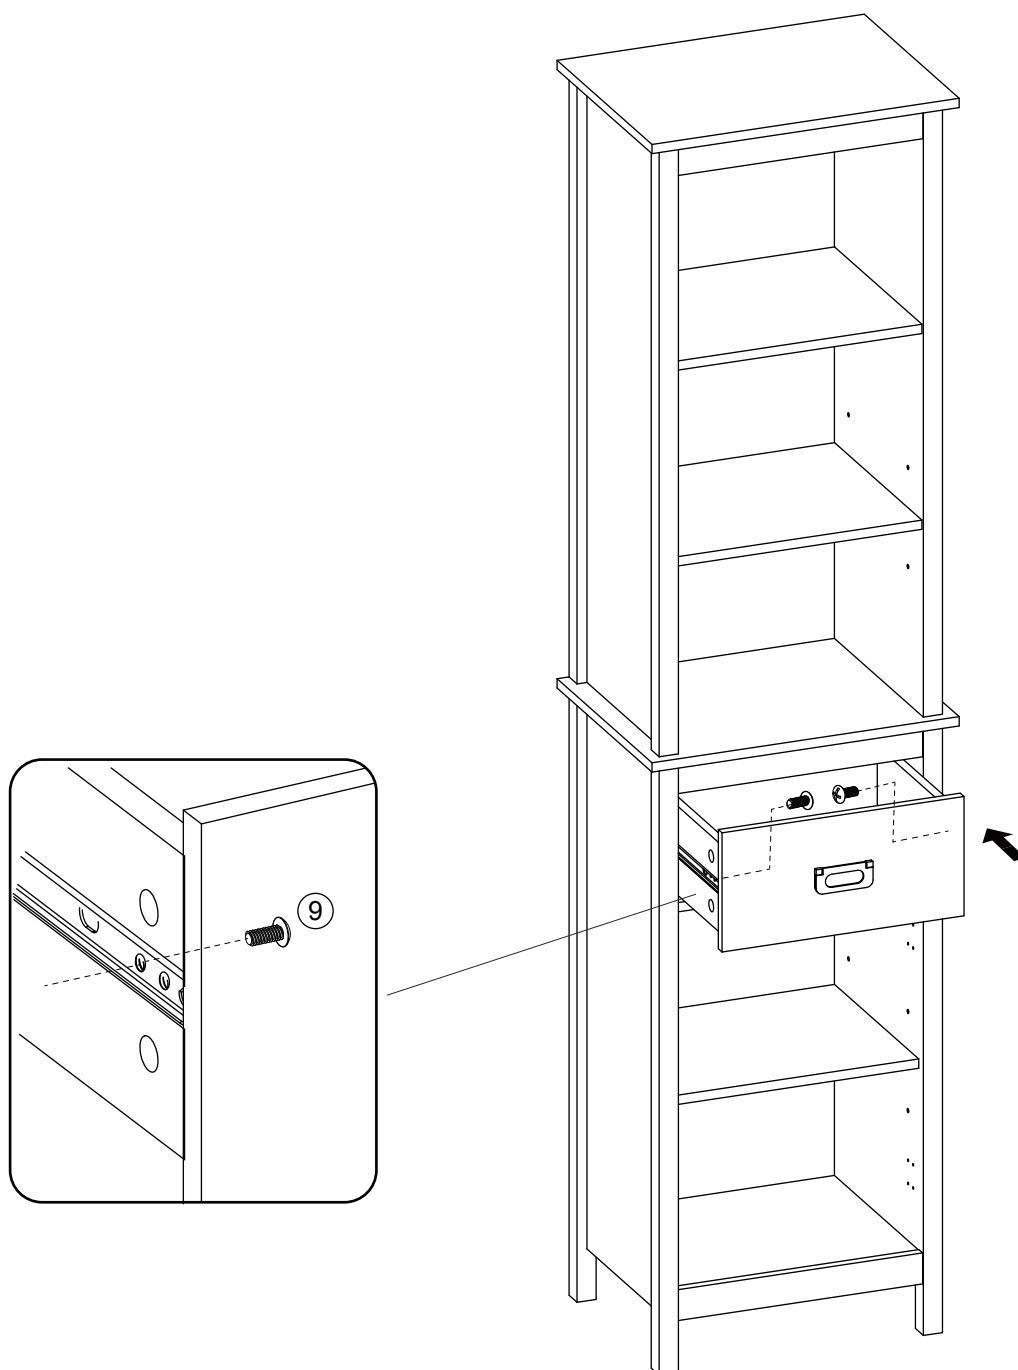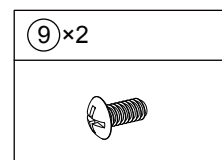


Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

Step 11

Assemble the hinges (5) to door T with screws (6), Fix handle (7) to T with bolt (8).

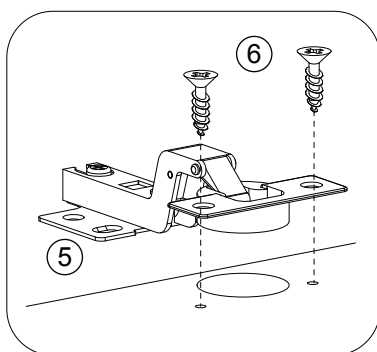







⑤ × 2
⑥ × 4
⑦ × 1
⑧ × 1

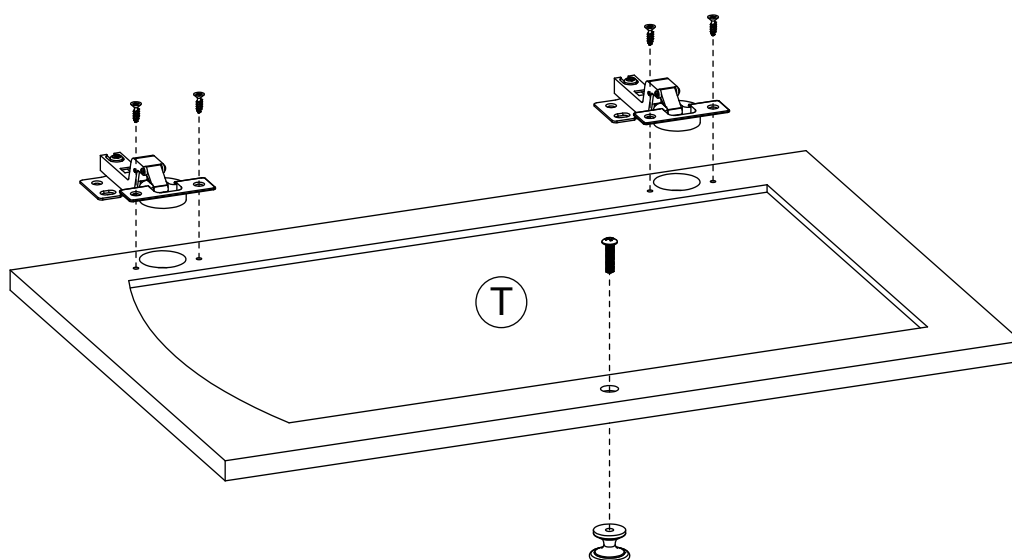

Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

Step 12

Assemble the door to the cabinet with screw (6).

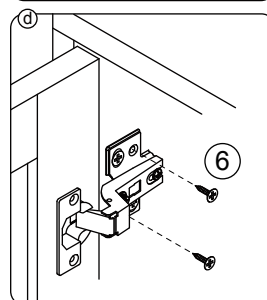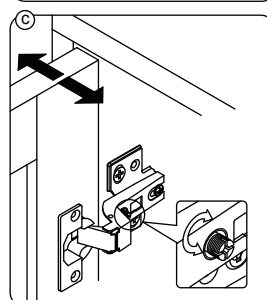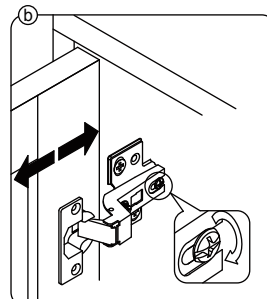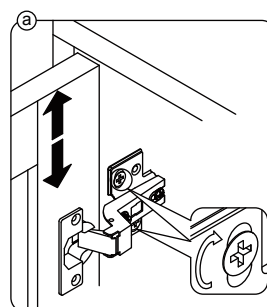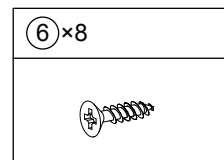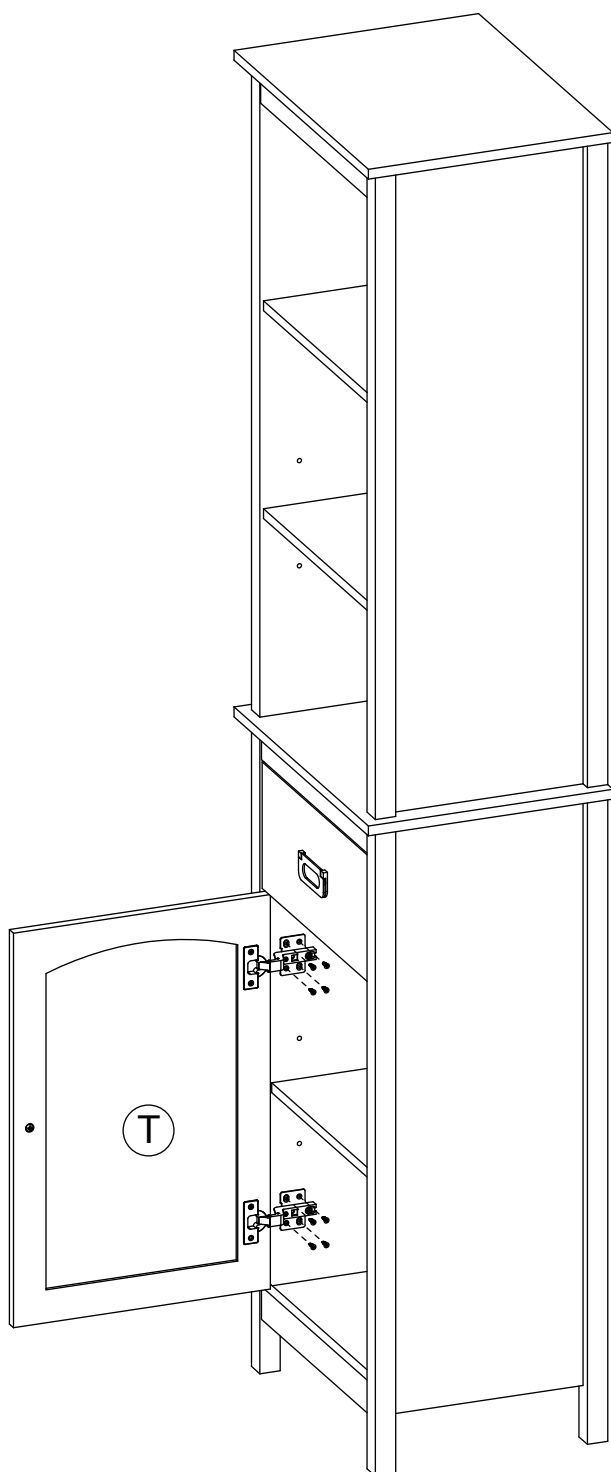

Product Name:	White Wood 63-Inch Tower Bathroom Cabinet
SKU #:	WHIF1670

Step 13

Draw a location hole on Wall. Drill a hole on the wall to input wall plug (18) , Fix the cabinet to wall with screw (17) as shown.

