























<b>Product Name:</b>	White Wood 2-Door Sideboard Storage Cabinet
<b>SKU #:</b>	WHIF1672


Thank you for purchasing this Luxen Home product. This product has been manufactured with the highest standards of safety and quality.

**PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.**

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

**Hardware:**


①×39	②×39	③×32	④×16	⑤×24	⑥×4
			 Φ3*12mm	 Φ4*12mm	
⑦×4	⑧×6	⑨×2	⑩×2	⑪×22	⑫×2
 Φ4*10mm	 Φ4*18mm			 Φ2.5*10mm	 Φ4*14mm
⑬×3	⑭×12	⑮×1	⑯×1	⑰×2	⑱×4
 Φ4*25mm	 Φ4*35mm				
⑲×2	⑳×2	㉑×2	㉒×4		
					

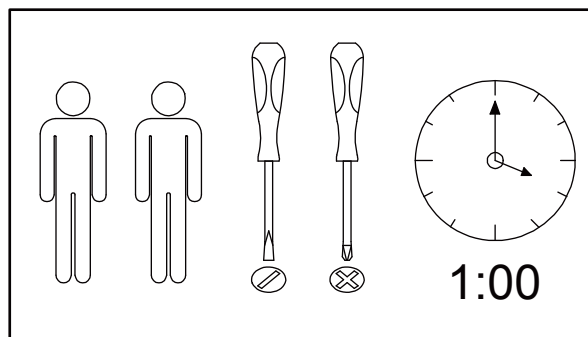

**Tools required for assembly:** Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)


Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Panels:

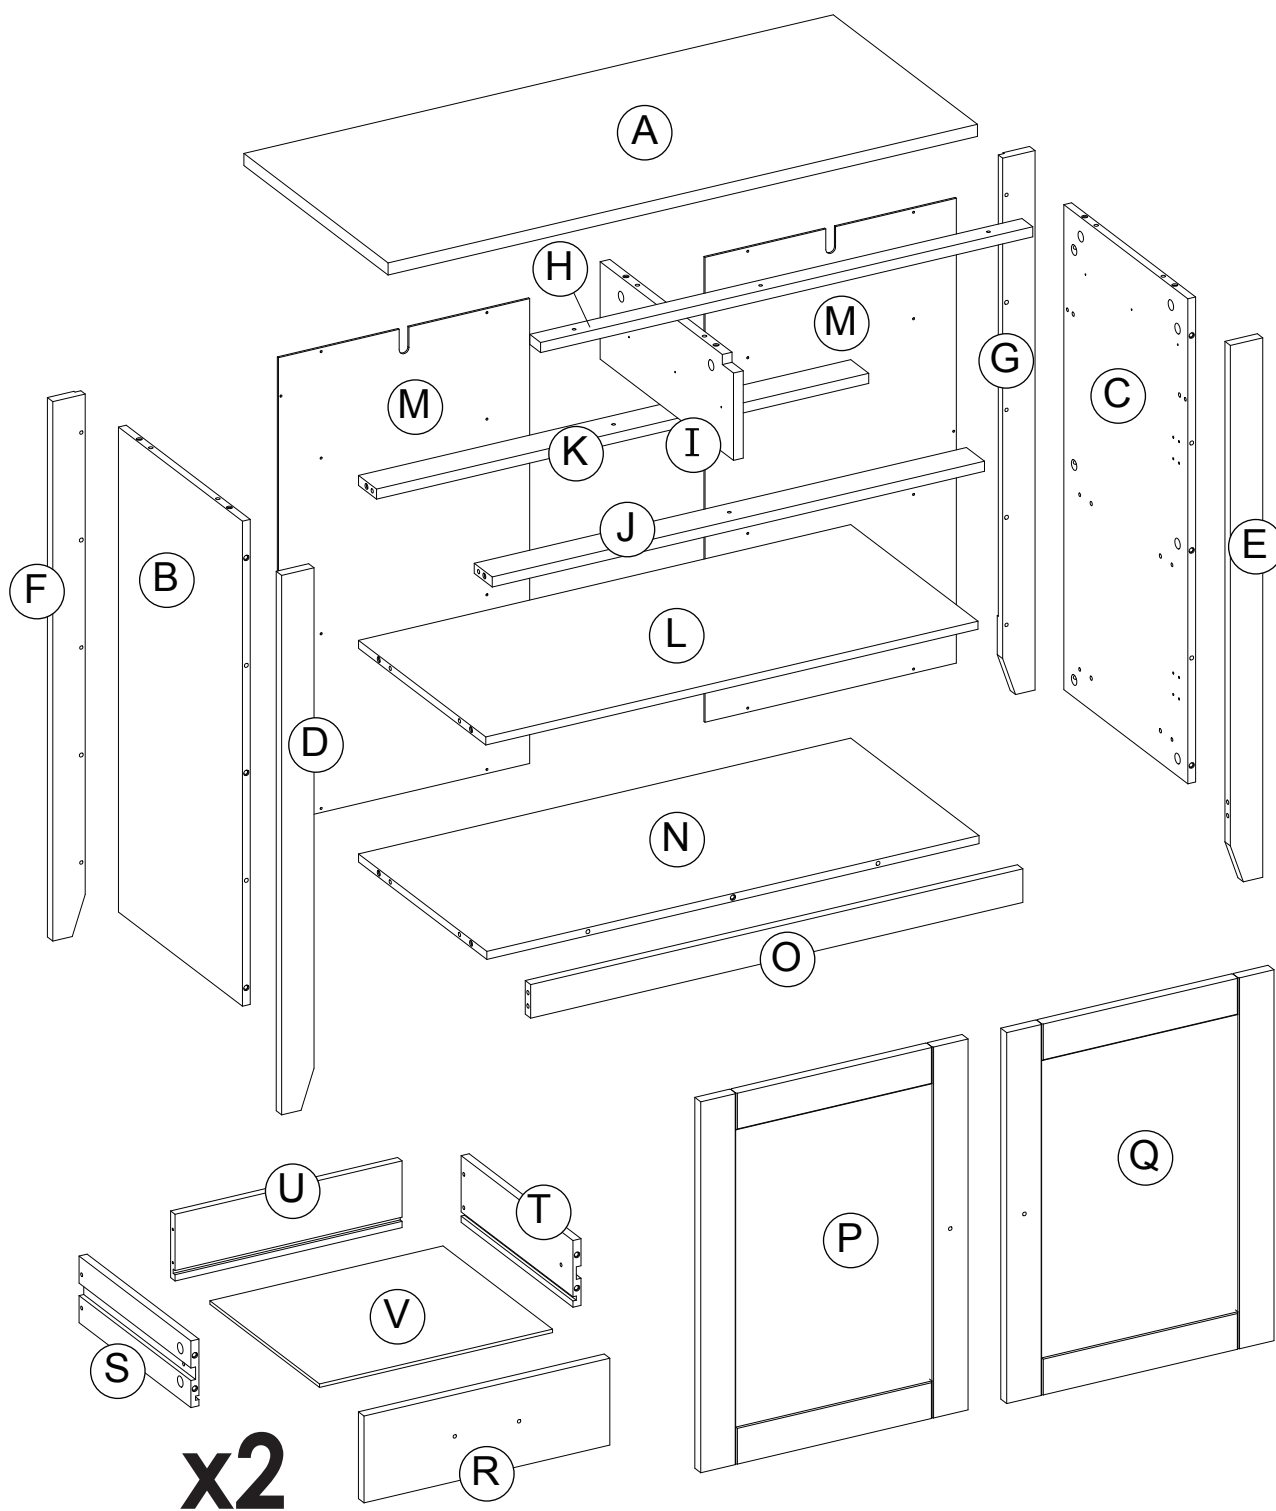


<b>Product Name:</b>	White Wood 2-Door Sideboard Storage Cabinet
<b>SKU #:</b>	WHIF1672


Make sure the pins are installed correctly as shown with the “check mark” below:

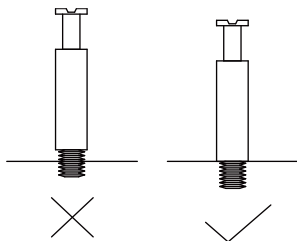

Below shows how the pins are used to assemble the panels together.

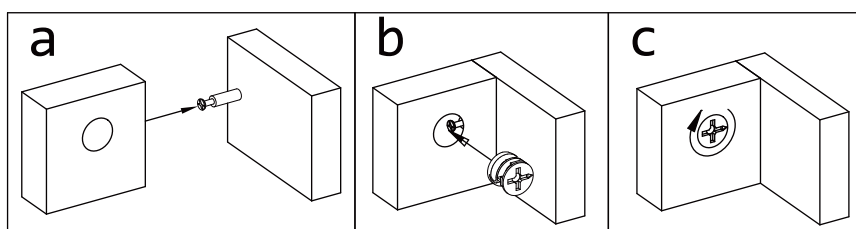


**FIGURE A**

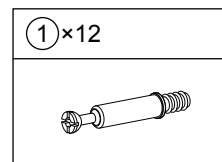

### Step 1



Screw cam bolt (1) to leg D, F, E & G as shown.

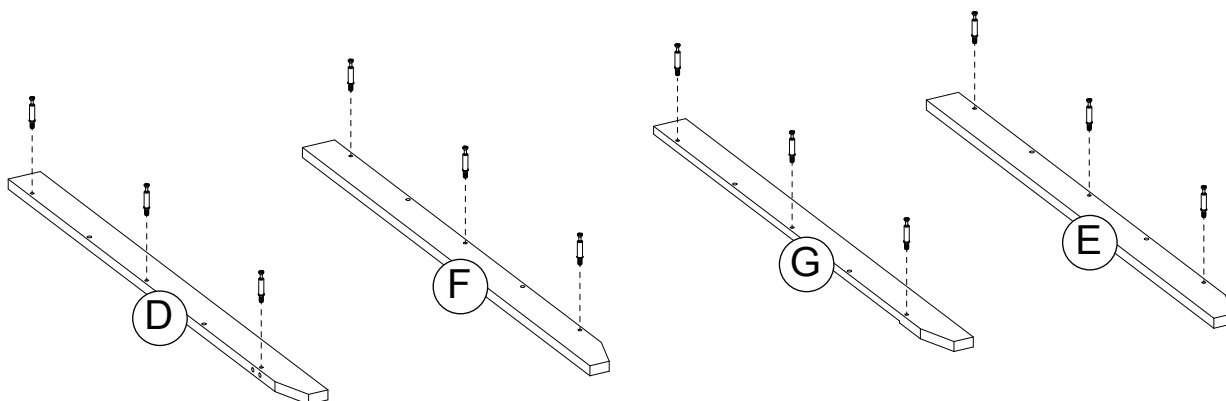





Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Step 2

Insert wood plug (3) to side panel B & C,  
 Assemble Leg D & F to B, Leg G & E to side panel C. then Insert cam lock (2) and tighten.  
 Screw cam bolt (1) to B & C.  
 Fix slider (6) onto B & C with screw (4), Please screw in the correct holes as shown.

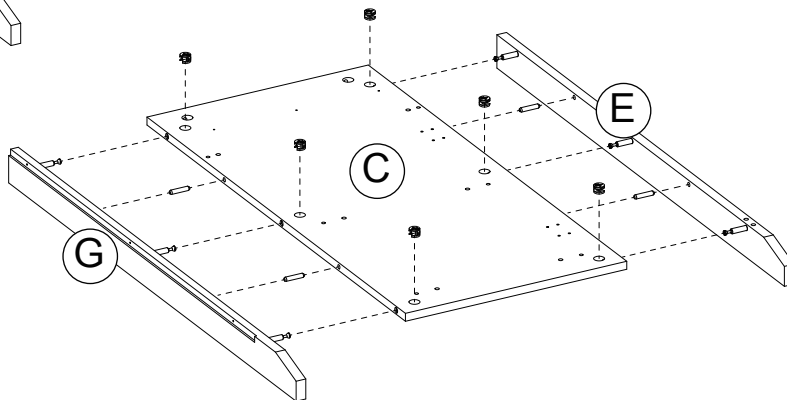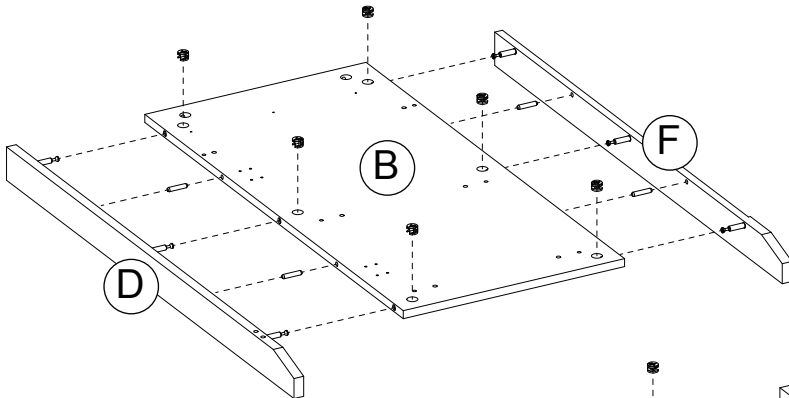

①×12
②×12
③×8
④×6
⑥×2

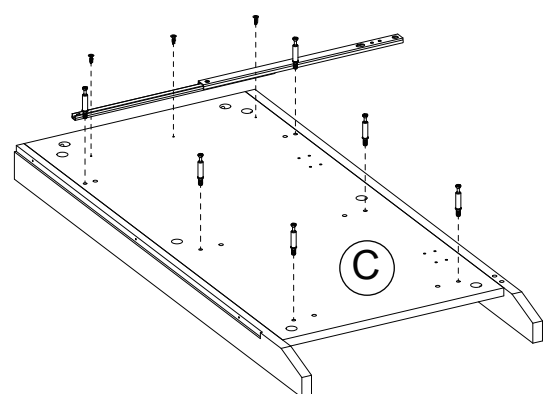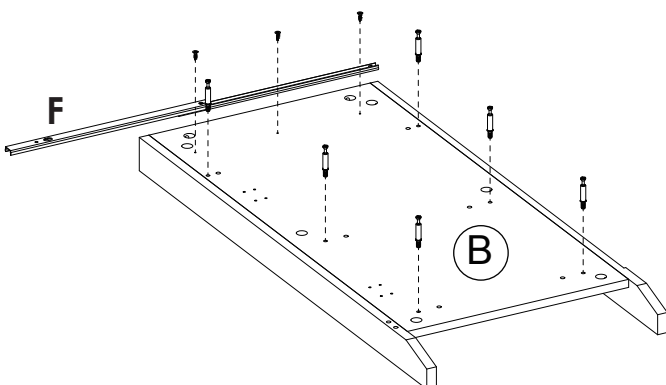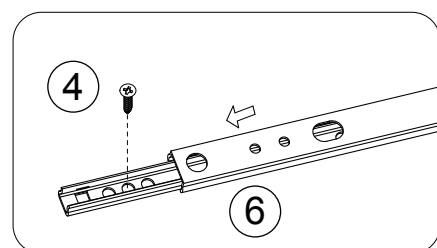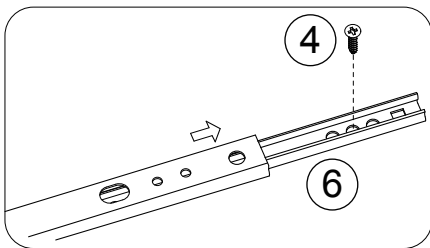


<b>Product Name:</b>	White Wood 2-Door Sideboard Storage Cabinet
<b>SKU #:</b>	WHIF1672


### Step 3

Insert wood plug (3) to bottom panel N.

Screw cam bolt (1) to Rail O. Assemble O to N, then Insert cam lock (2) and tighten.

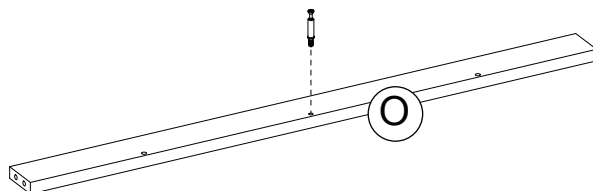



①×1
②×1
③×2

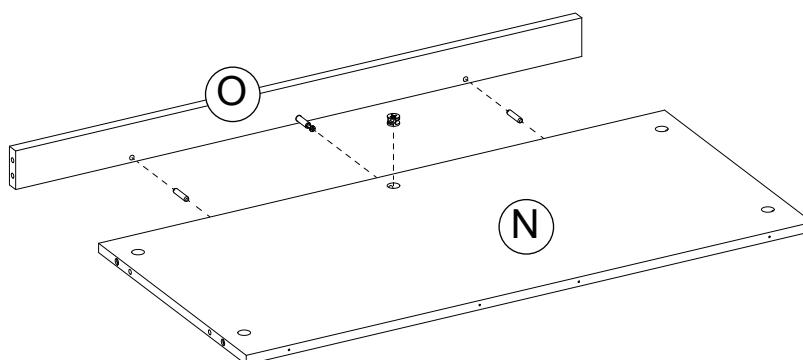

Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Step 4

Fix slider (6) onto Divider I with screw (4), Please screw in the correct holes as shown.

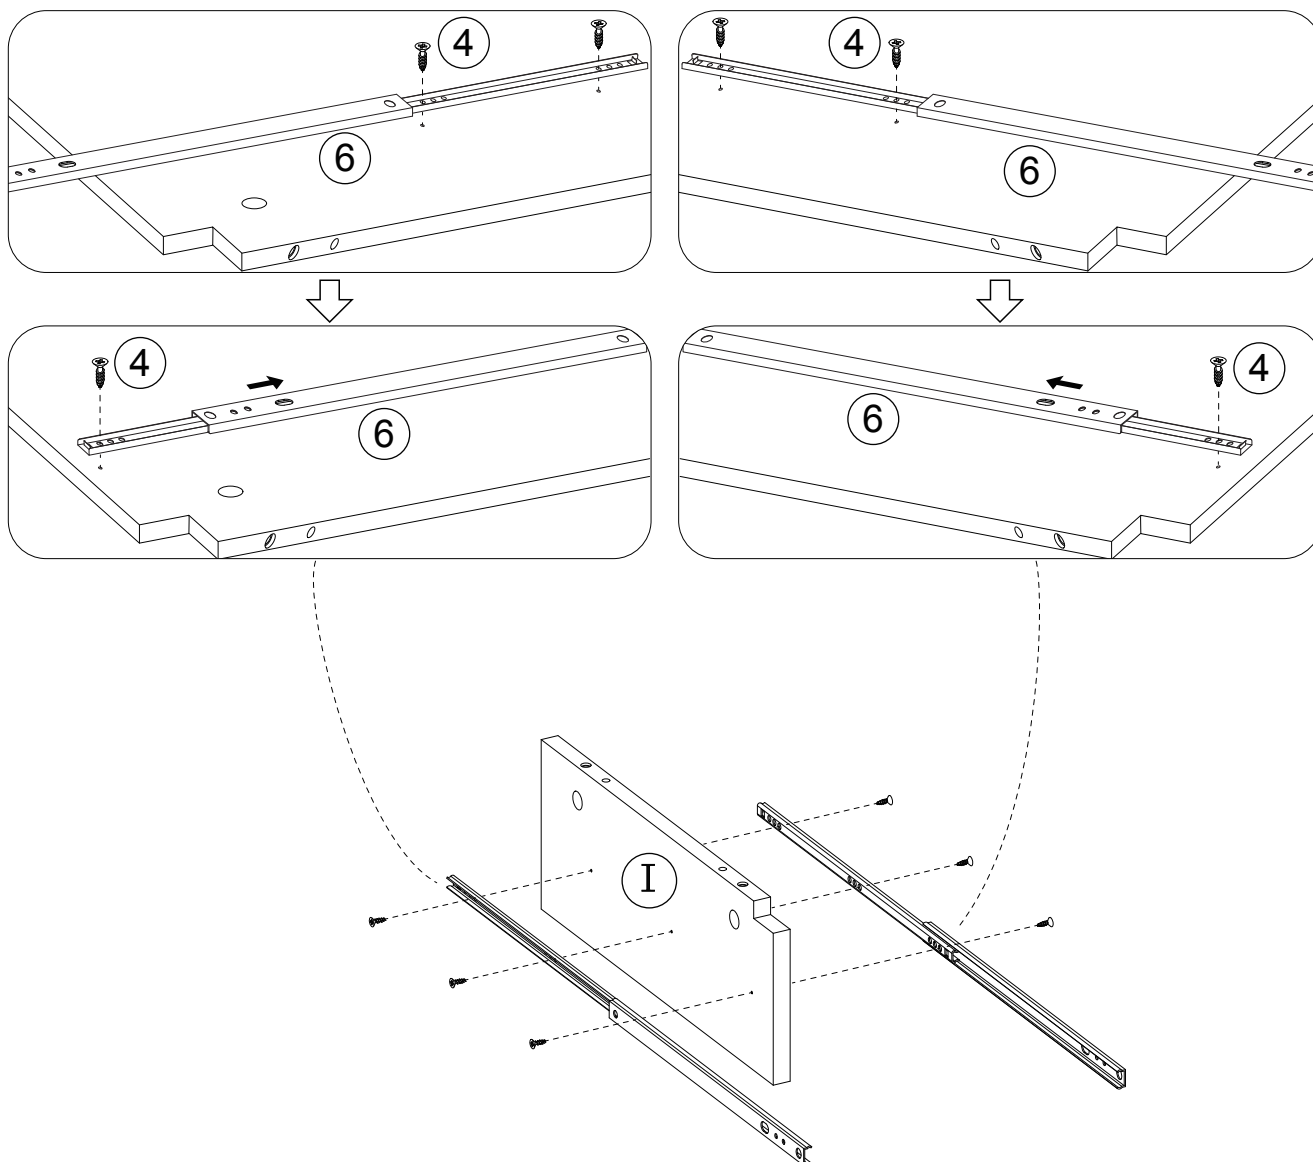
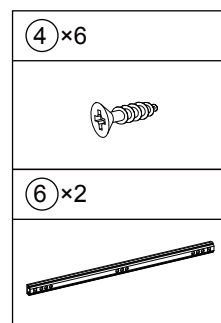


Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Step 5

Assemble support panel J & K to Divider I with screw (14).  
Insert wood plug (3) to side panel B, Assemble J, K, L & N to B,  
then Insert cam lock (2) and tighten.

(2)×6
(3)×8
(14)×2

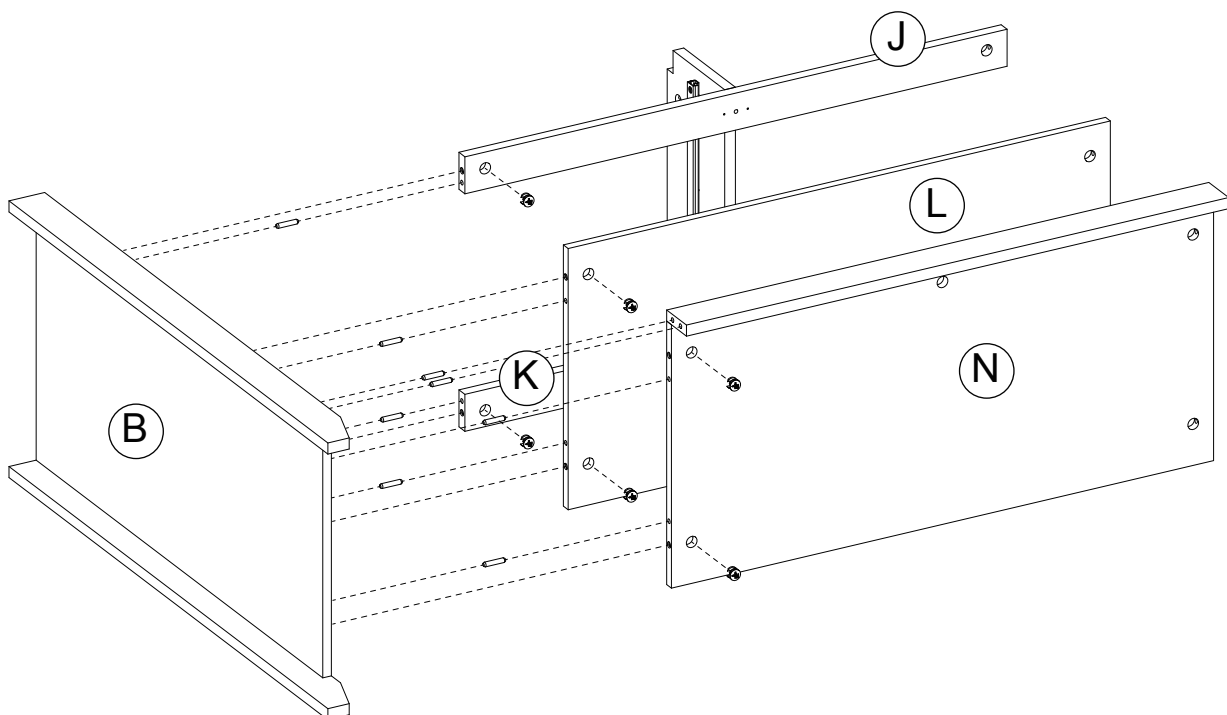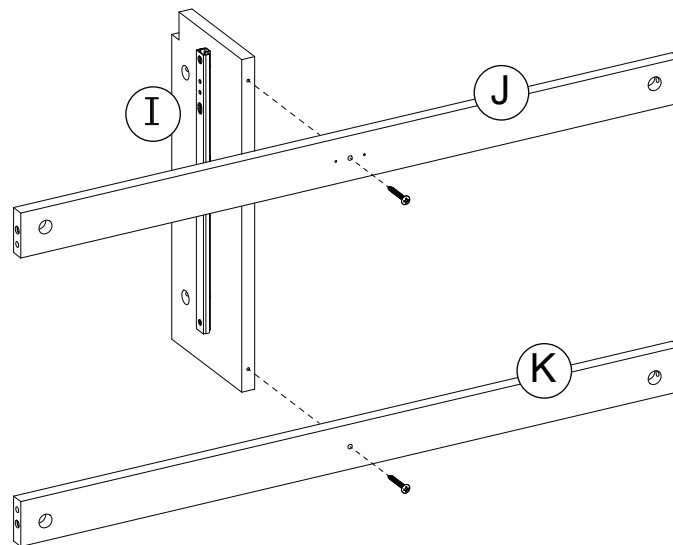

Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672



### Step 6

Insert wood plug (3) to side panel C. Assemble C to unit, then Insert cam lock (2) and tighten.

Fix Magnet catch (16) to support panel J with screw (4).

Fix H to Top panel A with screw (13).

②×6	③×8
④×2	⑬×1
	⑬×3


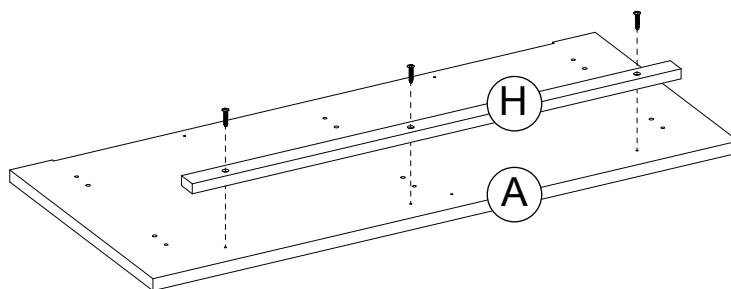
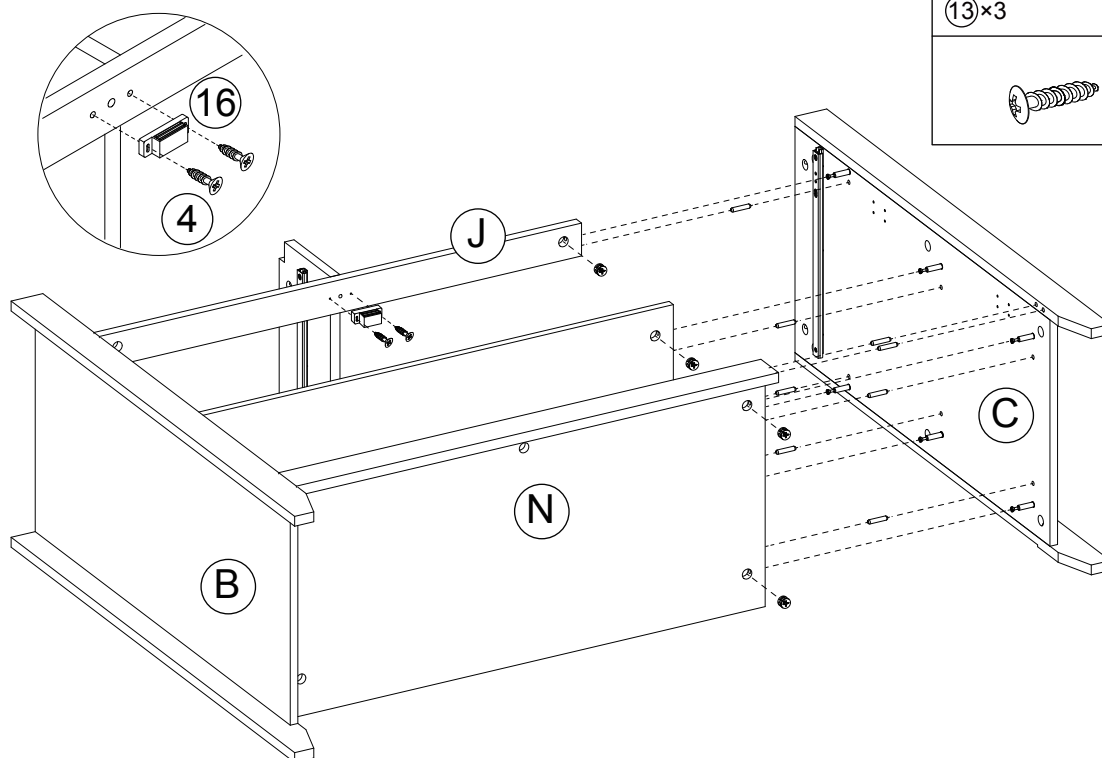




Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Step 7

Fix Hanger brackets (19) onto top panel A with screw (12). Screw cam bolt (1) to A. Insert wood plug (3) to panel B, I & C, Assemble A to unit, then Insert cam lock (2) and tighten.

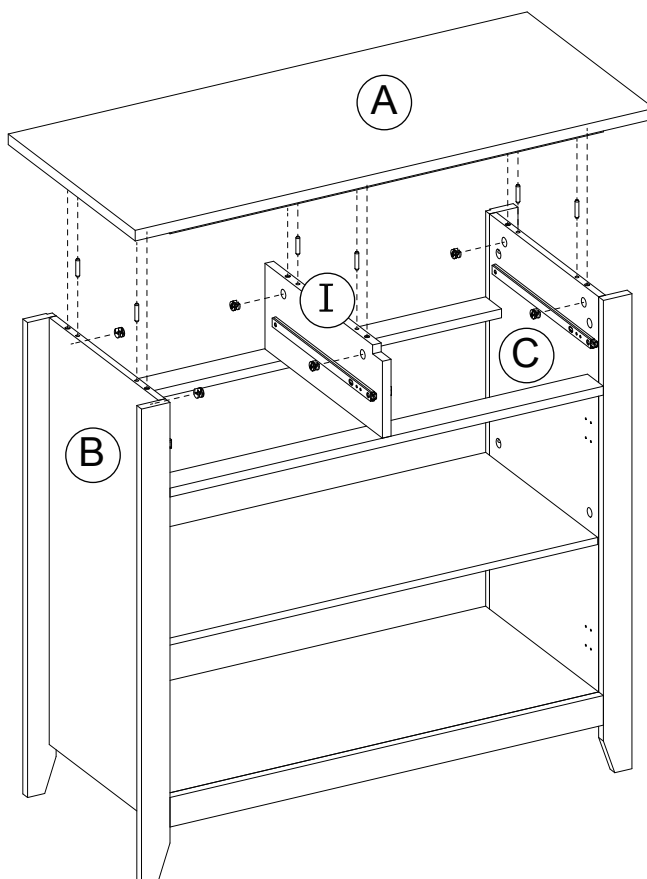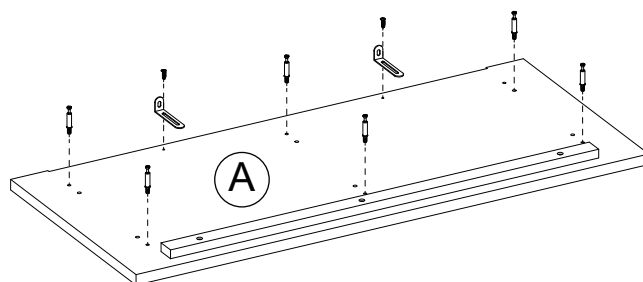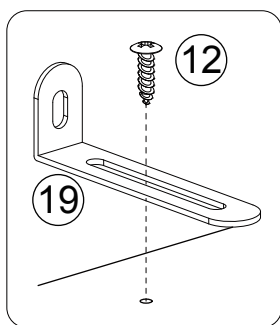




①×6
②×6
③×6
⑫×2
⑲×2

Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Step 8

Use H-joint (15) to combine two back panels M together.  
Fix the M to unit with screw (11). Stick the foot pad (22) on Legs as shown.






(11)×22
(15)×1
(22)×4

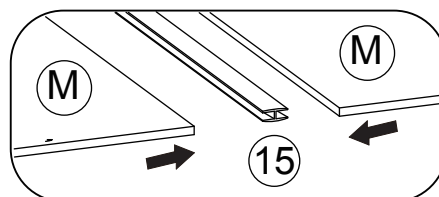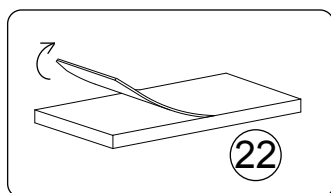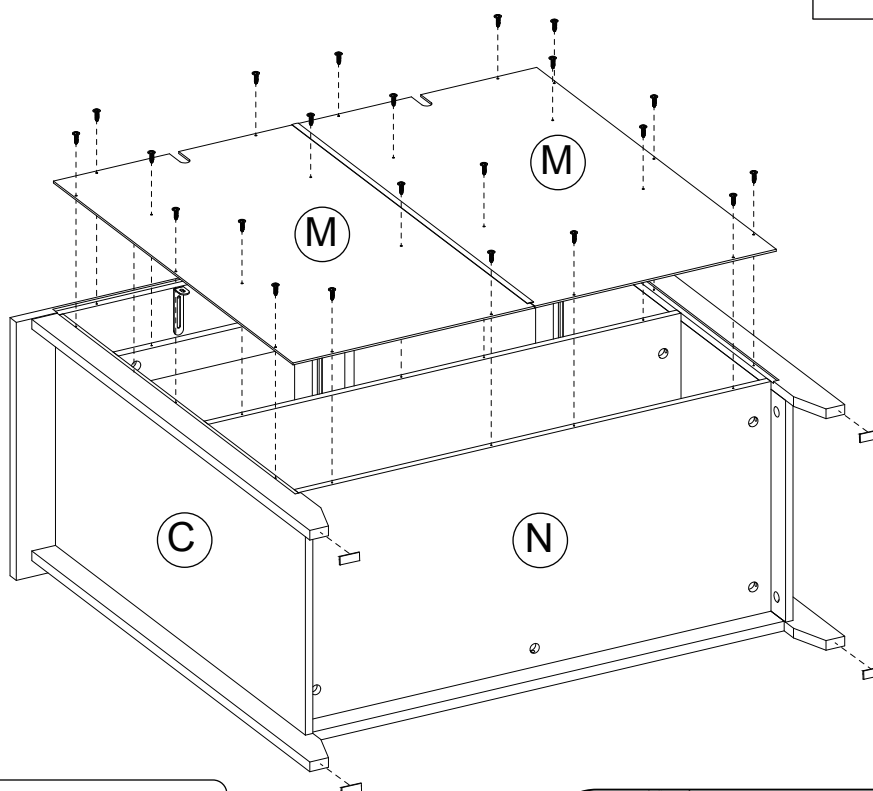

Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Step 9

Assemble the hinges (18) to door P & Q with screws (5),  
 Fix handle (9) to P & Q with bolt (8).  
 Fix magnet plate (17) to P & Q with screw (4).

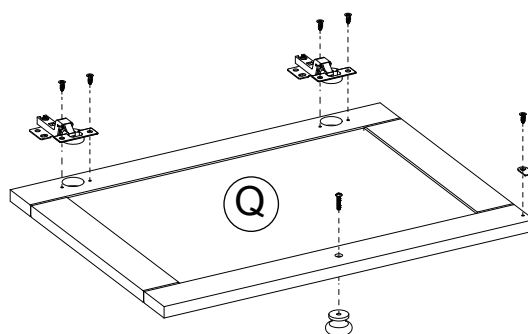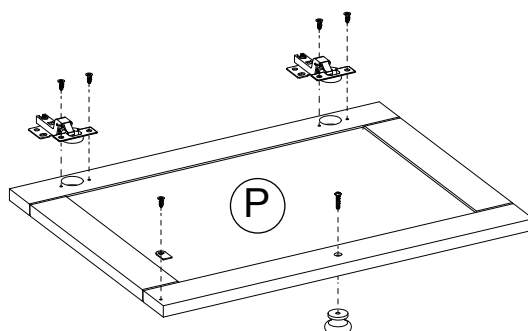
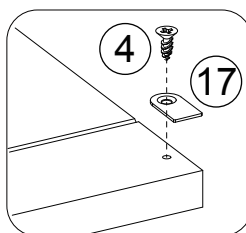
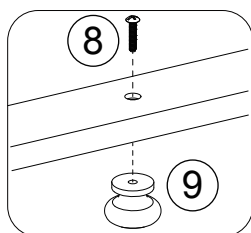
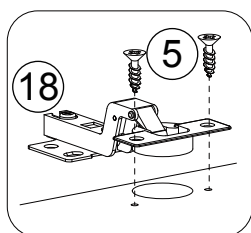


④ × 2
⑤ × 8
⑧ × 2
⑨ × 2
⑪ × 2
⑮ × 4

Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Step 10

Assemble the doors P & Q to the unit with screw (5).  
Stick Silica gel pad (21) on shelf L as shown .

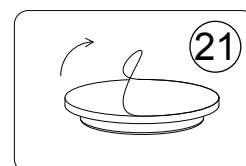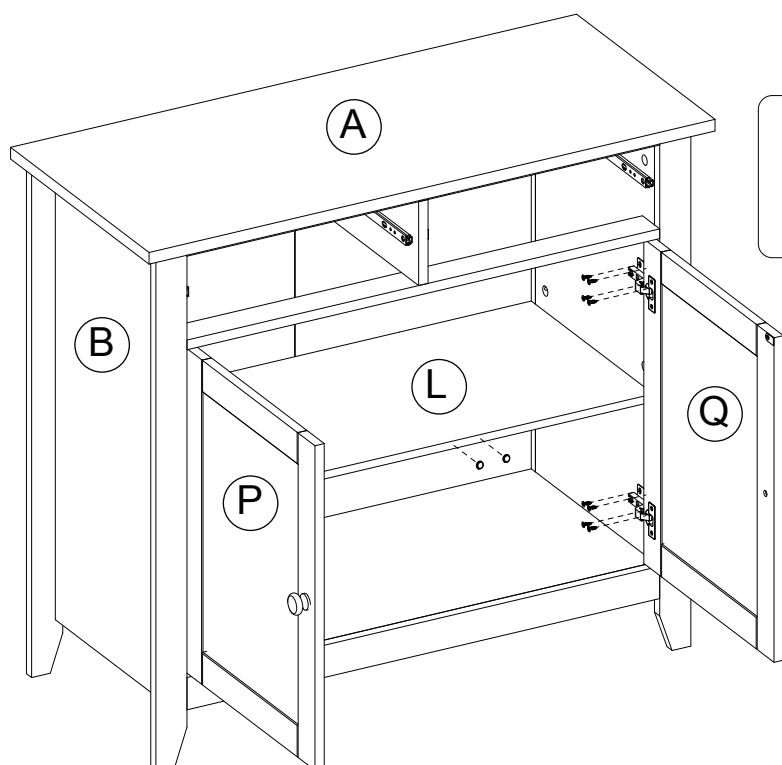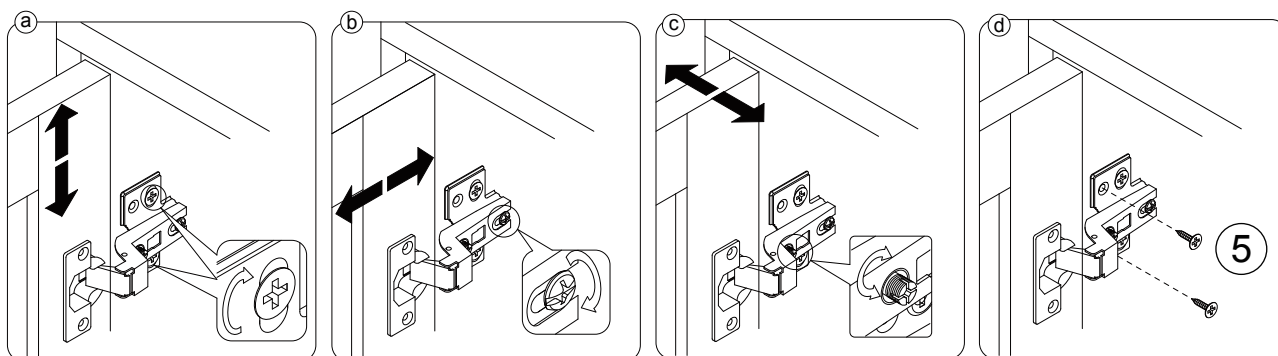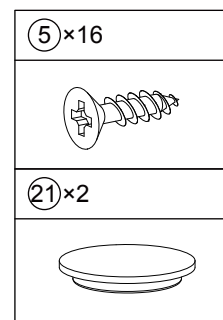

Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672


### Step 11

Screw cam bolt (1) to drawer front R. Fix handle (10) to drawer front with bolt (8).



Fix drawer side S & T to drawer back U with screws (14) as shown.

Insert drawer bottom V align with groove. Assemble R to unit,

then Insert cam lock (2) and tighten.

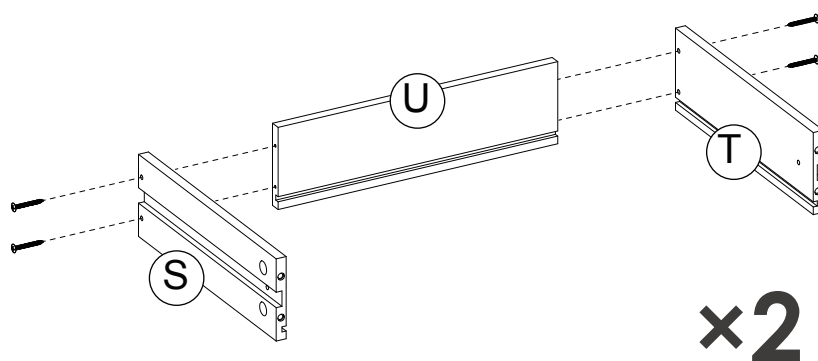







①×8
②×8
⑧×4
⑩×2
⑭×8

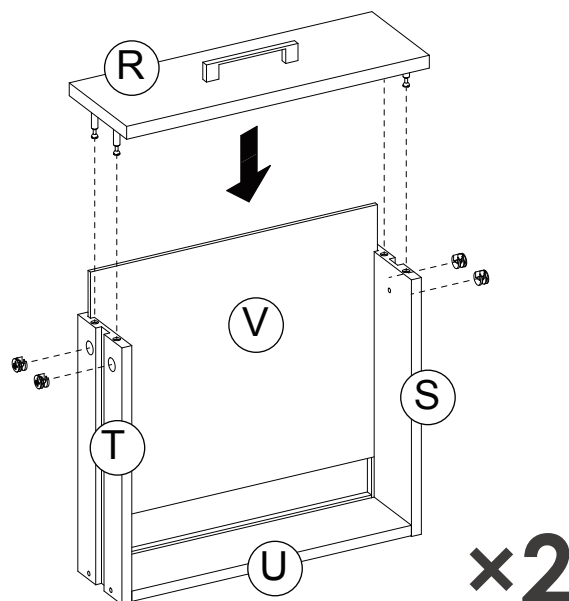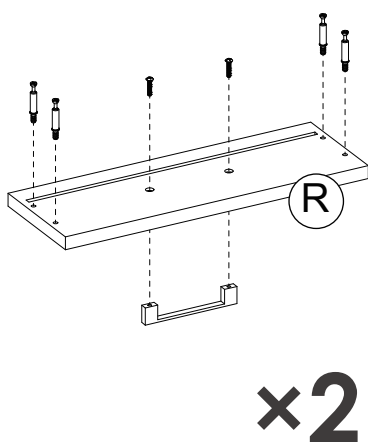

Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Step 12

Draw a location hole on Wall. Drill a hole on the wall to input wall plug (20) , Fix the cabinet to wall with screws (14) as shown.

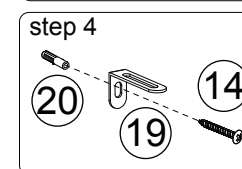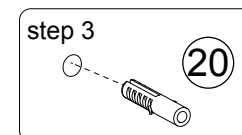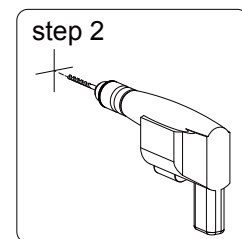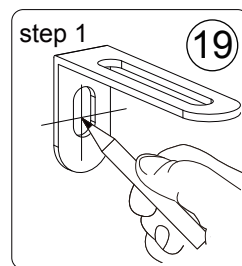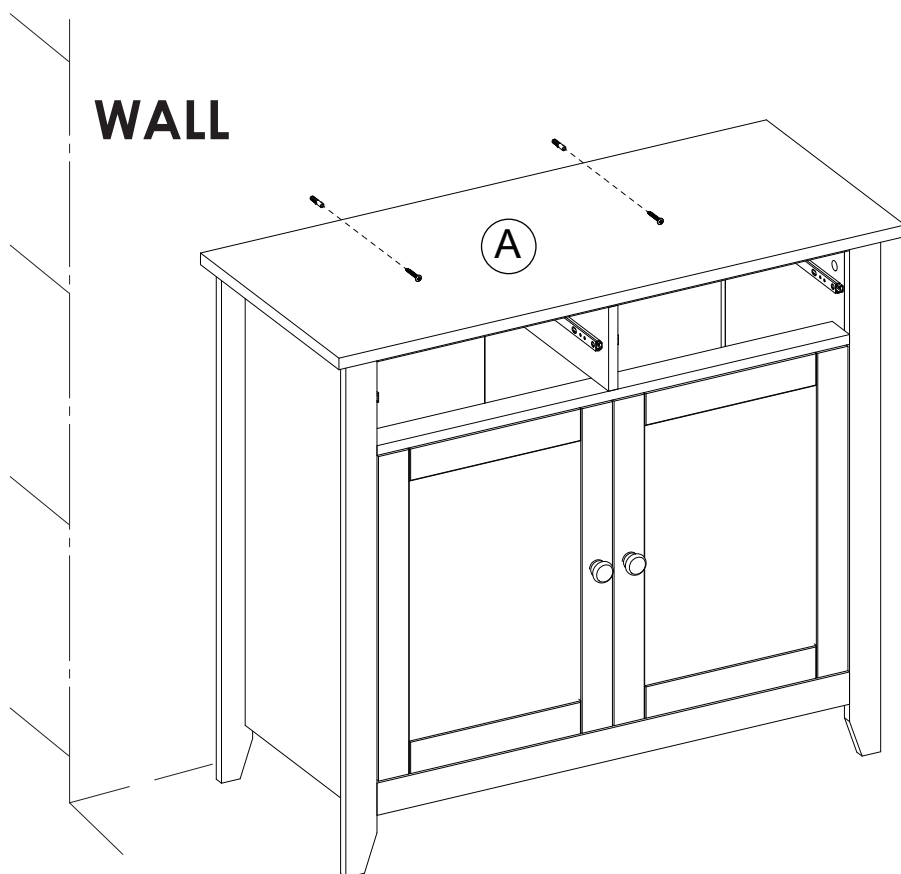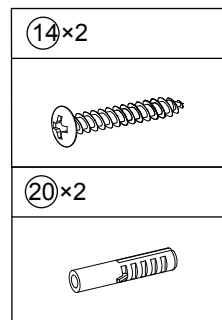

Product Name:	White Wood 2-Door Sideboard Storage Cabinet
SKU #:	WHIF1672

### Step 13

Fix the drawer to cabinet with bolt (7).

