



Instruction Manual

Please save this manual for future reference.

Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669


Thank you for purchasing this LuxenHome product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:


①×16	②×16	③×6	④×4	⑤×24	⑥×2
				 M4*12	
⑦×2	⑧×4	⑨×2	⑩×2	⑪×2	⑫×2
 M4*18		 M4*35	 M4*30	 M4*10	
⑬×2	⑭×4	⑮×8	⑯×8		
			 M3*12		

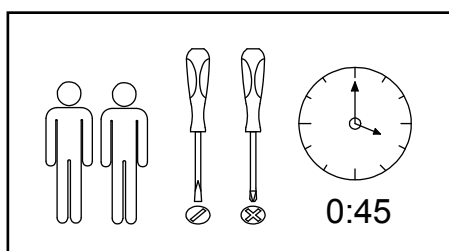

Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)


Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669

Panels:

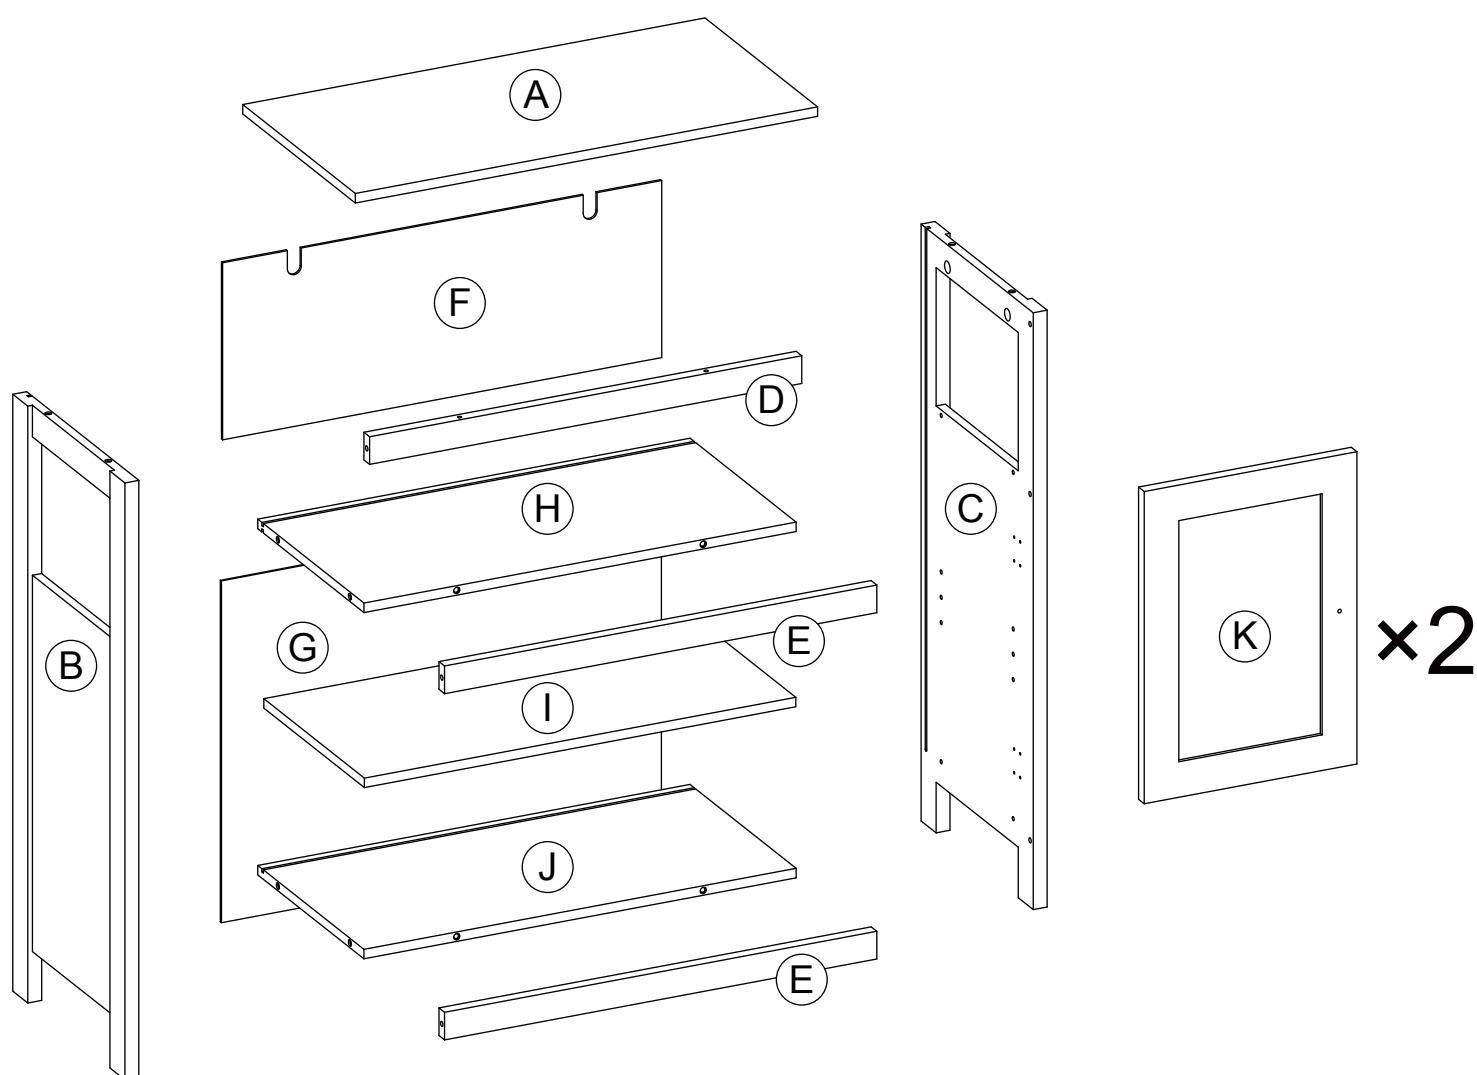

Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669

Make sure the pins are installed correctly as shown with the “check mark” below:

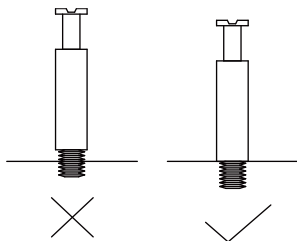

Below shows how the pins are used to assemble the panels together.


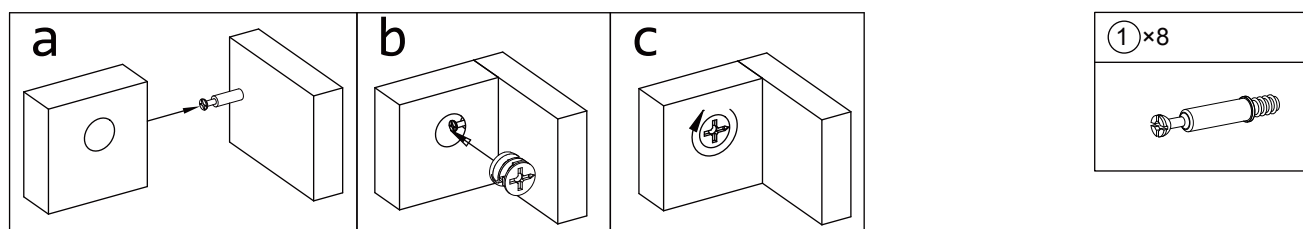


FIGURE A

Step 1



Screw cam bolt (1) to side panel B & C as shown



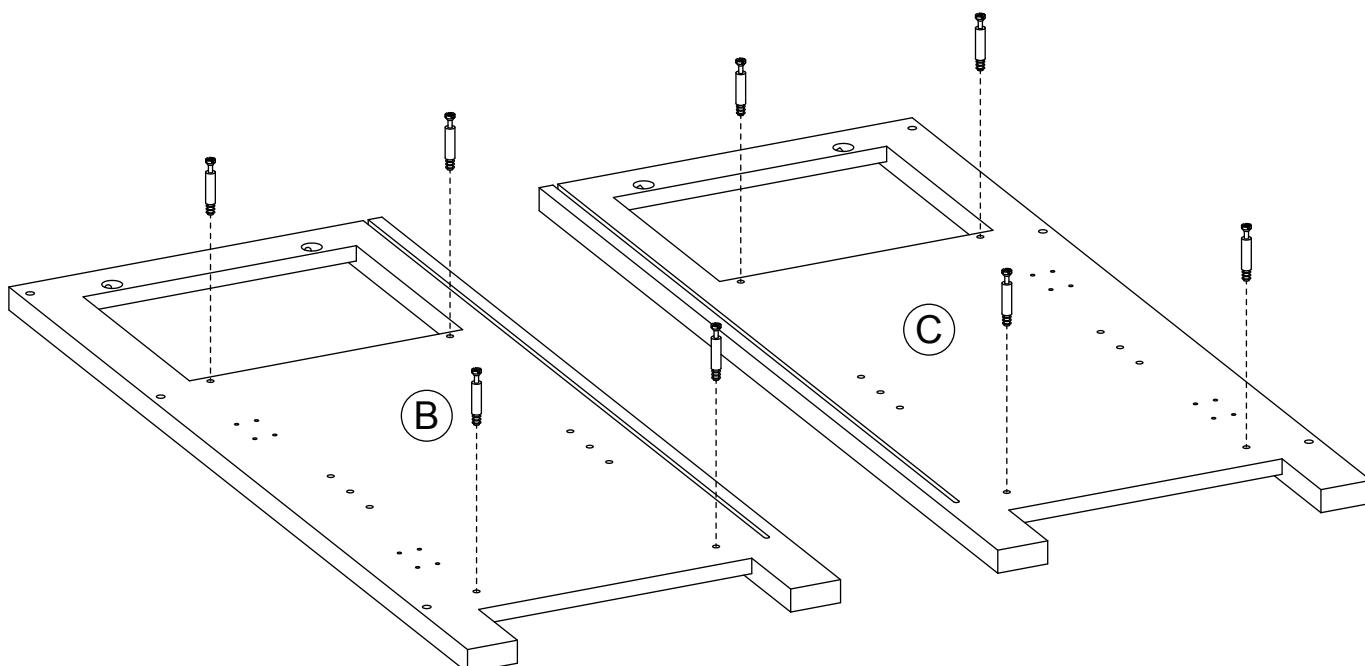


Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669

Step 2

Screw cam bolt (1) to rail E,
Assemble E to shelf H & bottom J, then Insert cam lock (2) and tighten.

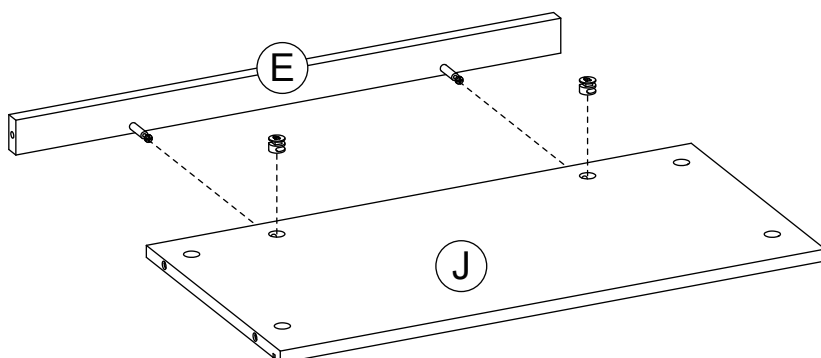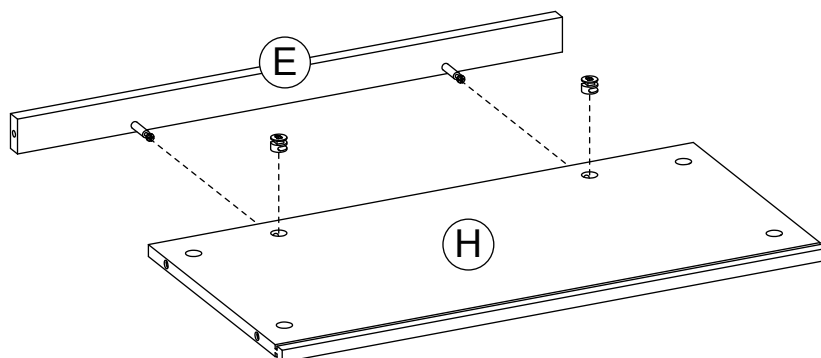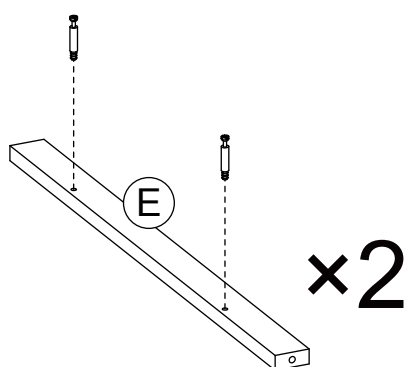

① × 4

② × 4


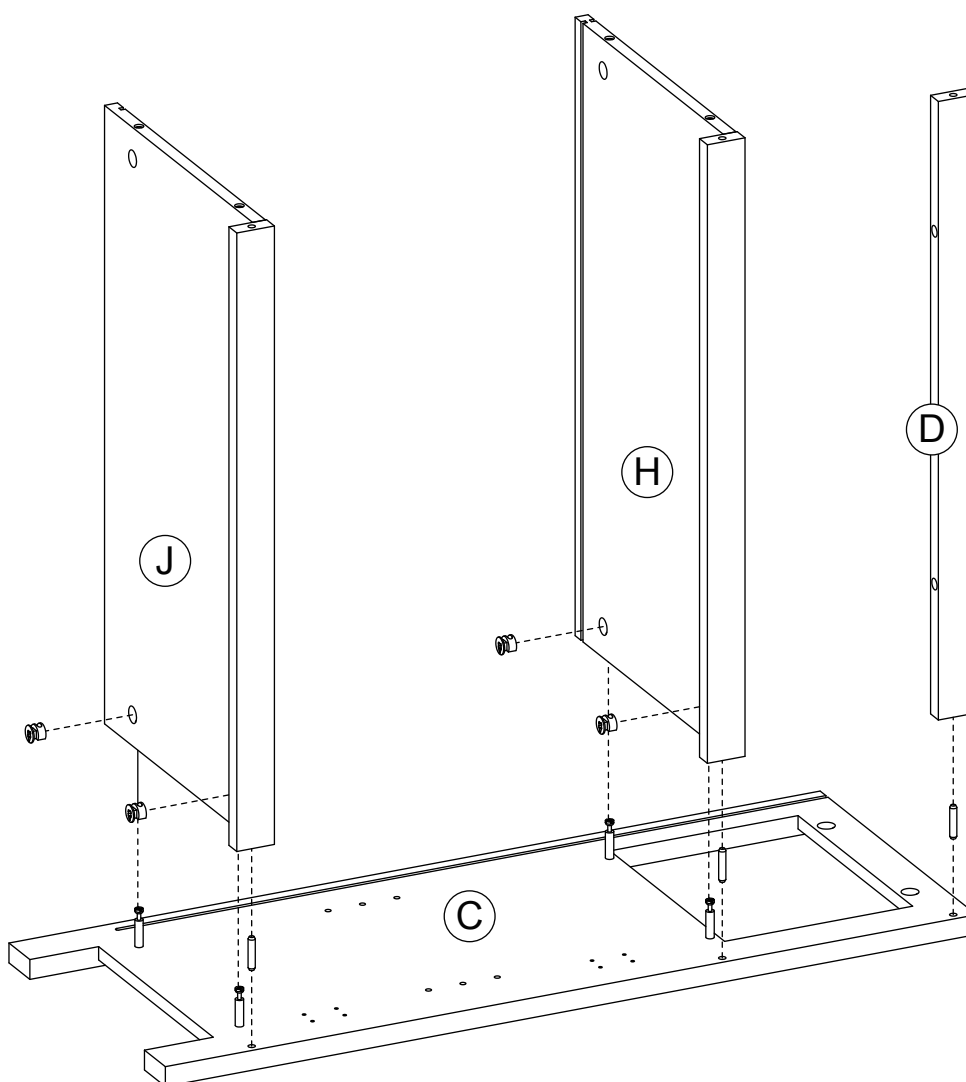


Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669




Step 3

Insert wood plug (3) to side panel C,
Assemble J,H & D to C, then Insert cam lock (2) and tighten.

②×4

③×3




Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669


②×4	③×3	⑭×4
		

Step 4






Insert wood plug (3) to bottom shelf J, shelf H & rail D.

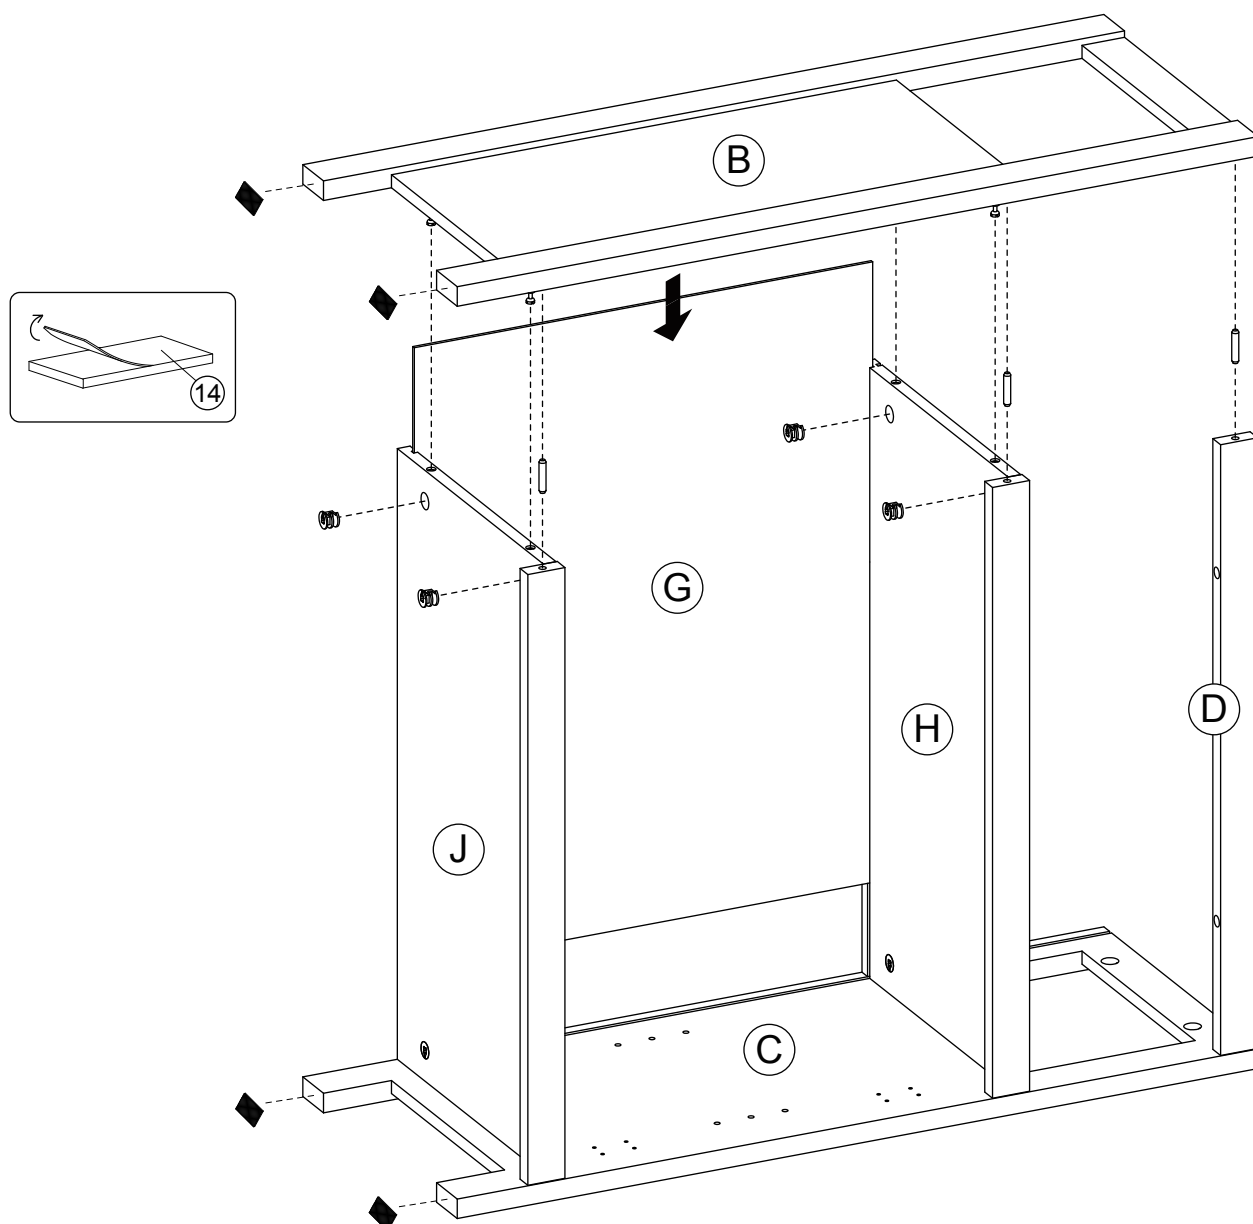Insert back panel G align with groove. Assemble side panel B to unit, then Insert cam lock (2) and tighten.

Stick foot pad on Legs as shown.




Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669

①×4	②×4	⑨×2	⑪×2	⑫×2
				

Step 5




Fix Hanger brackets (12) to top panel A with screw (11). Screw cam bolt (1) to A. Insert back panel F align with groove. Assemble A to unit, then Insert cam lock (2) and tighten. Screw (9) to A pass through D.

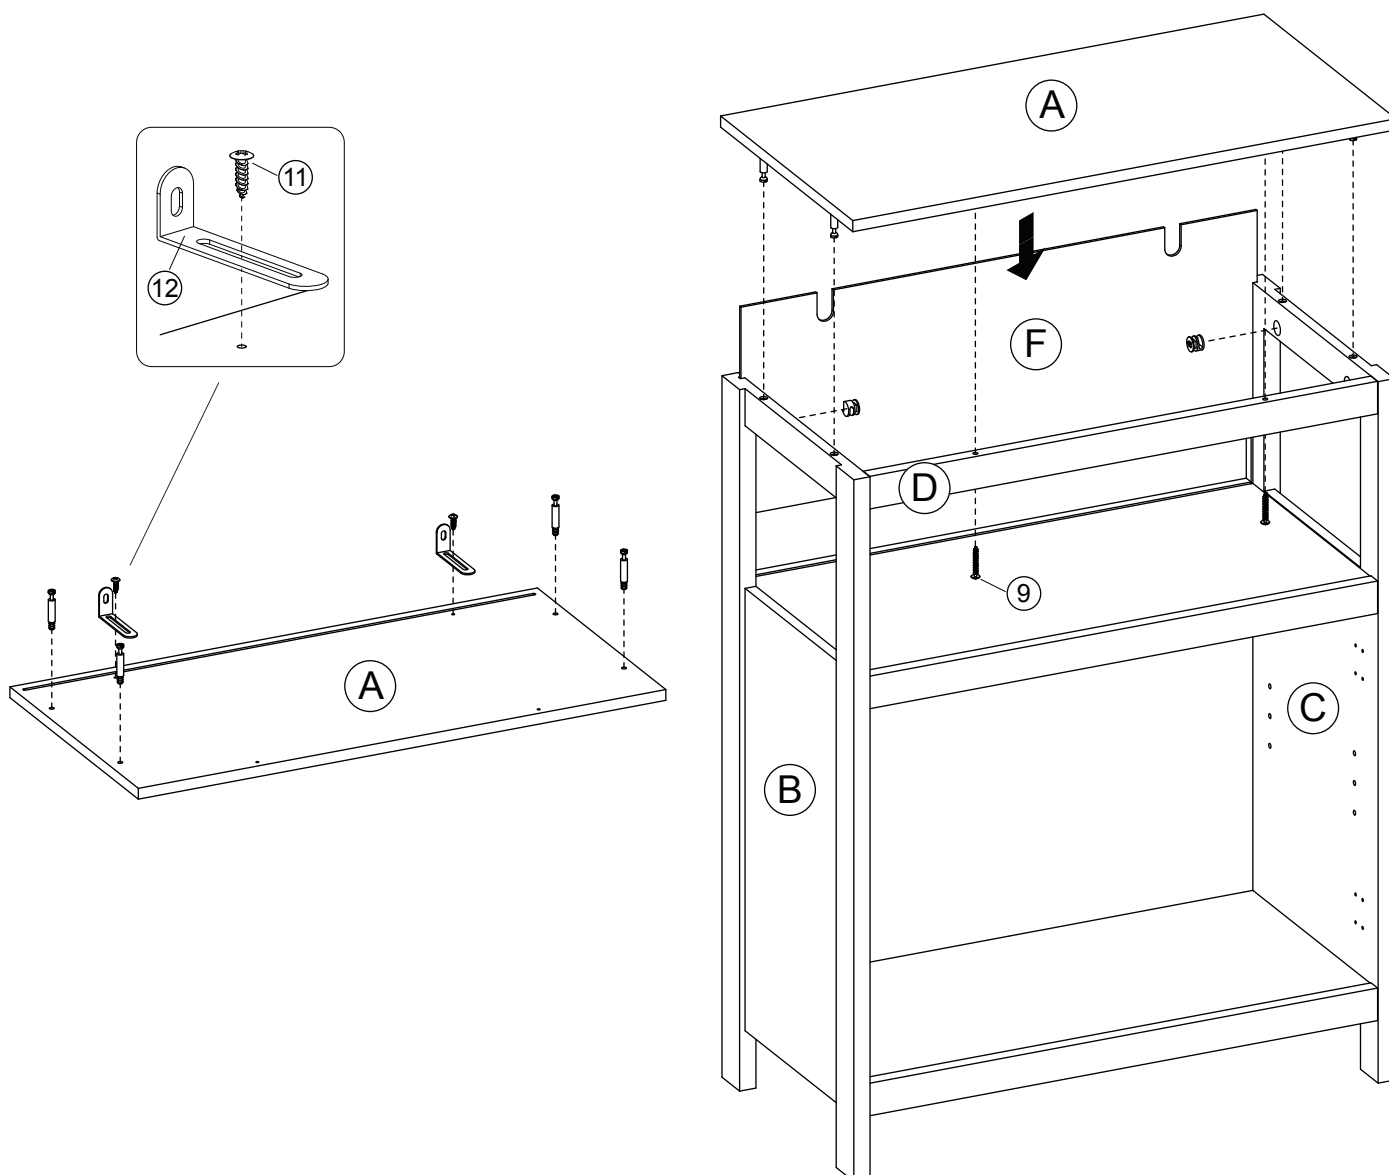

Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669

Step 6


Insert layer supports (8) into the side panels. Put adjustable shelf I on place.

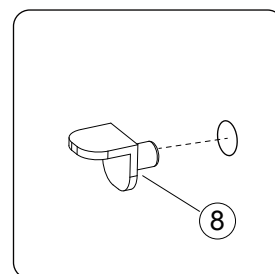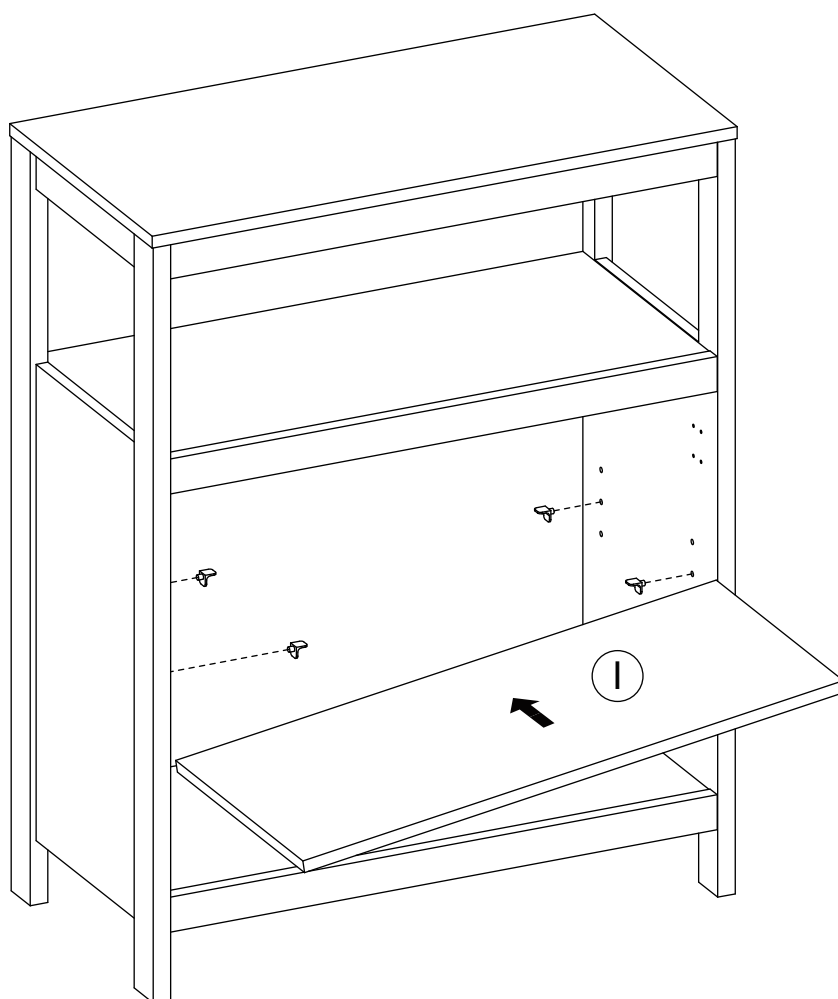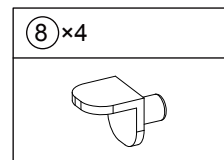


Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669

Step 7

Assemble the hinges (4) to door K with screws (5), Fix handle (6) to K with bolt (7).

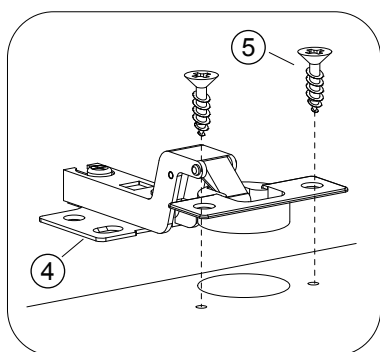







④ × 4
⑤ × 8
⑥ × 2
⑦ × 2

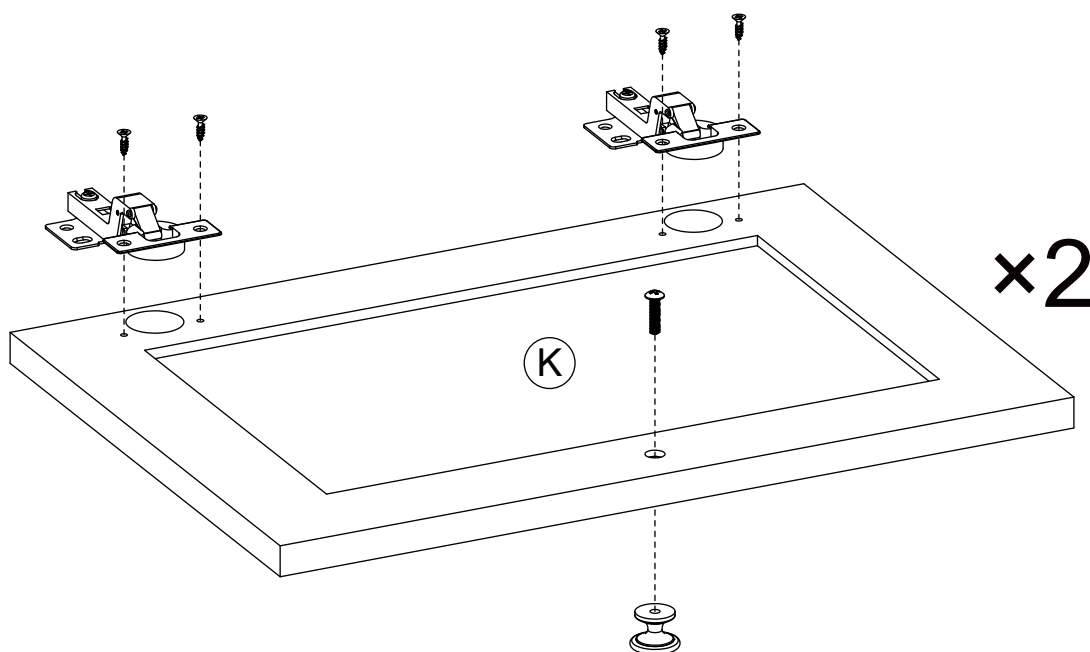

Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669

Step 8

Assemble the doors to the cabinet with screw (5).

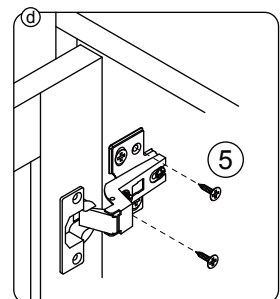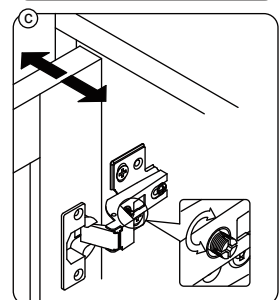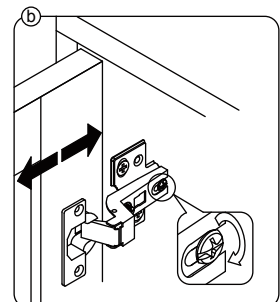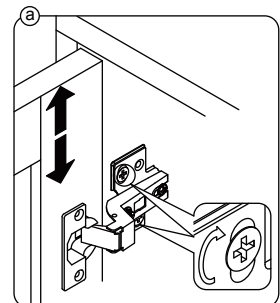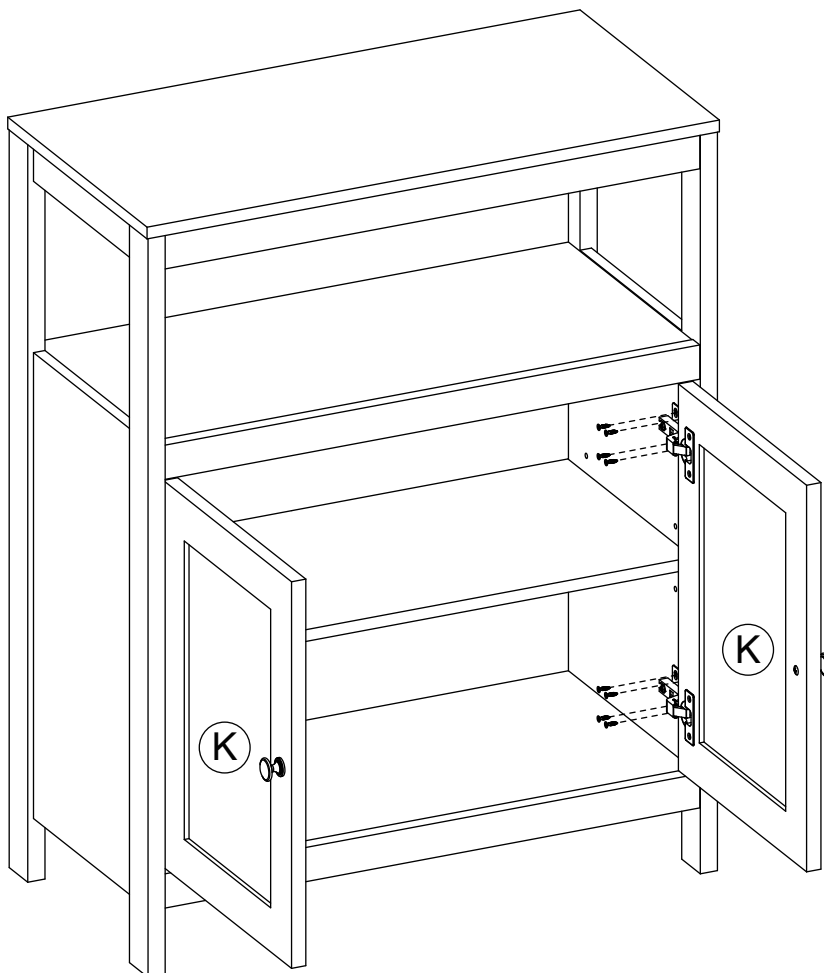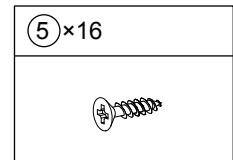


Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669

Step 9

Insert back panel button (15) to unit with screws (16) as shown.

(15)×8	(16)×8

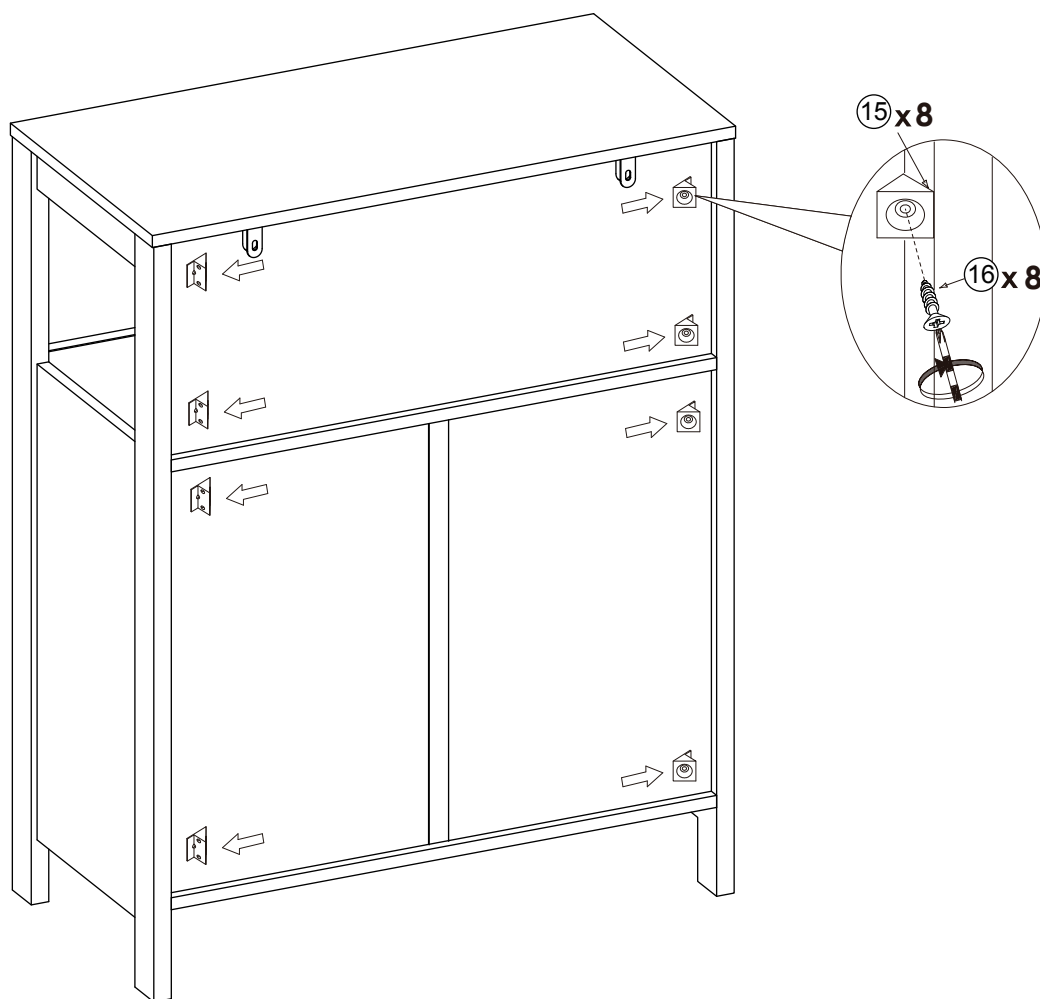

Product Name:	White Wood 2-Door Bathroom Cabinet
SKU #:	WHIF1669

Step 10

Draw a location hole on Wall. Drill a hole on the wall to input wall plug (13) , Fix the cabinet to wall with screws (10) as shown.

