

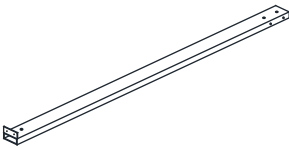
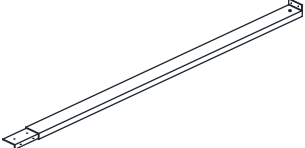

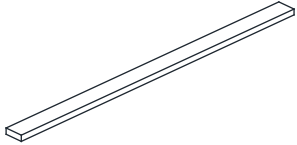
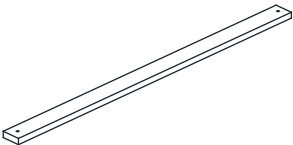
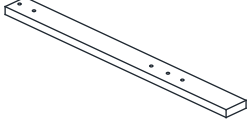


ASSEMBLY INSTRUCTION





ITEM : C8369TPL

PARTLIST

1  HEADBOARD CUSHION x1	2  FOOTBOARD CUSHION x1	3  FOOTBOARD LEG x2	5  SIDE RAIL x2	6  SIDE RAIL x2
7  SIDE RAIL LEG x2	10  SLAT x12	12  SOCKET x24	13  SUPPORT RAIL x2	14  HEADBOARD LEG x2
15  SIDE RAIL COVER x2	24  VELCRO TAPE x2			

*All parts needed are shown in above picture.
Numbers only indicate the specific parts for easy assembly.


HARDWARE

A  JCBB SCREW M8 x 40MM x4	B  JCBC SCREW M6 x 15MM x14	C  JCBC SCREW M6 x 20MM x8	D  JCBC SCREW M6 x 35MM x4	E  SPRING WASHER M6 x 12MM x4
F  FLAT WASHER M6 x 19MM x4	G  SPRING WASHER M8 x 13MM x4	H  FLAT WASHER M8 x 22MM x4	I  L - KEY M4 x 100MM x1	J  L - KEY M5 x 65MM x1


ASSEMBLY INSTRUCTION

STEP 1


Open zipper to get all other parts.

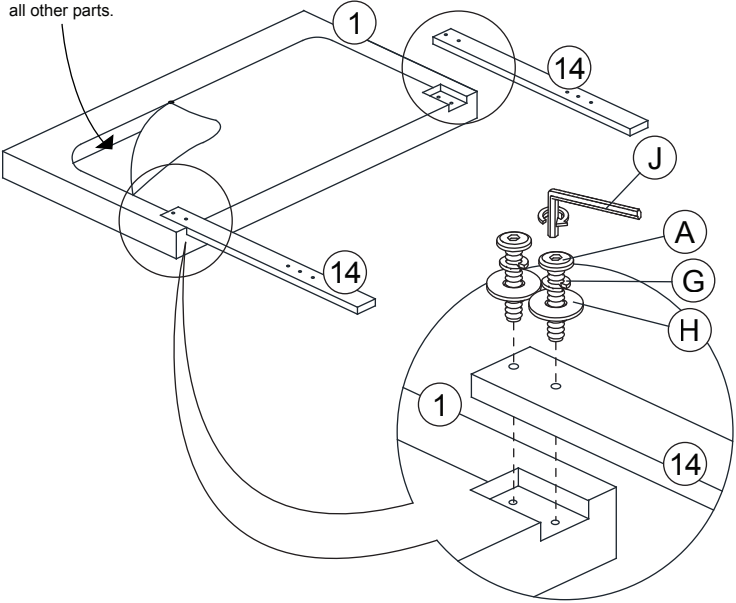


STEP 2

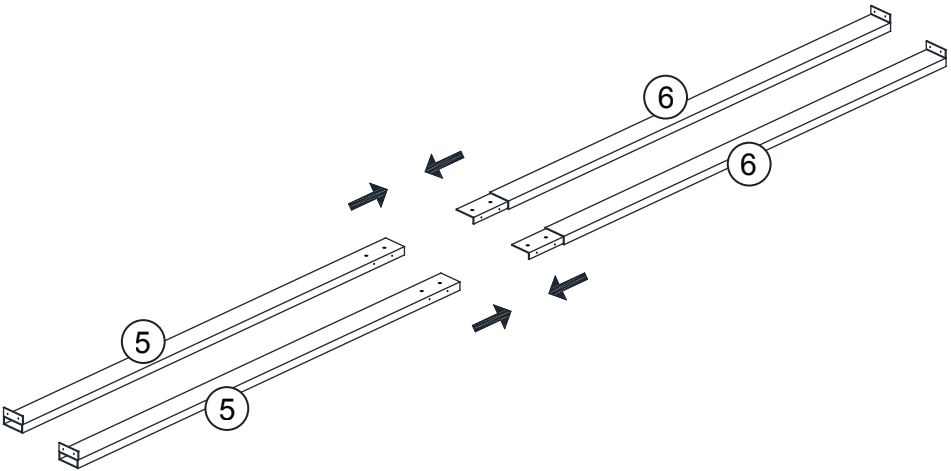

STEP 3

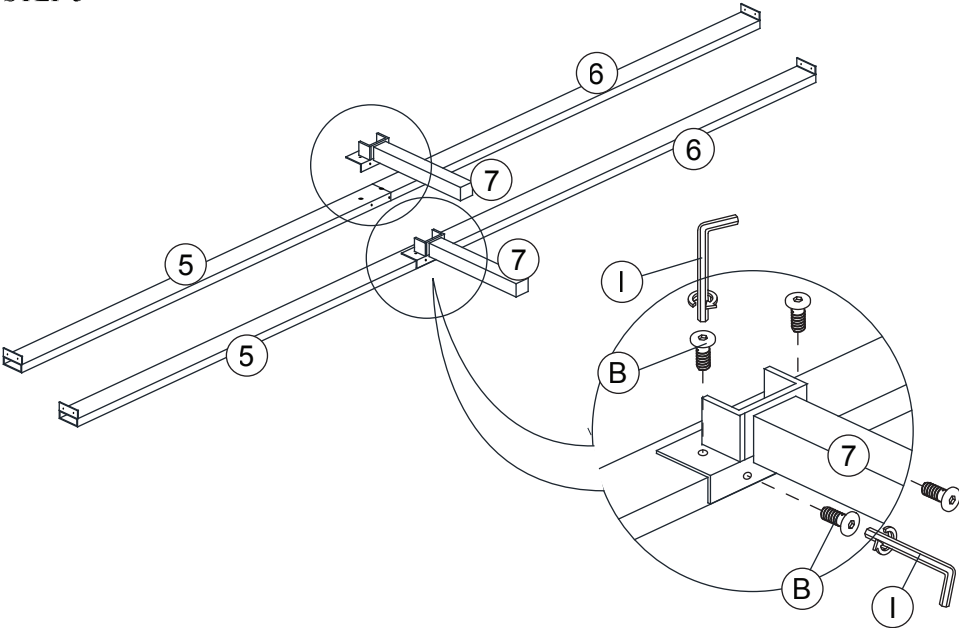


STEP 4

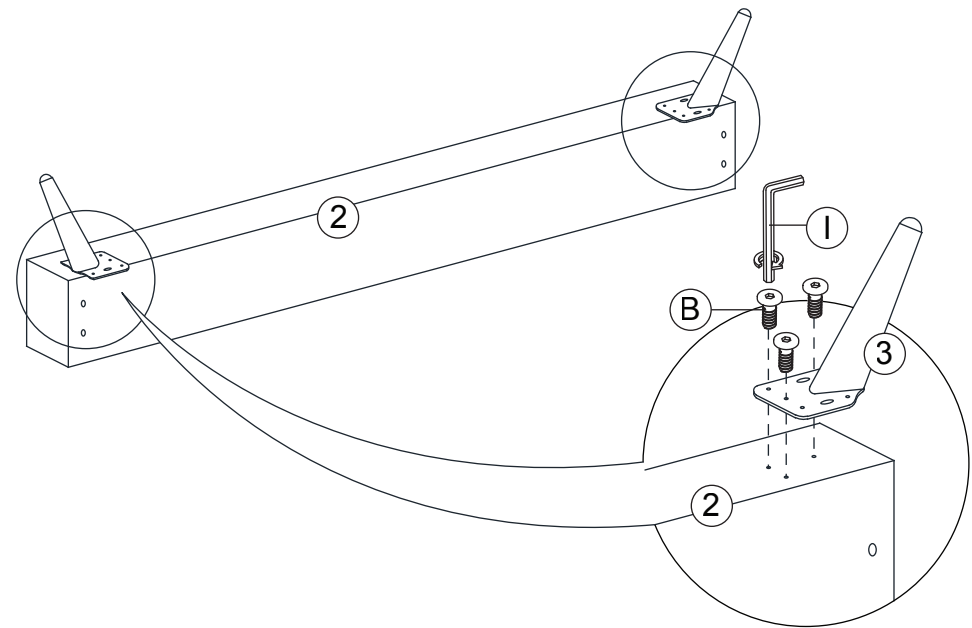


ASSEMBLY INSTRUCTION


STEP 5

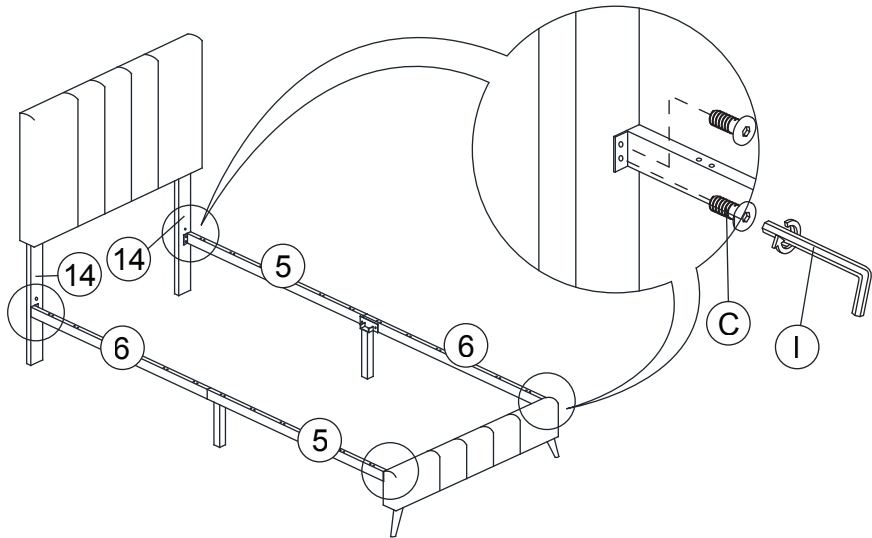


STEP 6

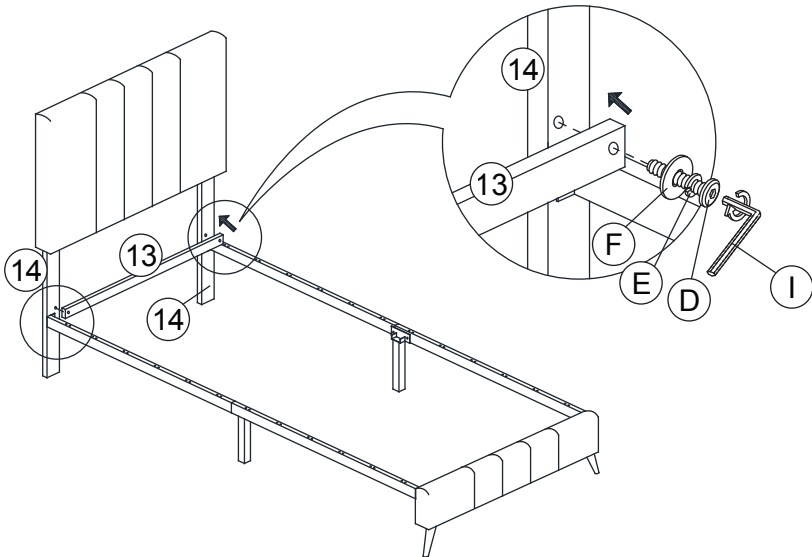

STEP 7

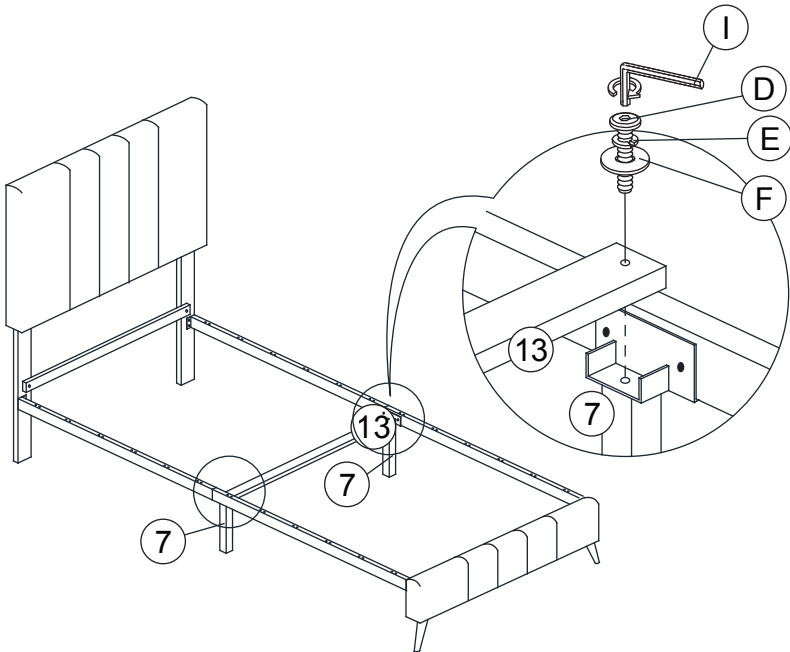


STEP 8

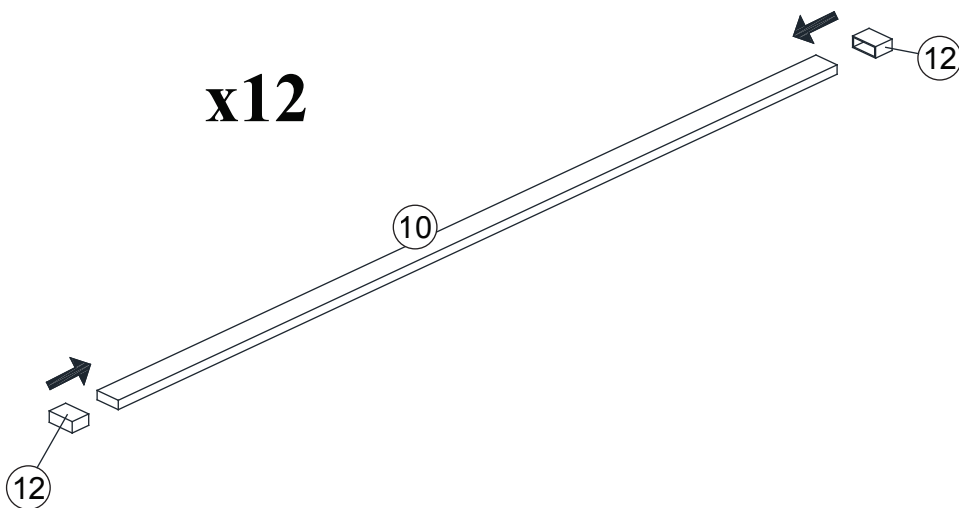


ASSEMBLY INSTRUCTION


STEP 9

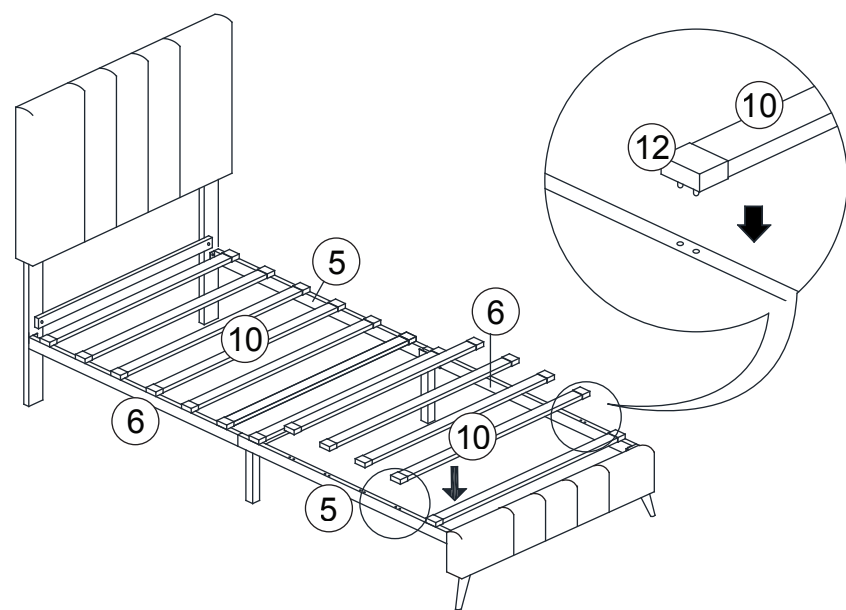

STEP 10

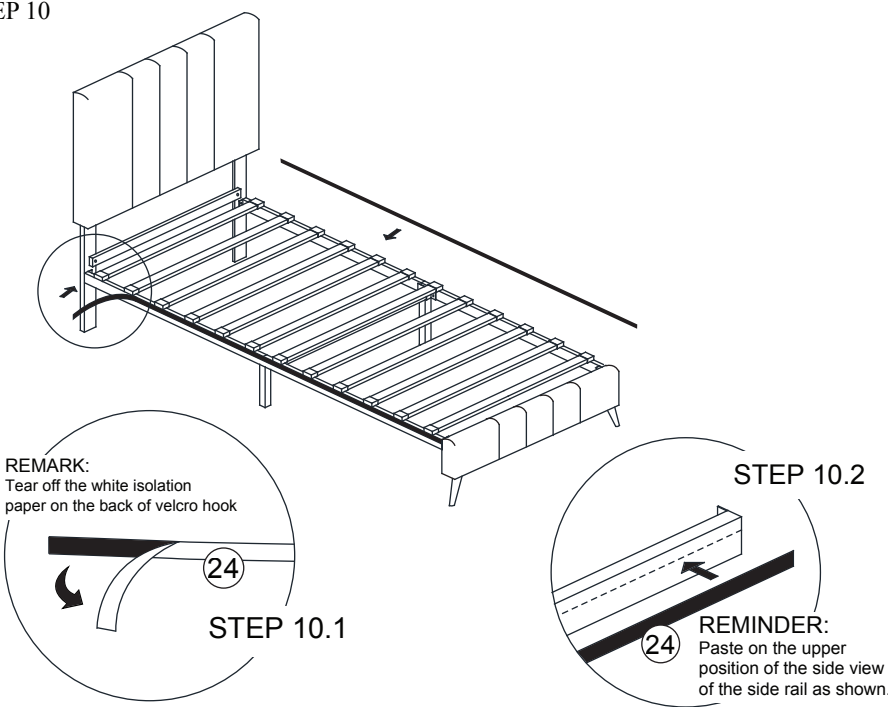

STEP 11

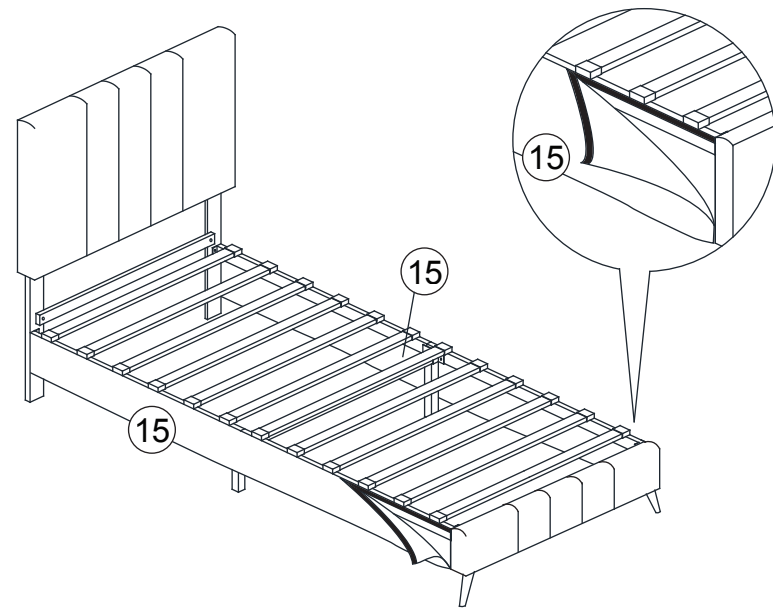

ASSEMBLY
COMPLETED