

## Assembly Instruction Sheet #S-8318W12C For Style 8318W12C

Tools Required: Phillips screwdriver, pliers, wire cutters, wire stripper, electrical tape, safety glasses.

Light Source: (5) E12 base bulb (not included).

Installation Assembly Time: 15-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, repair, or open the fixture. Contact customer service for replacement parts.

### ⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture.

We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.


### Package Contents

1	Crystal X12	14mmx1 63mmx1
4	Crystal X2	14mmx7 63mmx1
2	Crystal X1	14mmx1 63mmx1
3	Crystal X2	14mmx1 63mmx1
5	Crystal X1	14mmx1 63mmx1

### Hardware Contents

Part	Description	Quantity
AA	Cap Nut	2
BB	Wire	2
CC	Mounting Screws	2
DD	Mounting Screws	2
EE	Mounting Screws	2
AA	Backplate	1
DD	Mounting Screws	2
EE	Mounting Screws	2

Figure 1

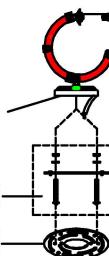

**STEP 1 – Attach Mounting Bracket, Backplate and Hex Nut to Mounting bracket.**  
A. Line up a set of holes on the Mounting bracket (EE) and holes on the Backplate. Thread Mounting Screws (DD) into the holes on the Mounting bracket (EE). Please Lock Washers and Thread Hex Nut onto the Mounting Screws (DD). Hand tighten until snug.

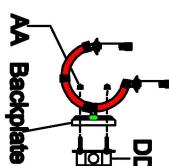


Figure 2

### STEP 2 – Attach Mounting bracket to Outlet Box

A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of Green Ground Screw facing you. Secure it with Outlet Box Screws. Tighten until snug.

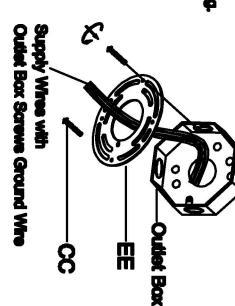


Figure 2

### STEP 3 – Fit Backplate to Mounting bracket Assembly

A. Fit the backplate to Mounting screws (DD) and secure with Cap nut (AA). Note: The backplate should swing against the outlet box. If the backplate is too tight, adjust the length of the mounting screws (DD) by unscrewing the hex nut and lock washer and then retwisting mounting screws (DD) in or out of the mounting bracket (EE) until the correct length is achieved. Once the backplate is secure, remove the Cap nut (AA) and backplate and proceed to Step 4.

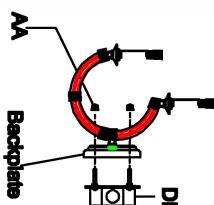


Figure 3

### STEP 4 – Wire Connections

A. Use standard wire connection to make all wire connections. Twist connection until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully strip all the connected wires into the Outlet Box.

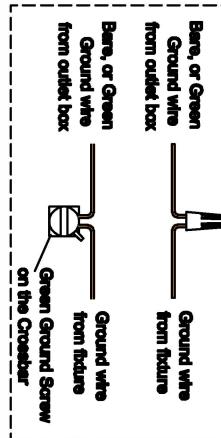
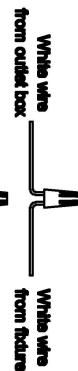


Figure 4

### STEP 5 – Install Backplate to Ceiling

A. Carefully twist all wires into the outlet box and position the backplate over the outlet box. Align the holes in the backplate with the mounting screws (DD). Secure with Cap nut (AA) and hand tighten until snug.


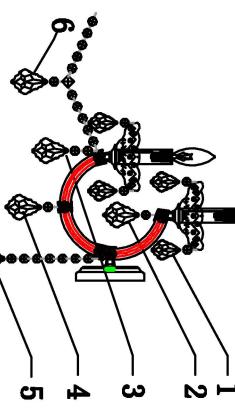


Figure 5

### STEP 6 - Install bulb,Socket sleeve, Bobeche

A. Place bobeches and candle covers over sockets as shown.

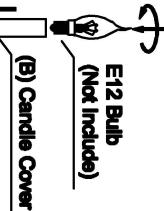

(E12 Bulb  
(Not Include))

(B) Candle Cover

(C) Bobeche

### STEP 7 - Install Crystal

A. Attach Crystals to the Picture Body (AA).

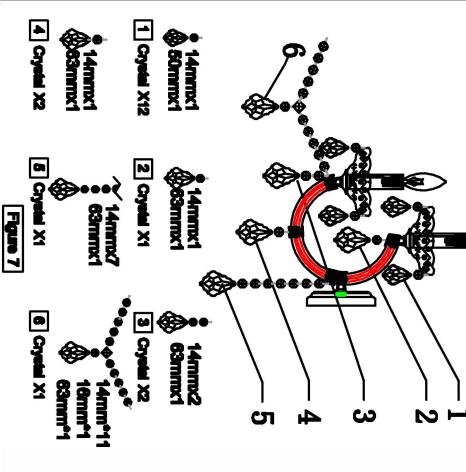


Figure 7