


ASSEMBLY INSTRUCTIONS


TWIN L SHAPED BUNK BED WITH TRUNDLE

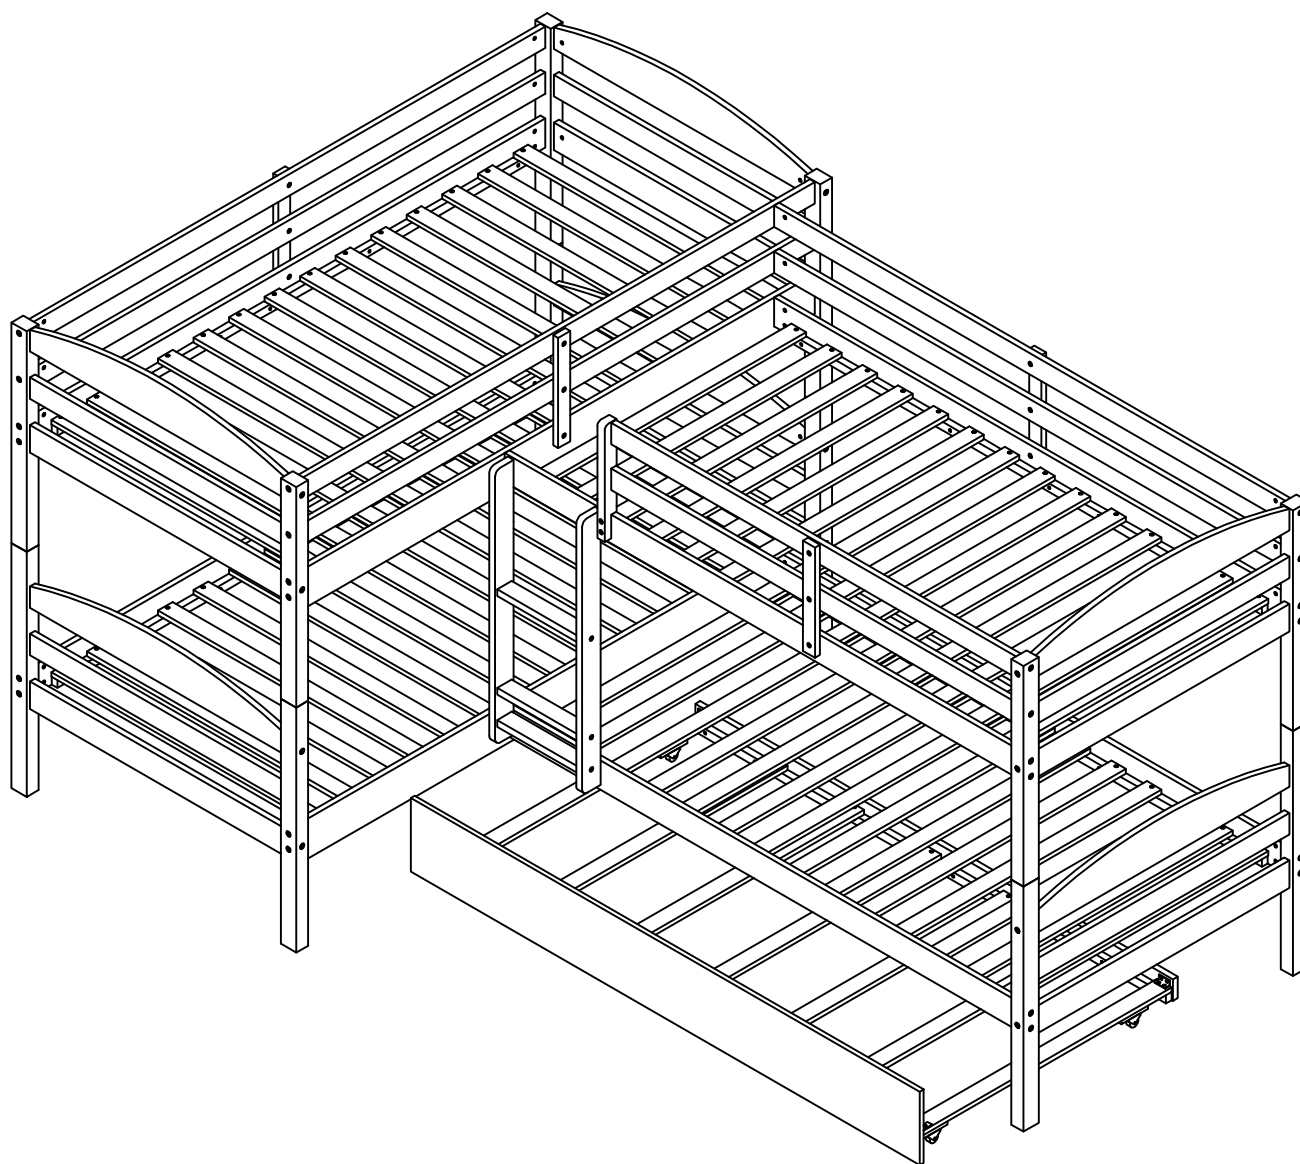

WF292934/WF292935



SAFETY WARNING



1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk:

Down bed


Bed type	Length	Width	Thickness
Twin Standard	74"-75"	38 1/2"	8"

Up bed (Bunk bed and tribed included)

Bed type	Length	Width	Thickness
Twin Standard	74"-75"	38 1/2"	6" max











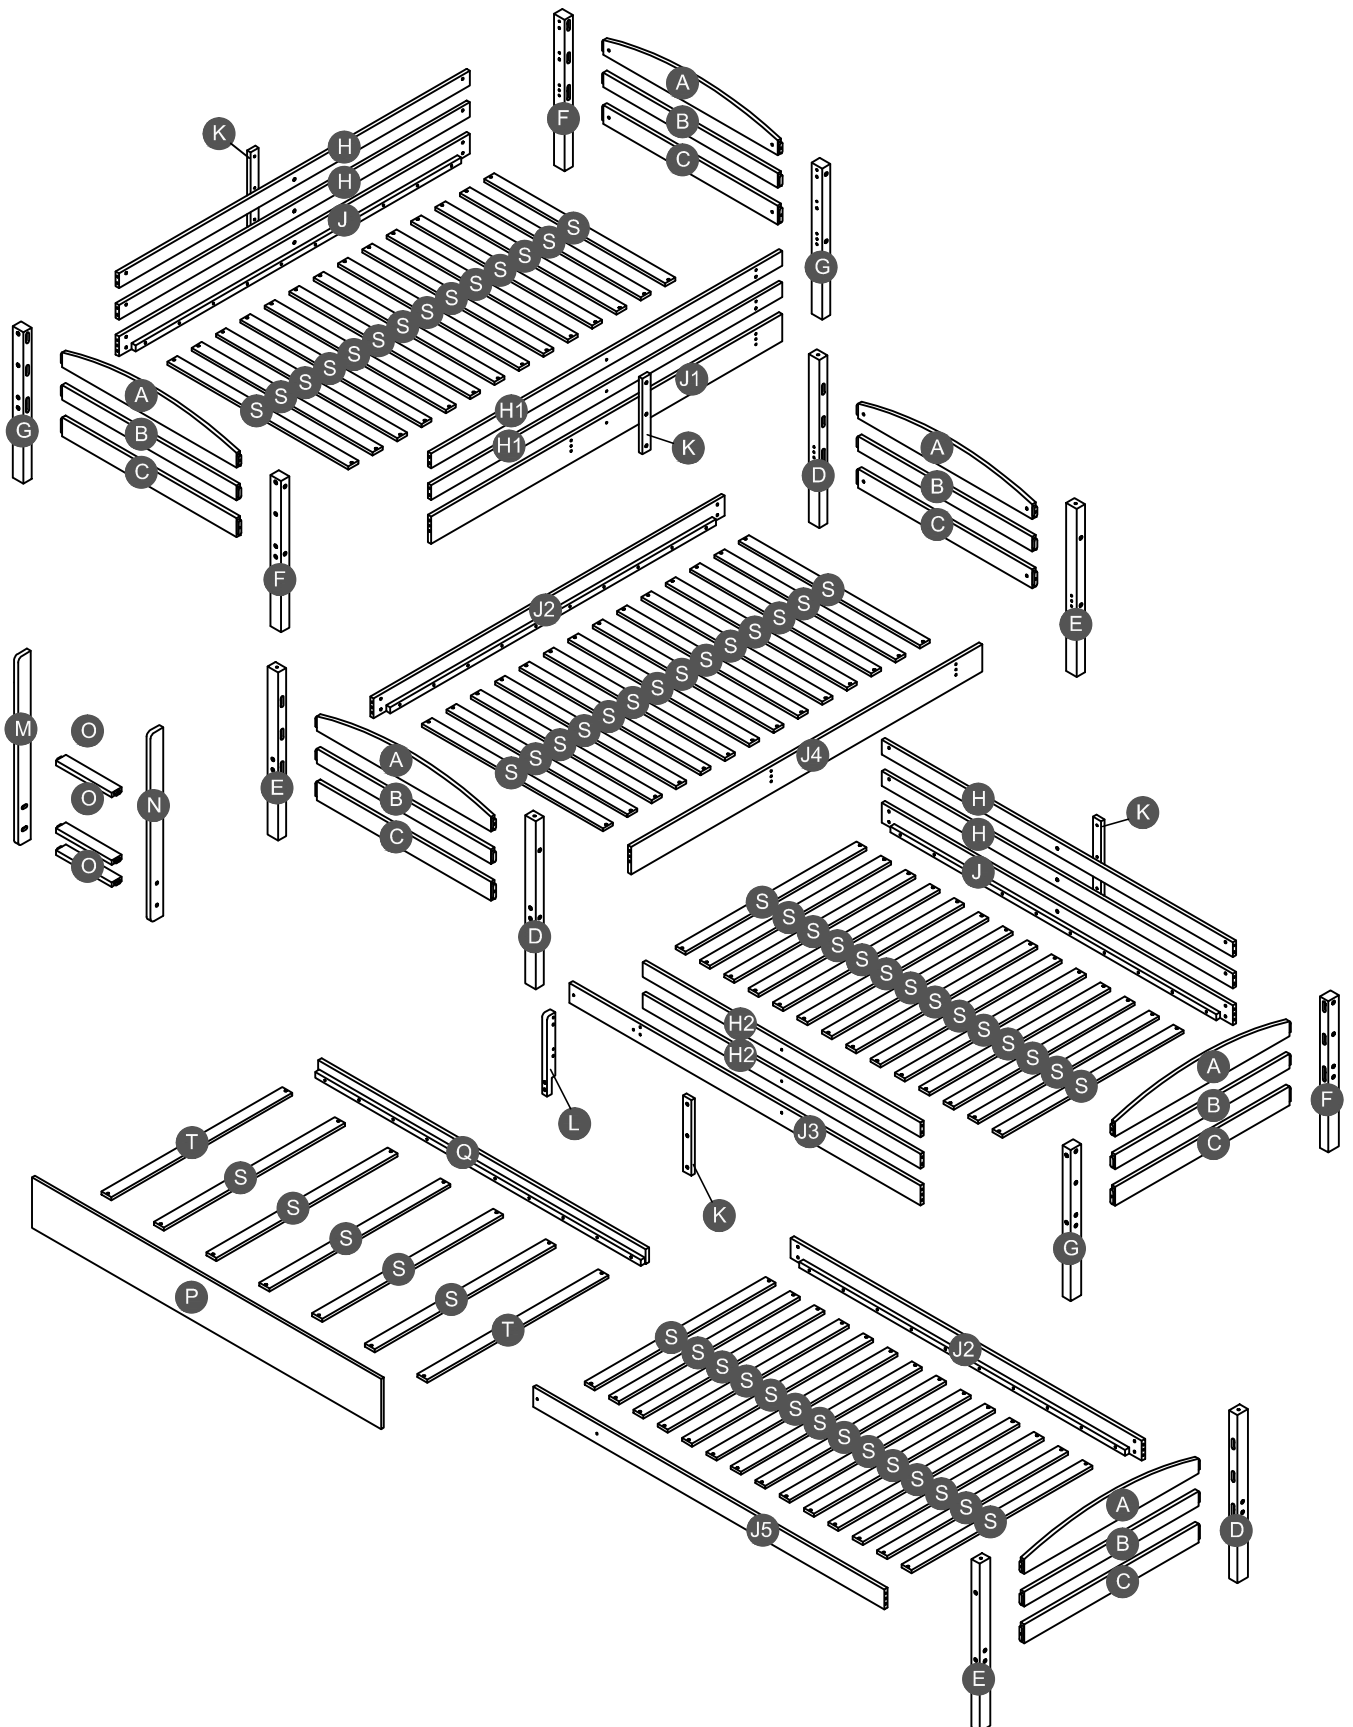


2. Replacement parts, including additional guardrails, maybe obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748) dealers
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part.
11. Use of a night light may provide added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
15. Keep these instruction for future reference.
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.

Detail View
















Part List

















WF292934

H  Long guard rail (back) - 4pcs	H1  Long guard rail (front) - 2pcs	H2  Short guard rail (front) - 2pcs
J  Upper side rail (Back) -2pcs	J1  Upper side rail (front) -1pc	J2  Lower side rail (Back) -2pcs
J3  Upper side rail (front) -1pc	J4  Lower side rail (front) -1pc	J5  Lower side rail (front) -1pc
P  Front panel of trundle - 1pc	Q  Back panel of trundle - 1pc	S  Slats - 24pcs
T  Trundle Slats - 2pcs		


Hardware List WF292935

A  Horizontal bar (HB/FB) - 6pcs	B  Horizontal bar (HB/FB) - 6pcs	C  Horizontal bar (HB/FB) - 6pcs
D  Lower leg HB/FB (left)-3pcs	E  Lower leg HB/FB (right)-3pcs	F  Upper leg HB/FB (left)-3pcs
G  Upper leg HB/FB (right)-3pcs	K  Vertical guard rail - 4pcs	L  Support guard rail (left) - 1pc
M  Ladder (Left) - 1pc	N  Ladder (Right) - 1pc	O  Step ladder - 3pcs
S  Slats - 37pcs		

Hardware List WF292935


1  $\varnothing 10 \times 40 \text{mm}$ Wood dowel (16pcs)	2  $(\varnothing 15) 1/4" \times 100 \text{mm}$ Hex-Head bolts (60pcs)	3  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (12pcs)
4  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (6pcs)	5  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (4pcs)	6  $(\varnothing 12) 1/4" \times 35 \text{mm}$ Hex-Head bolts (2pcs)
7  $(\varnothing 12) 1/4" \times 30 \text{mm}$ Hex-Head bolts (12pcs)	8  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (78pcs)	9  $\varnothing 4 \times 30 \text{mm}$ Wood screws (134pcs)
10  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)	11  $\varnothing 9 \times 90 \text{mm}$ Metal connector (6pcs)	12  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (16pcs)
13  $100 \times 63 \times 20 \text{mm}$ Wheels (4pcs)	14  $95 \times 95 \times 18 \times 3 \text{mm}$ Metal bracket (2pcs)	15  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (16pcs)
16  $40 \times 18 \times 18 \times 2 \text{mm}$ Metal bracket (2pcs)		



ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

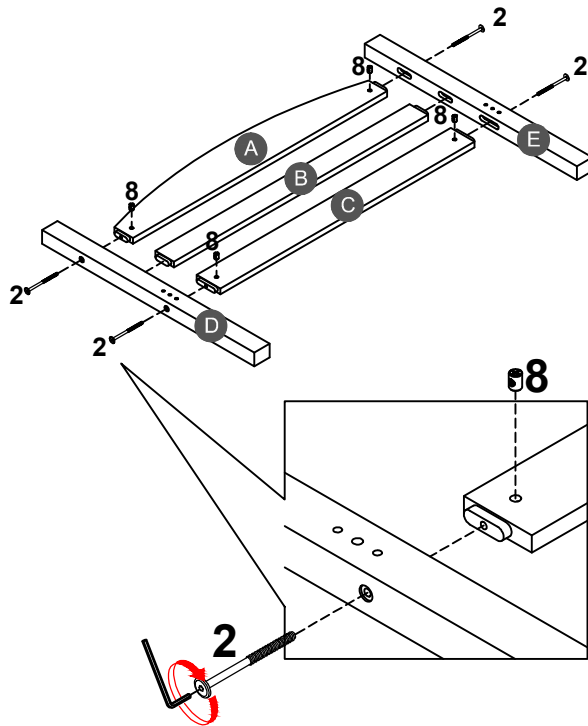STEP 1:




2	8
	
12PCS	12PCS

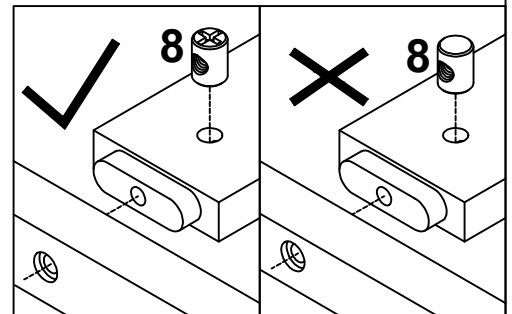




Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened


x3

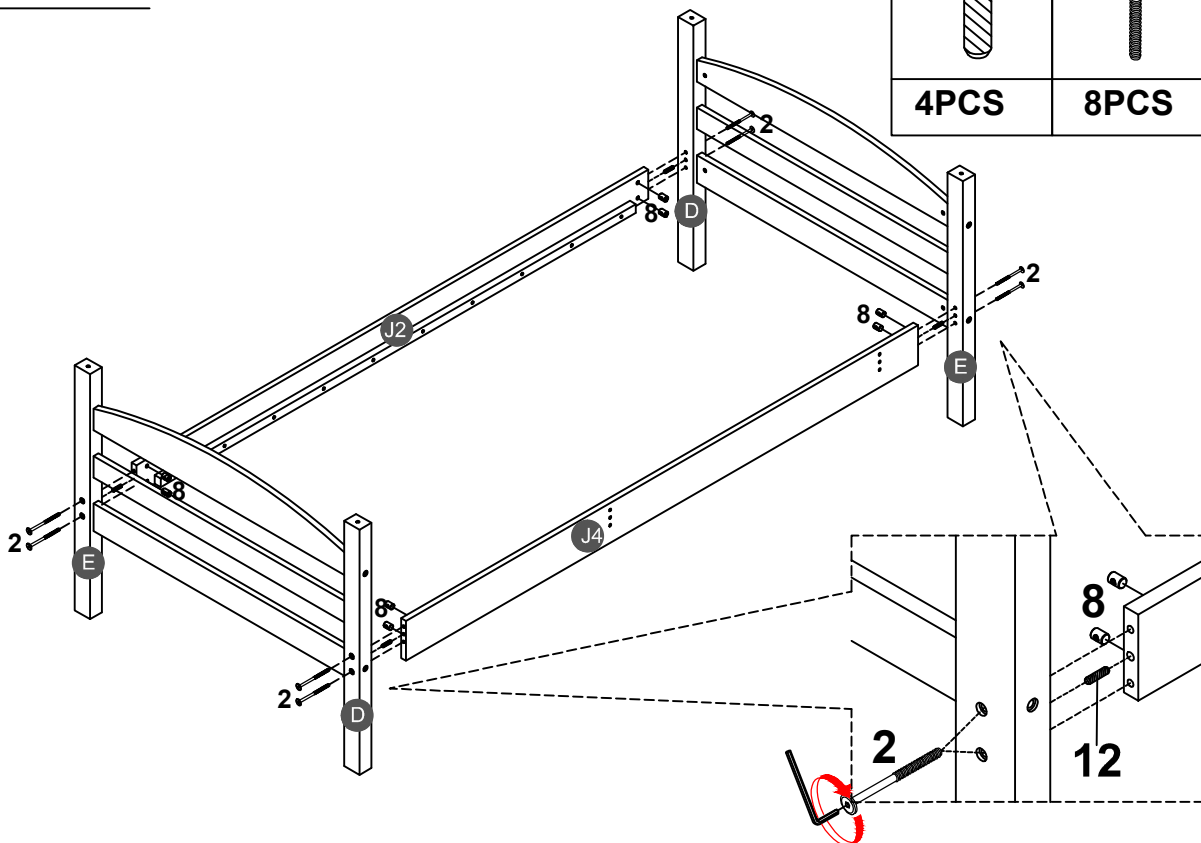STEP 2:




12	2	8
		
4PCS	8PCS	8PCS

STEP 3:

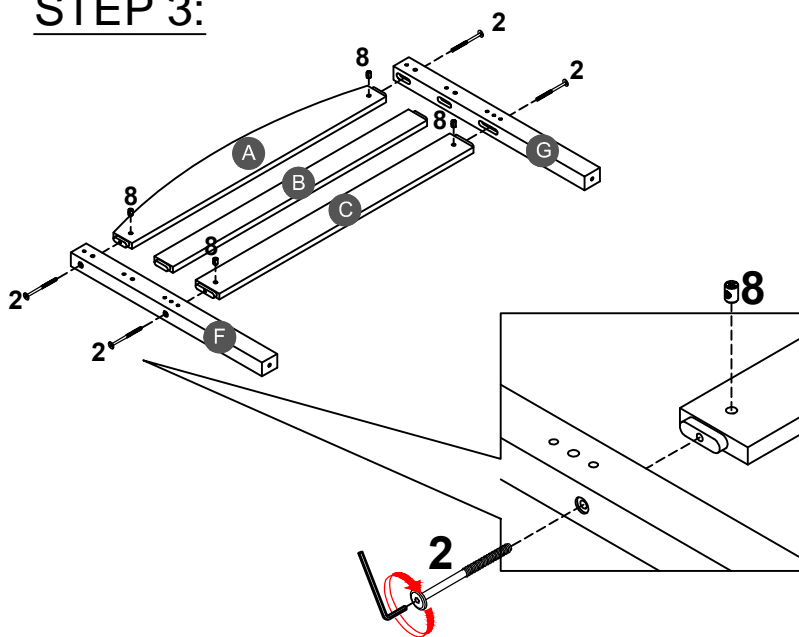


2	8
12PCS	12PCS

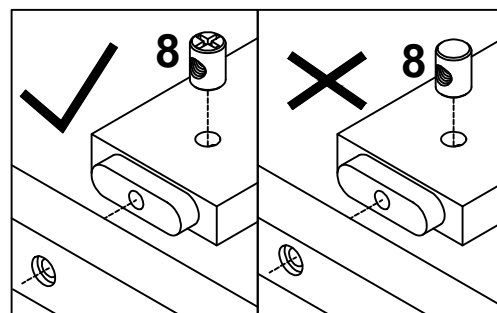

Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

x3


STEP 4:

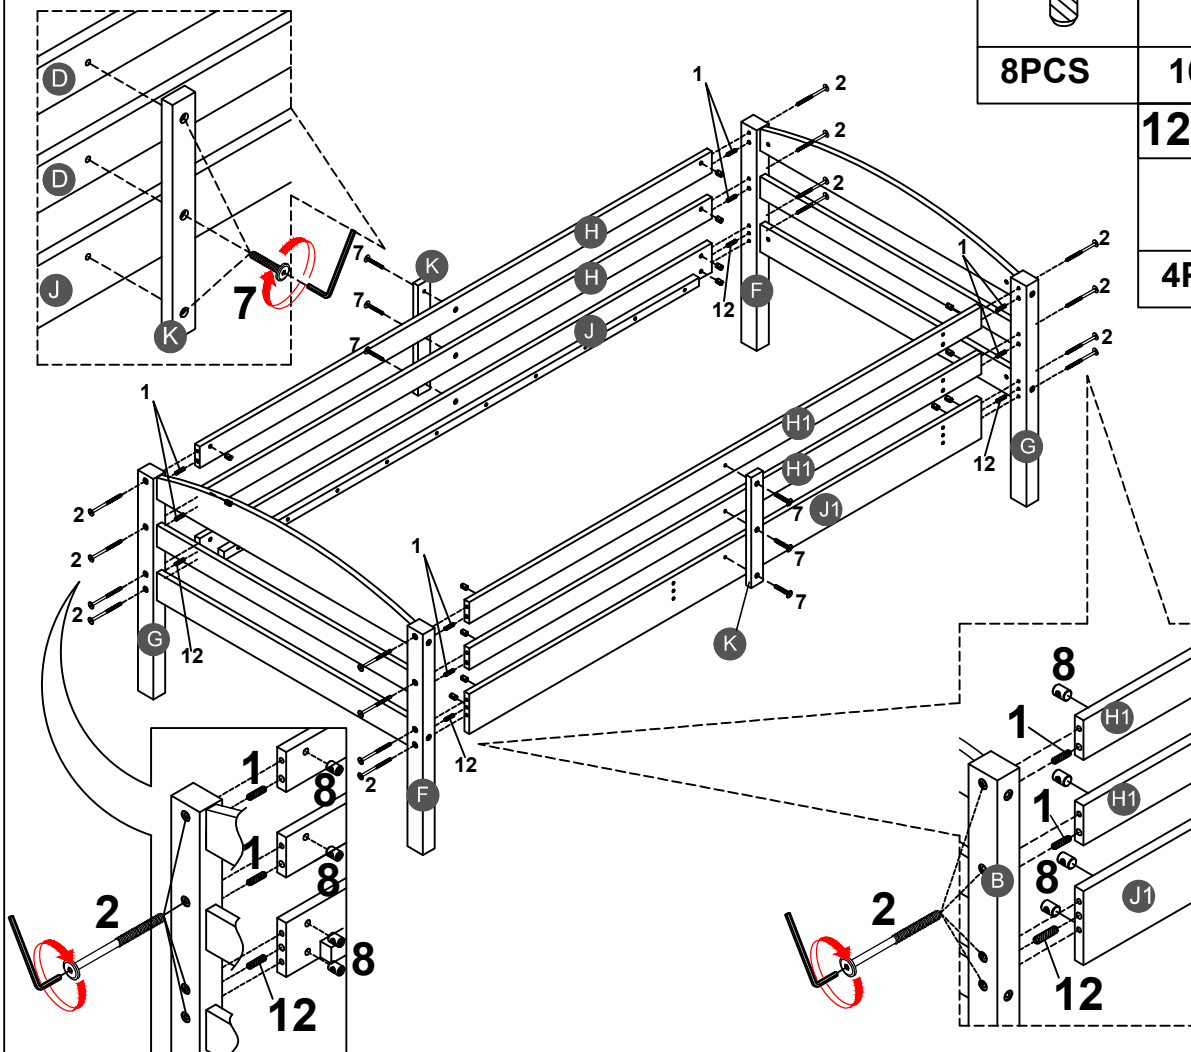

1	2	7
8PCS	16PCS	6PCS

12	8
4PCS	16PCS


STEP 5:

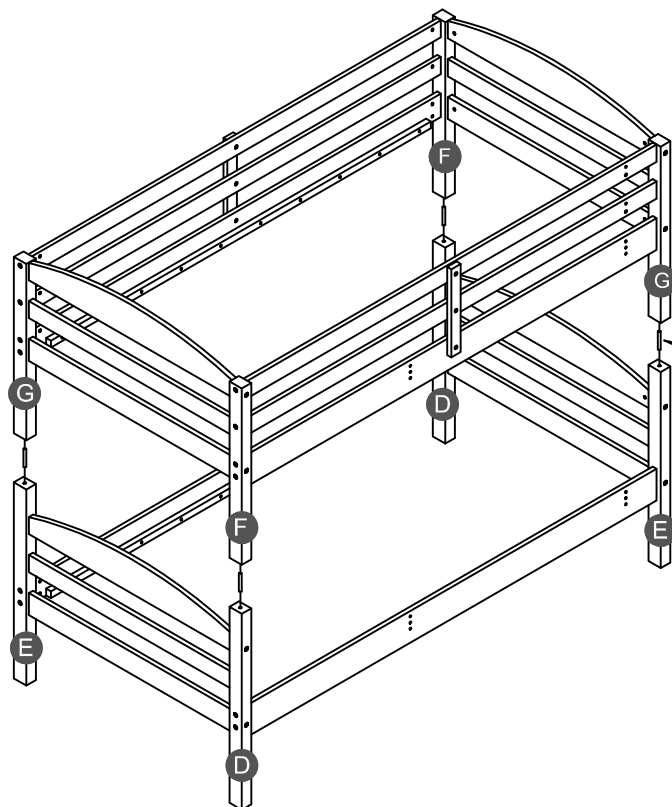


11



4PCS

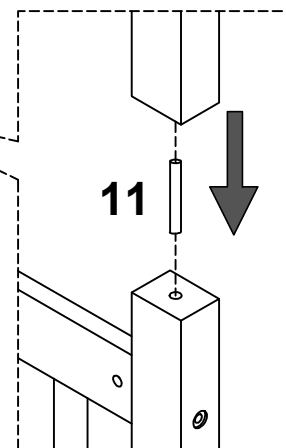


STEP 6:

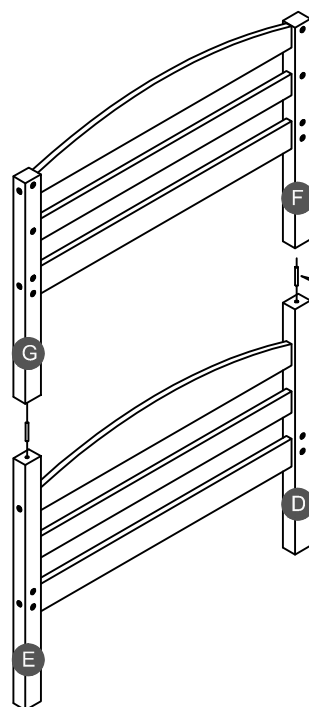


11




2PCS

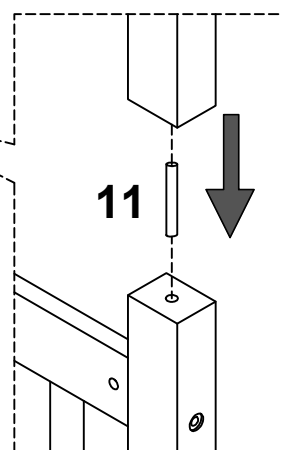


STEP 7:

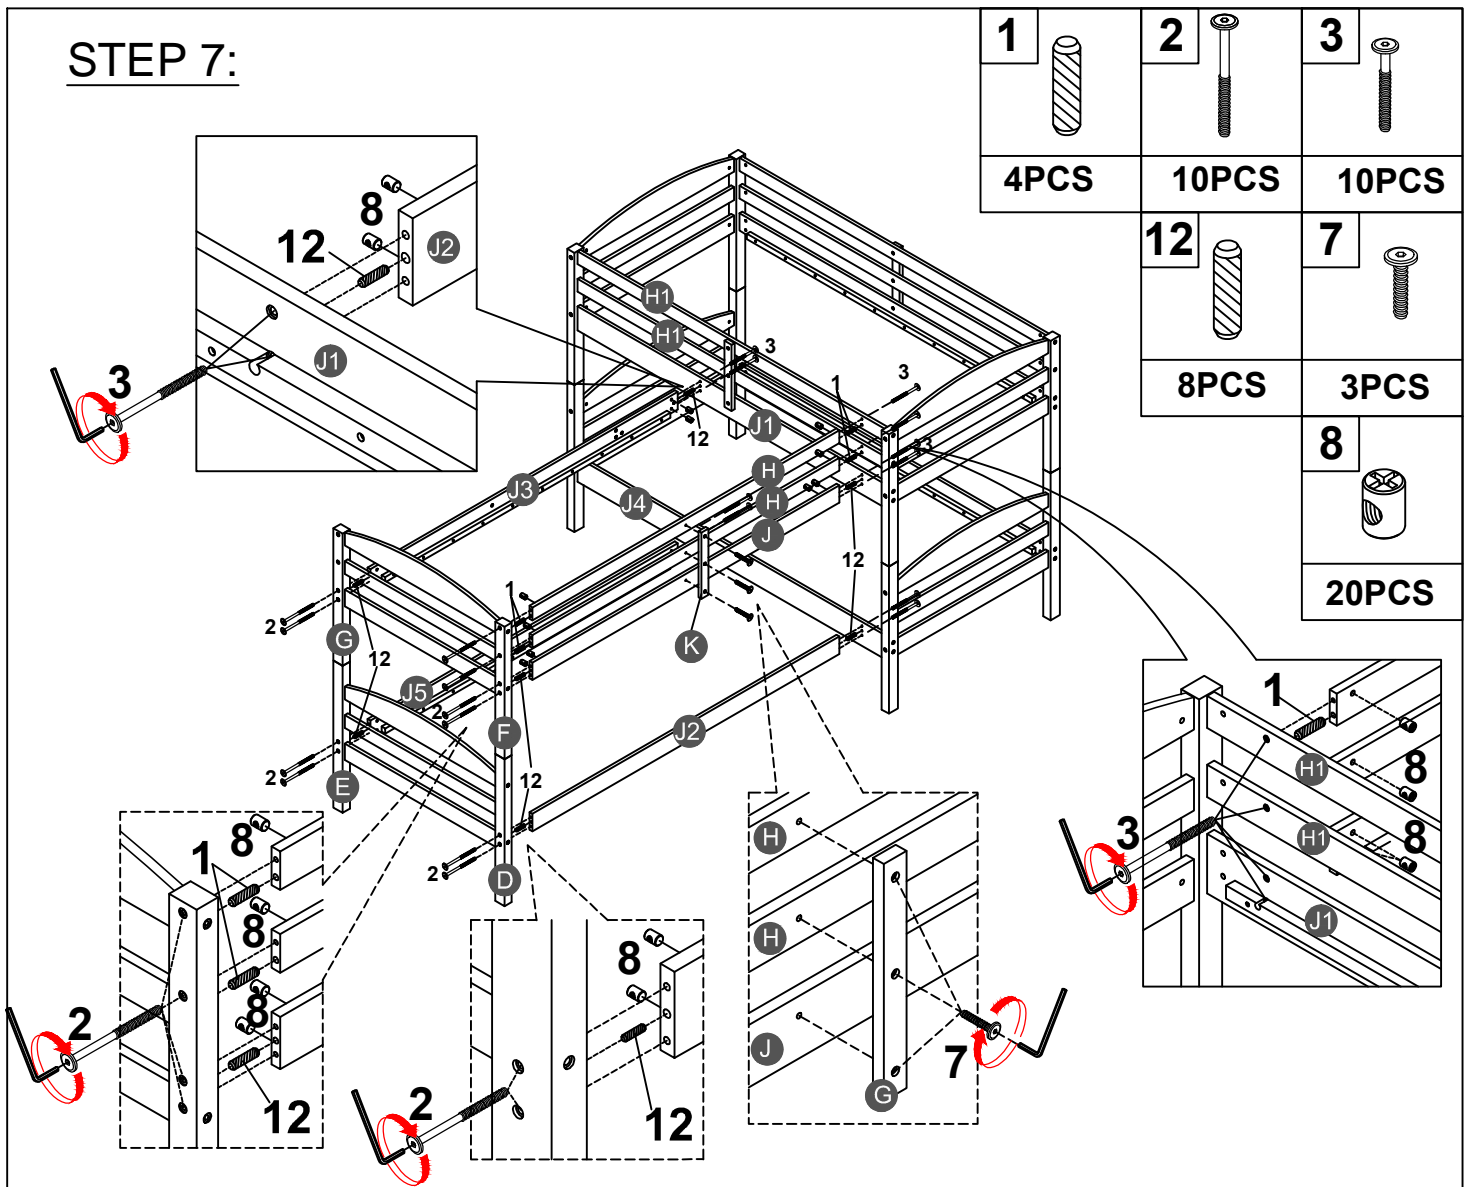

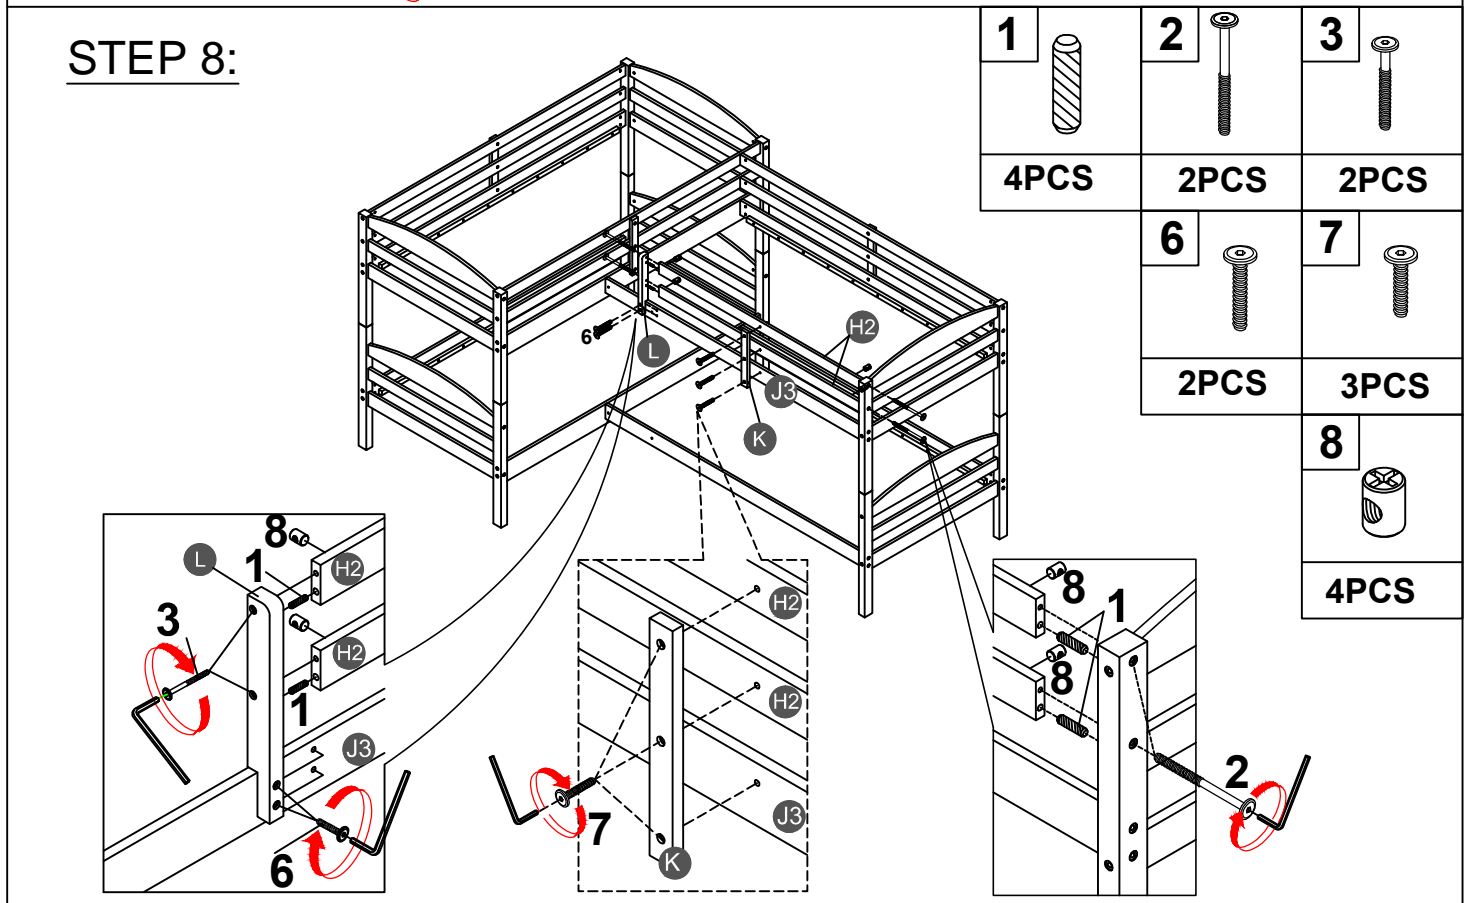

STEP 8:

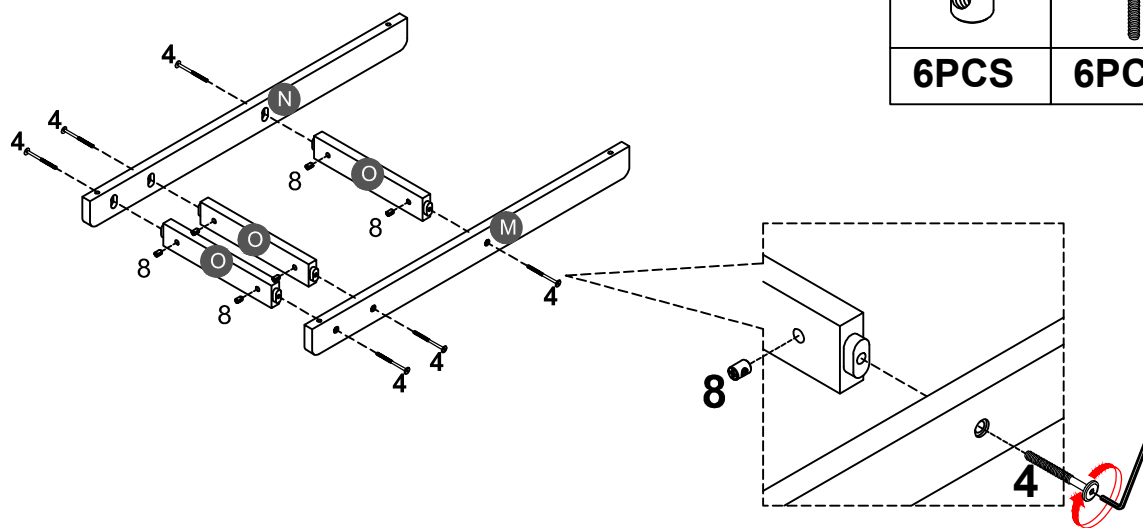



STEP 9:



8	4
	
6PCS	6PCS

STEP 10:

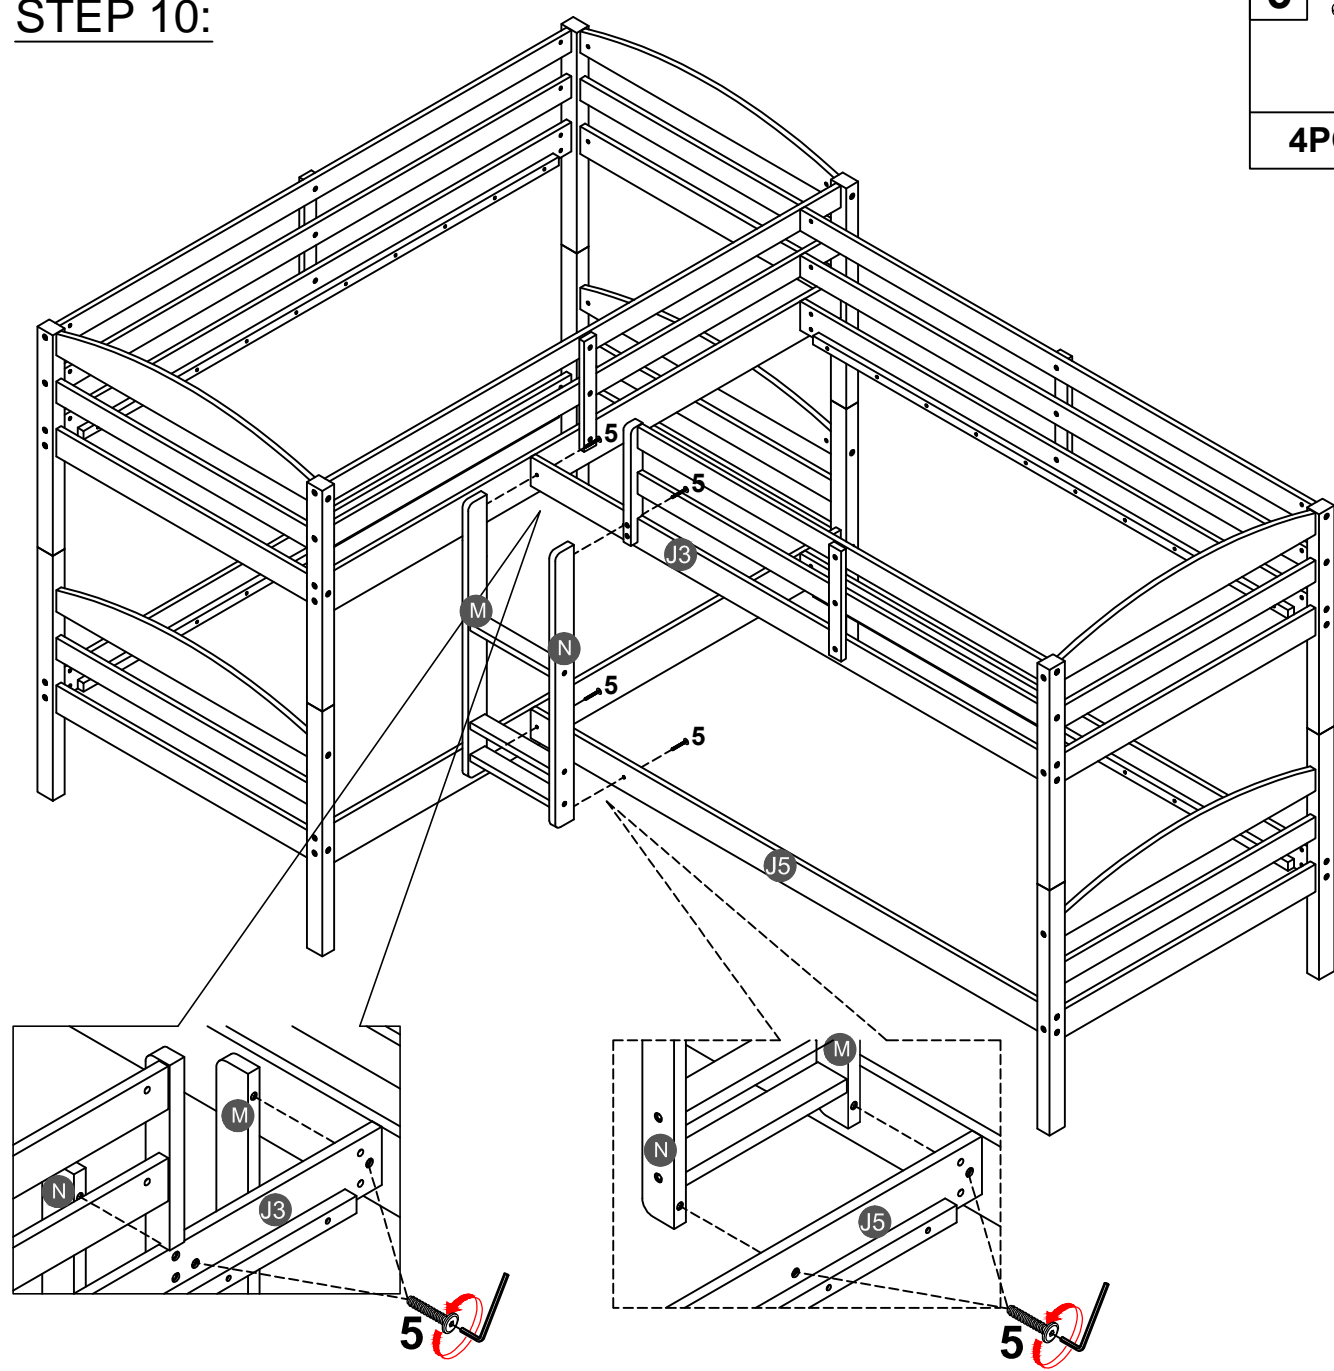




5

4PCS

STEP 11:

9

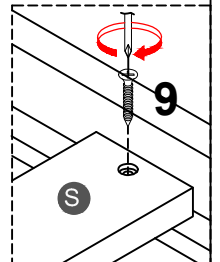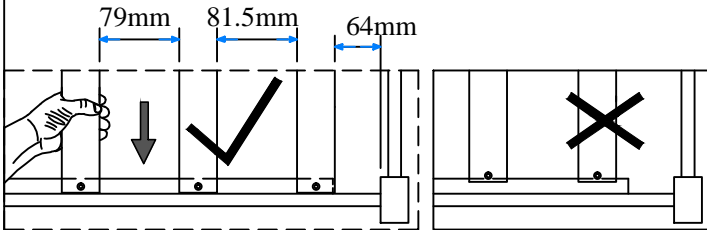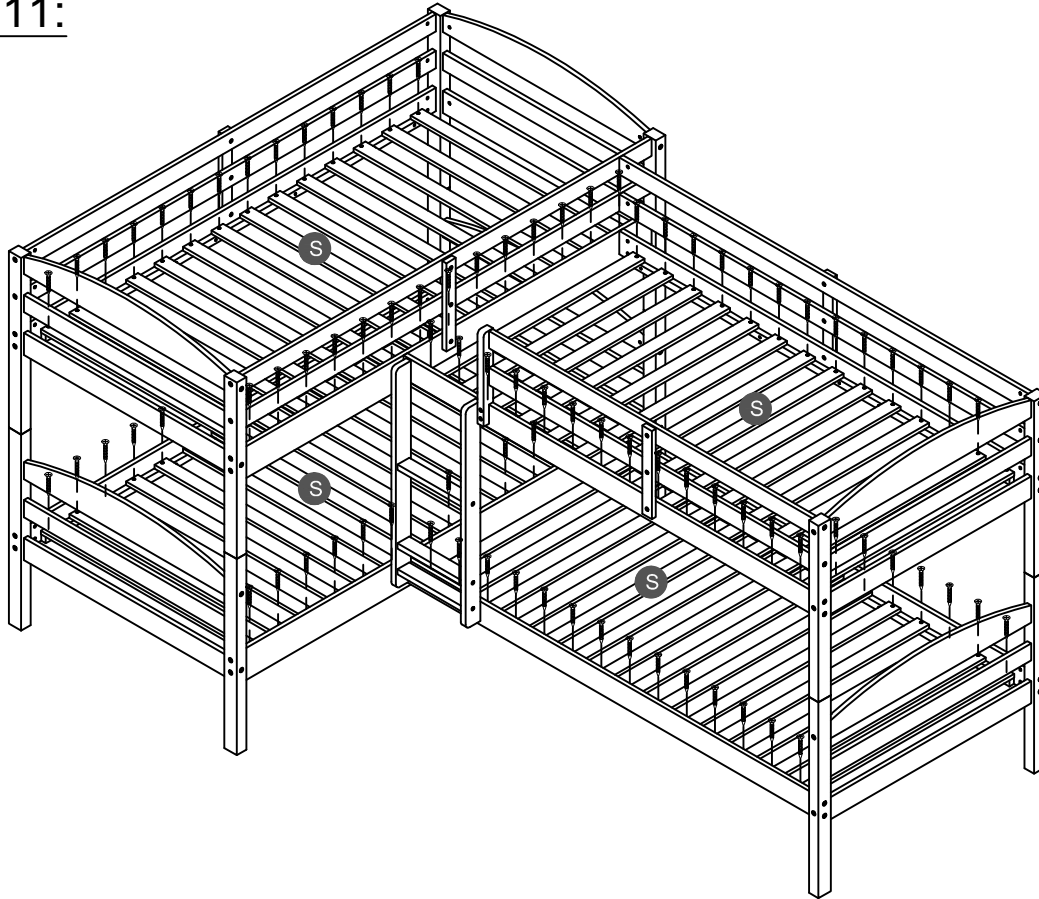

112PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 12:

13






4PCS

9



8PCS

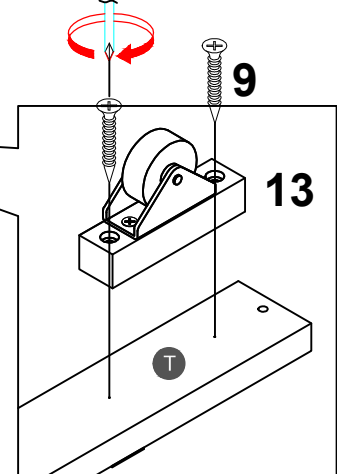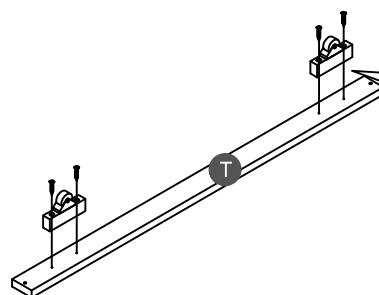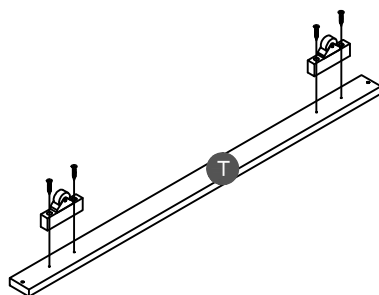


STEP 13:

9



14PCS

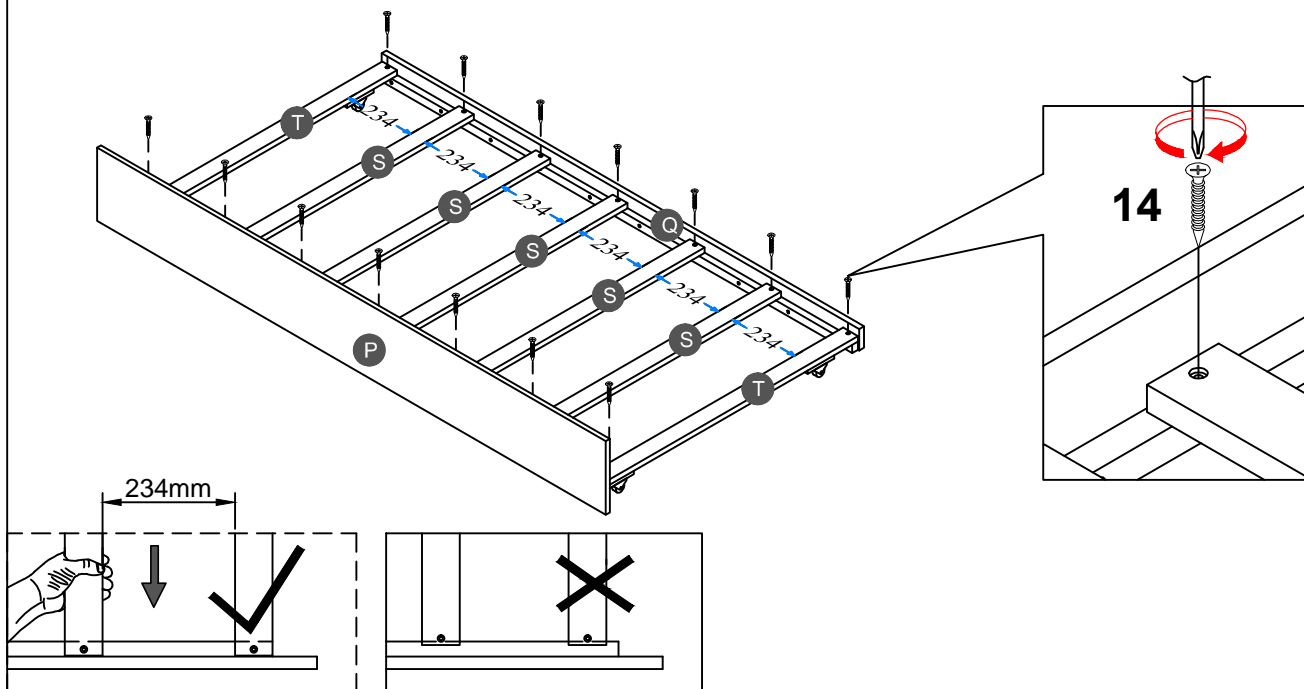

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 14:

14




2PCS


15





8PCS

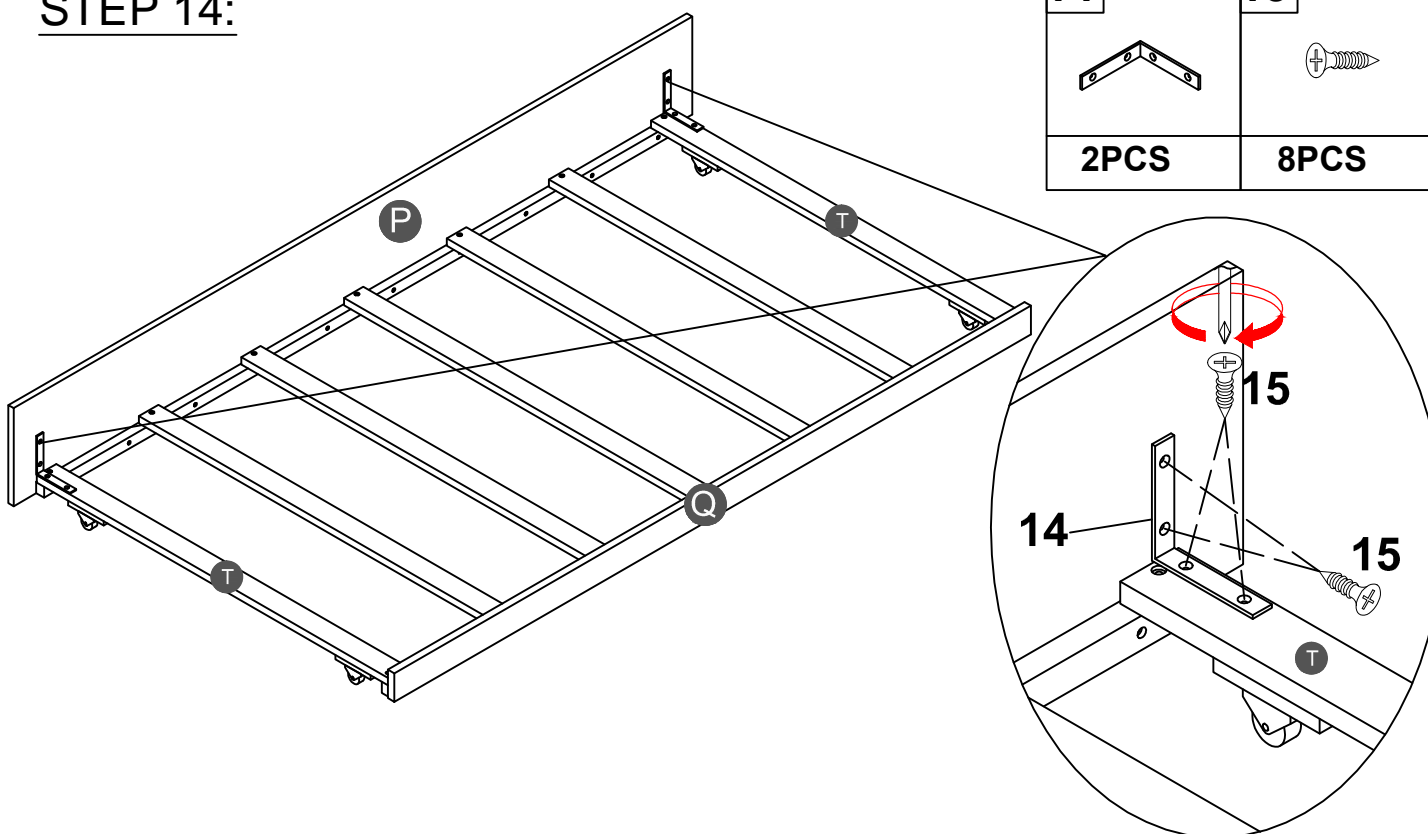


STEP 15:

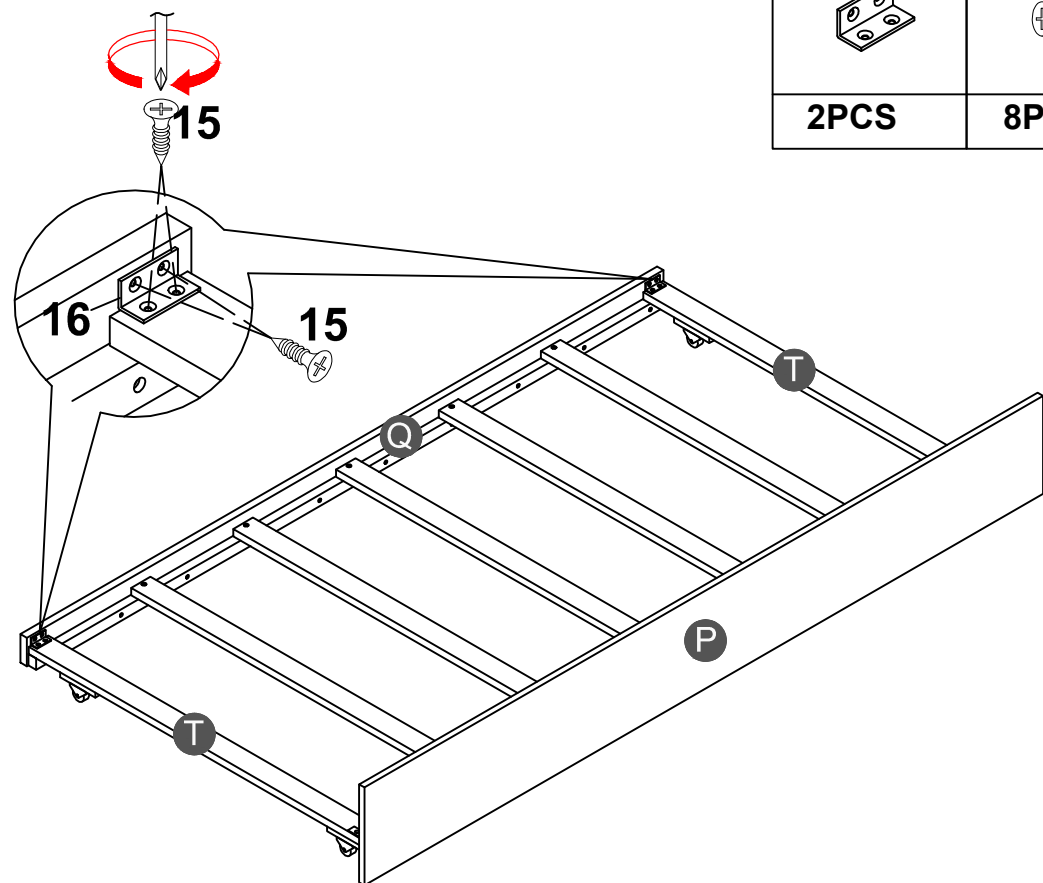

16	15
	
2PCS	8PCS

STEP 16:

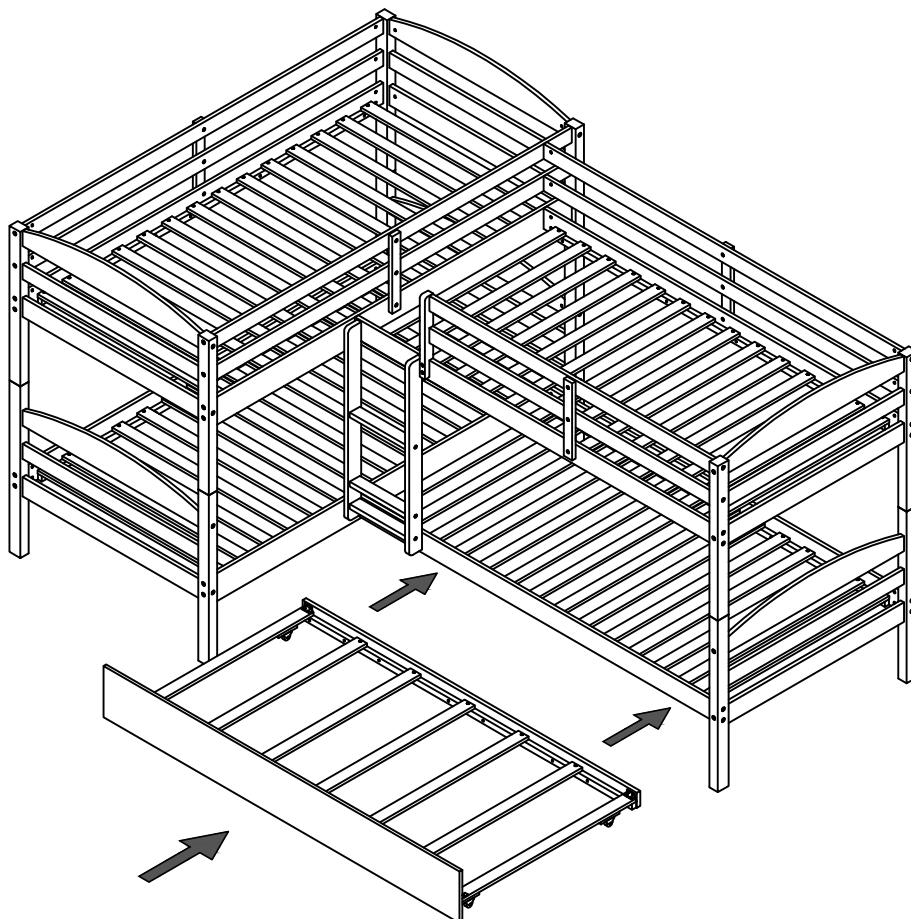

Push Trundle under the bottom of Bunkbed.