

**COUNT AND INSPECT ALL PARTS CONFIRMING
ALL WERE RECEIVED AND ARE IN GOOD
CONDITION.**

**FOR ANY REPLACEMENT PARTS OR HARDWARE,
AND/OR HELP WITH ASSEMBLY;**

CONTACT US AT:


Support@camaflexi.com

OR CALL US AT:


(347)844-9307

**PLEASE HAVE THE MODEL NUMBER and/or PART
NUMBER NEEDED AS SHOWN IN THE PACKAGING
OR ASSEMBLY MANUAL**

ASSEMBLY INSTRUCTIONS

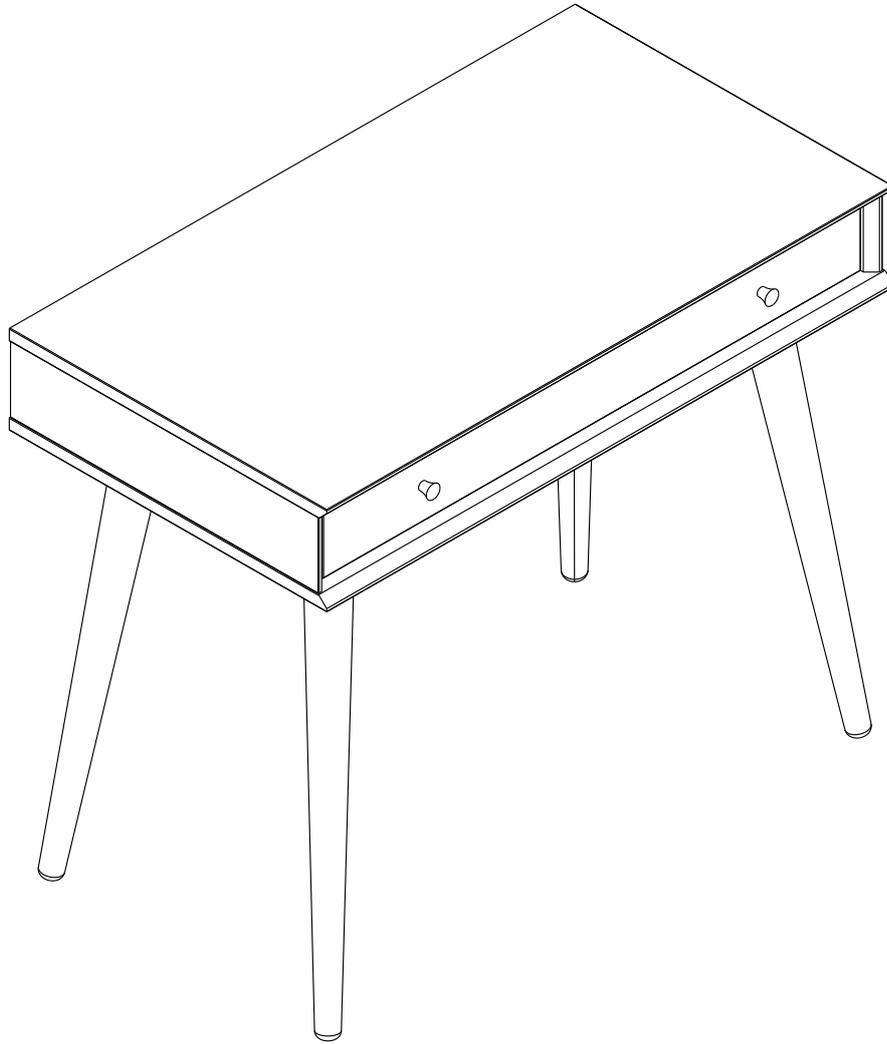


Mid-Century WRITING DESK WITH 1 DRAWER

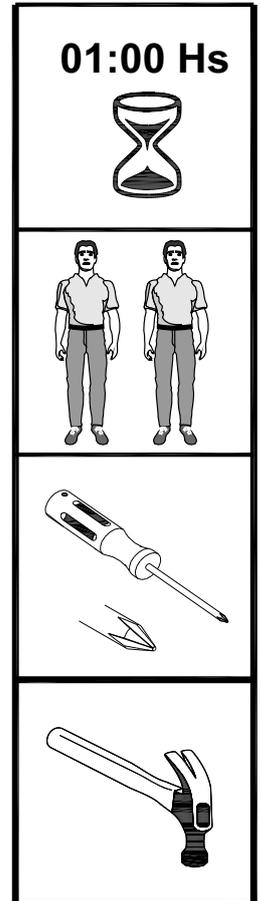


HARDWARE INCLUDED



A - 8,0x40 Wood Dowel
Qty. 04



B - 7x60 Screw
Qty. 06




C - 4,5x35 Screw
Qty. 04




D - Allen Key
Qty. 01




PARTS INCLUDED

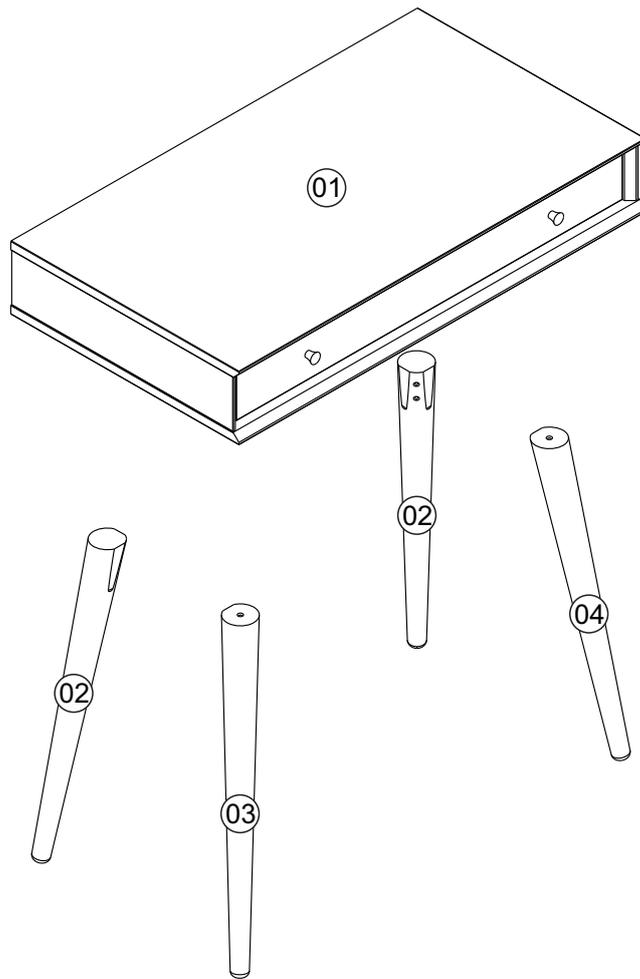

Remove drawer from desk.

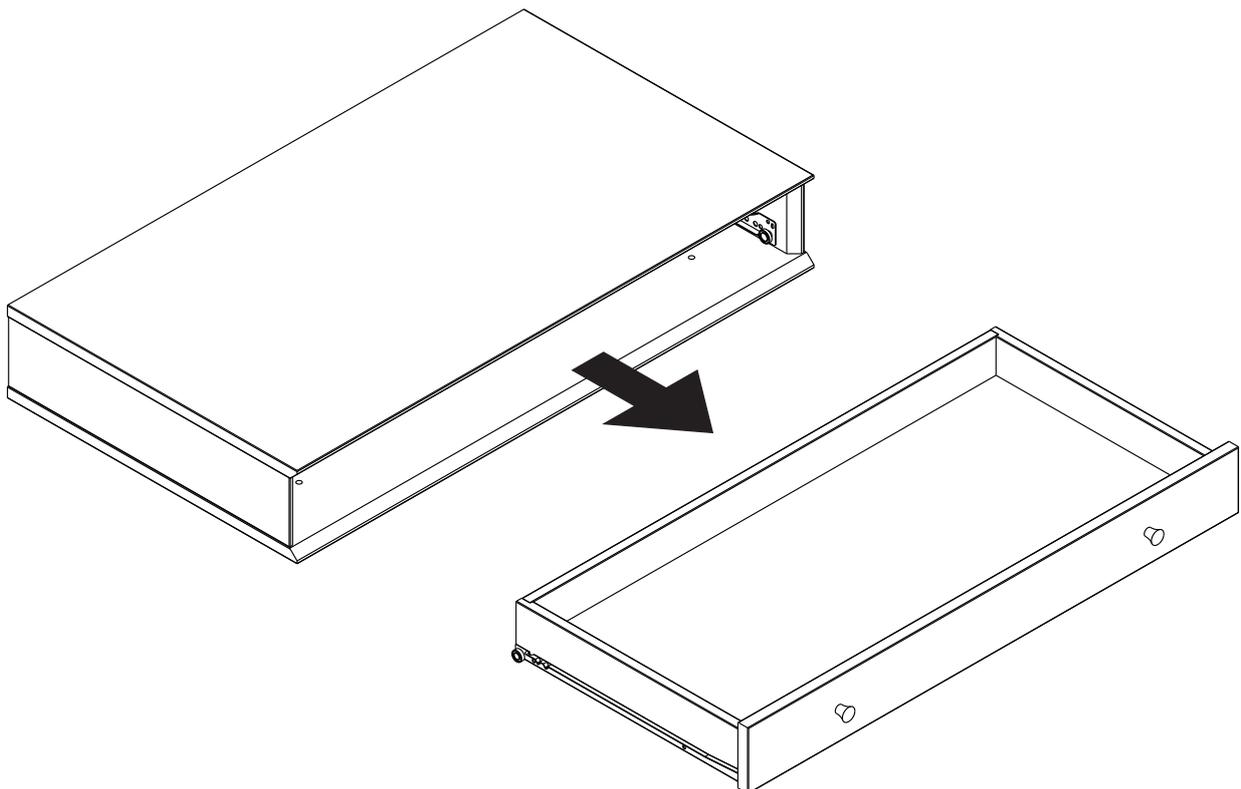


STEP 2

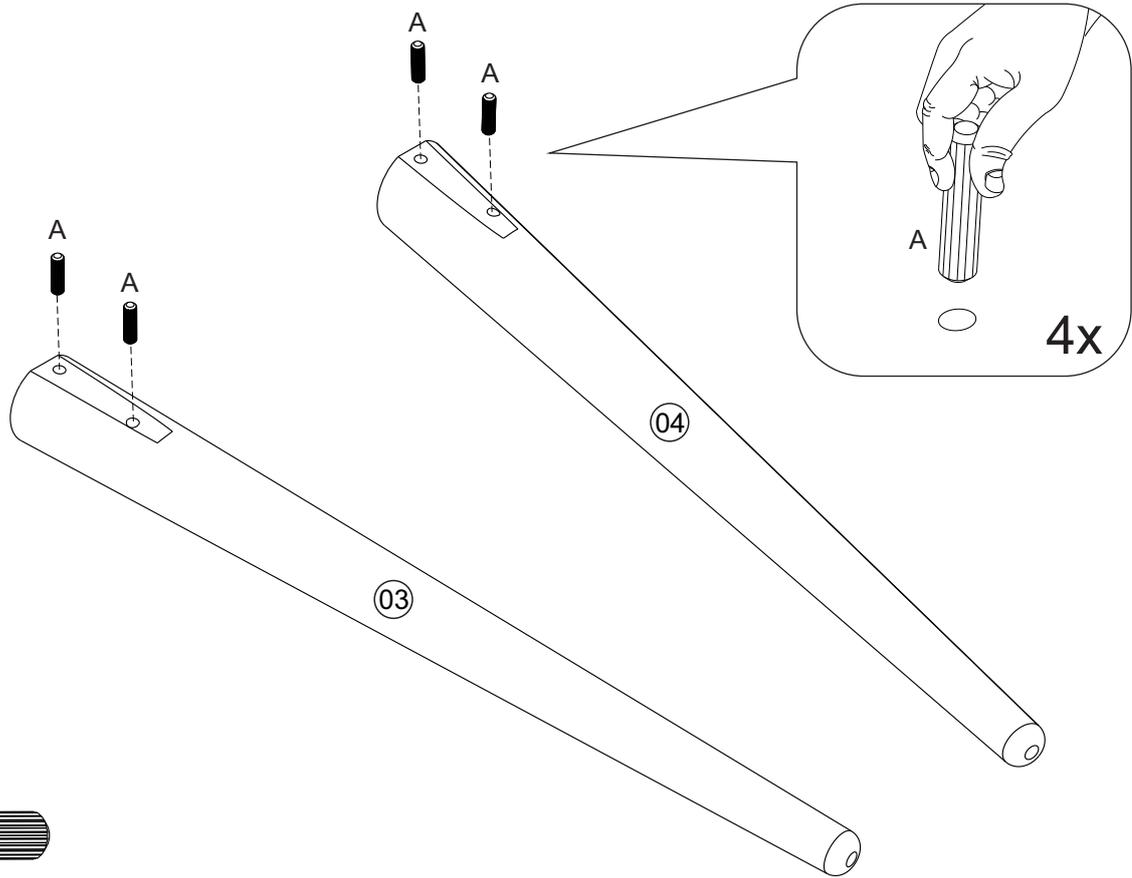


A - 8,0x30 Wood Dowel
Qty. 04

STEP 3

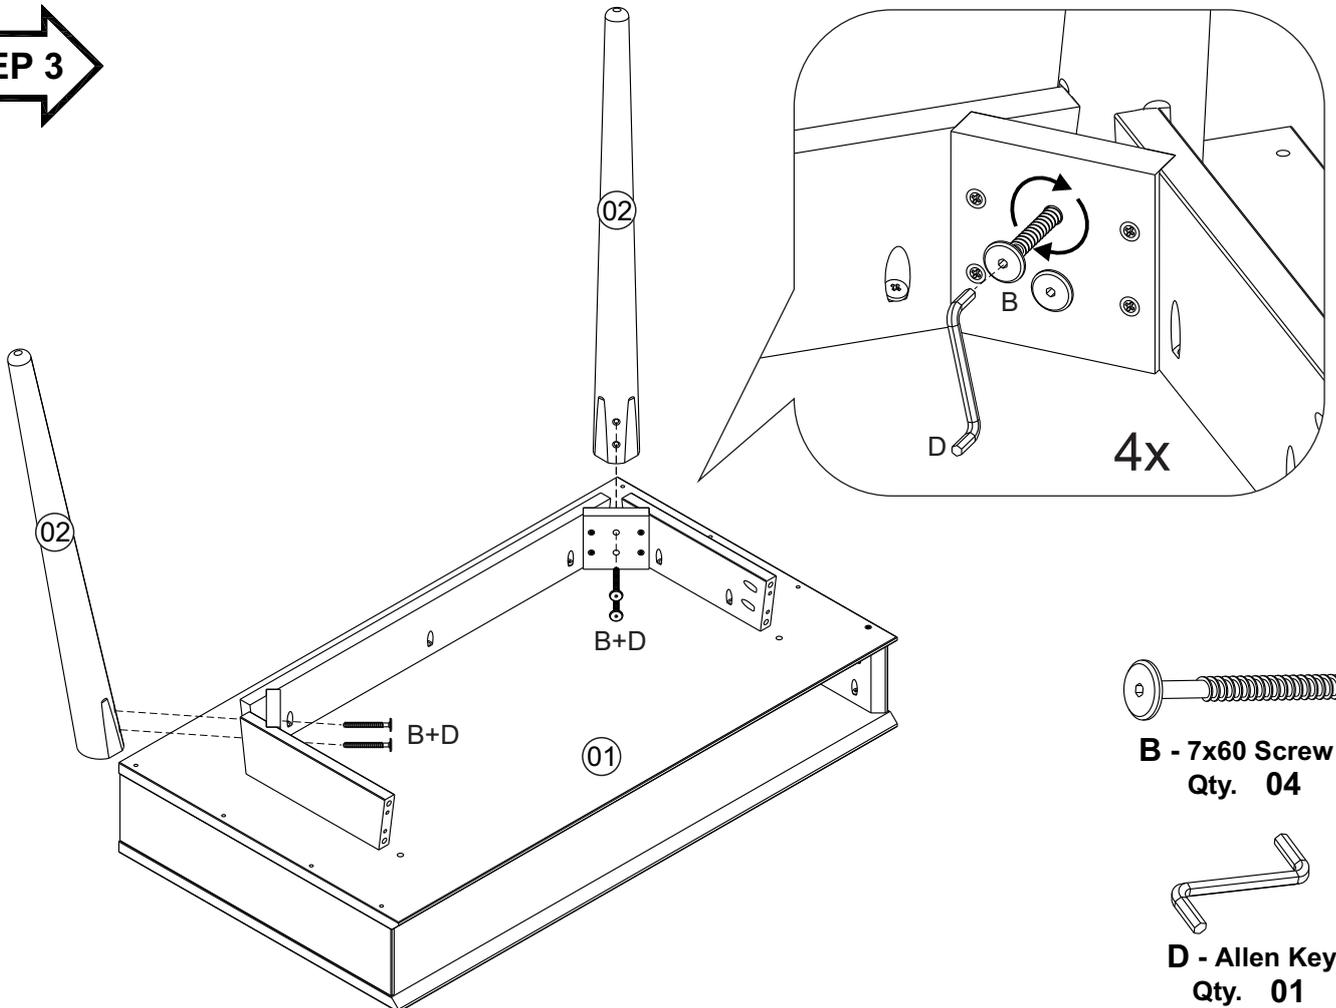


B - 7x60 Screw
Qty. 04




D - Allen Key
Qty. 01


STEP 4

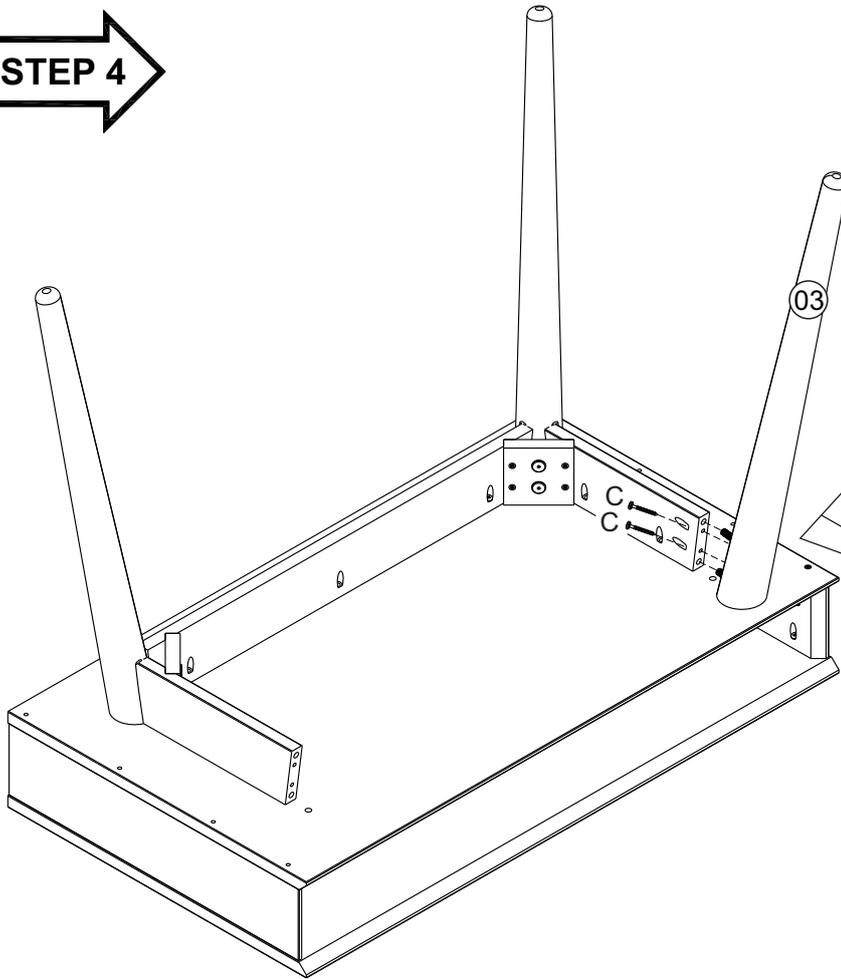


C - 4,5x35 Screw
Qty. 02

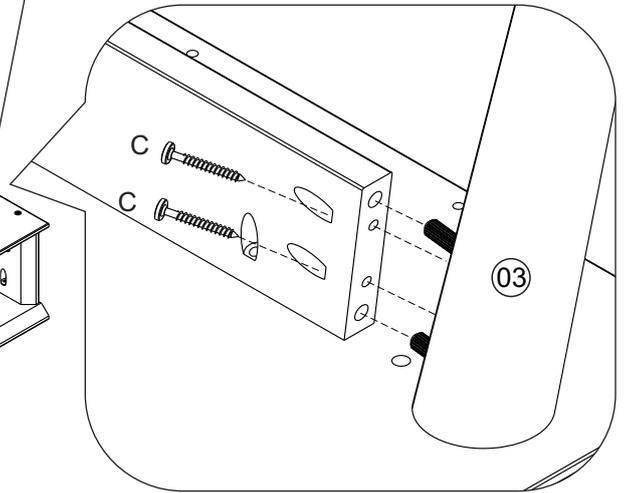


STEP 5

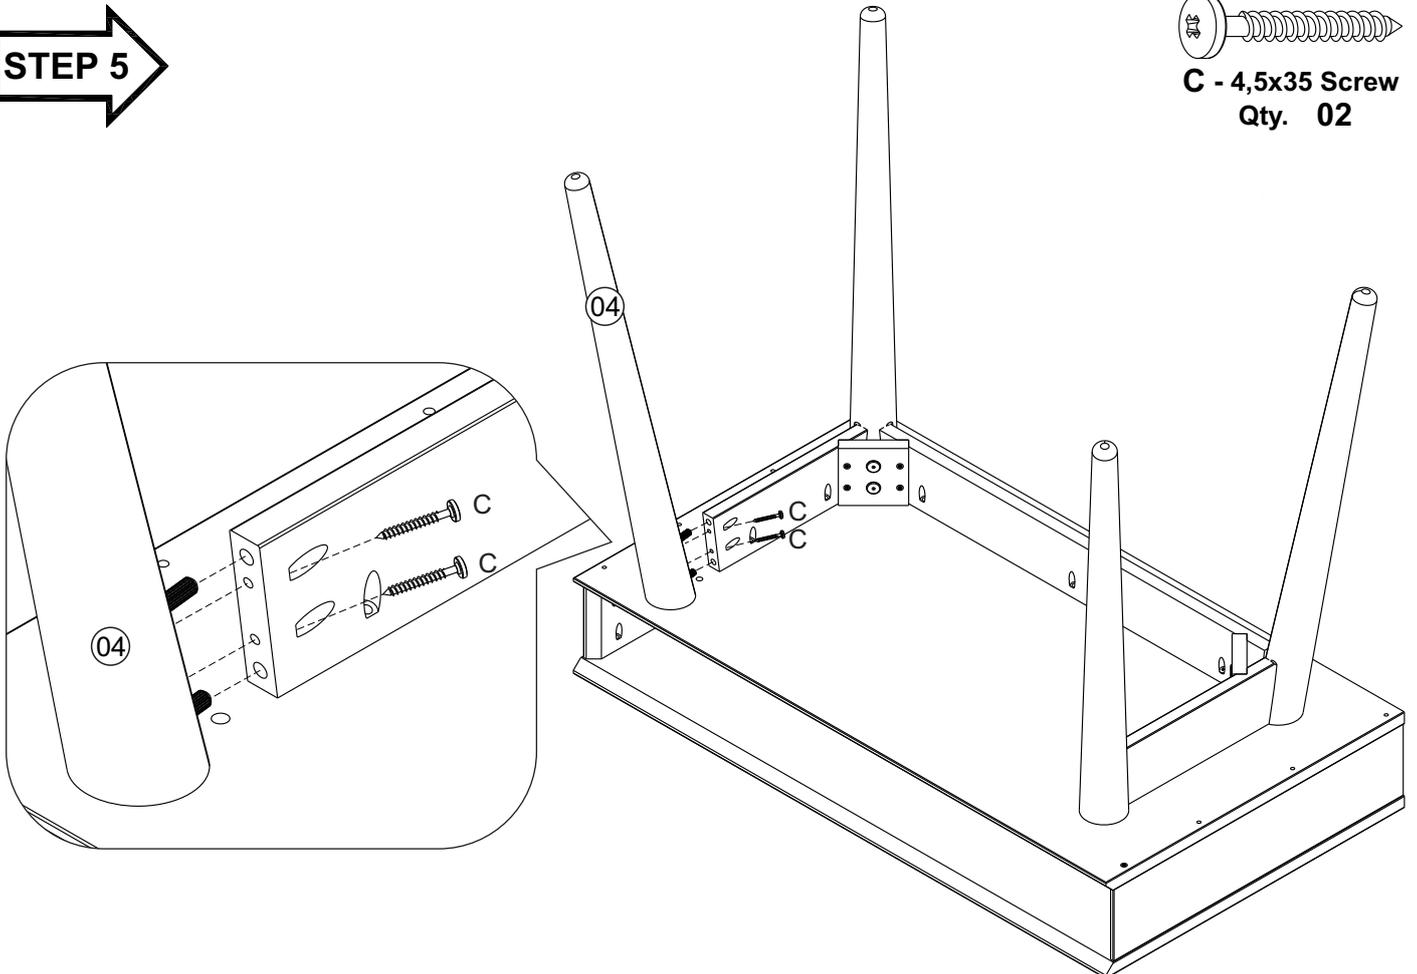


C - 4,5x35 Screw
Qty. 02

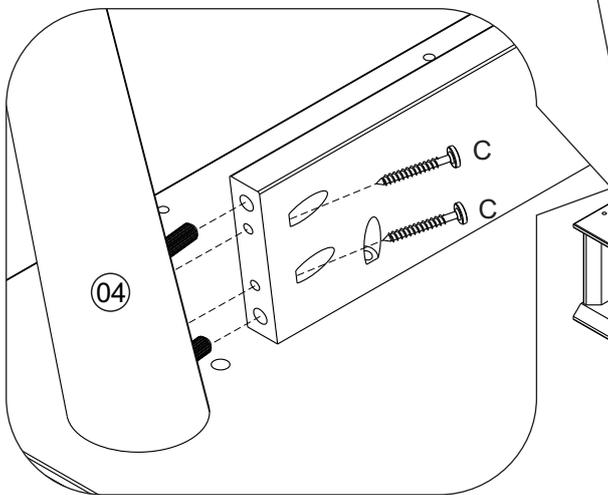

STEP 6

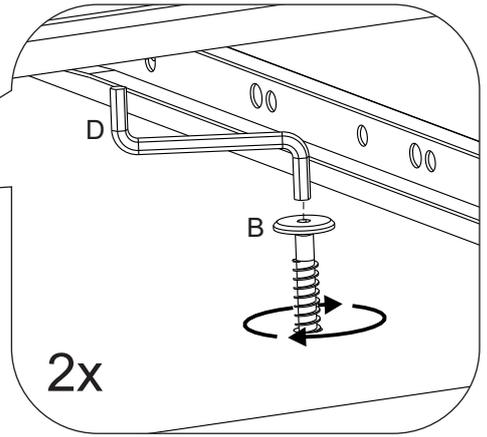

B - 7x60 Screw
Qty. 02



D - Allen Key
Qty. 01

STEP 7

