




ASSEMBLY INSTRUCTIONS

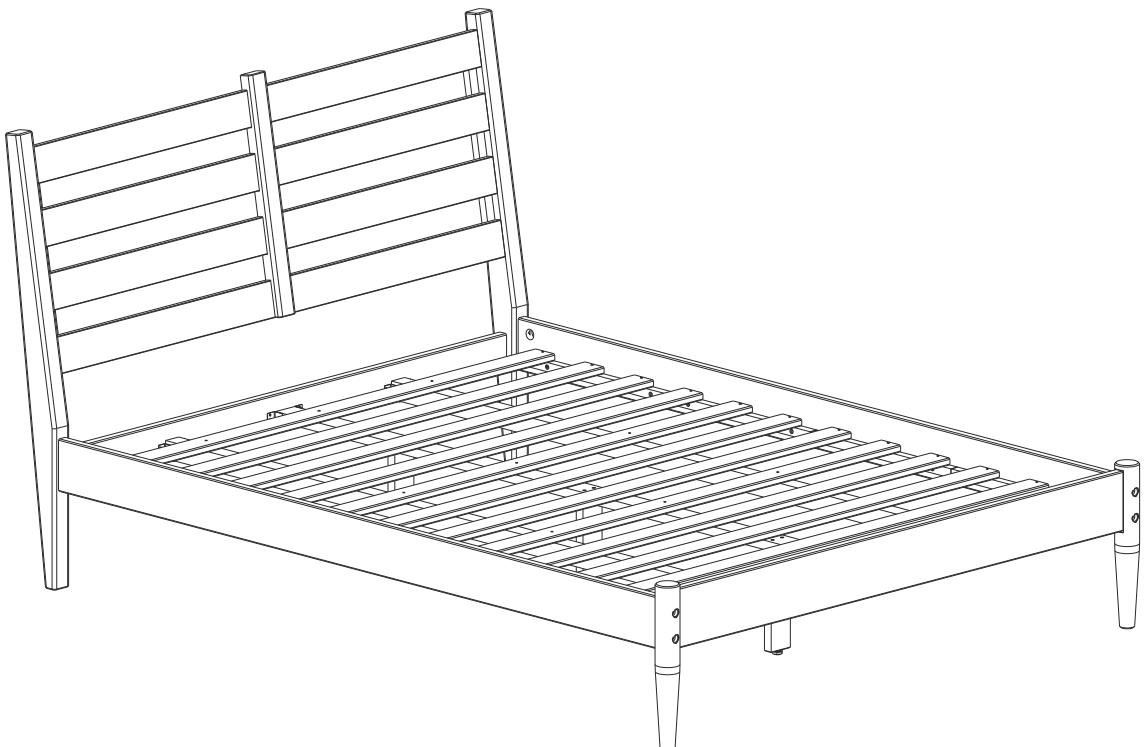

Mid-Century Slat Bed - Queen Size

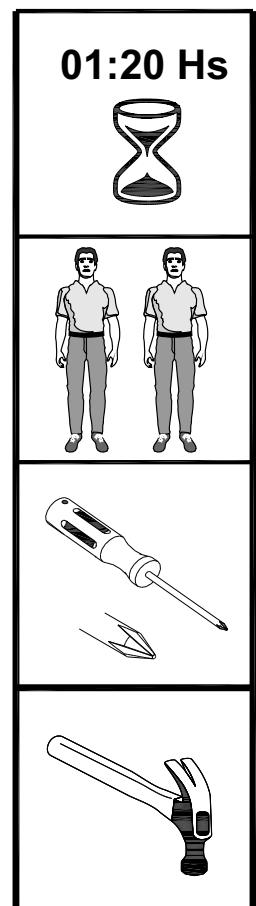

HARDWARE INCLUDED




A - 10,0x50 Wood Dowel
Qty. 20



B - 4,0x40 Screw
Qty. 8




C - 3,5x16 Screw
Qty. 40




D - 3,5x30 Screw
Qty. 36



E - Screw Nut
Qty. 08




F - Allen Key
Qty. 01




G - Support Bar
Qty. 02




H - 1/4x100 Screw
Qty. 08



I - 7,0x50 Screw
Qty. 06



J - Bed Frame
Separator 98mm
Qty. 02

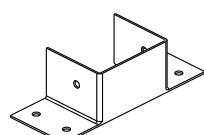

K - Support Bar
Qty. 04




L - 1/4x50 Screw
Qty. 08




M - Wood Hole
Cover - Qty. 04


PARTS INCLUDED

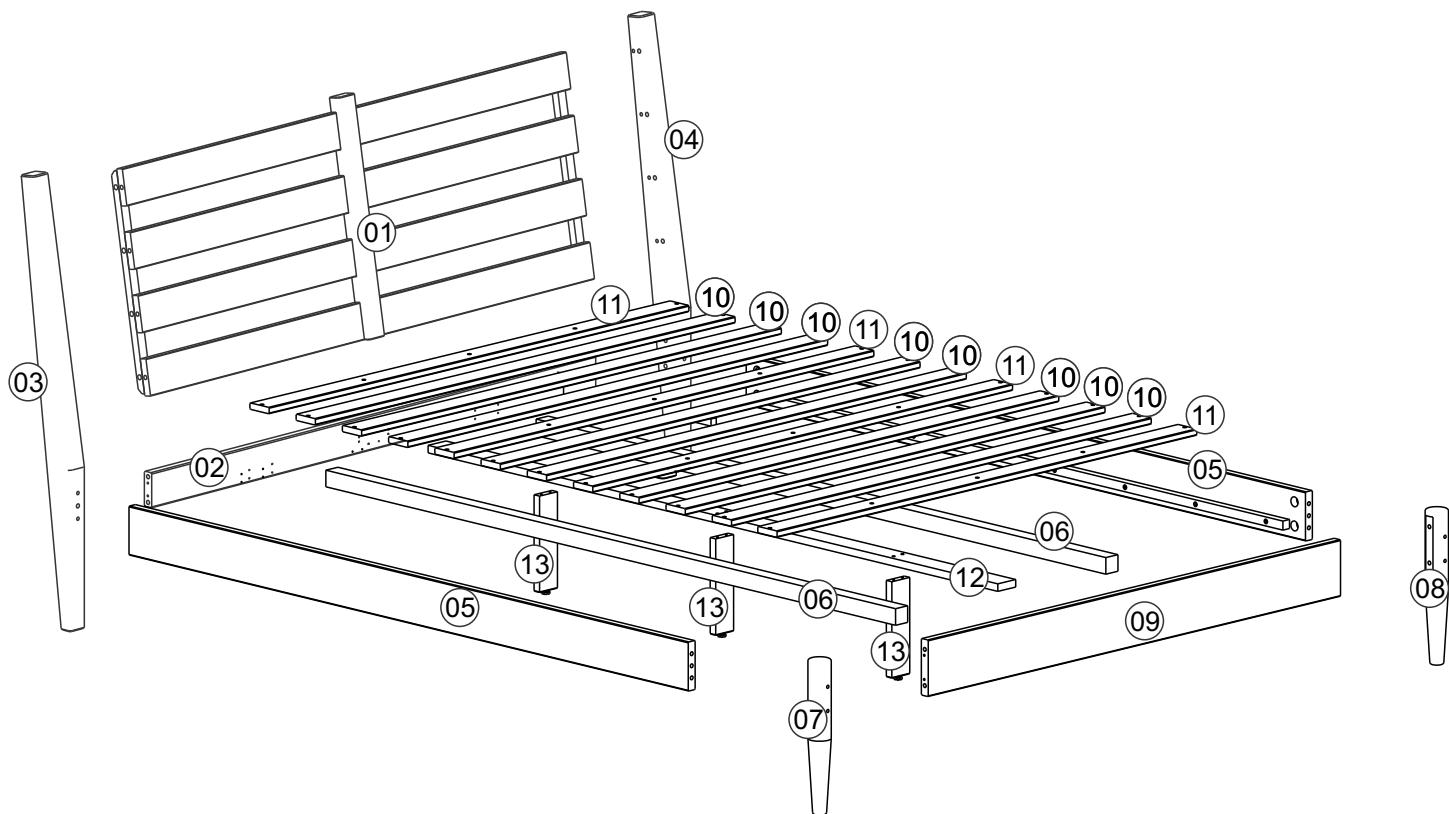


STEP 1

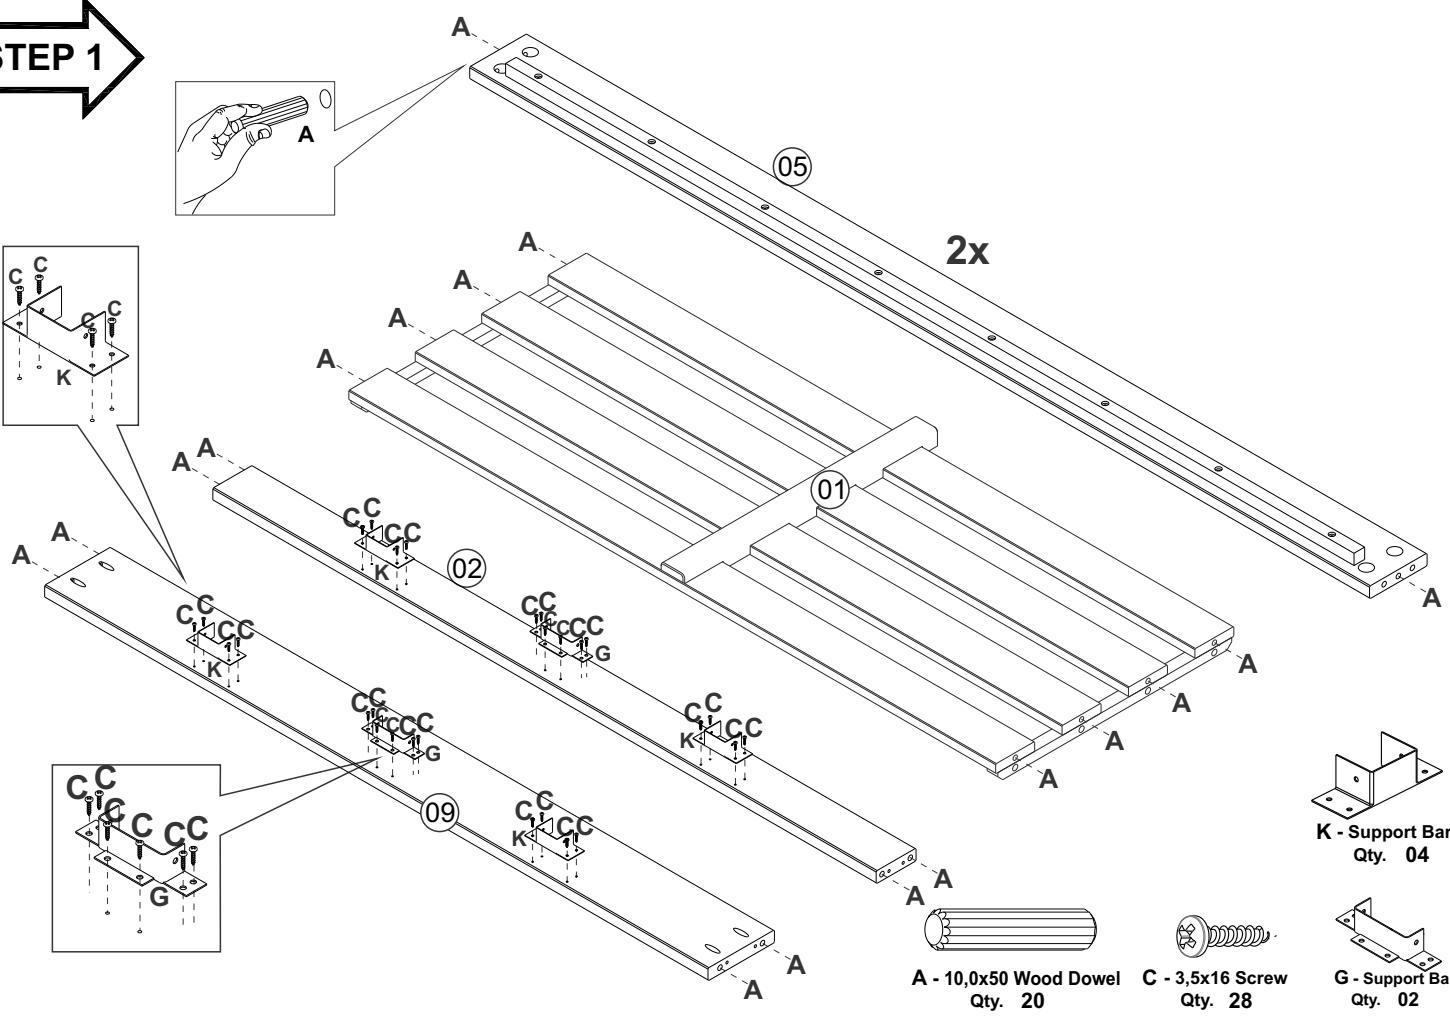


STEP 2

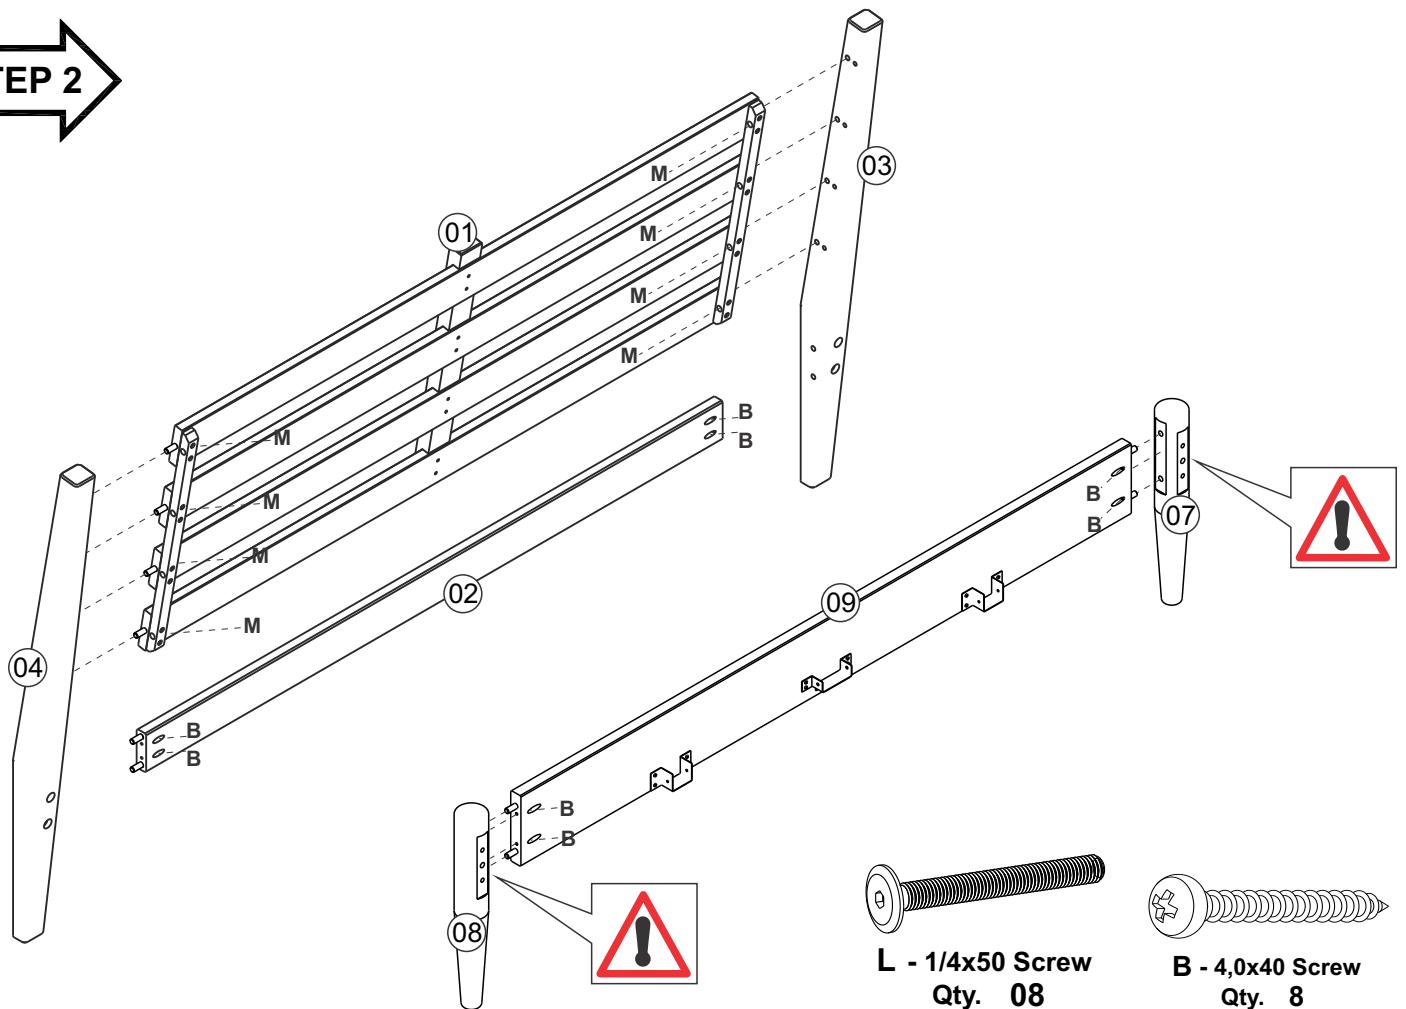


STEP 3

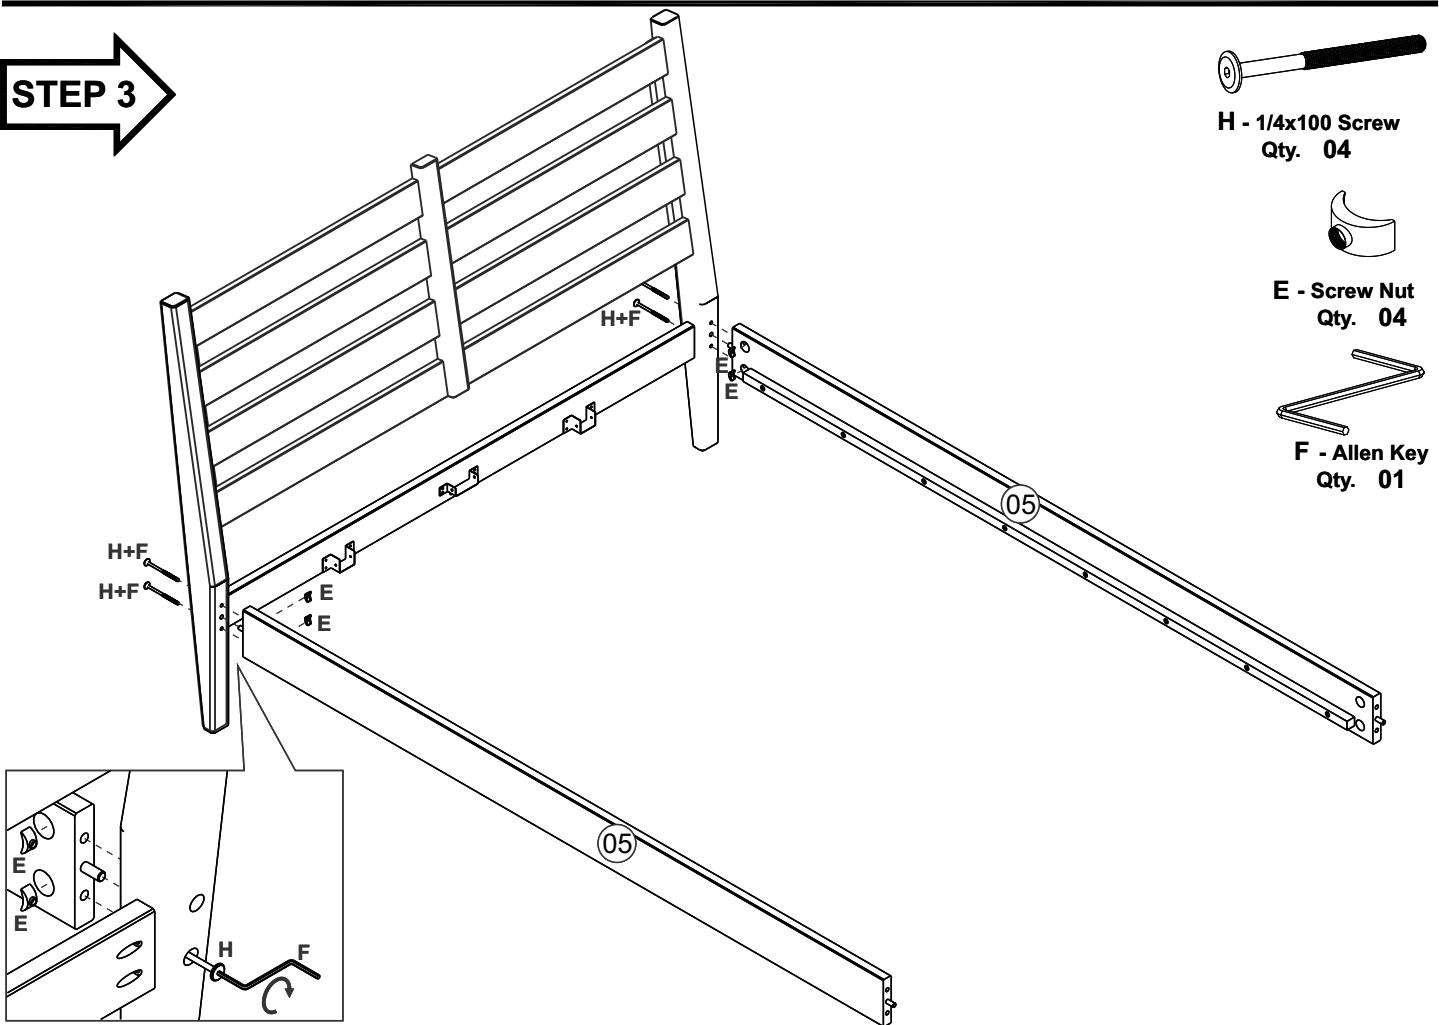


STEP 4

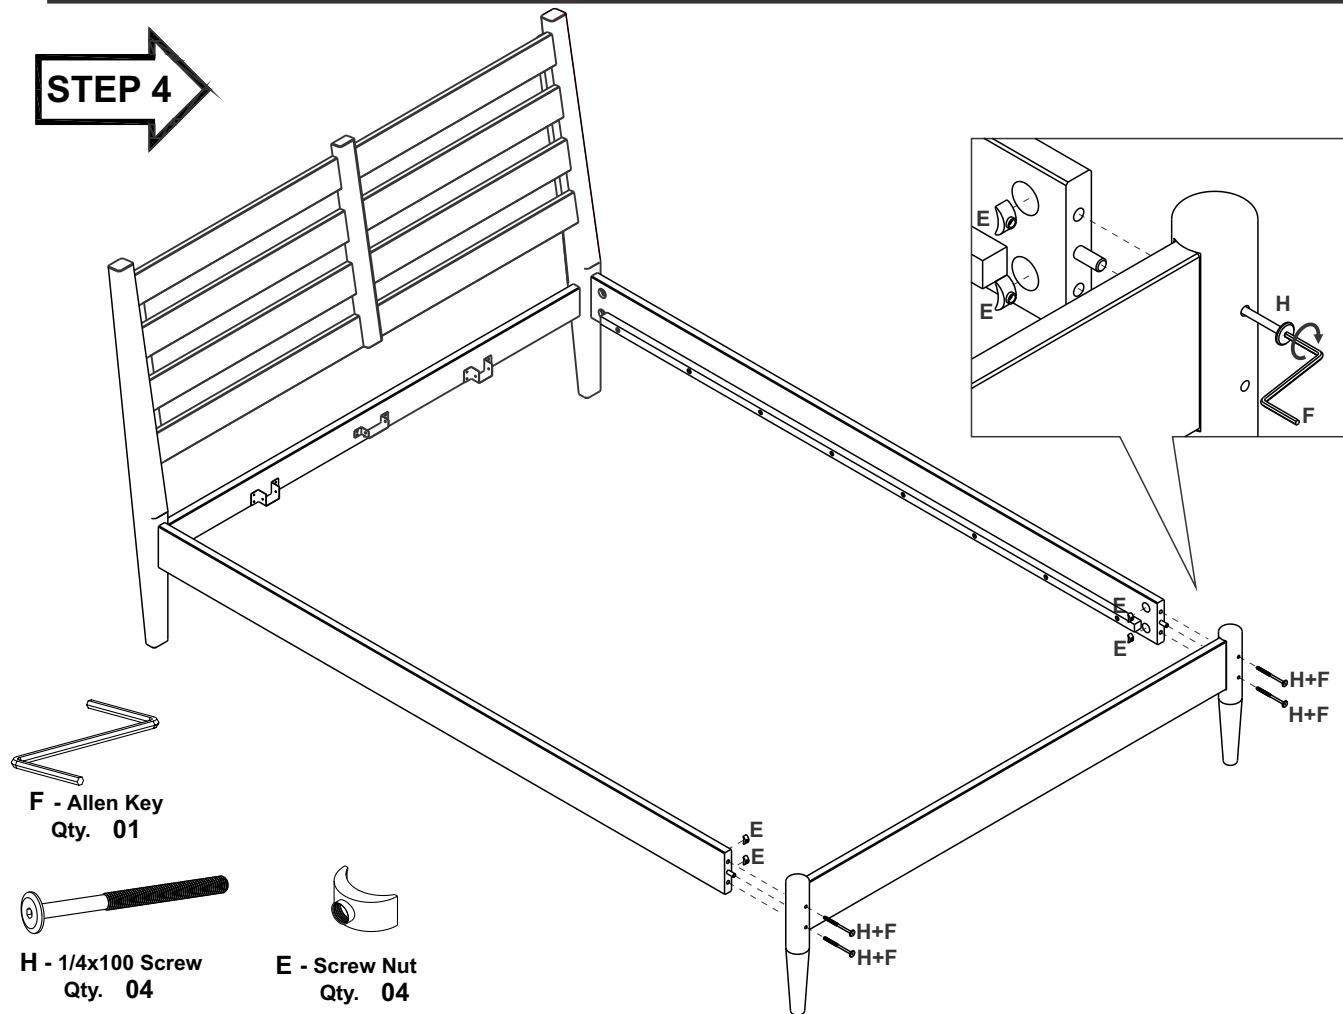


STEP 5

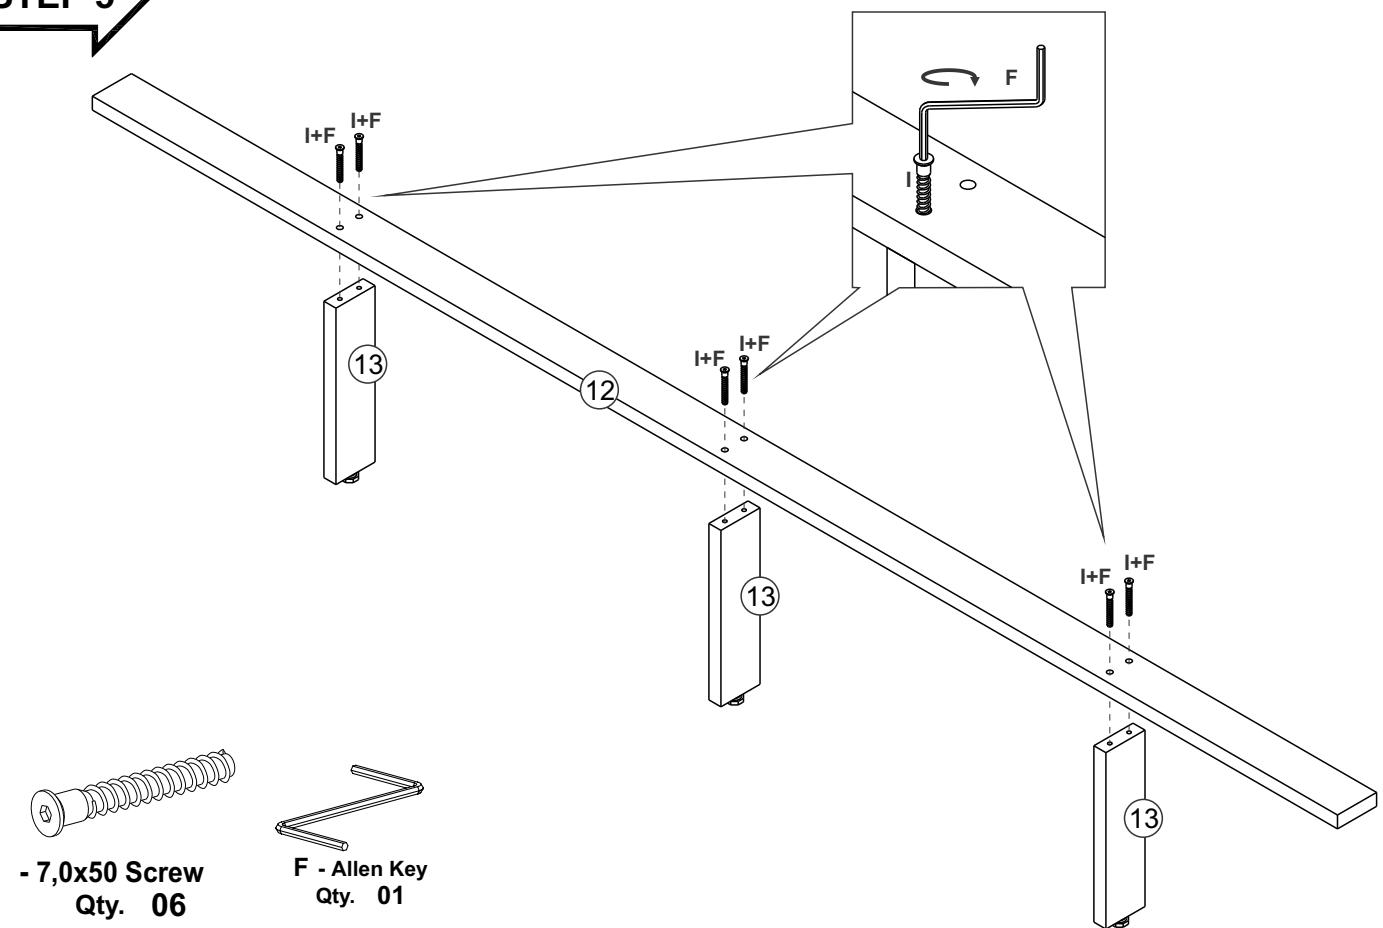

STEP 6

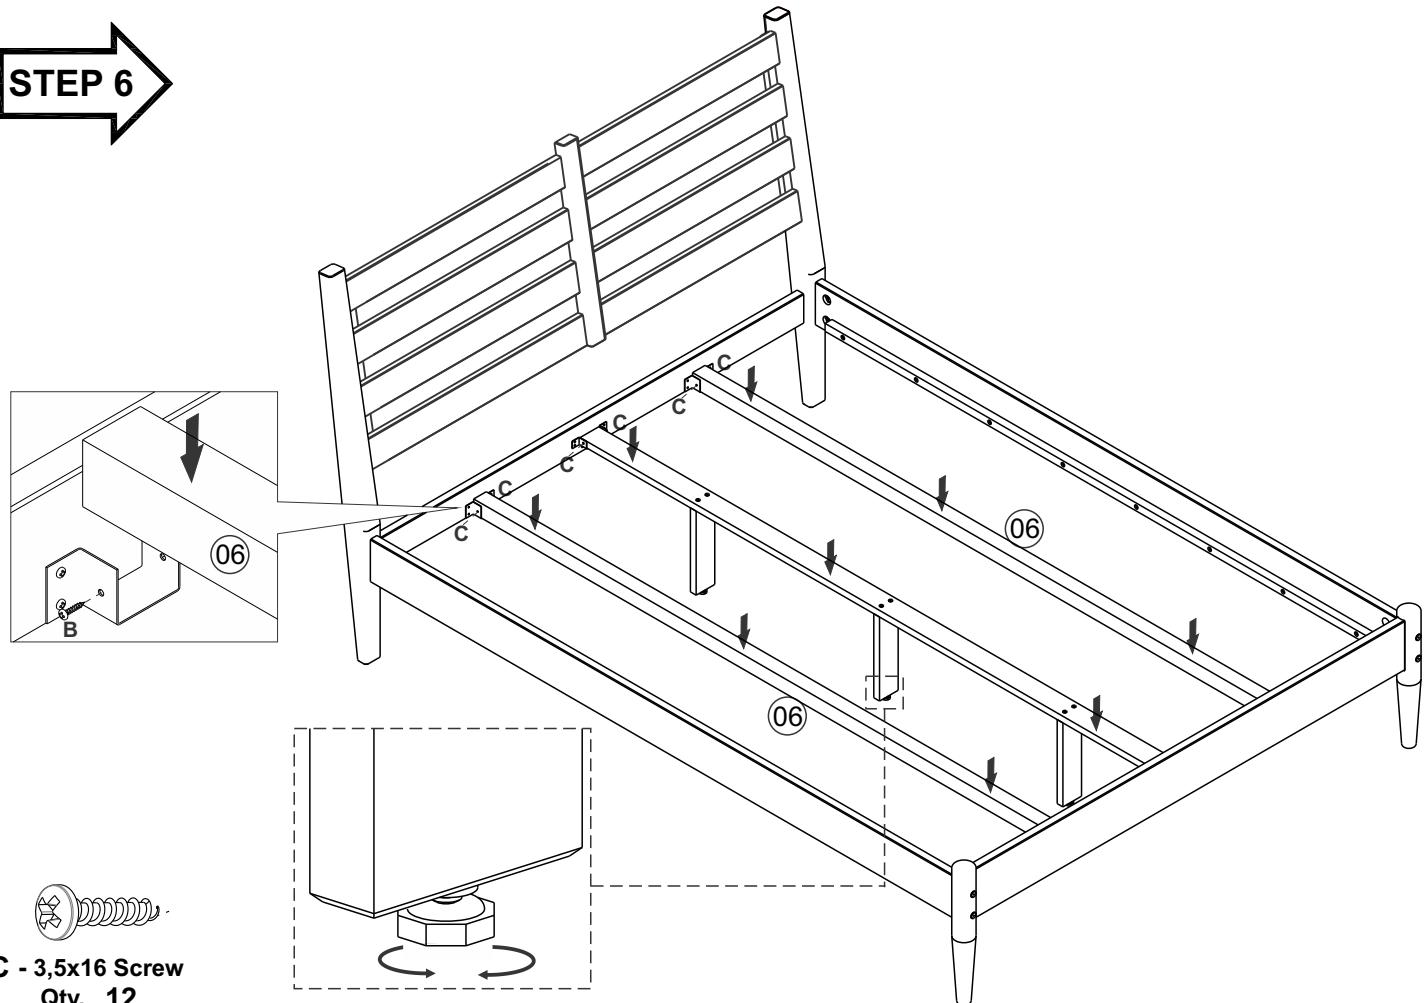

STEP 7

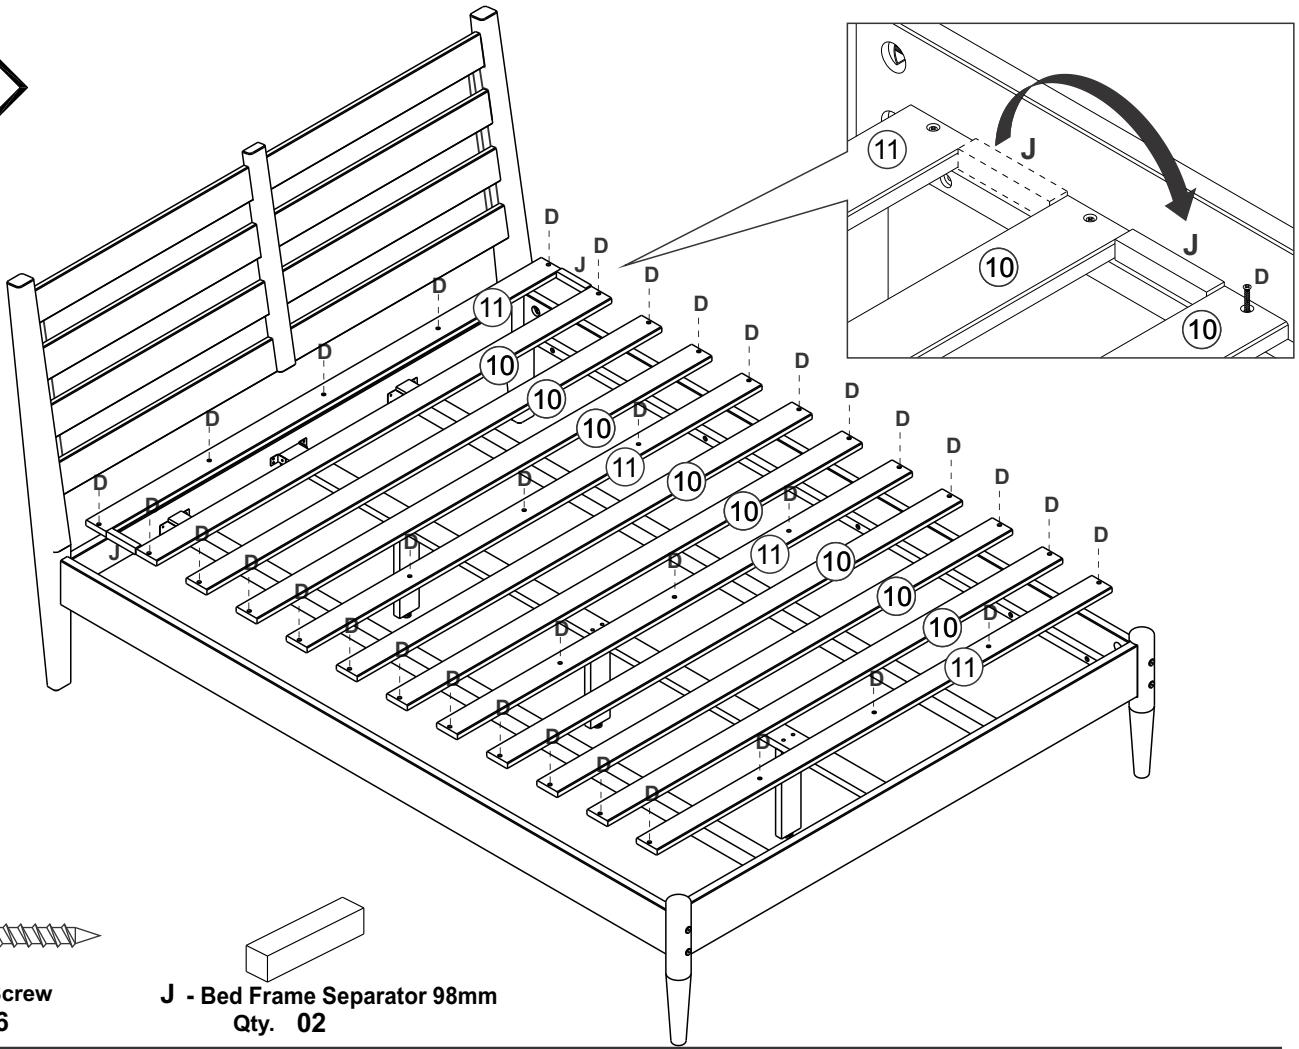

STEP 8

