
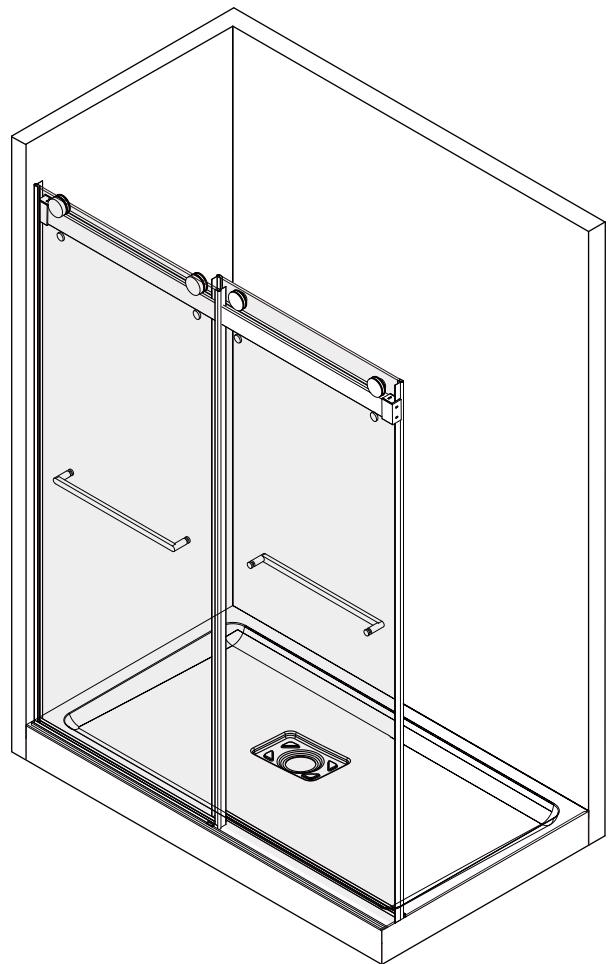


# INSTALLATION MANUAL

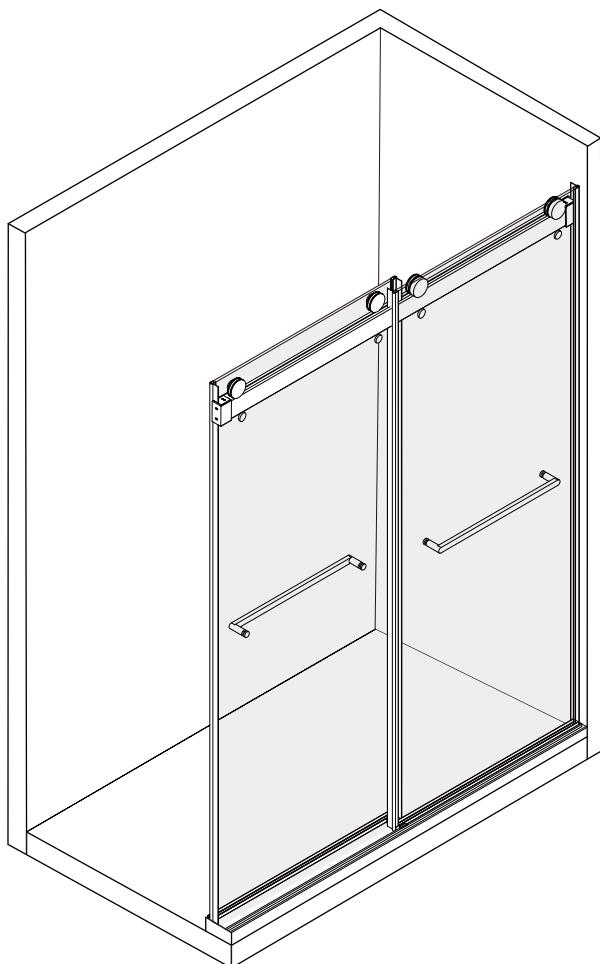
















**Without shower base  
(P2~12)**


**With shower base  
(P13~24)**

**DS13-BL-60/DS13-BN-60/DS13-BL-72/DS13-BN-72**




**IMPORTANT - Please read and follow all warnings and instructions before using this product. Injury can result from improper use. Save this document.**

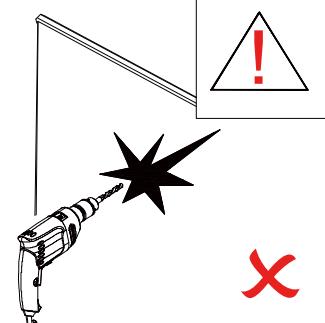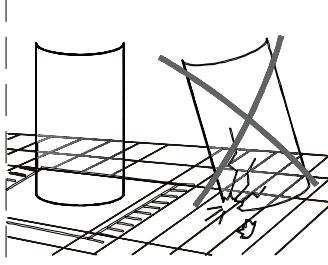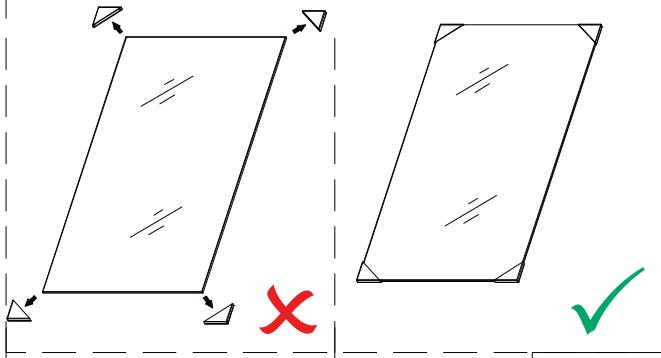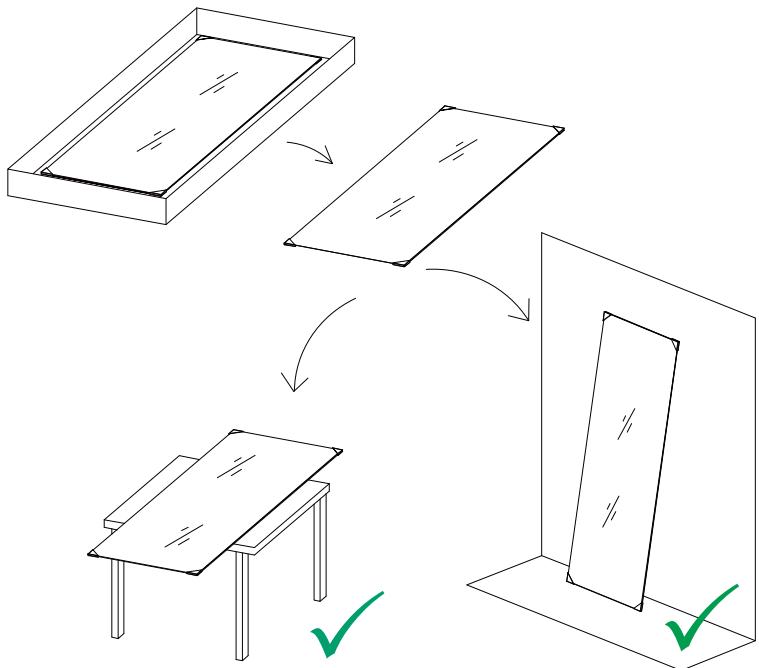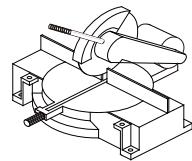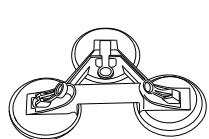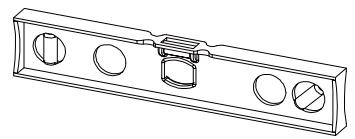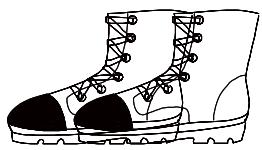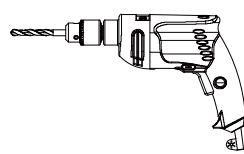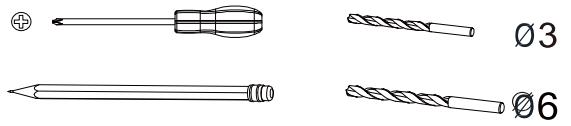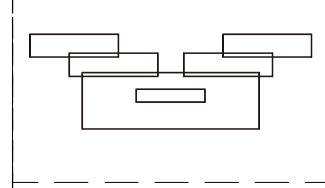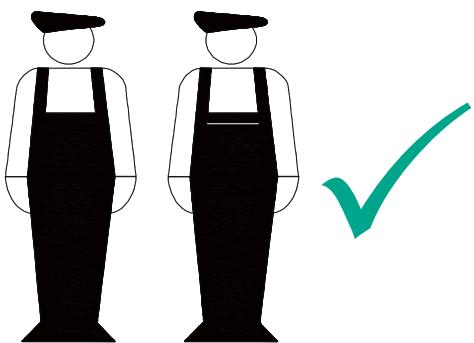

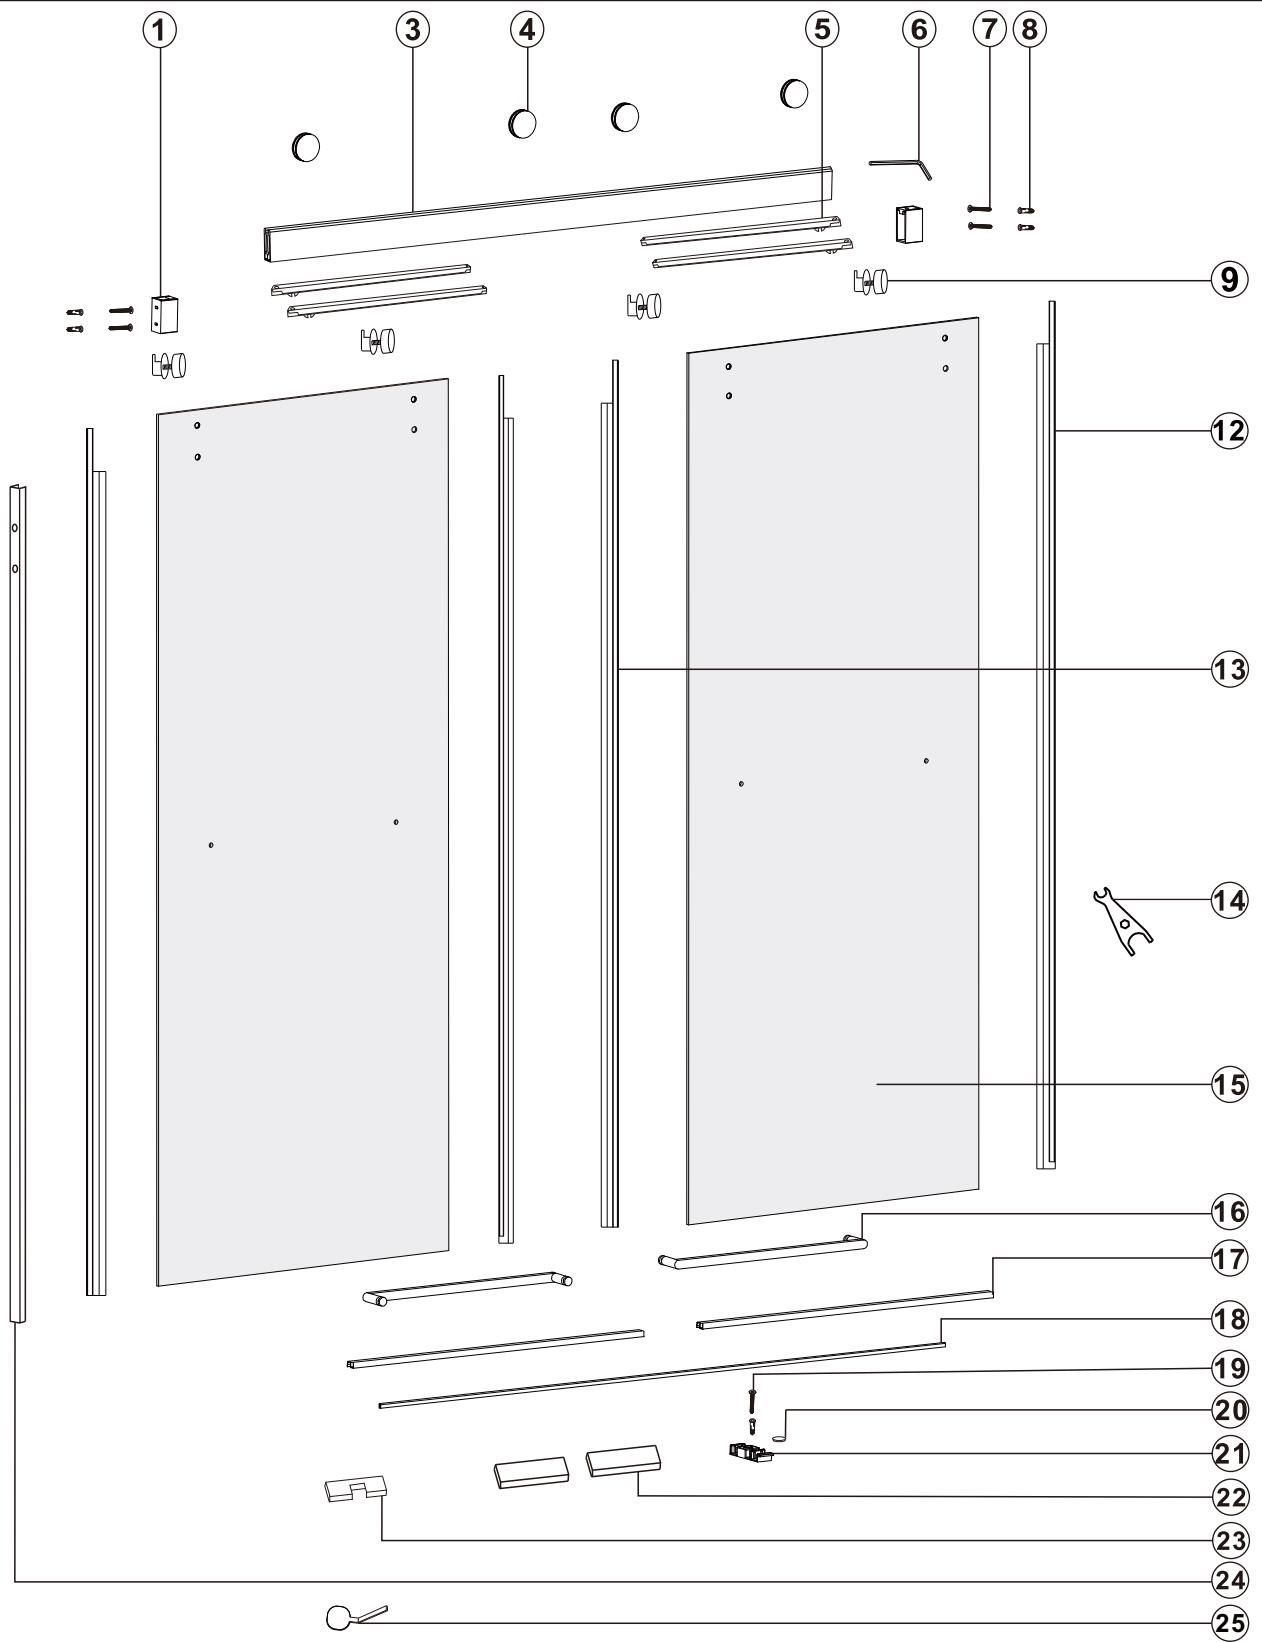


NO.	Picture	Qty												
1		2	3		1	4		4	5		4	6		1
7		4	8		5	9		4	12		2	13		2
14		1	15		2	16		2	17		2	18		1
19		1	20		1	21		1	22		2	23		1
24		1	25		1									

1

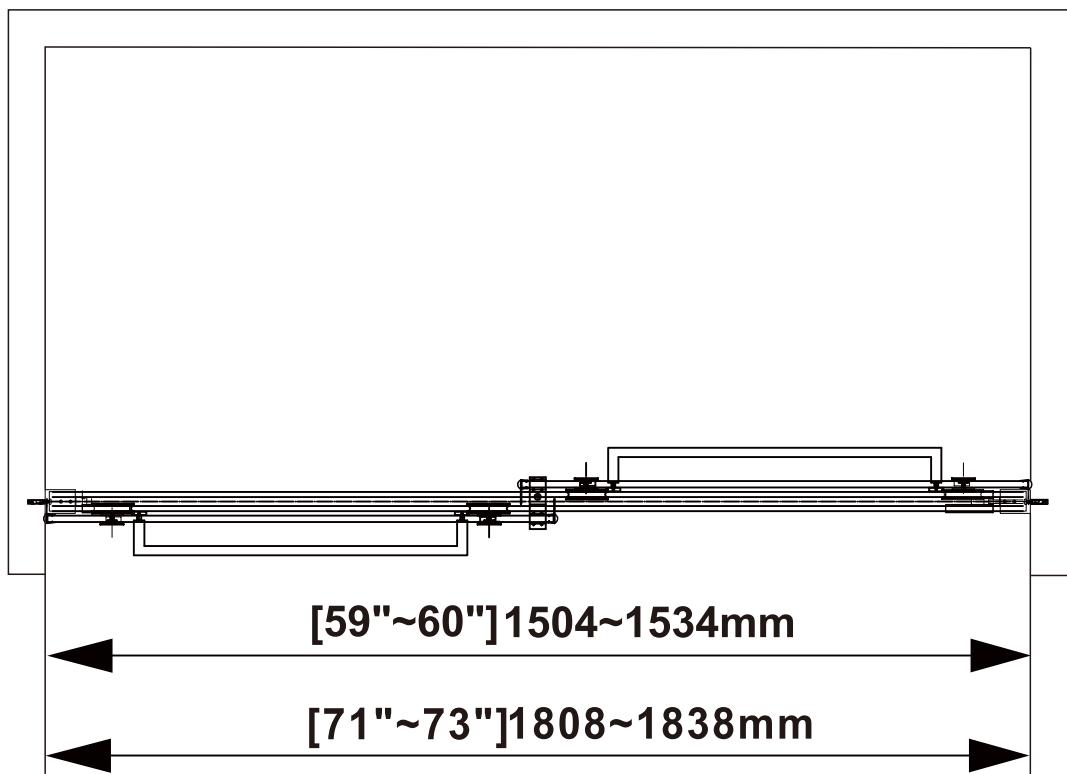


2

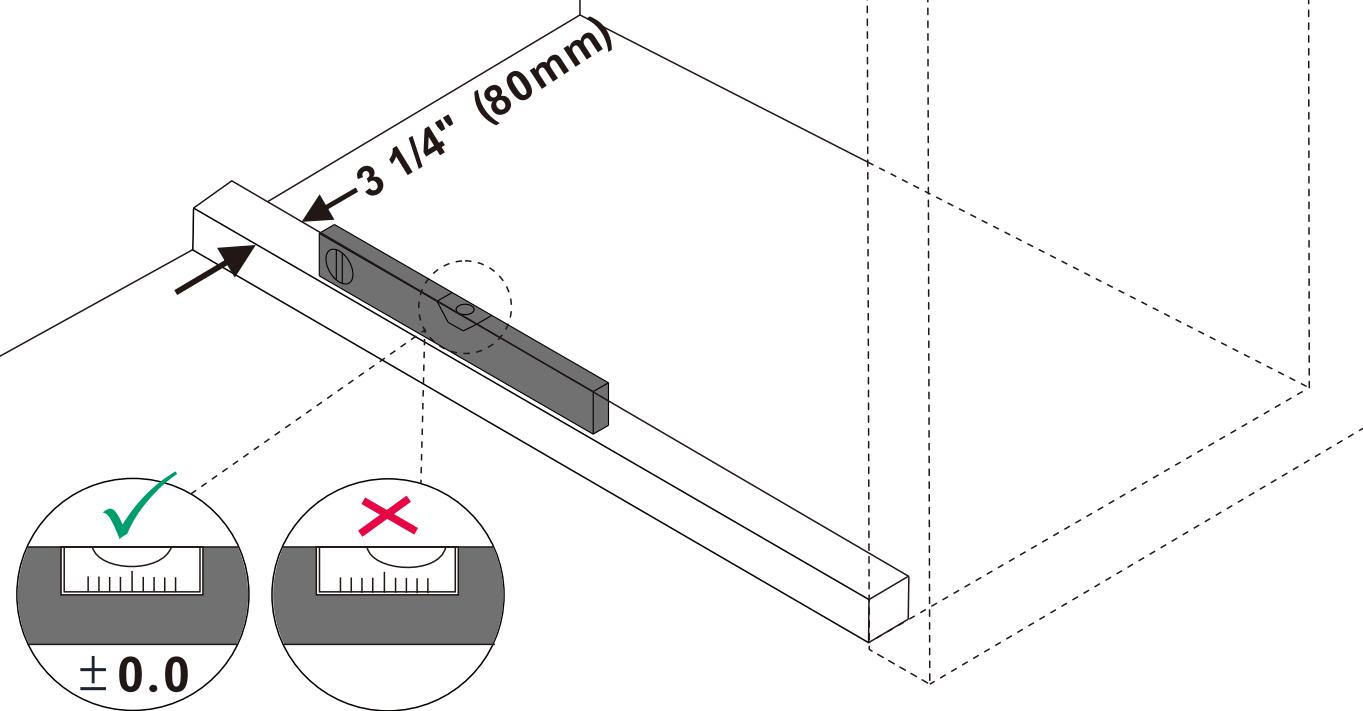


### 3

NO.	Picture	Qty
①		2
⑦		4
⑧		4
⑨		1
⑩		1

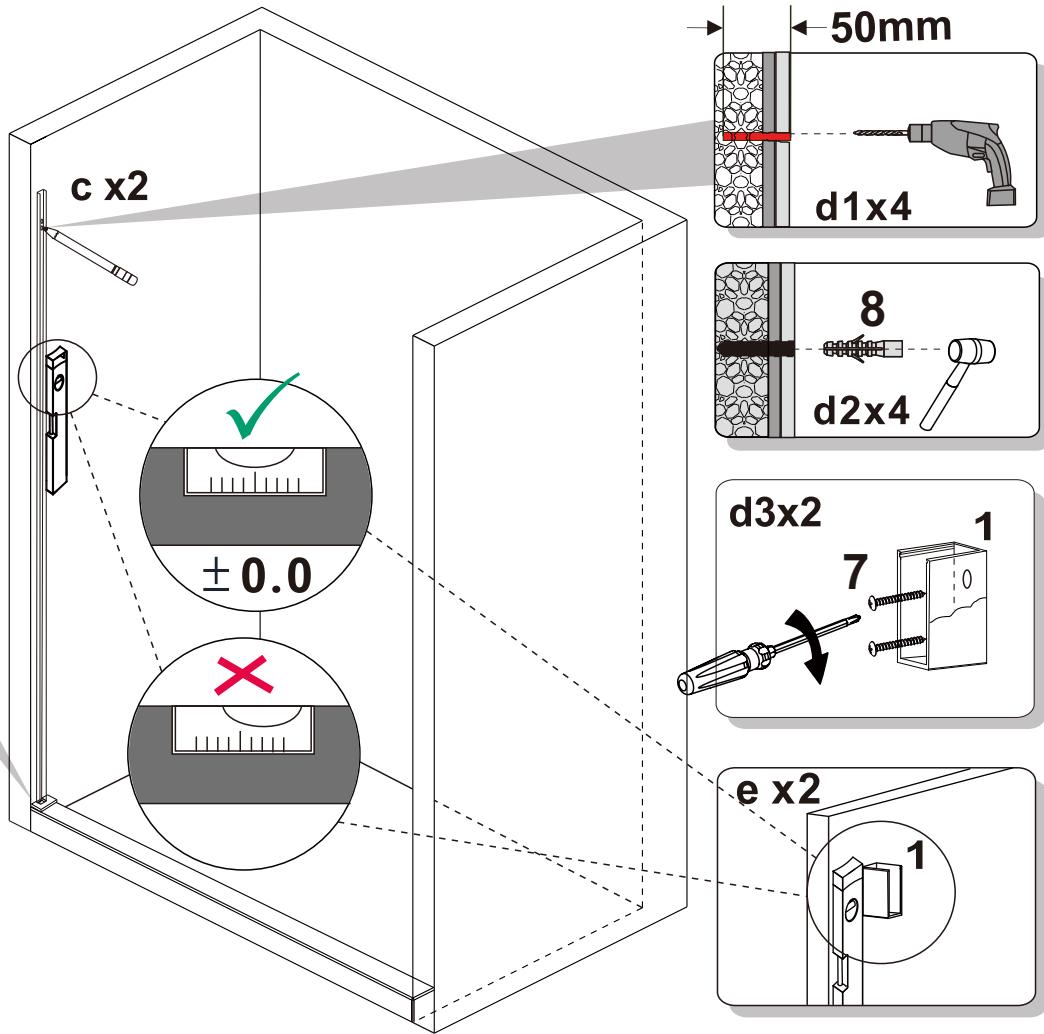


### 4

NO.	Picture	Qty
③		1
⑤		4
⑥		1

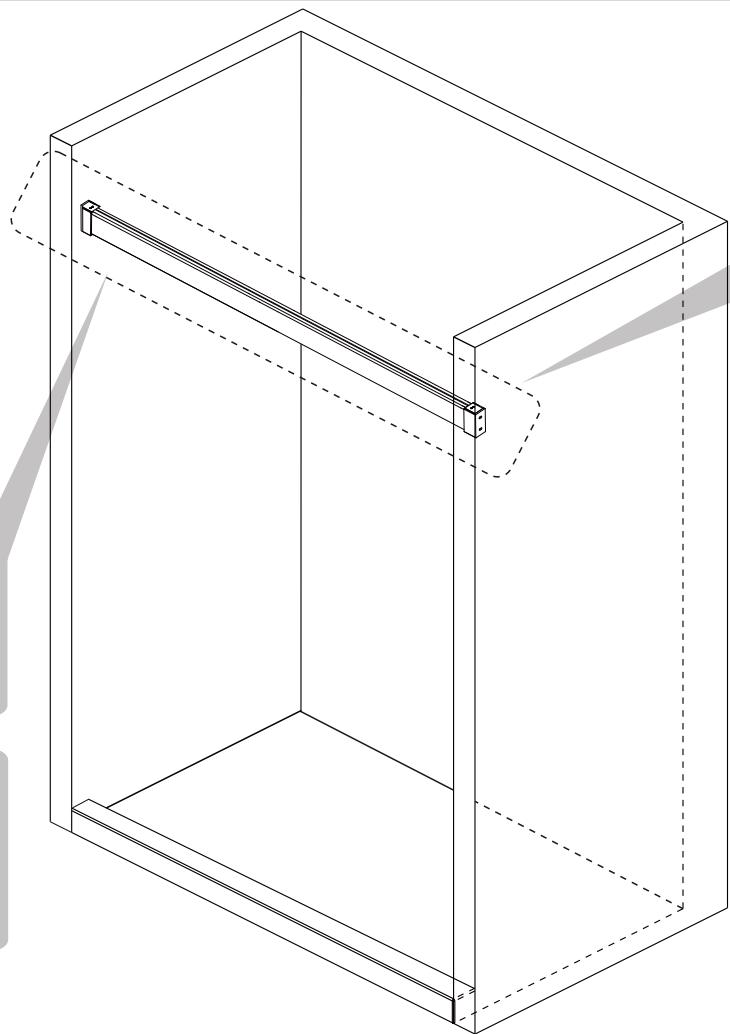


## 5


NO.	Picture	Qty
18		1

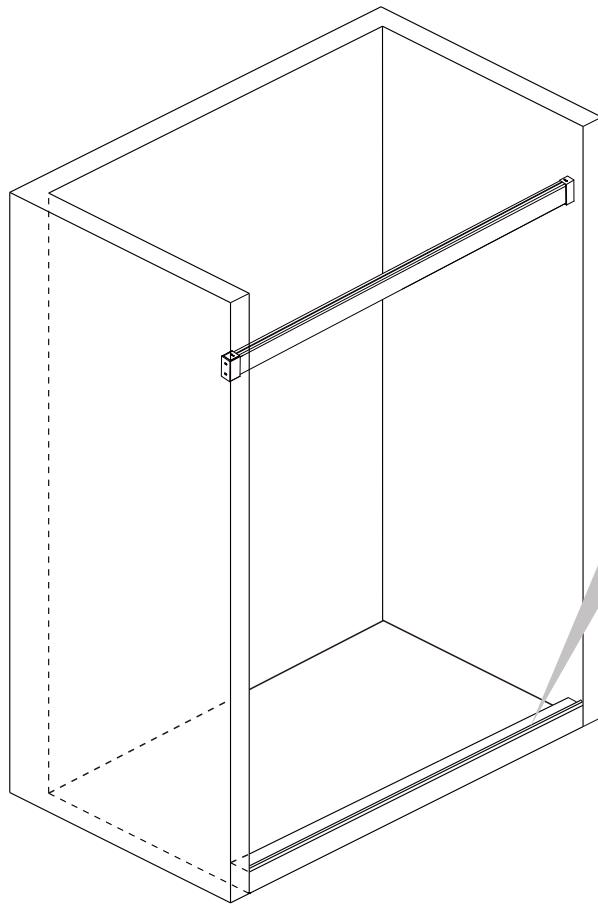

a

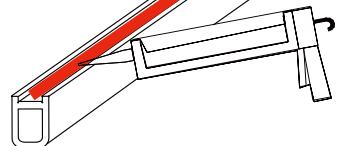


b

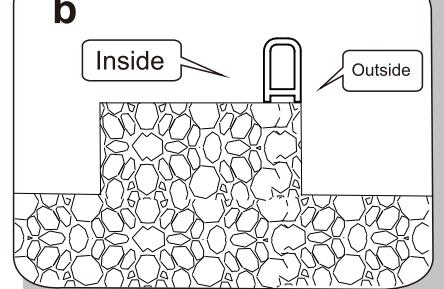


## 6


NO.	Picture	Qty
8		1
19		1
20		1
21		1

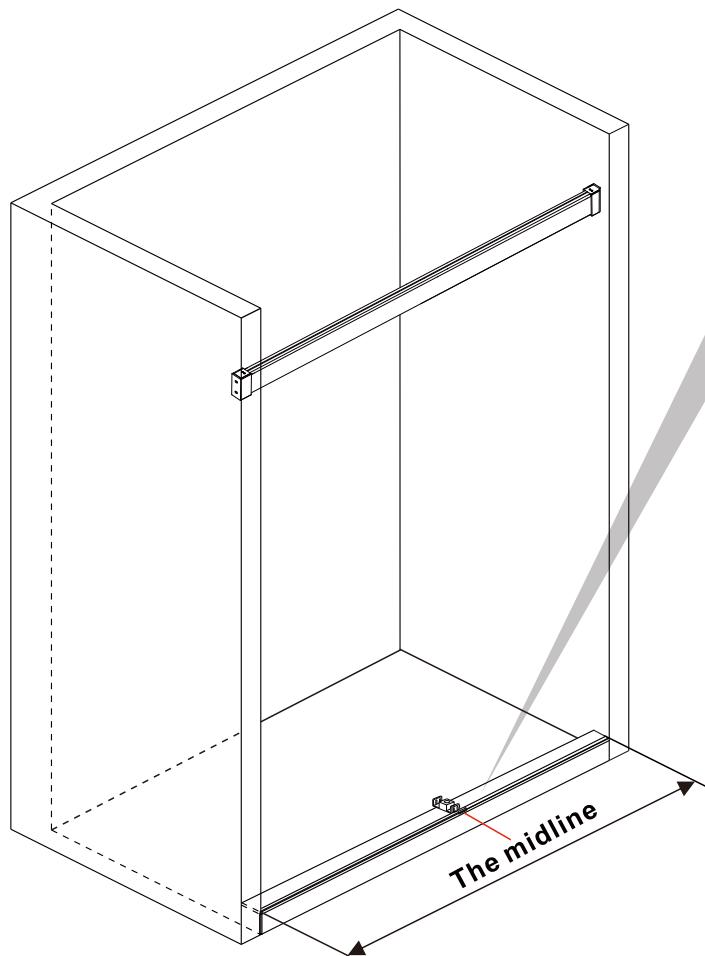


b2

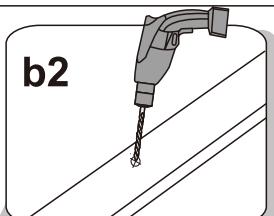


b3


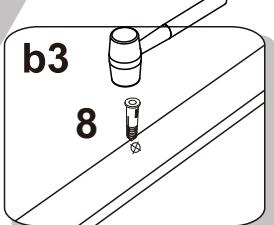


b4

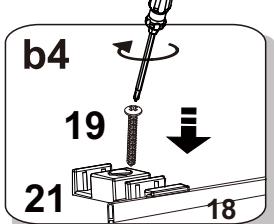


b5

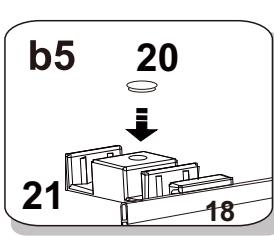

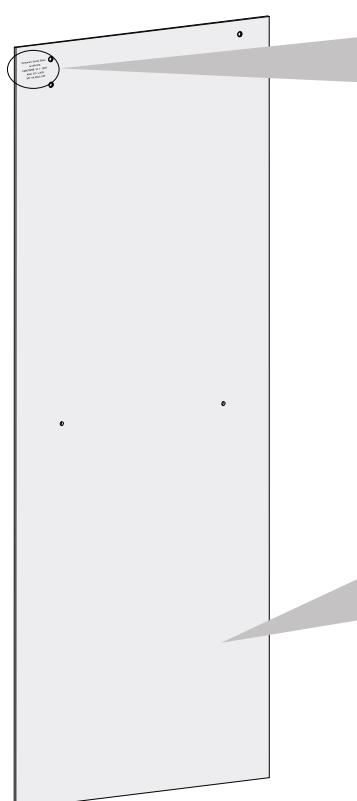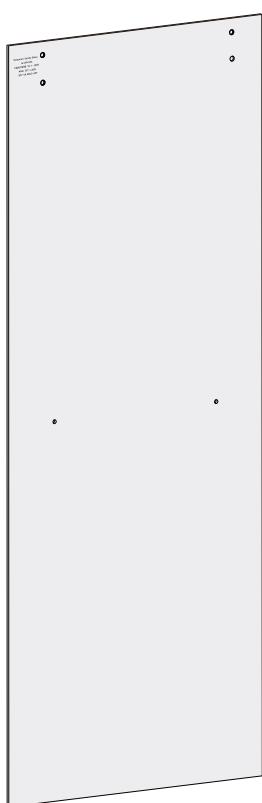**7**

Tempered Safety Glass  
16 CFR 1201  
CAN/CGSB 12.1 - 2017  
ANSI Z97.1-2015  
3/8" UA SGCC-6119







Inside

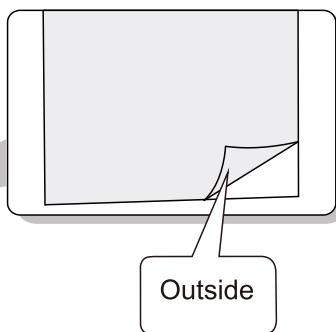

Outside





**8**

NO.	Picture	Qty
④	○	2
⑨	H	2
⑯	Wrench	1
⑮	Box	1
⑰	L	1

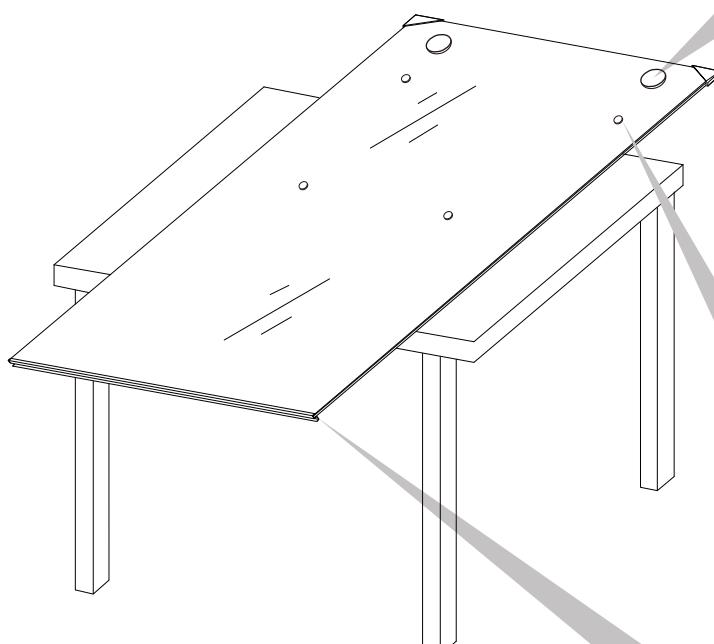
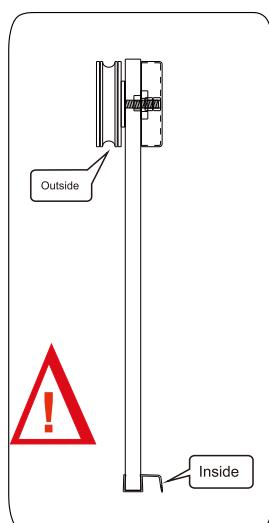
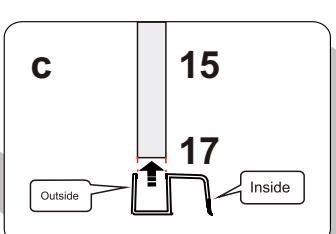
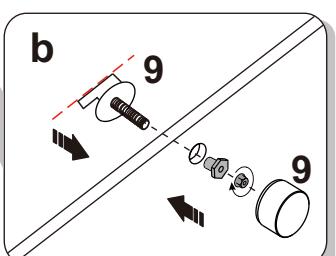
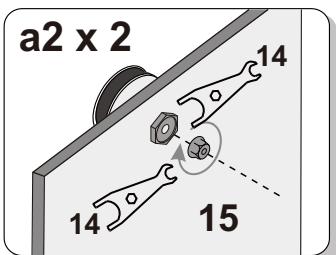
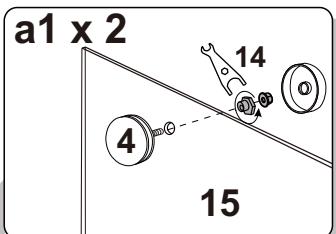


**9**






NO.	Picture	Qty
22		2

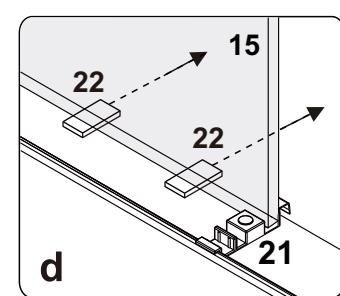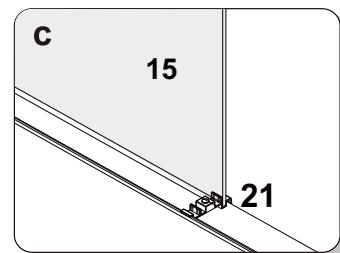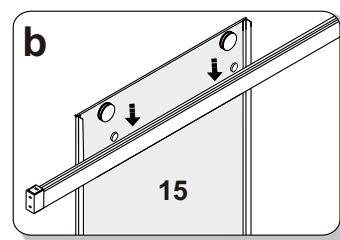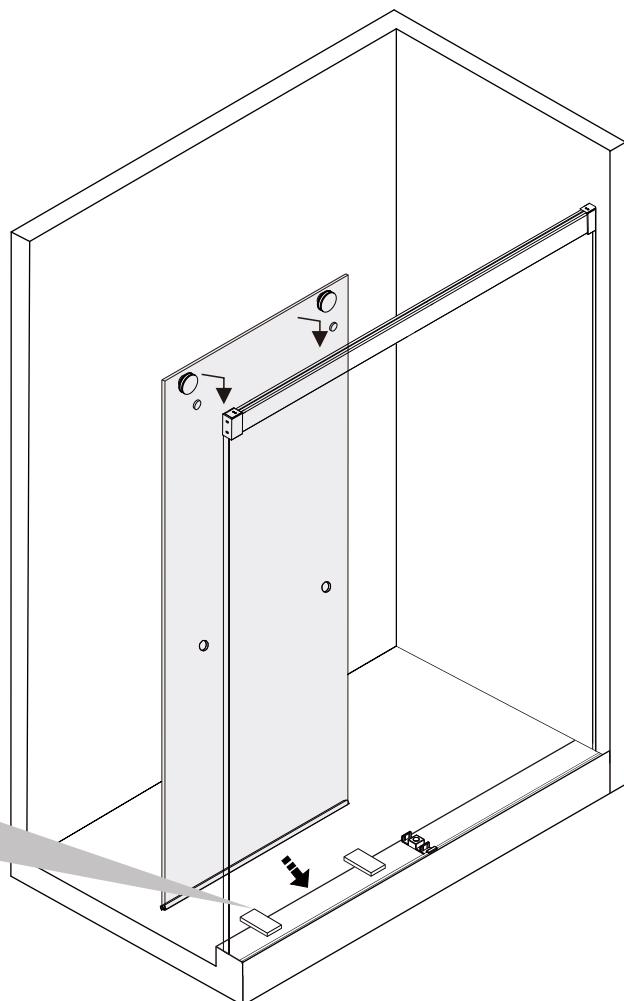**10**

NO.	Picture	Qty
④		2
⑨		2
⑯		1
⑰		1

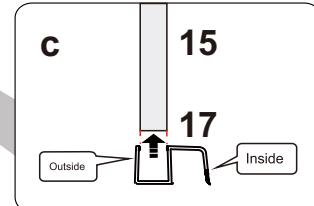
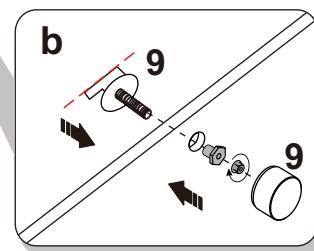
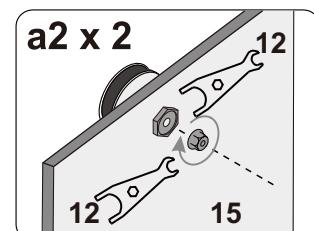
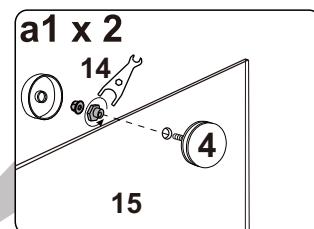
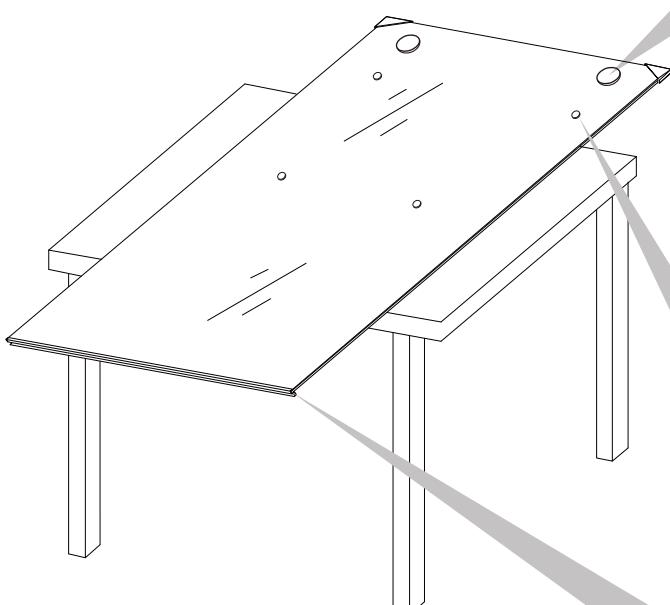
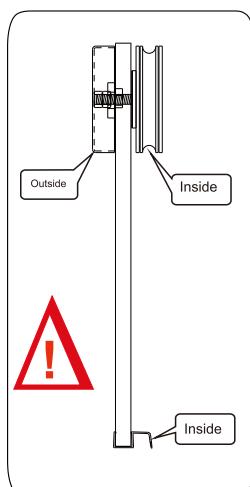


## 11


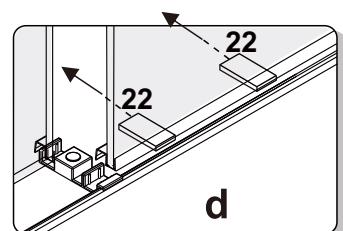
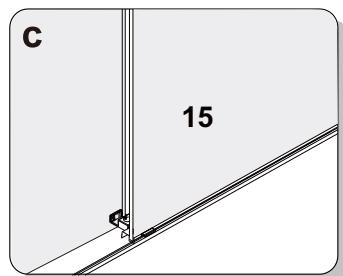
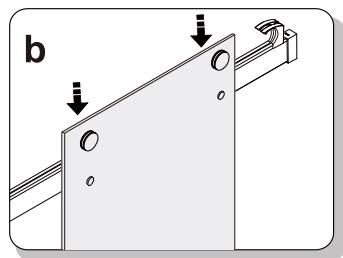
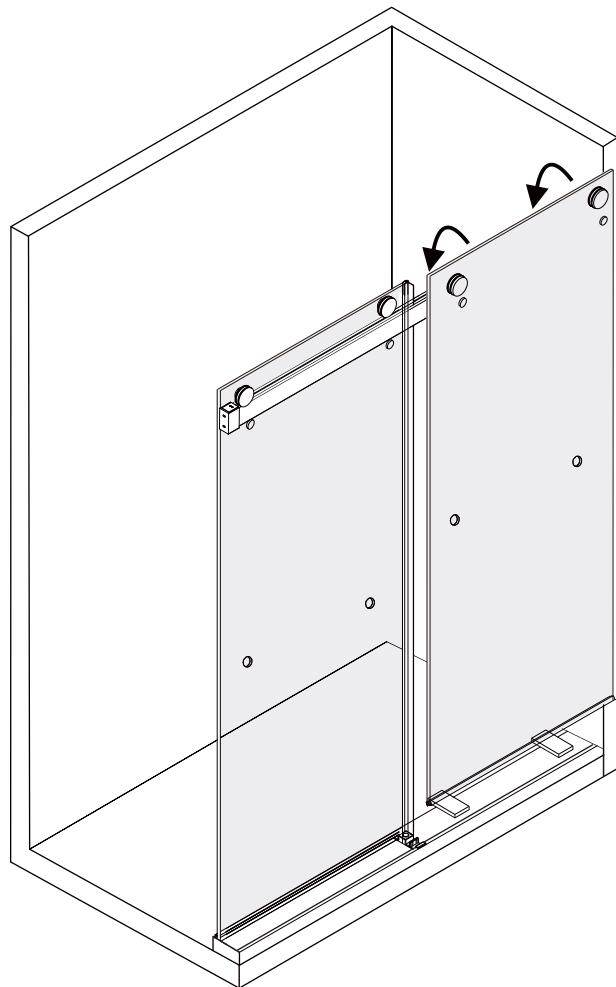
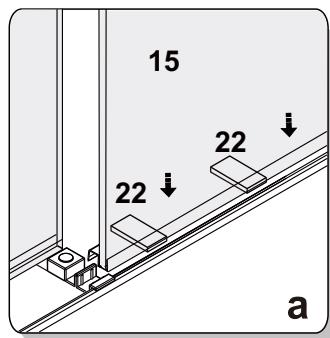


## 12

NO.	Picture	Qty
⑫		2
⑬		2

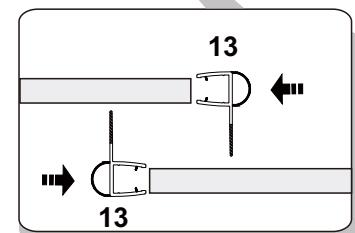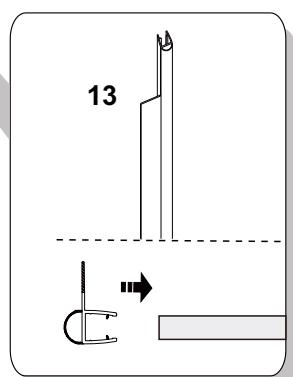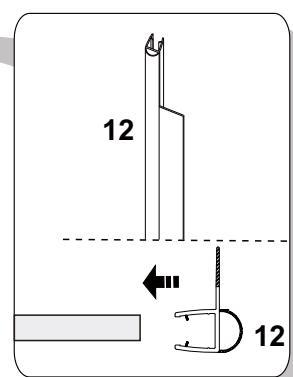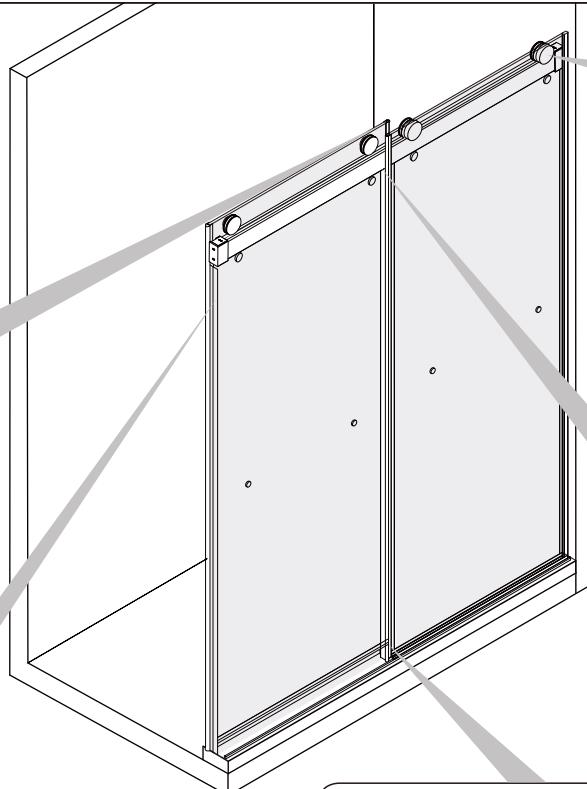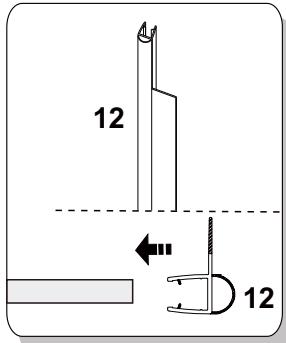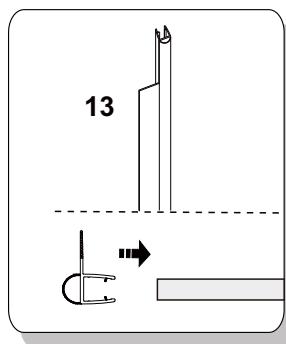


**13**

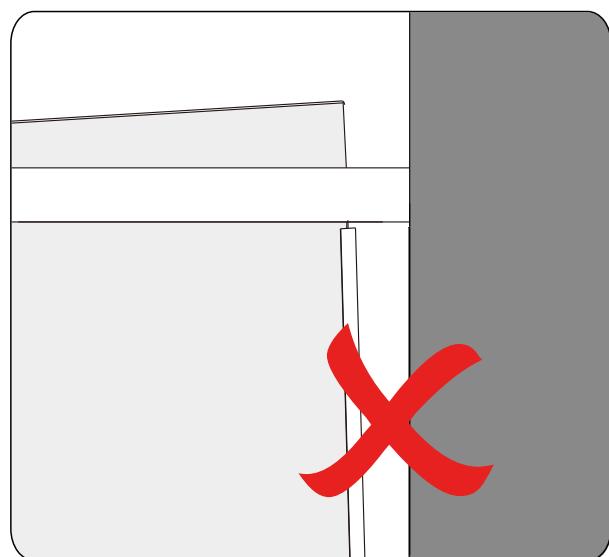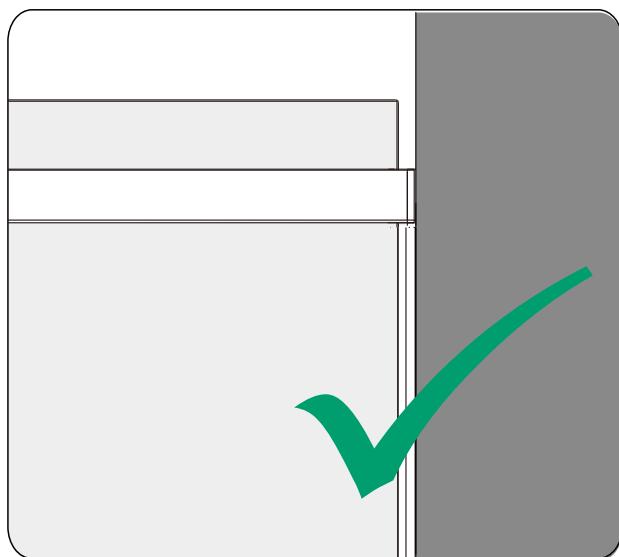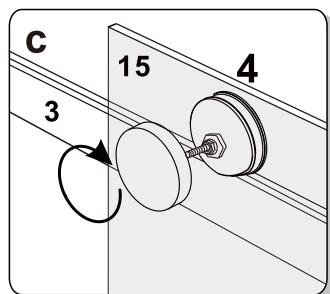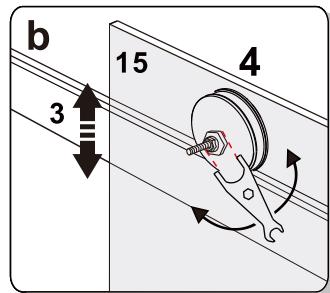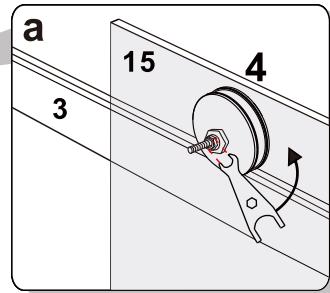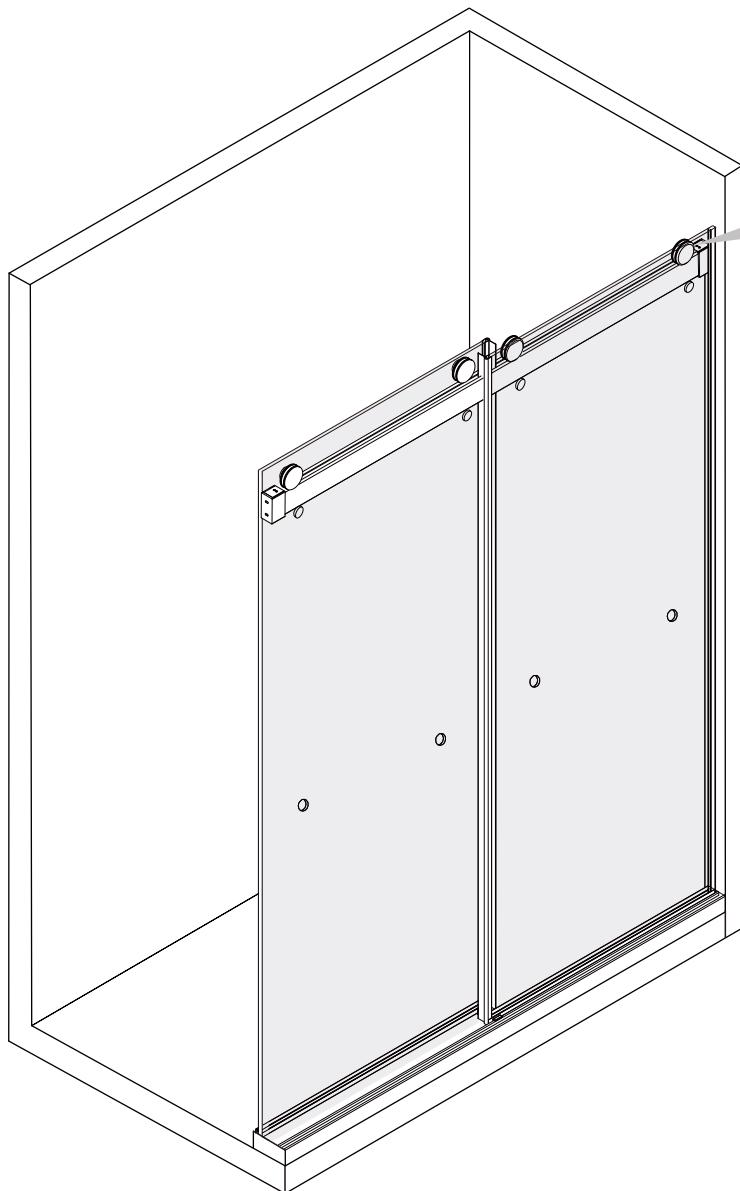


**14**


NO.	Picture	Qty
16		2

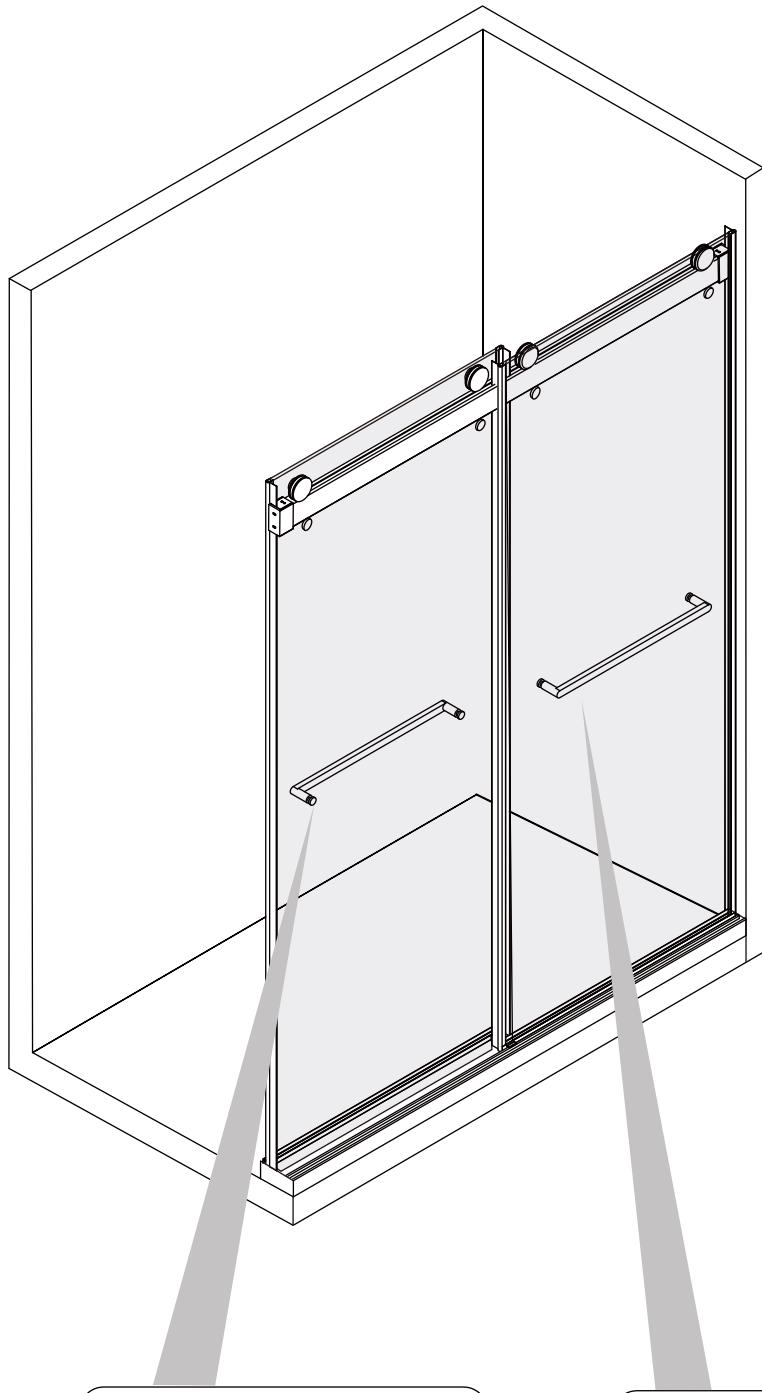


**b1x4**

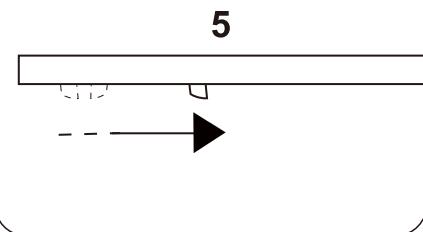

**b2x4**

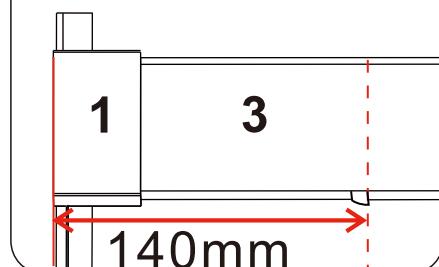

**b3x4**

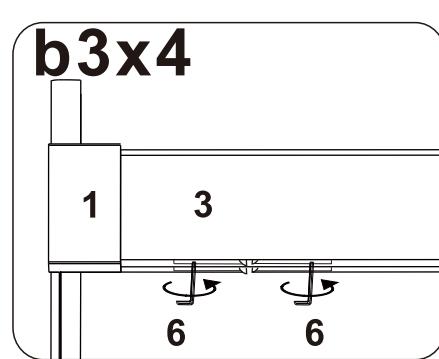

**16**


**15**

**15**


**16**

# 15








NO.	Picture	Qty
25		1

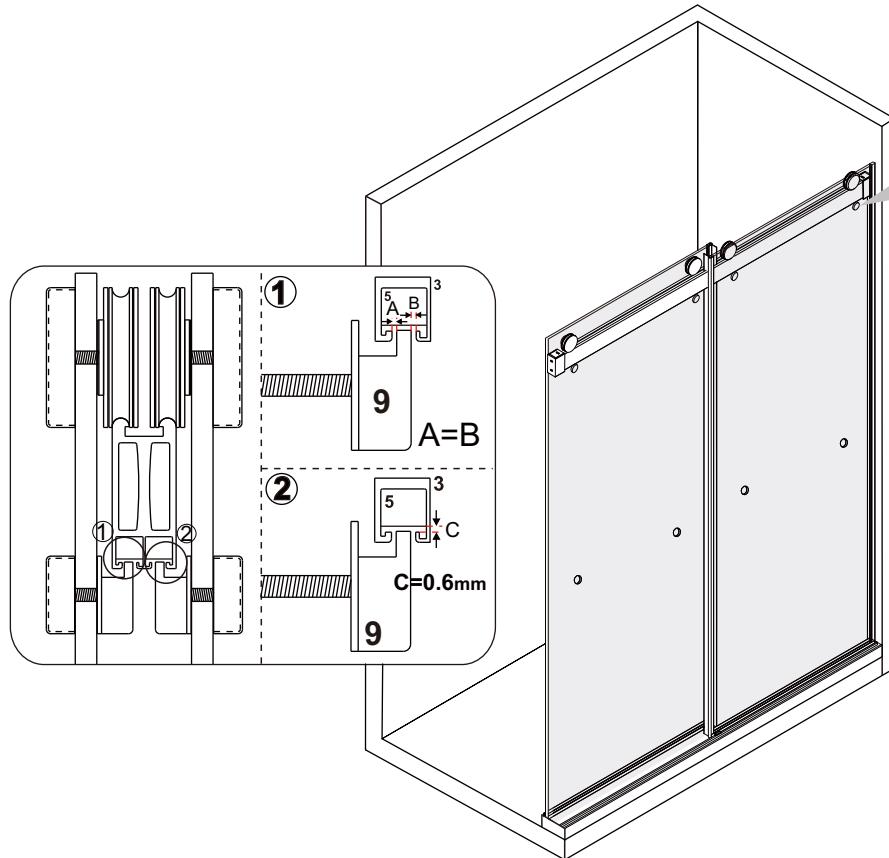


a1 x4

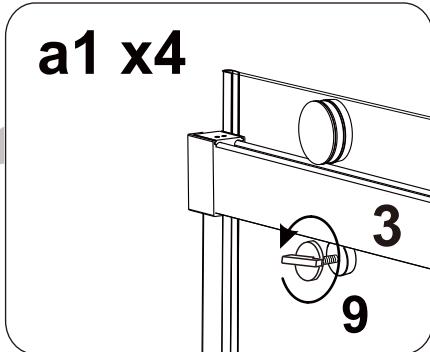


a2 x4

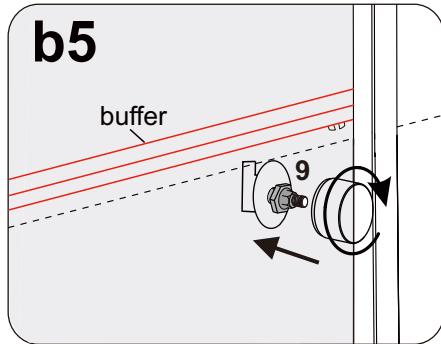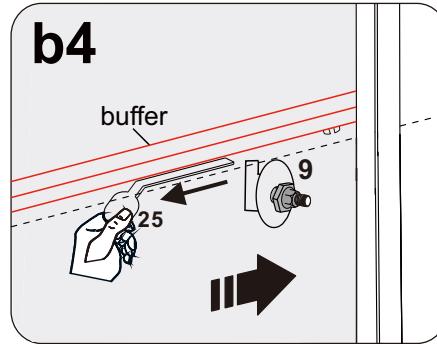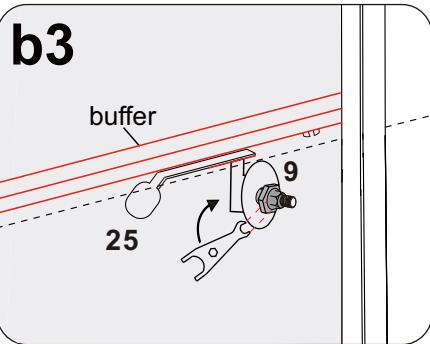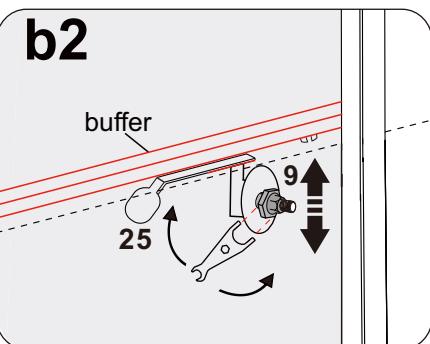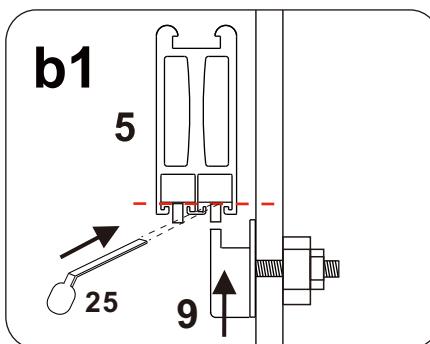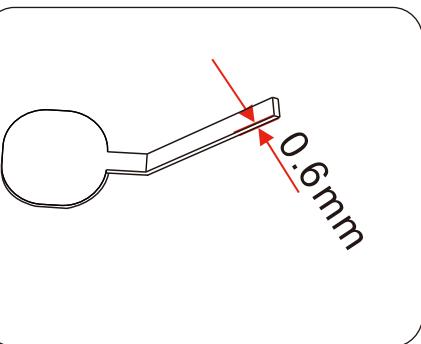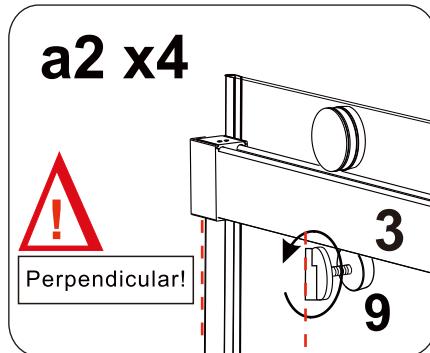

# 16

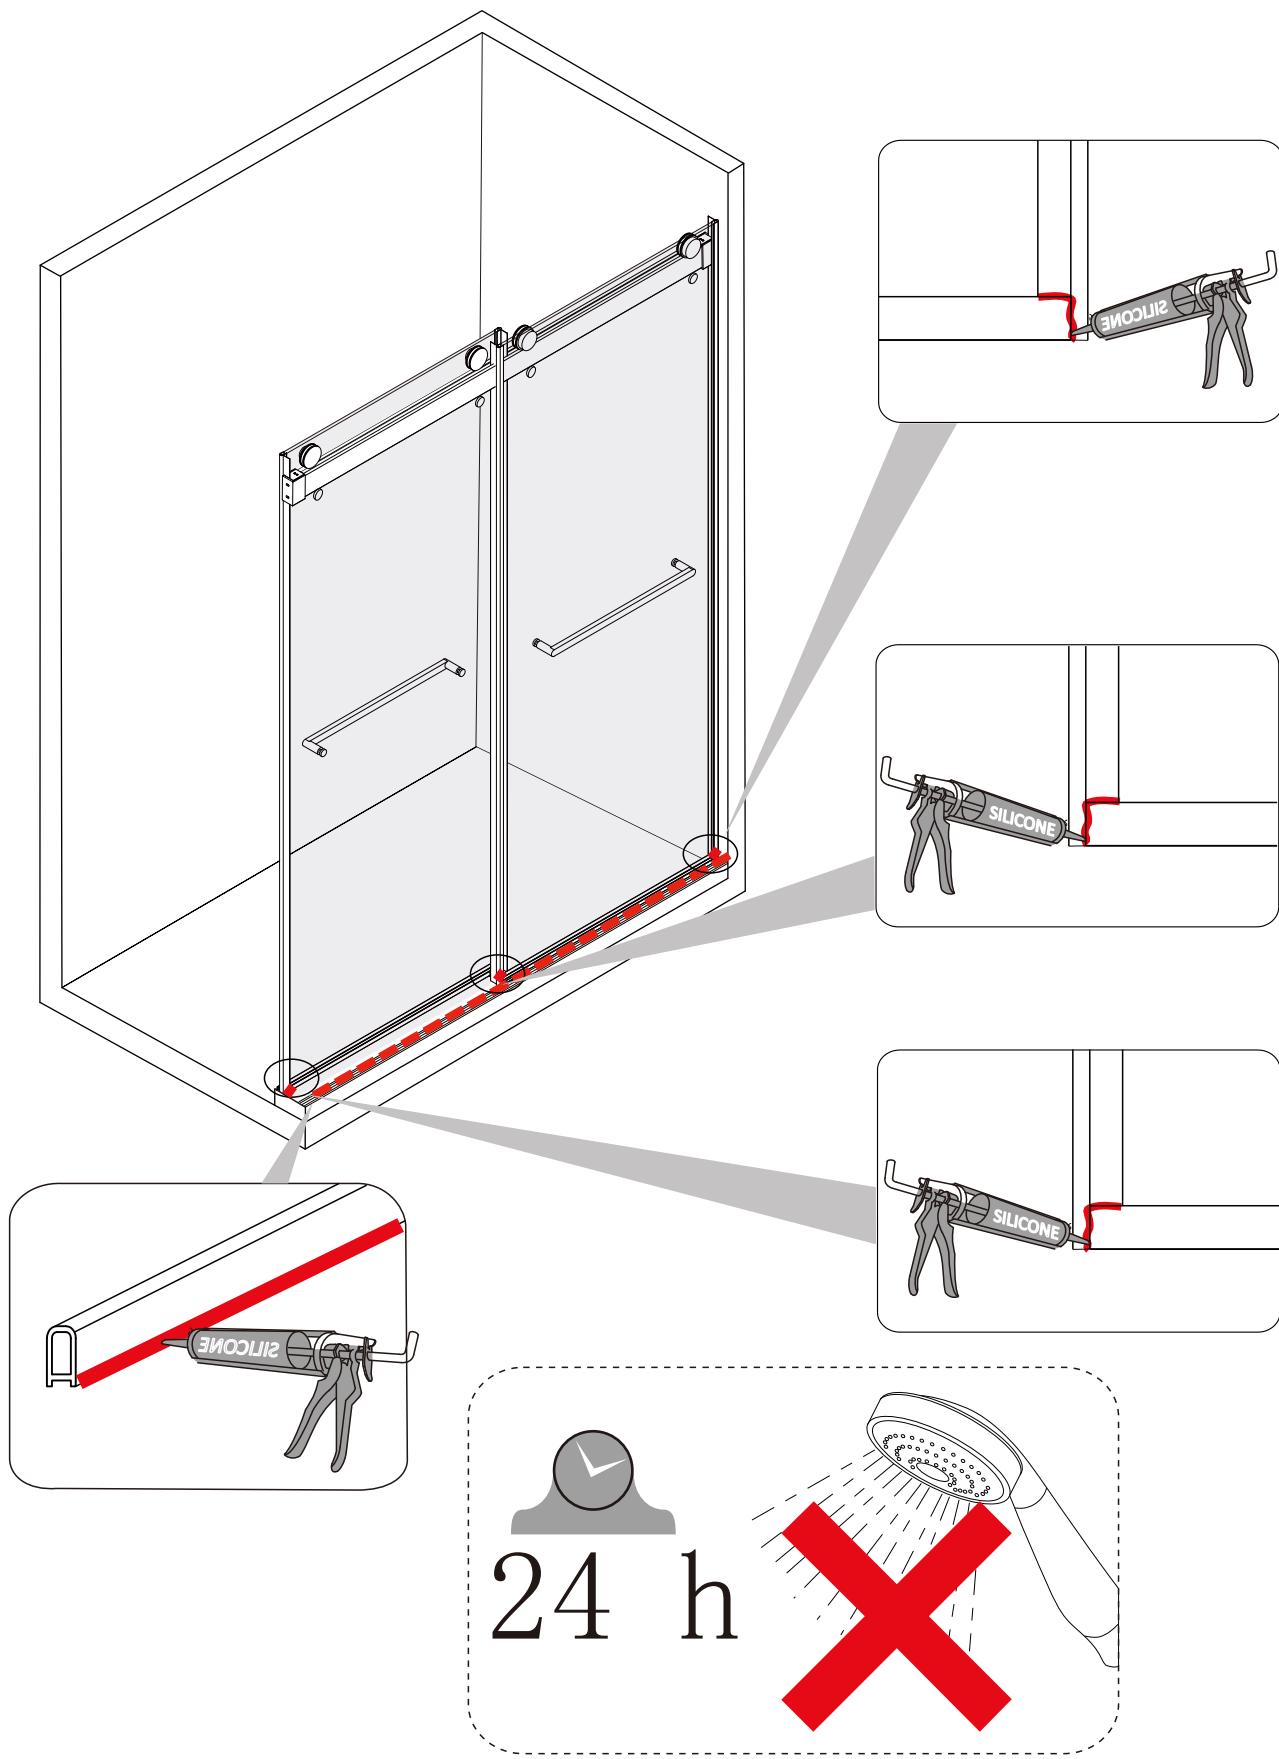


Do not use the shower enclosure for at least 24 hours  
in order to allow the silicone sealant to cure fully.

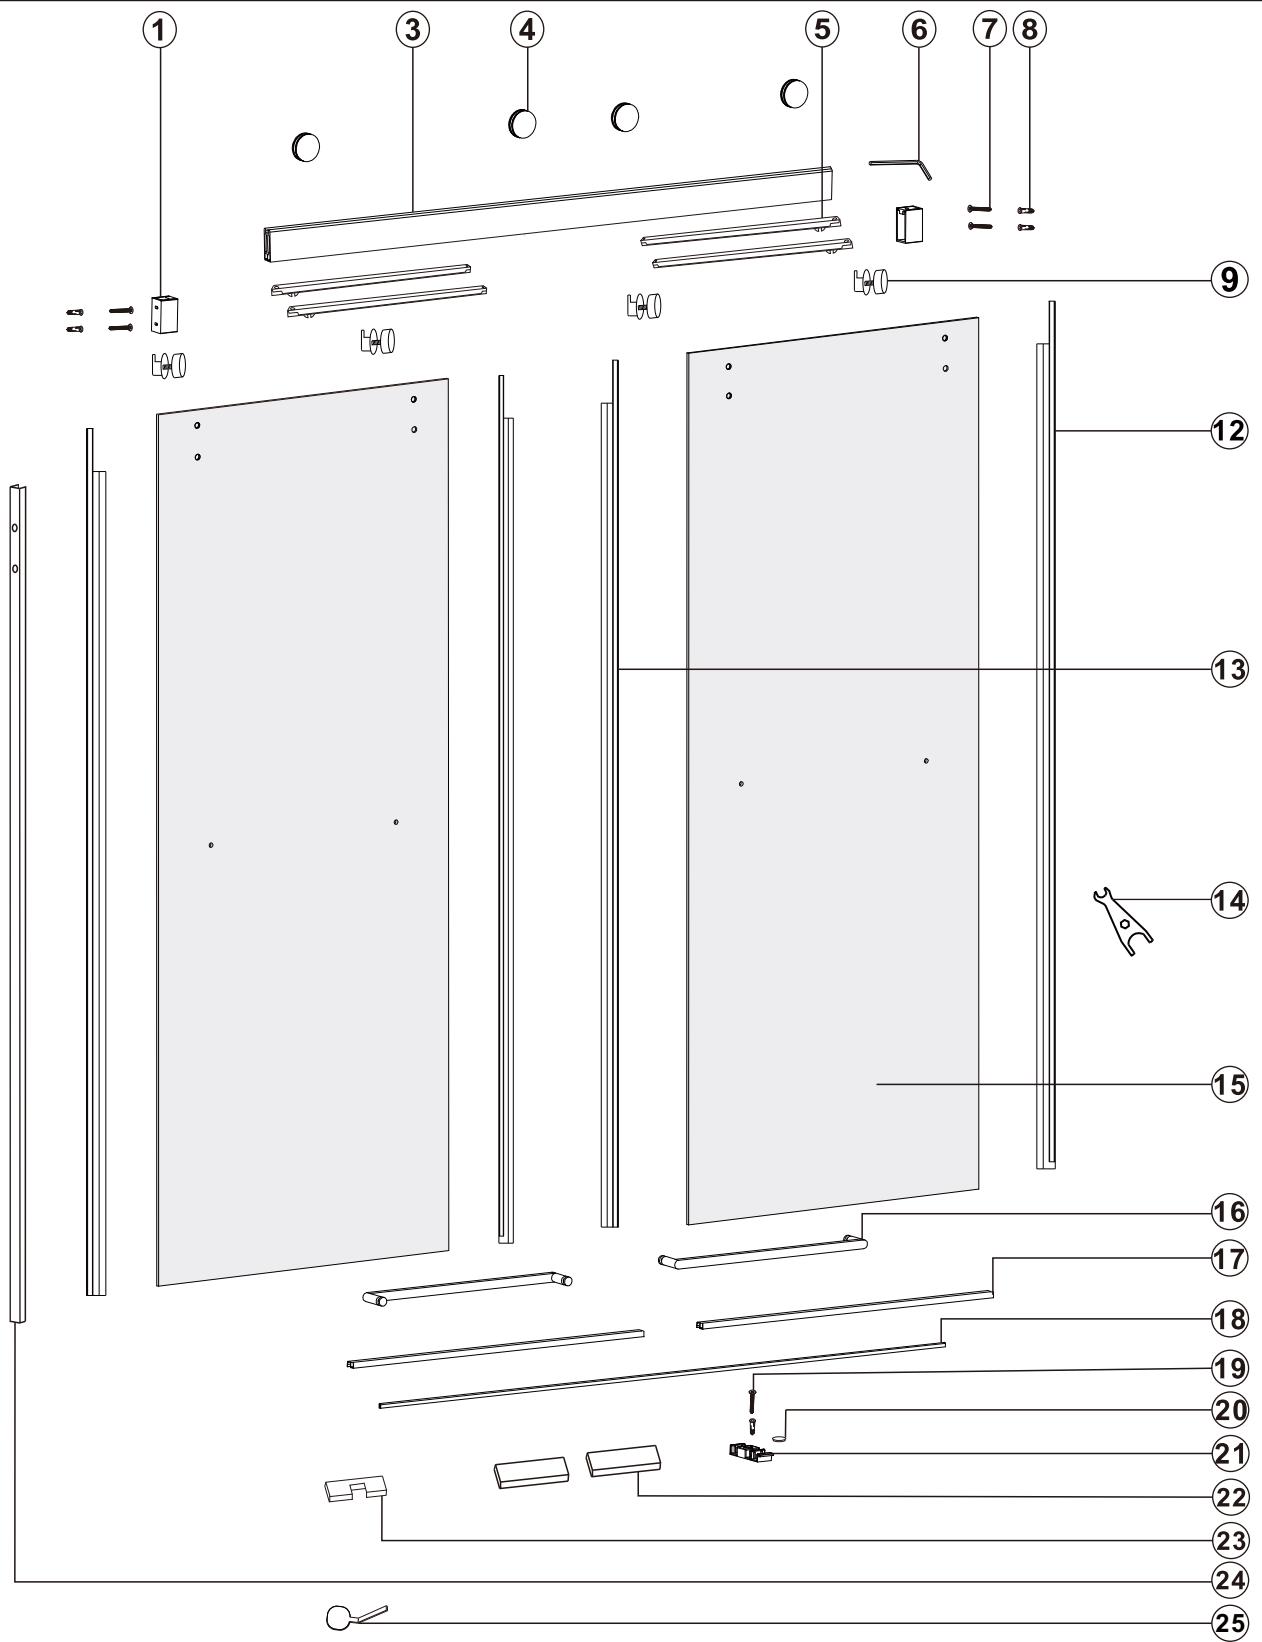


NO.	Picture	Qty												
1		2	3		1	4		4	5		4	6		1
7		4	8		5	9		4	12		2	13		2
14		1	15		2	16		2	17		2	18		1
19		1	20		1	21		1	22		2	23		1
24		1	25		1									

1

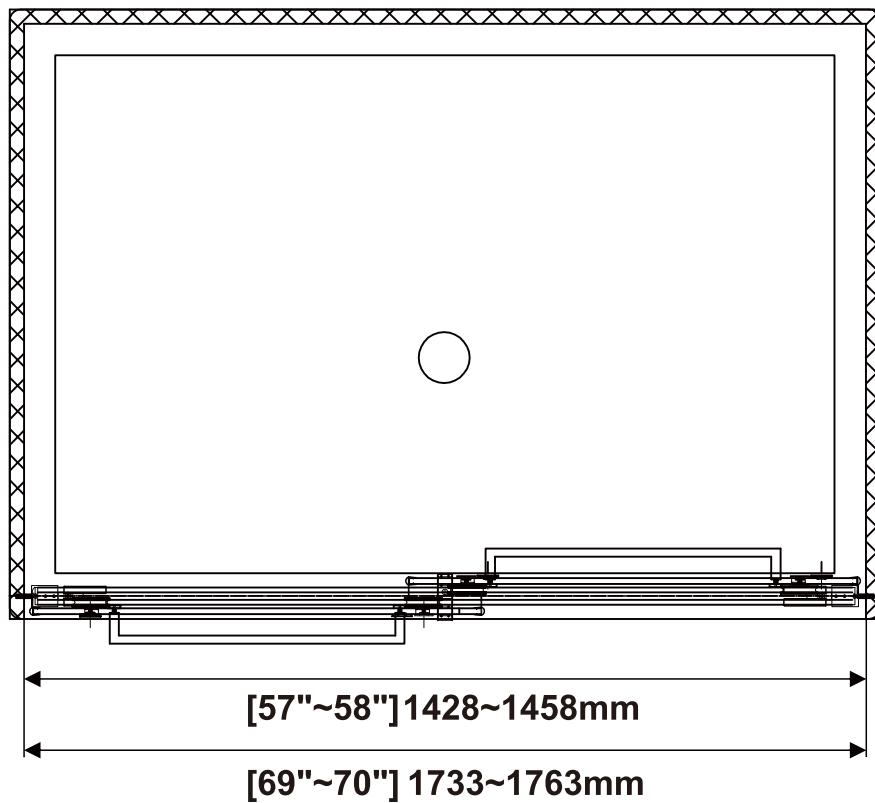


2

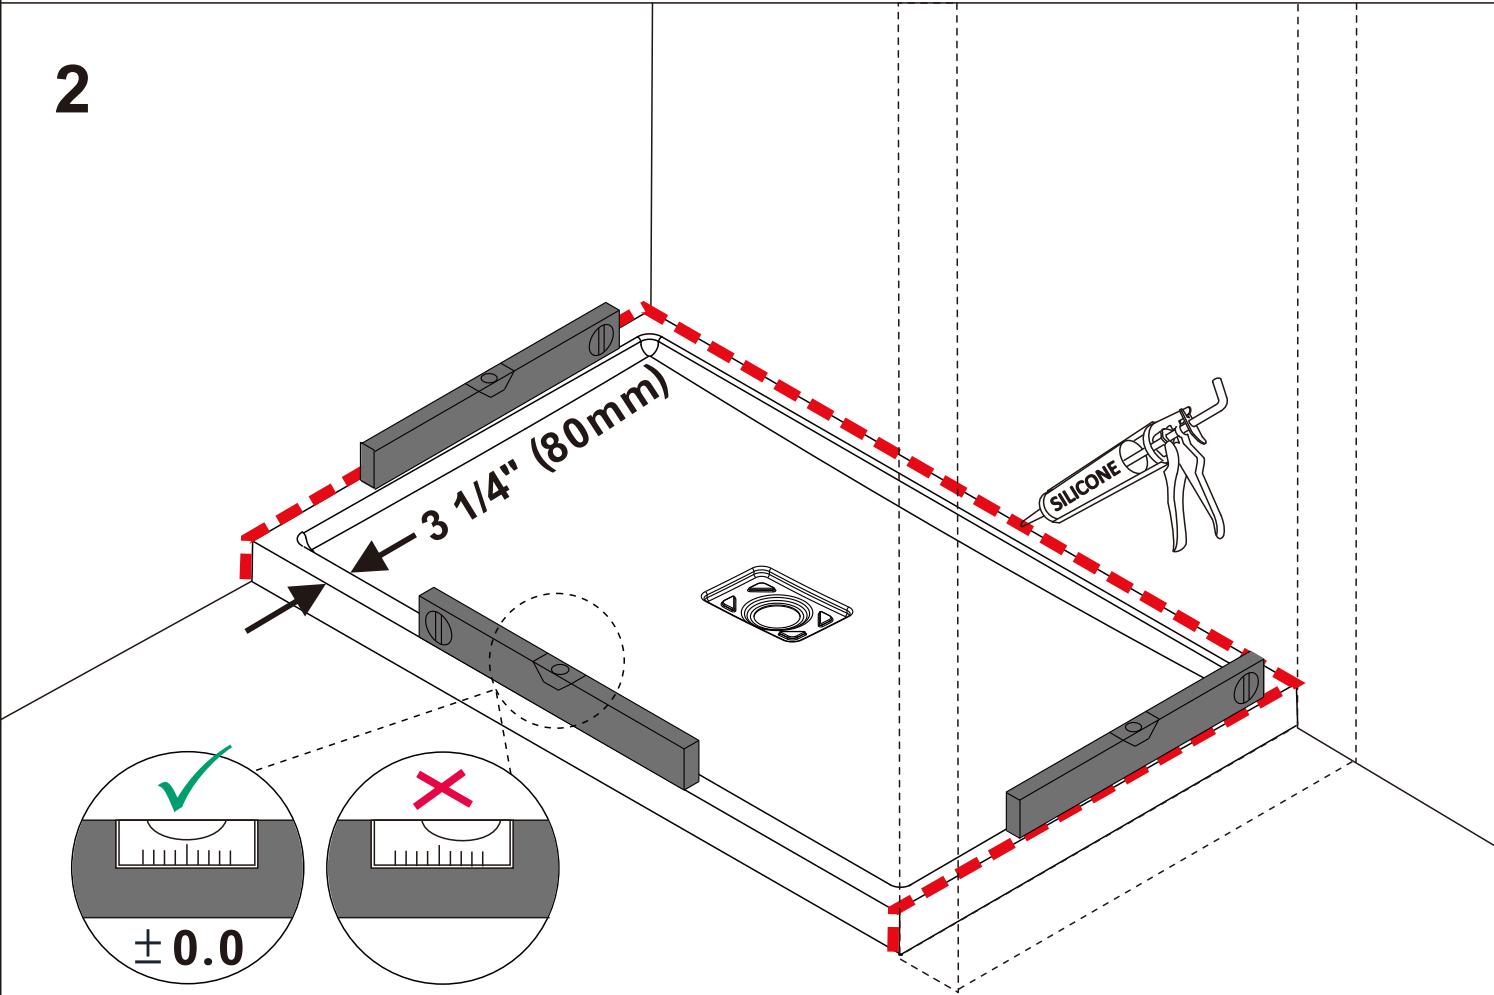





### 3

NO.	Picture	Qty
①		2
⑦		4 ST5*50
⑧		4
⑨		1
⑩		1

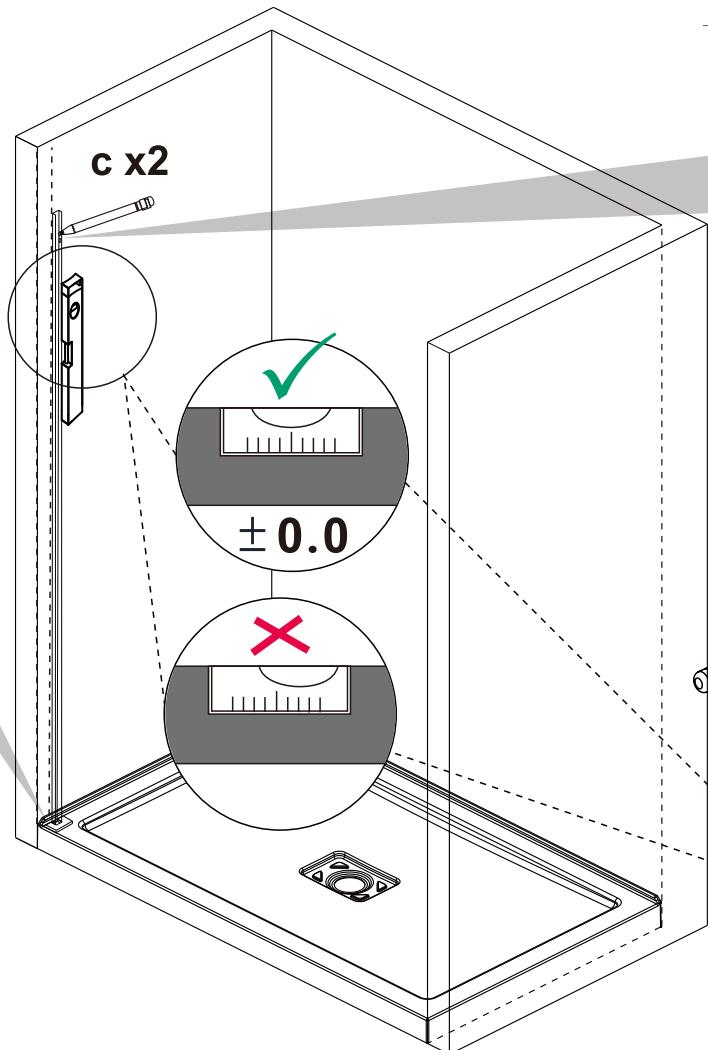






### 4

NO.	Picture	Qty
③		1

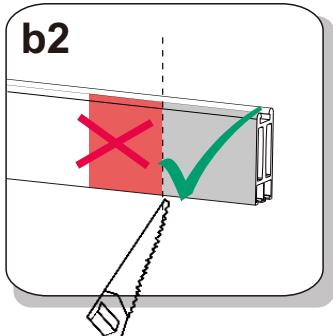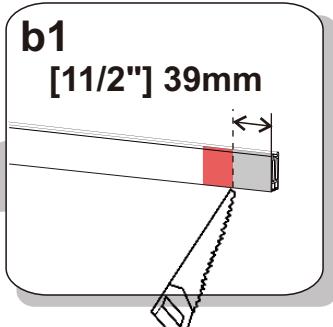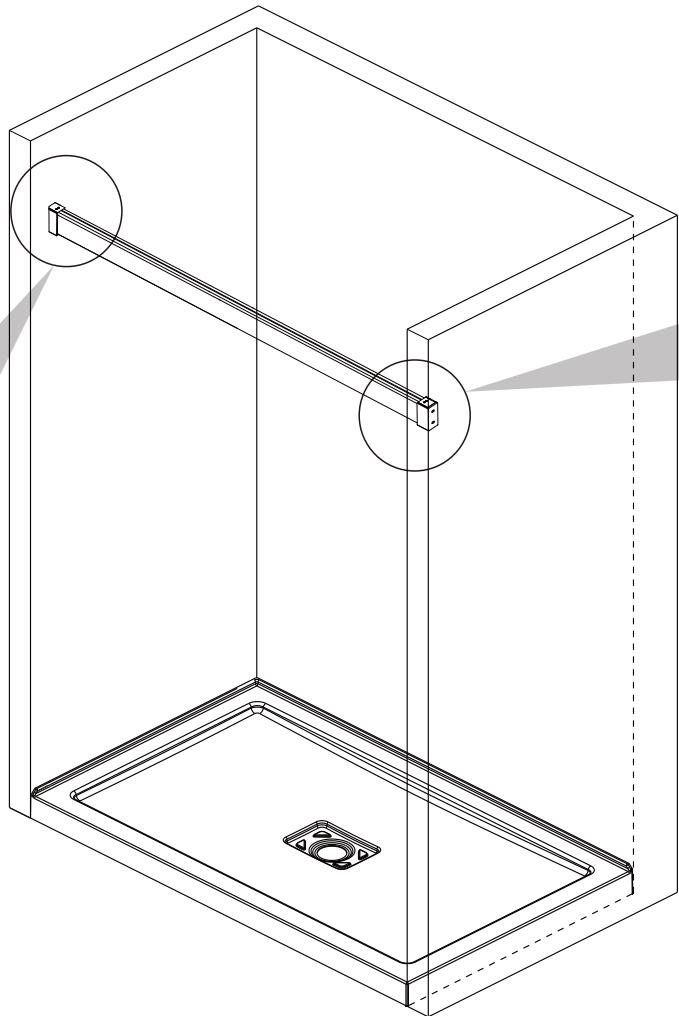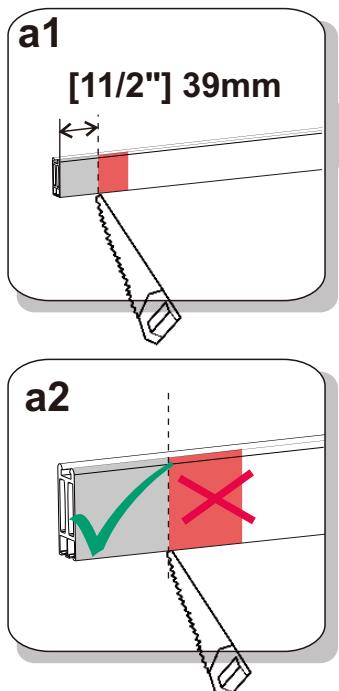


## 5

NO.	Picture	Qty
⑤		4
⑥		1

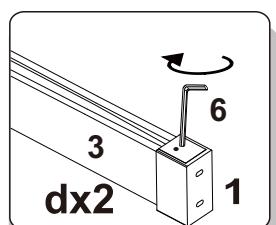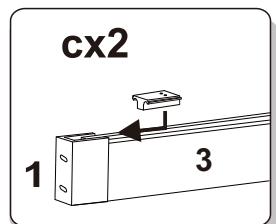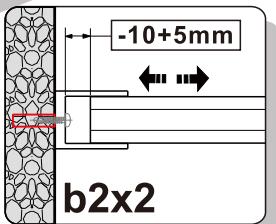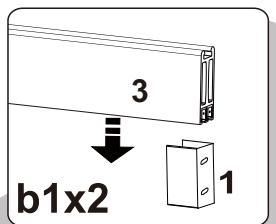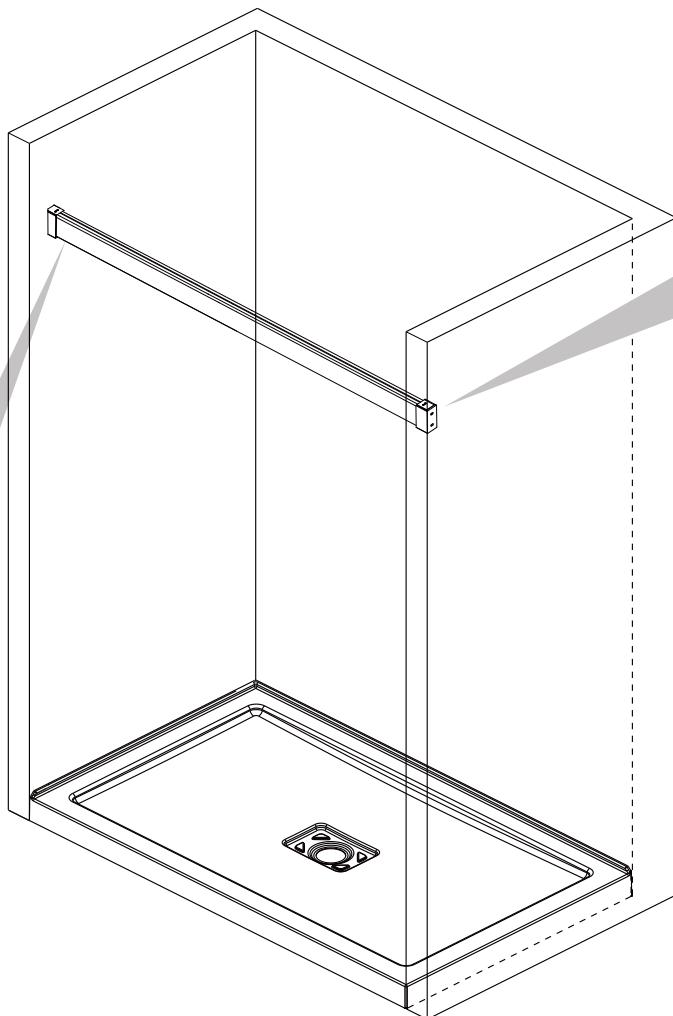


## 6


NO.	Picture	Qty
⑯		1

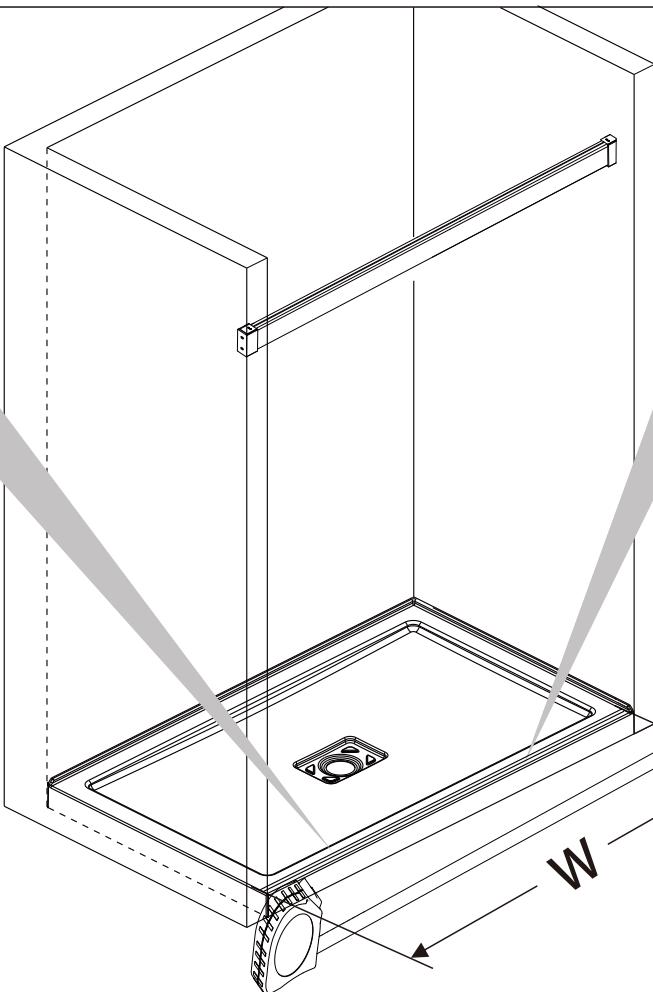


b

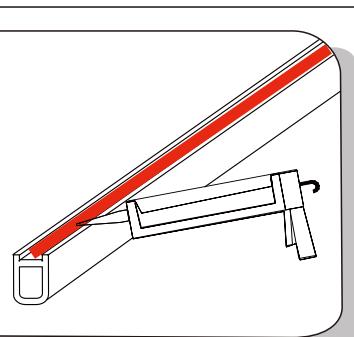


a1

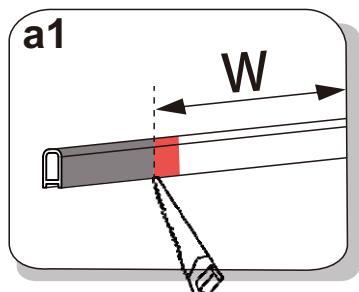

a2








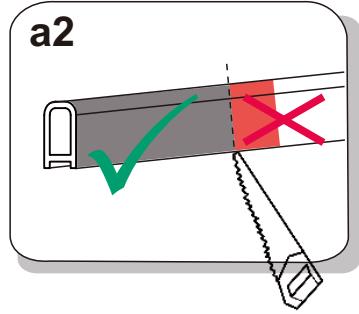


c

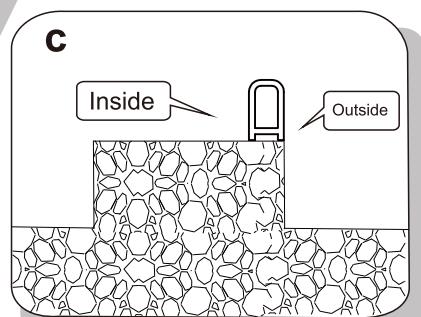


**7**

NO.	Picture	Qty
⑧		1
⑯	 ST4*40	1
⑳		1
㉑		1

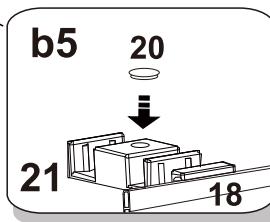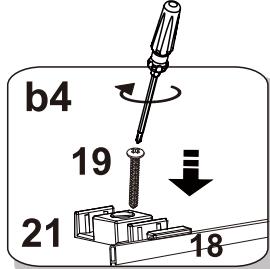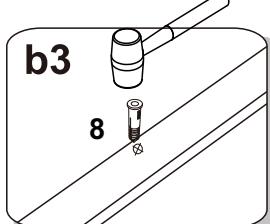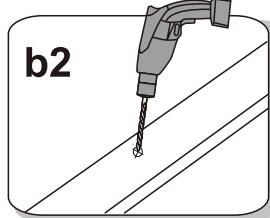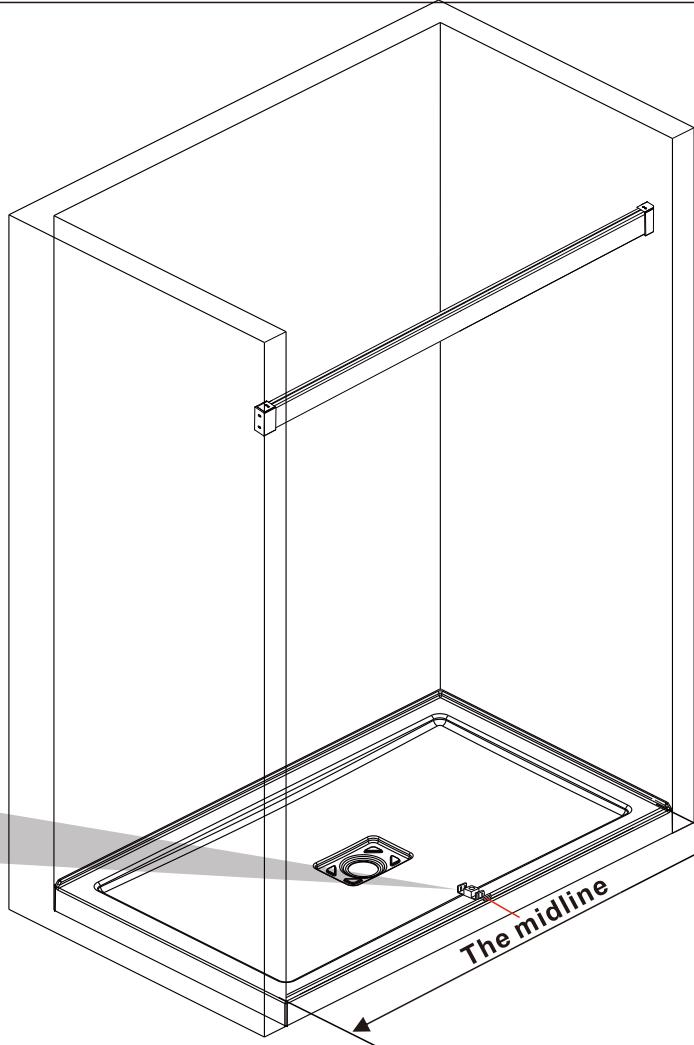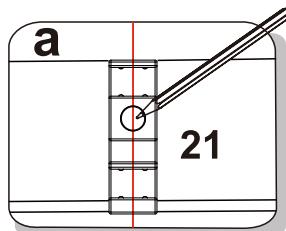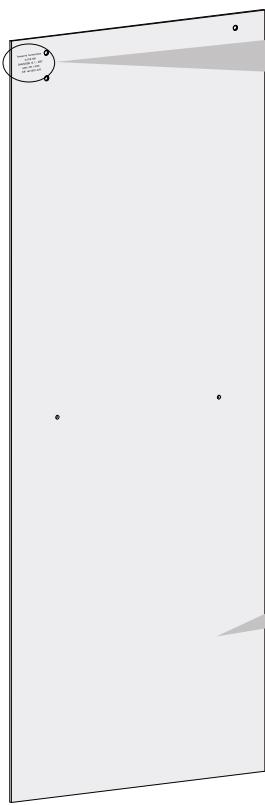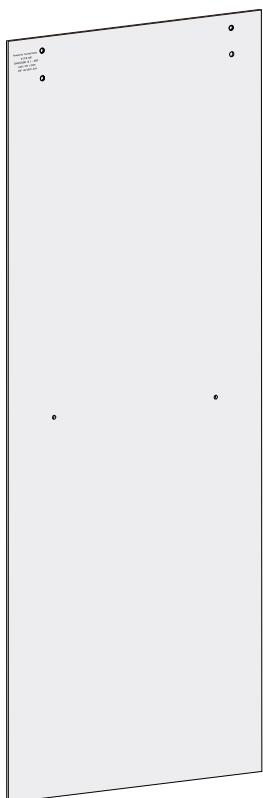**8**

Tempered Safety Glass  
16 CFR 1201  
CAN/CGSB 12.1 - 2017  
ANSI Z97.1-2015  
3/8" UA SGCC-6119







Inside

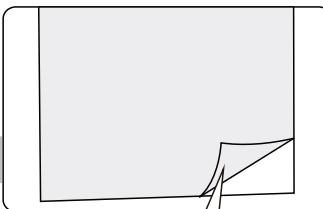

Outside






## 9

NO.	Picture	Qty
④		2
⑨		2
⑯		1
⑮		1
⑰		1

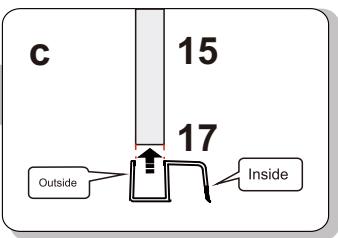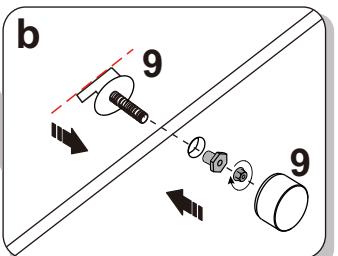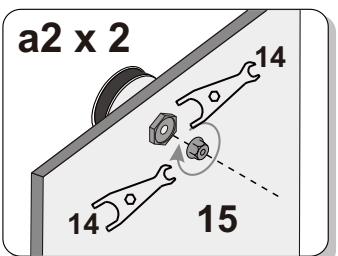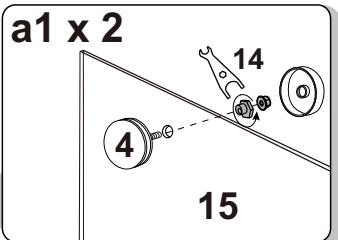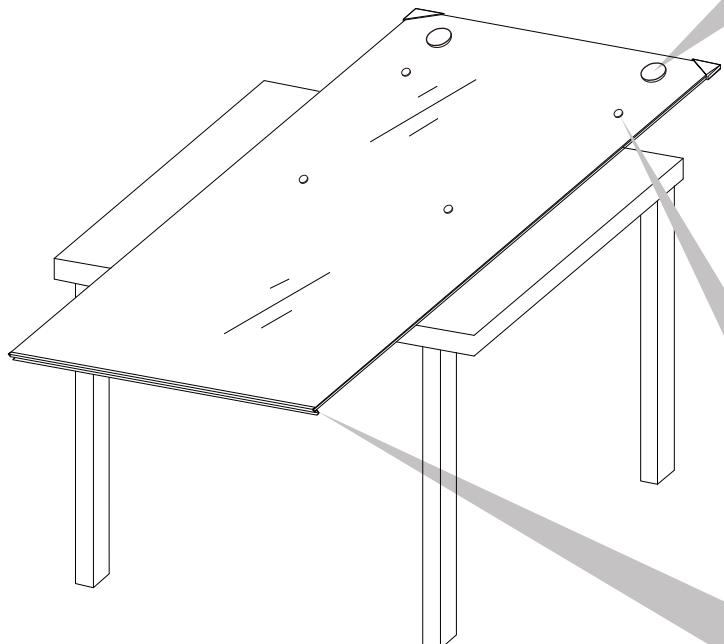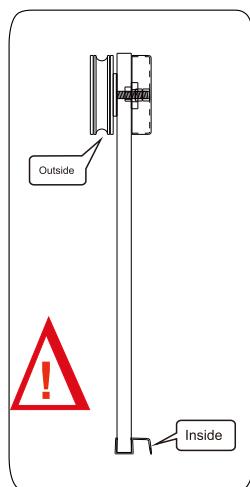







## 10

NO.	Picture	Qty
⑳		2

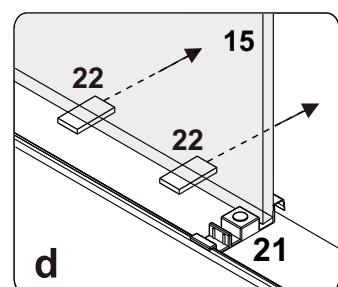
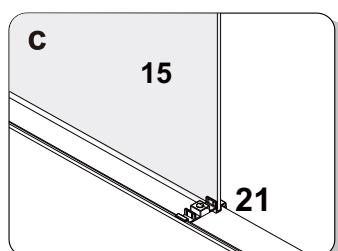
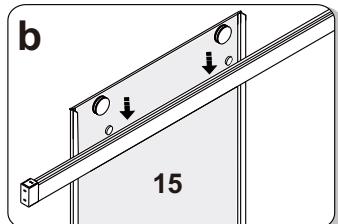
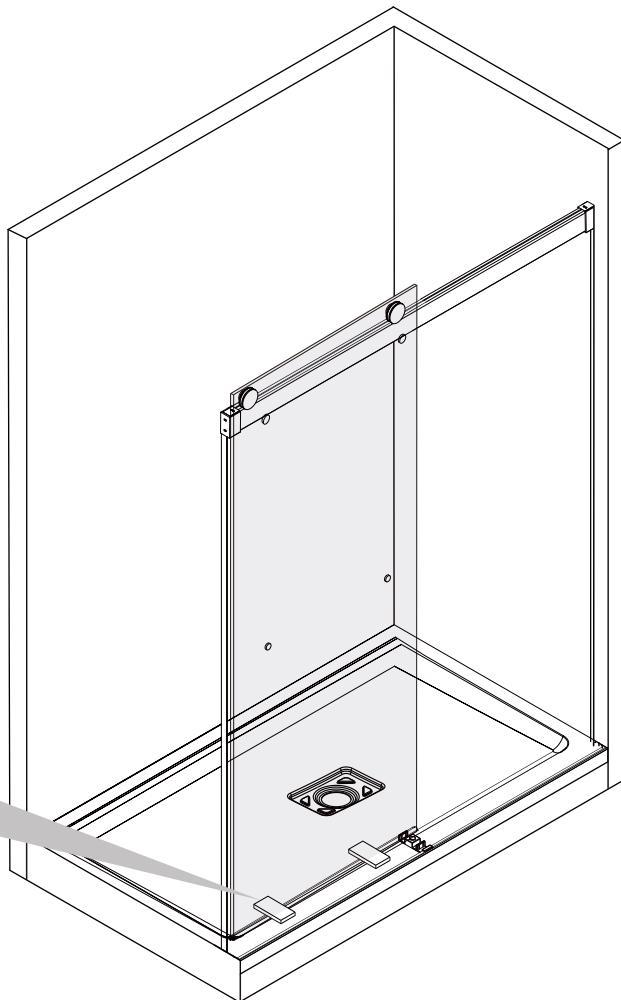
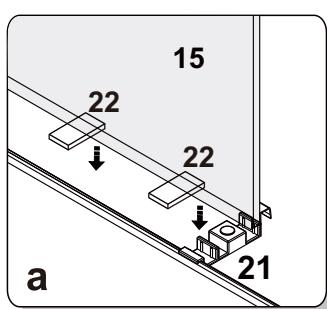


# 11

NO.	Picture	Qty
④		2
⑨		2
⑯		1
⑰		1

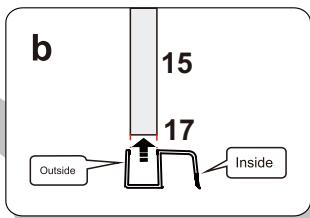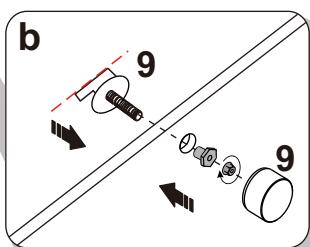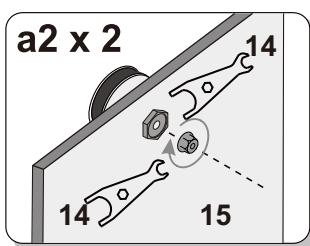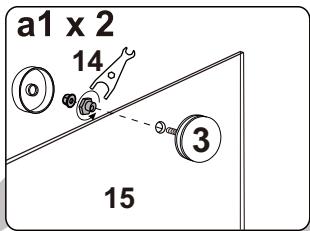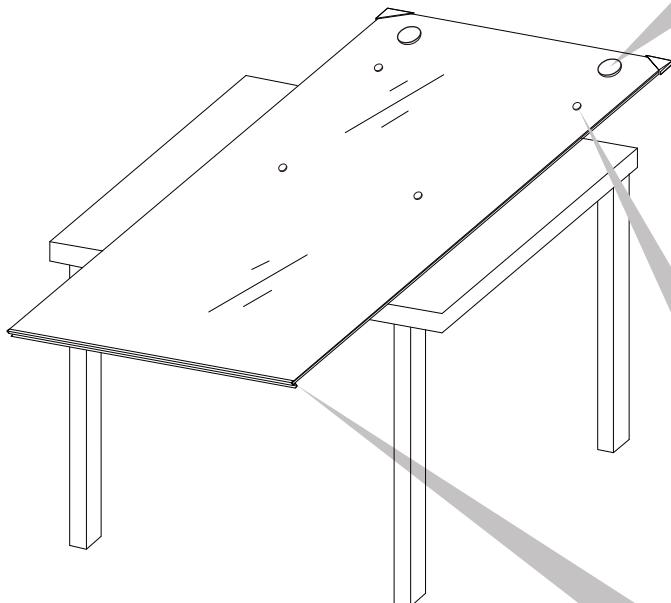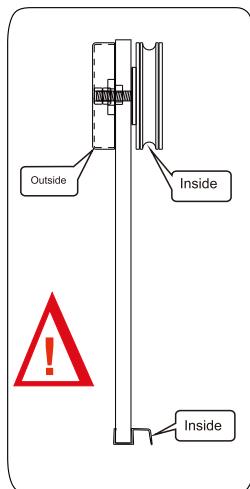


# 12


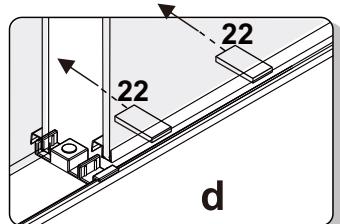
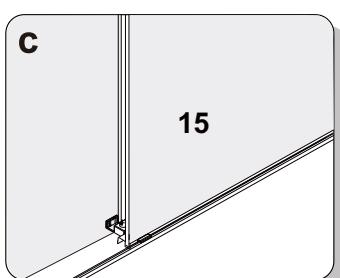
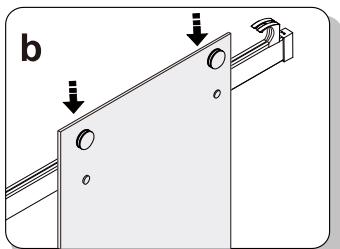
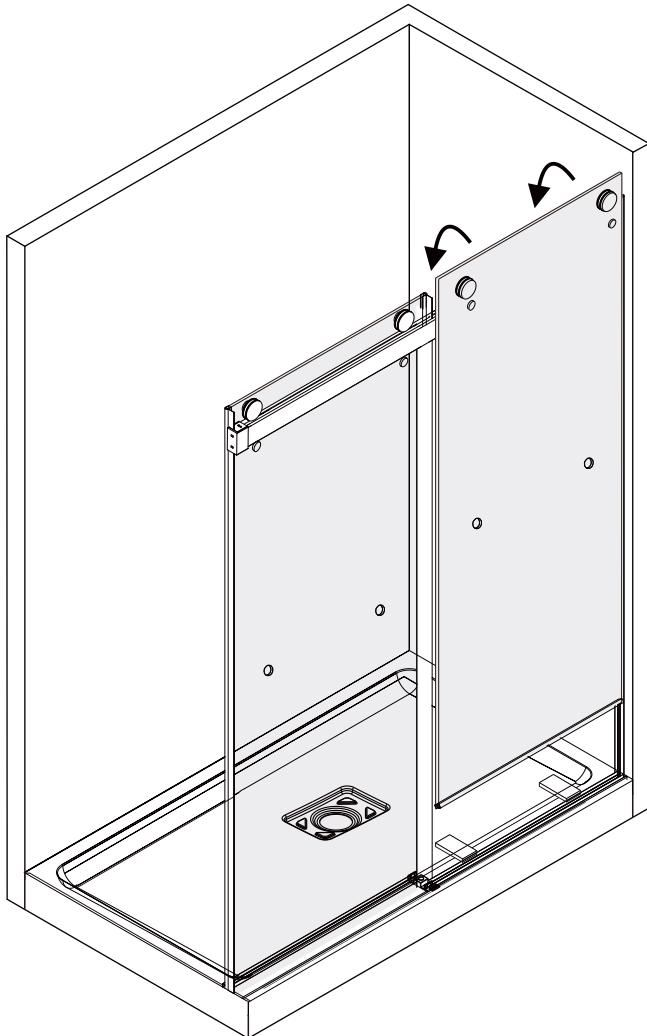
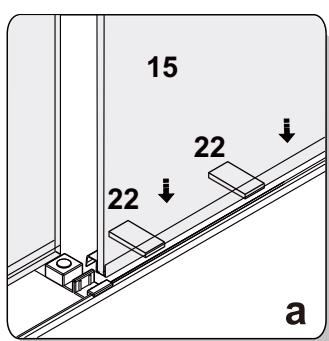


# 13

NO.	Picture	Qty
⑫		2
⑬		2

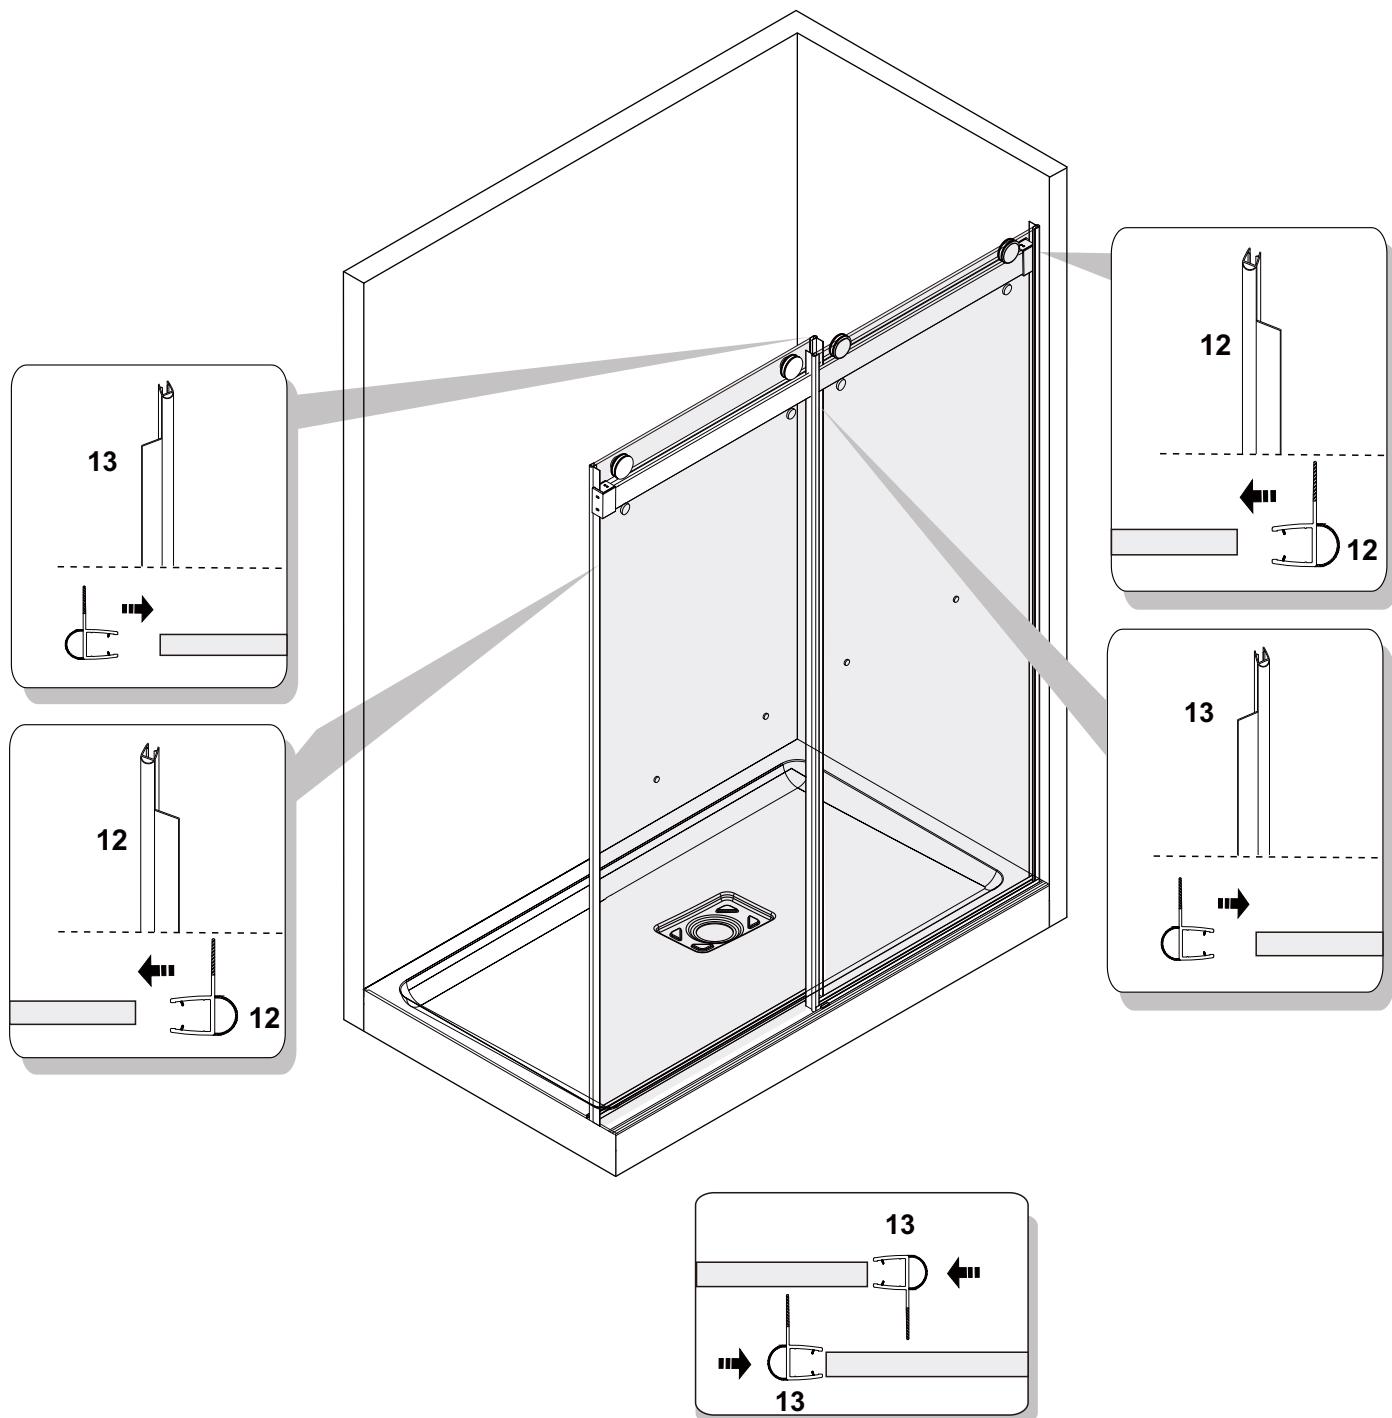


**14**

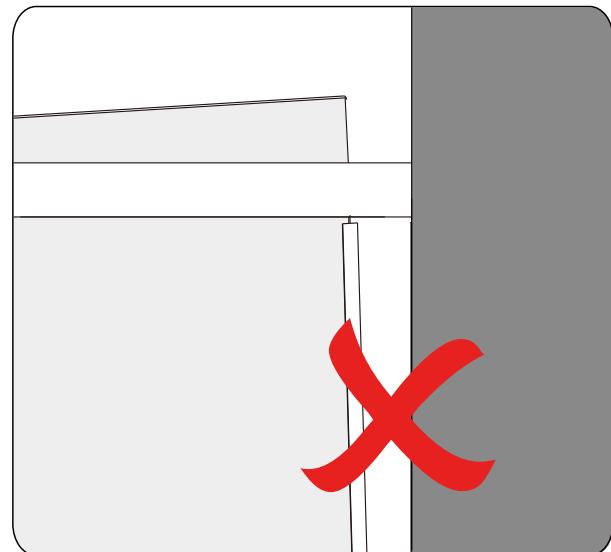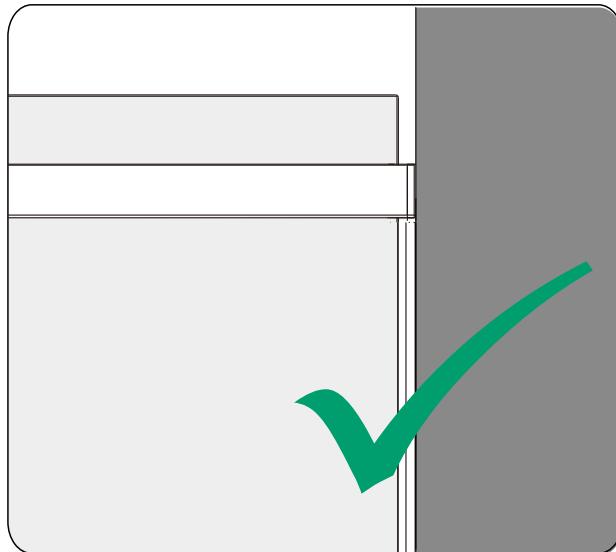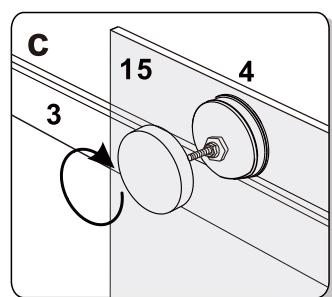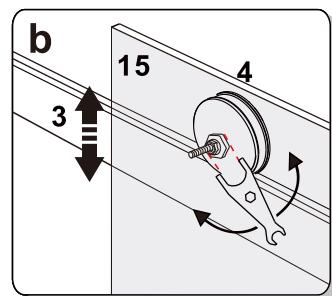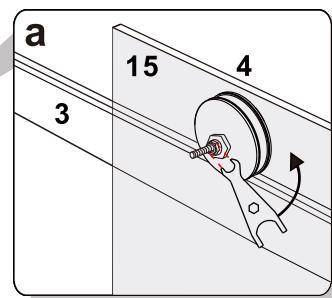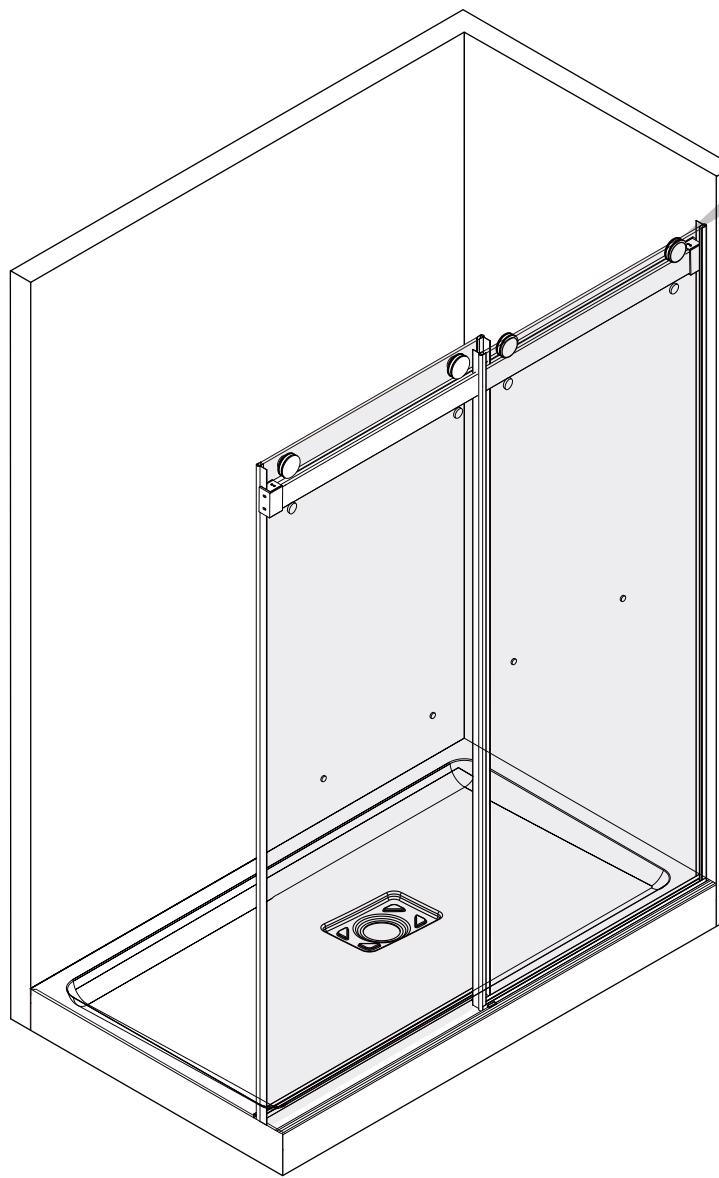


**15**


NO.	Picture	Qty
⑯		2

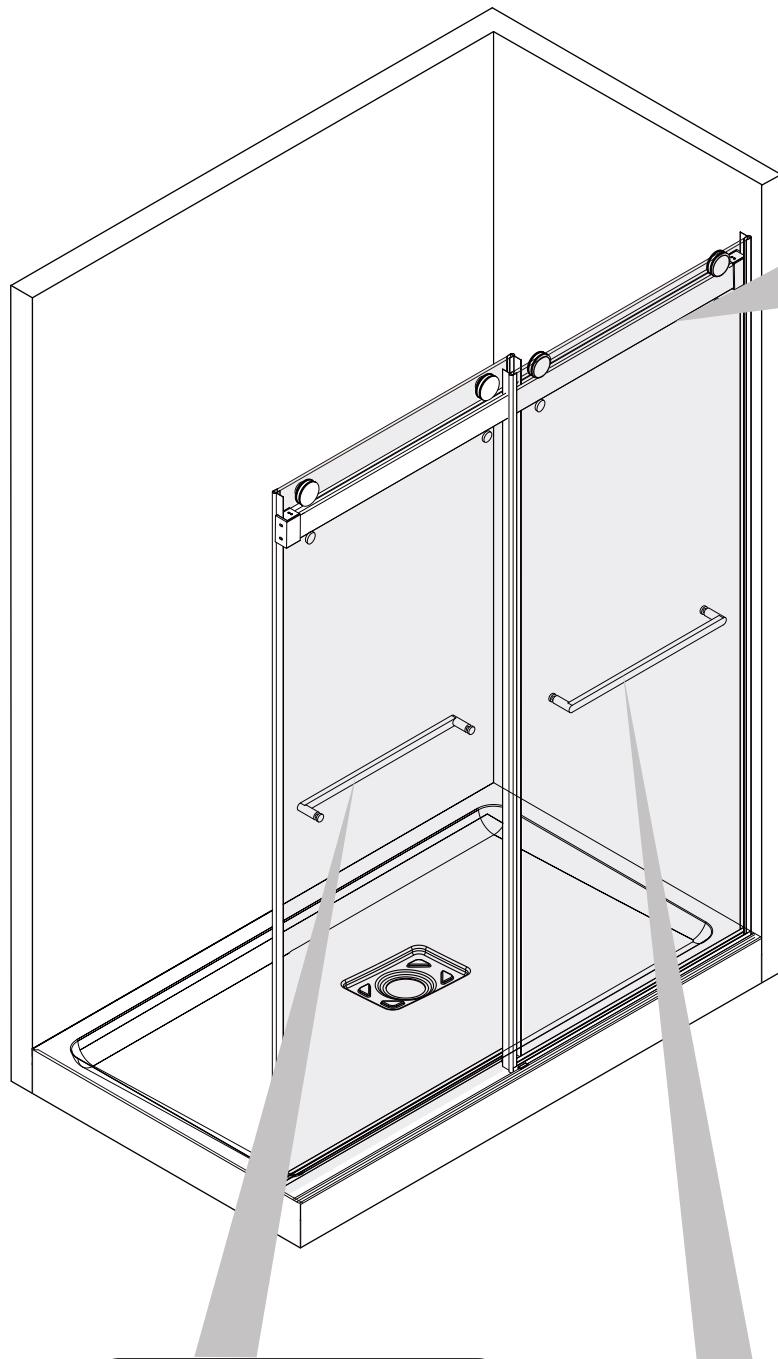


**b1x4**

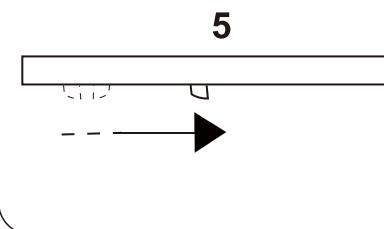

**b2x4**

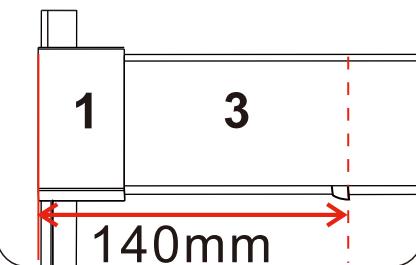

**b3x4**

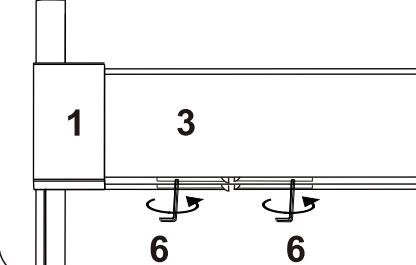

**16**


**15**

**15**


**16**

# 16







NO.	Picture	Qty
25		1

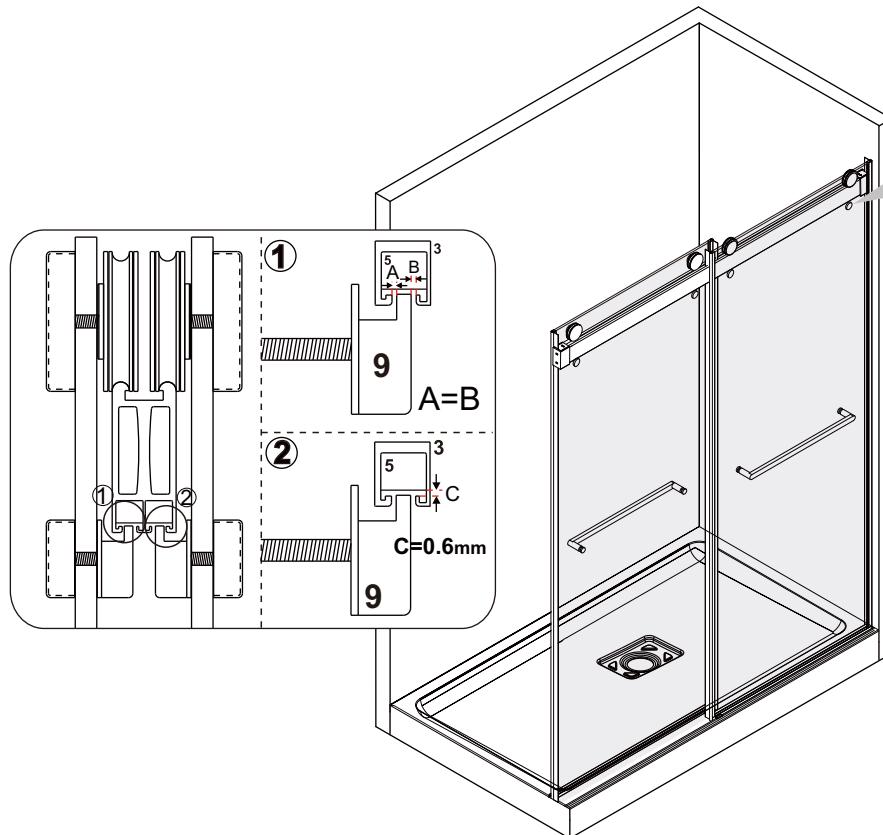


a1 x4

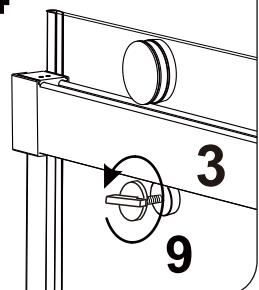

a2 x4

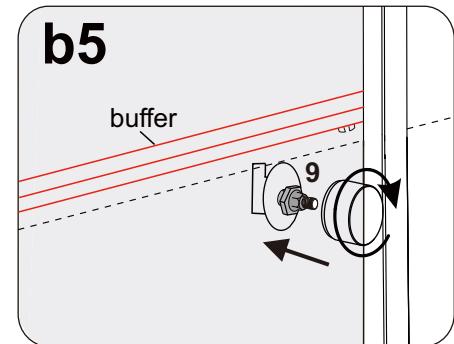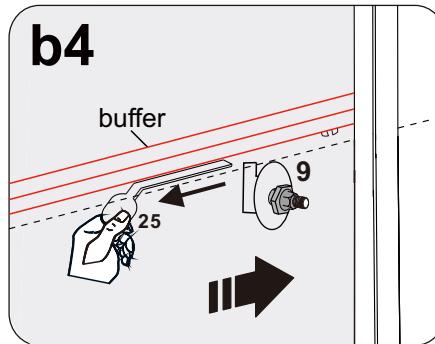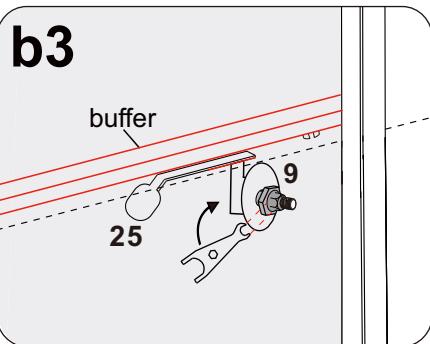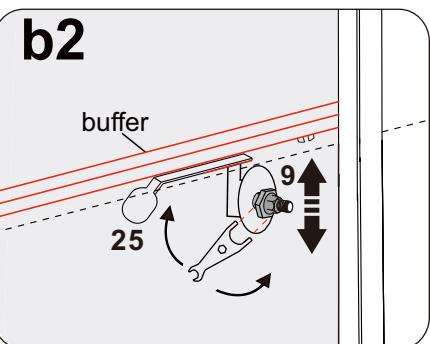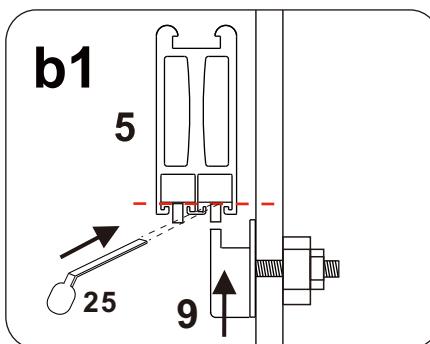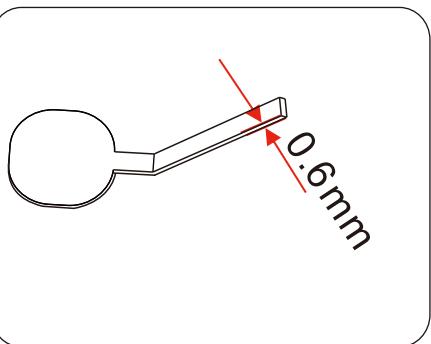

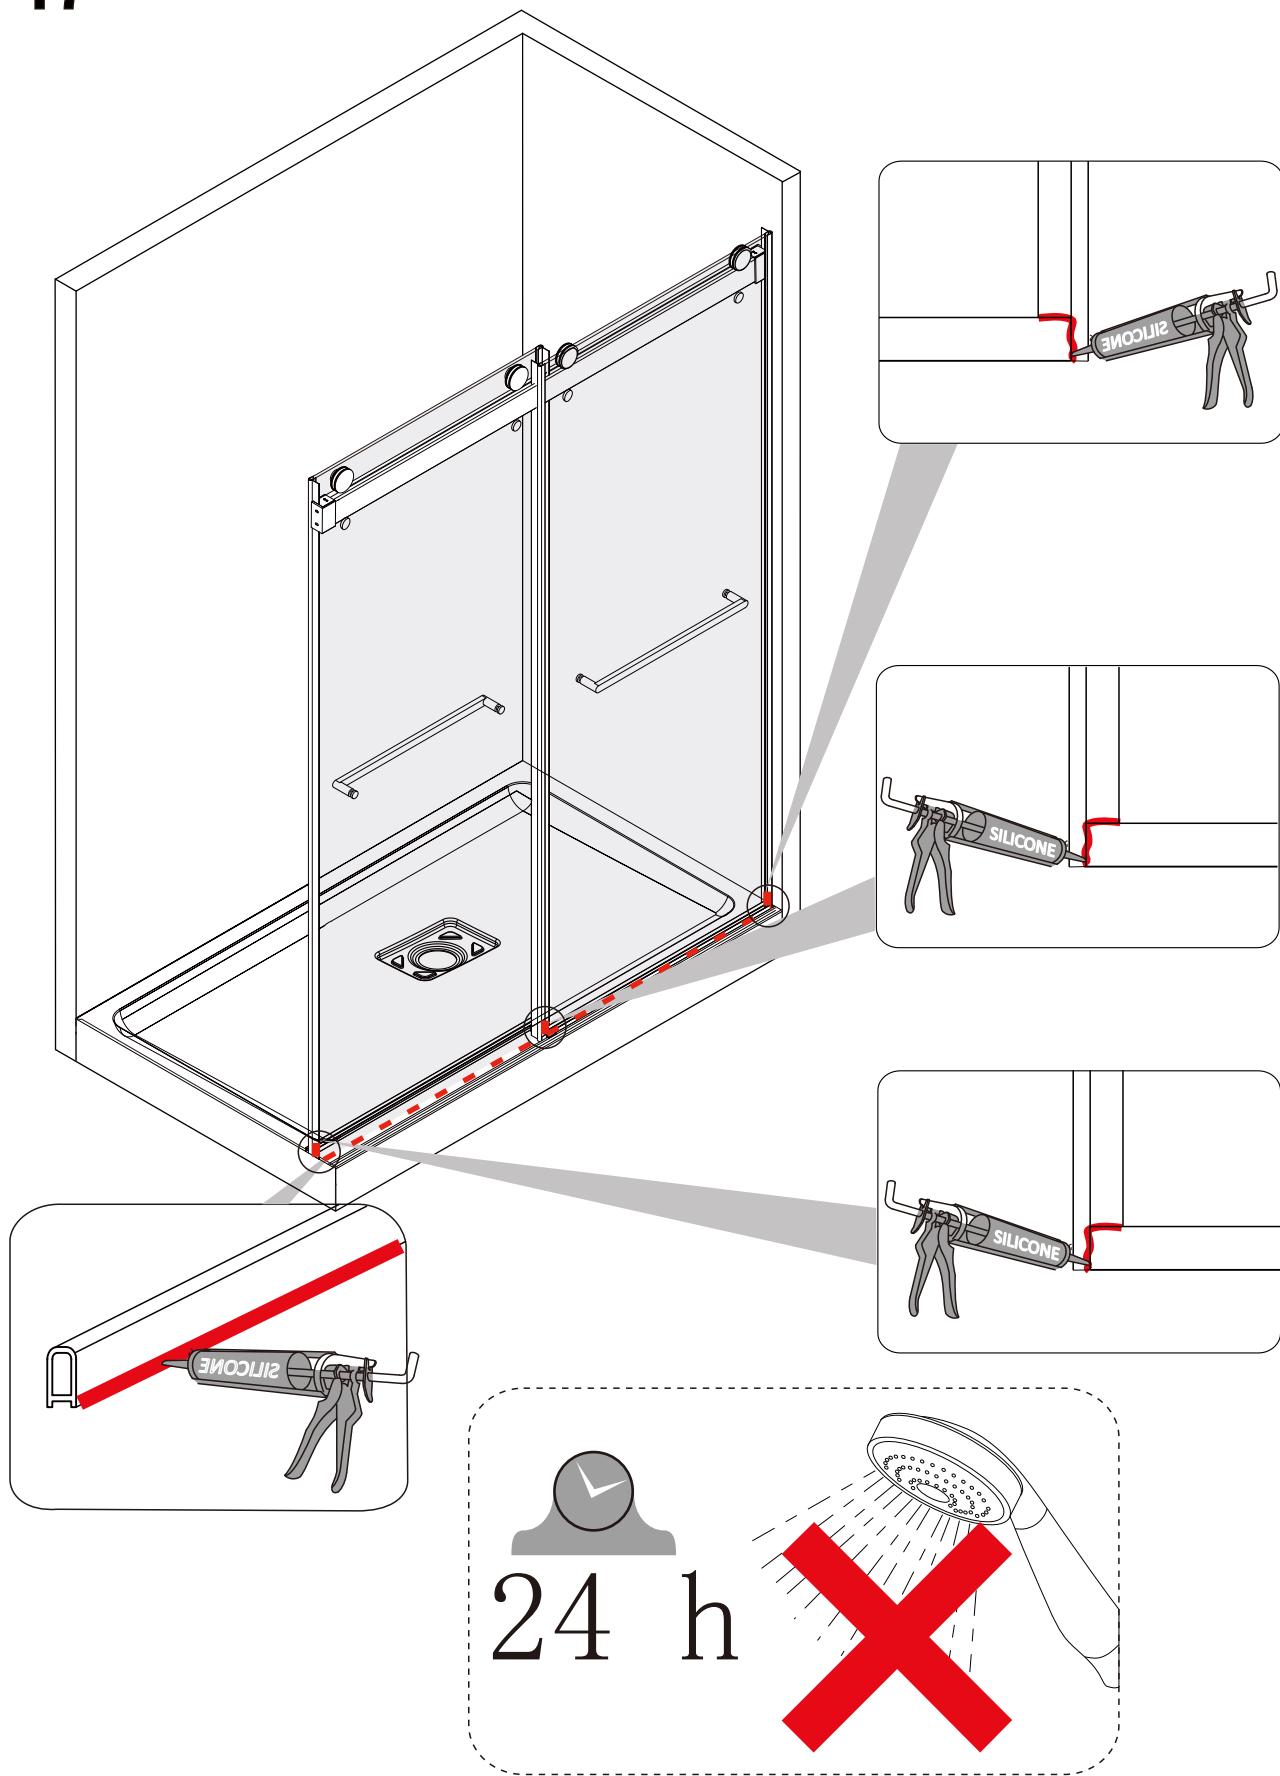

Do not use the shower enclosure for at least 24 hours  
in order to allow the silicone sealant to cure fully.