
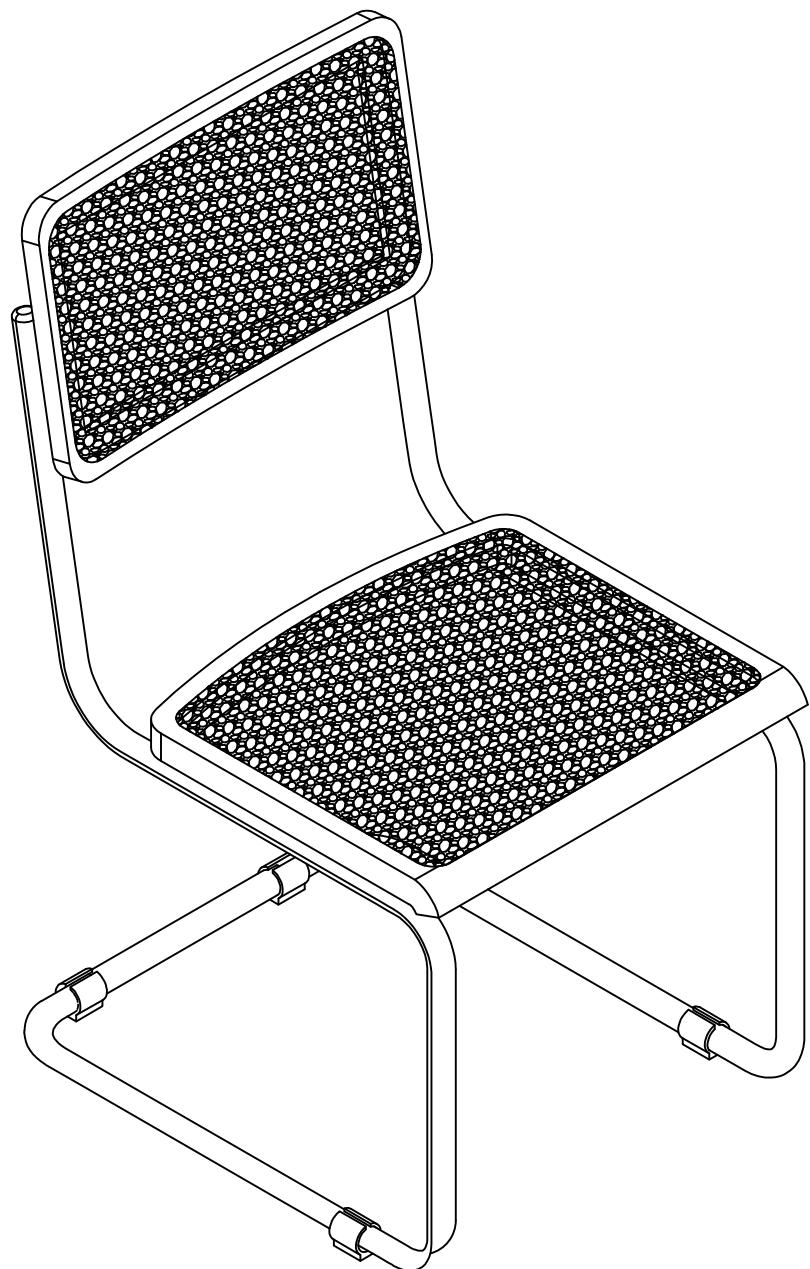
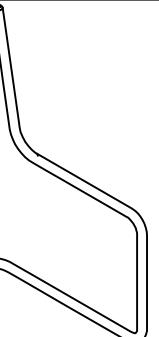
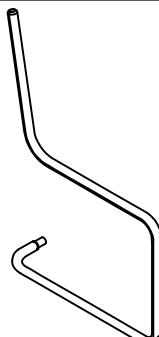
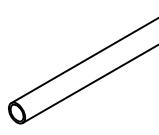


# Assembly Guide


## WB2201J Chairs

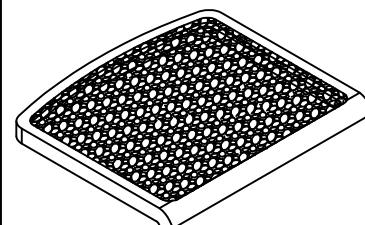

# PARTS LIST

1	2	3	4
			
left foot=1	right foot=1	connecting pipe=1	seat panel=1



  

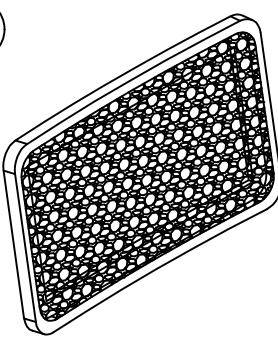5	
	

  
| backrest=1 |  |

**Tips:** Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us. Assemble this item on a soft surface, such as carpet to protect the finish.


# HARDWARE LIST

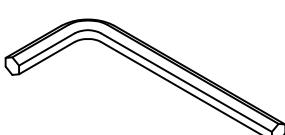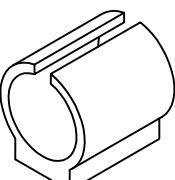A	B	C	D	
				


  

M6*15 hexagon socket screws=4	M4 hexagonal key=1	M6*38 hexagon socket screws=8	plastic foot cover=4	
-------------------------------	--------------------	-------------------------------	----------------------	--

phillips head screw driver required  
for assemble---not include

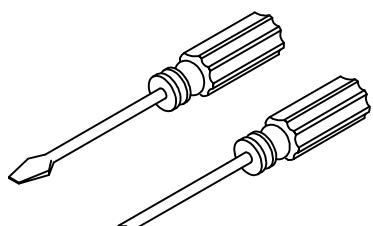


## Step 1

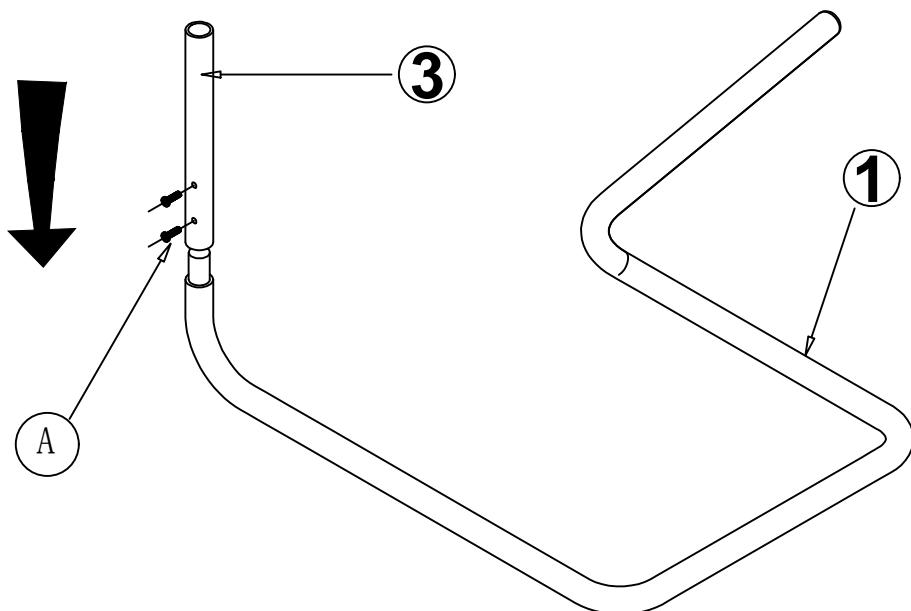

Connecting pipe and left foot installation:

Insert the ③connecting tube into the ①left foot and fix it with two pcs (A) M6\*15 hexagon socket screws.


## Step 2

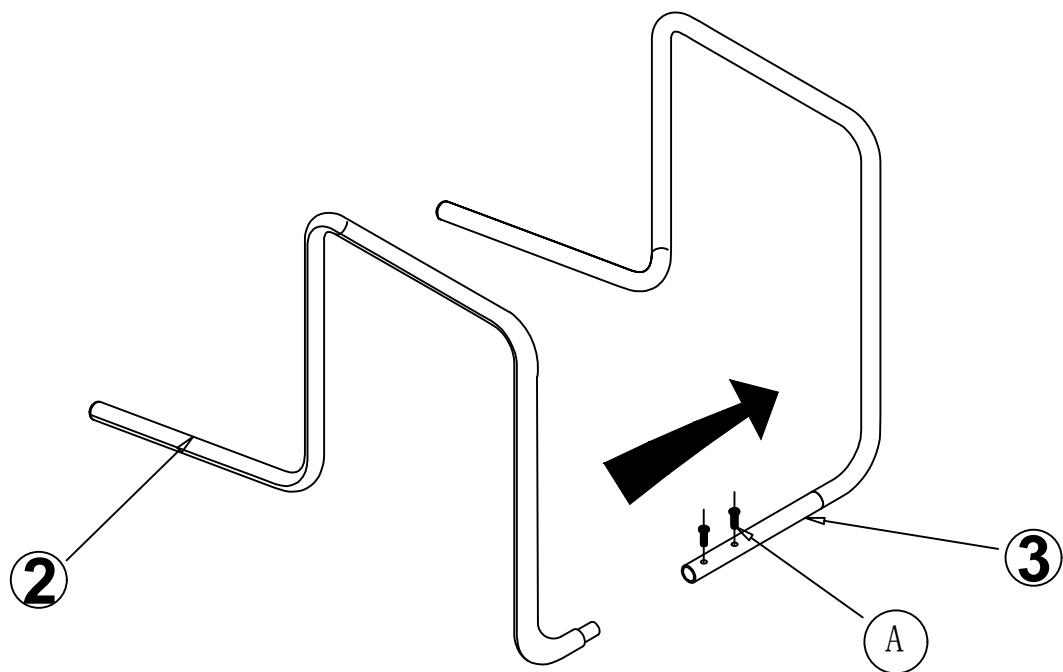

Connecting pipe and right foot installation:


Insert the ③connecting tube into the ②right foot and fix it with two pcs (A) M6\*15 hexagon socket screws.

### Step 3

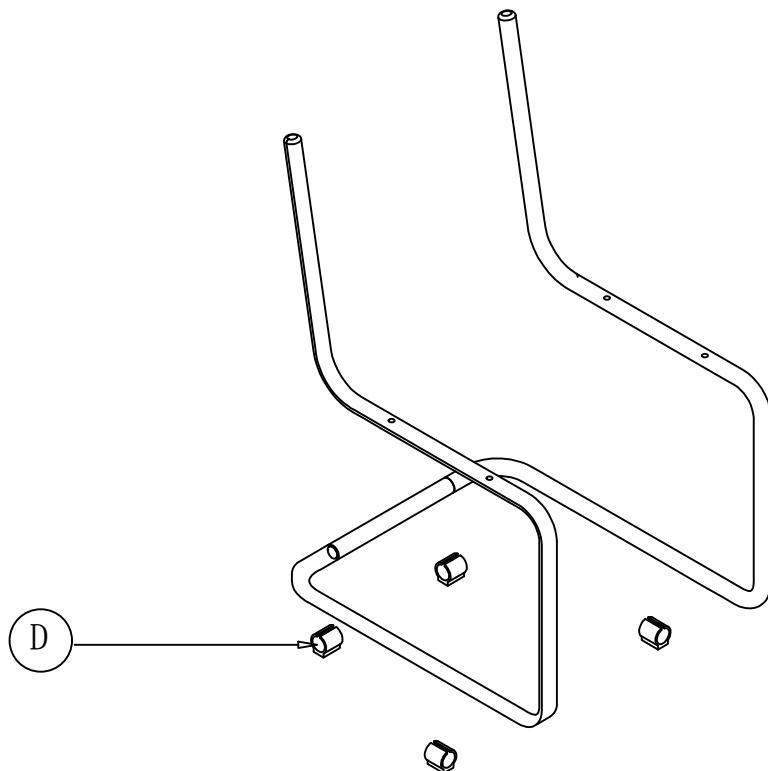

Install 4 pcs (D) on the pipe, Make sure that part (D) align with the holes under the pipe.


### Step 4

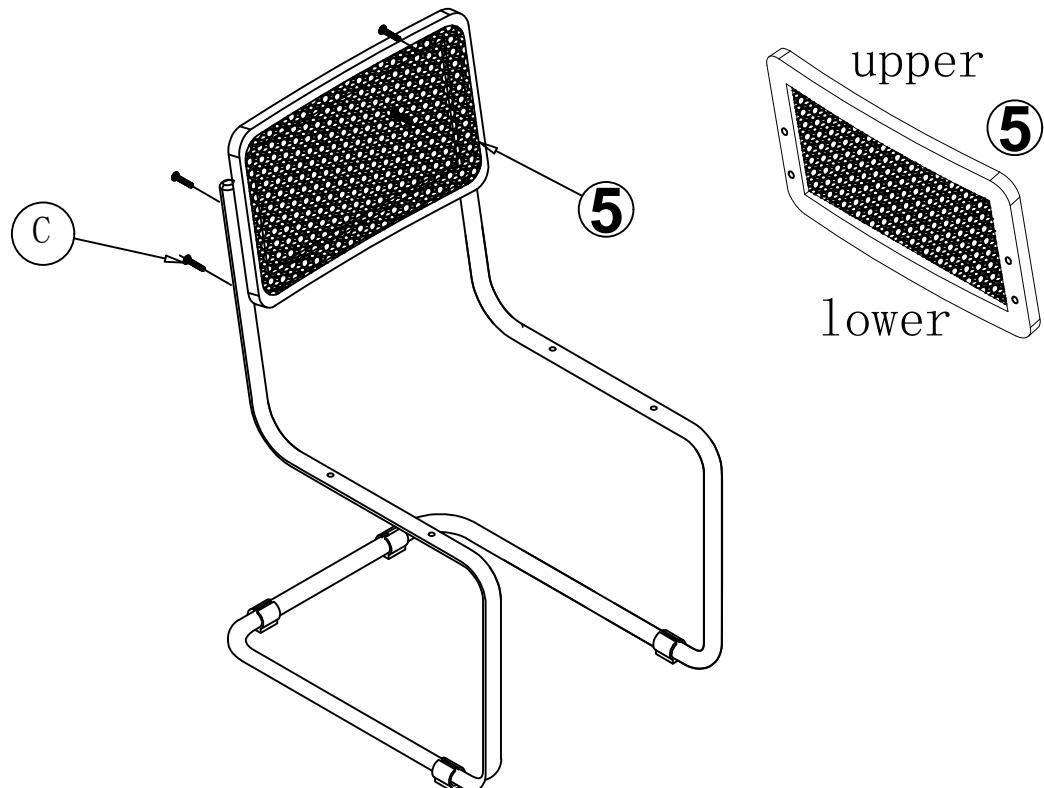

Backrest installation: Use 4 pcs (C) to fix, do not tighten up the screws first. Note: The hole on the short side is downward

## Step 5

Fix the seat panel with 4 pcs(C), do not tighten up the screws first. After all four feet are balanced, tighten up the screws of backrest in order, and then tighten up the seat panel.

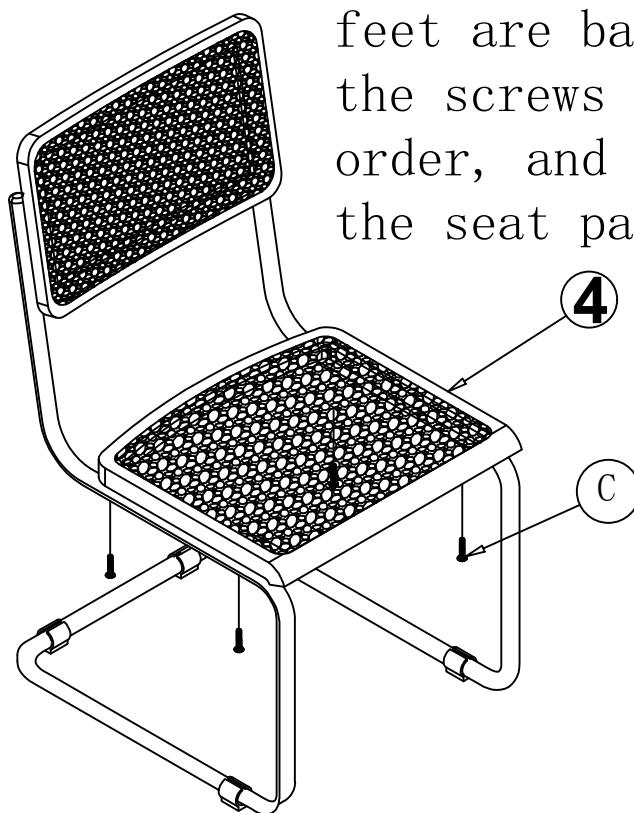

Finished

