



Assembly Instruction

CF 9270-B
(4'6" FULL)


Step 1

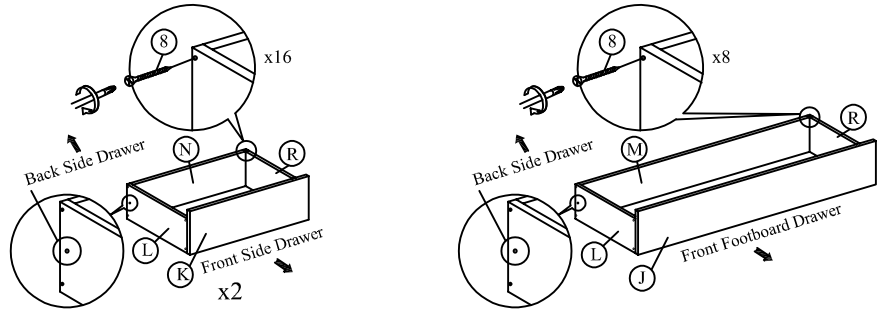

Step 2

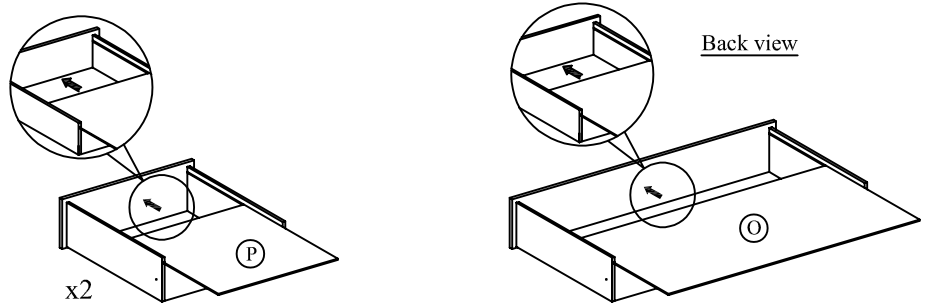


Step 3

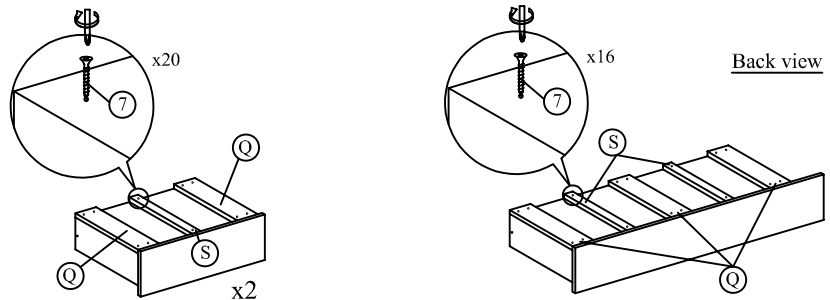


HARDWARE

1	JCBC M6 x 60	3pcs
2	JCBC M6 x 50	12pcs
3	Allen Key 100mm	1pc
4	Allen Key 70mm	1pc
5	CSK Screw 16mm	56pcs
6	CSK Screw 28mm	8pcs
7	CSK Screw 32mm	56pcs
8	CSK Screw 50mm	24pcs
9	JCBB M8 x 20	4pcs
10	Small Adjuster	3pcs
11	Wood Dowel 20mm	8pcs
12	Metal Stopper	6pcs
13	Roller	14pcs
14	Spring Washers	10pcs
15	Flat Washers	10pcs

Step 4

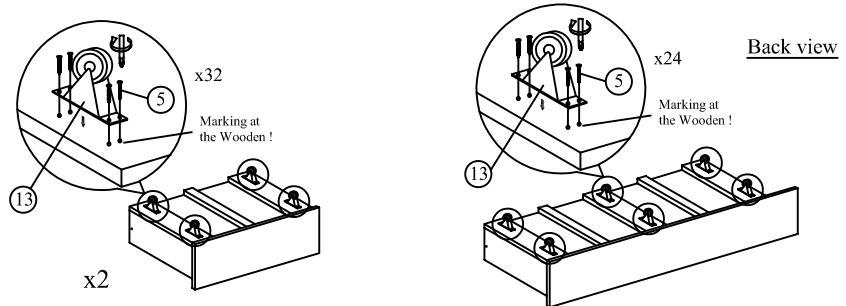

Step 5

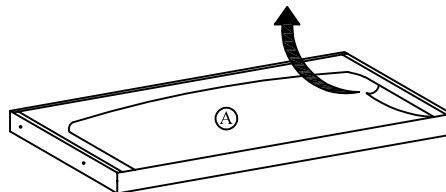


BACK VIEW


Attention: Zip the black non-woven fabric after take out the parts !!

Assembly Instruction


Step 6

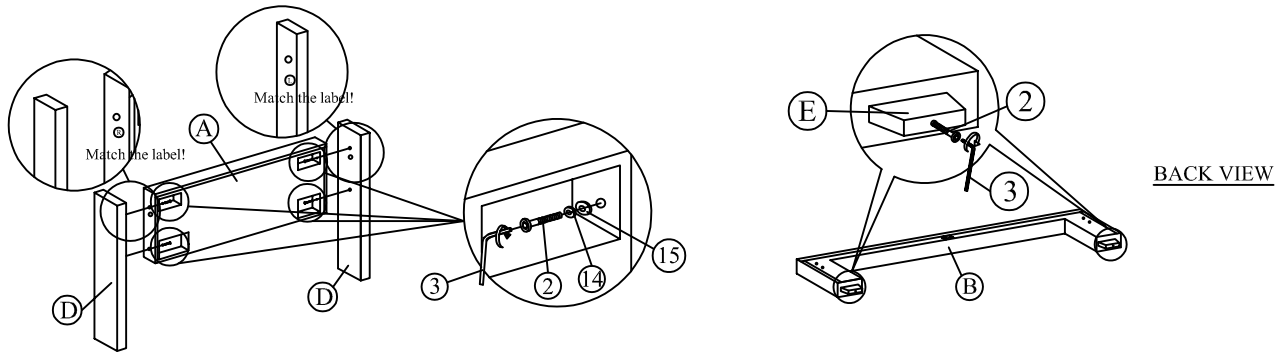


Step 7

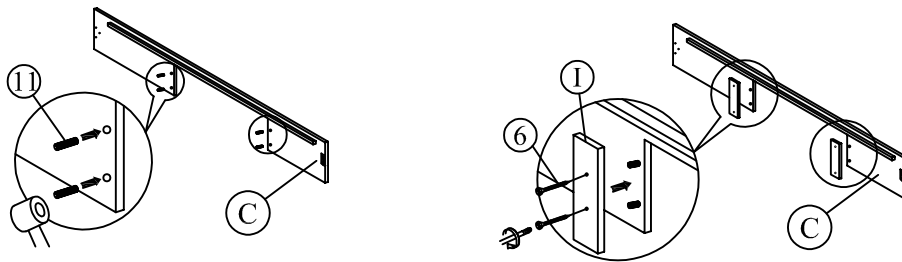

Step 8

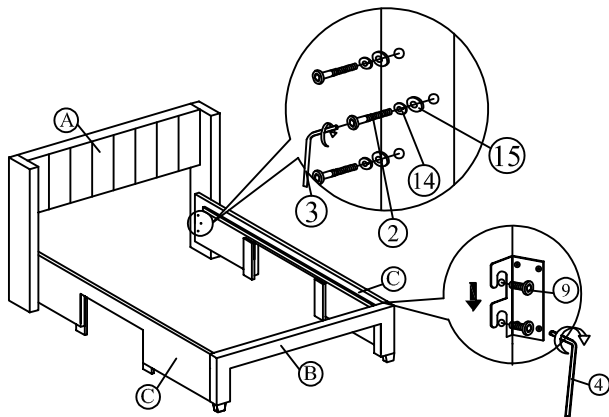

Step 9

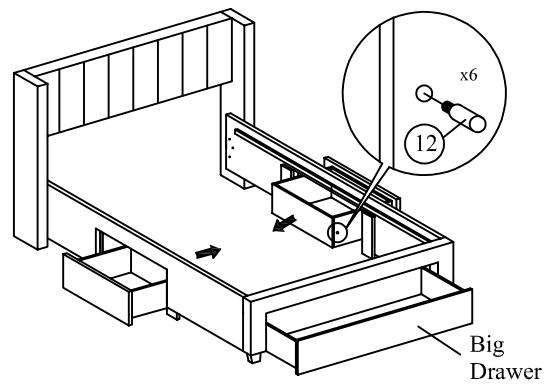

Step 10

