

NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION









- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 15 minutes.
- *Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.

Parts List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg		1X
B	Leg		1X
C	Seat		1X
D	Metal Plate		1X
HW1	Bolt M8 x 100MM		1X
HW2	Bolt M8 x 25MM		8X
HW3	Flat Washer 9 mm		9X
HW4	Allen Key		1X

SAFAVIEH

COUTURE

Model# SFV5052

Product Dimensions: 38.60" W x 38.60" D x 17.70" H

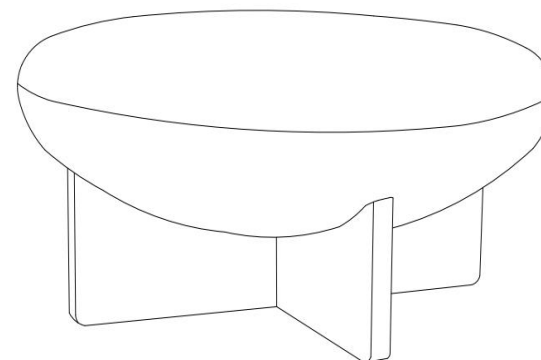

Weight Capacity: 275 lbs

WARNING: DO NOT STAND ON OTTOMAN

WARNING: DO NOT OVER TORQUE BOLTS

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.


*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 15 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

1

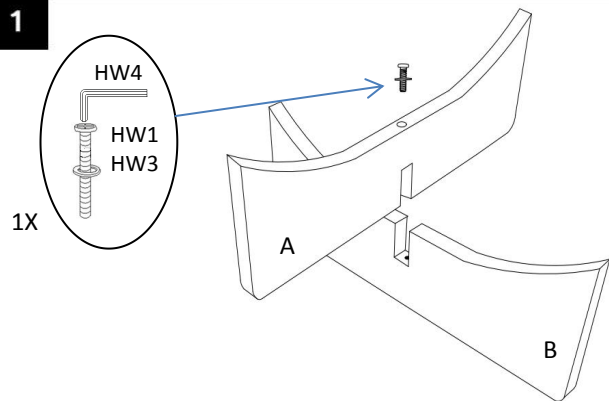


STEP 1: PUT THE WASHER ON THE SCREW IN THE ORDER SHOWN IN THE PICTURE, INSERT THE LEGS AND SCREW IN THE SCREWS .

2

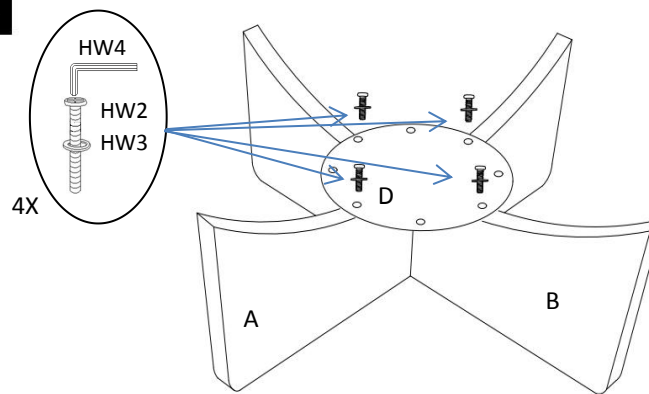


STEP 2: PUT THE WASHERS ON THE SCREW IN THE ORDER SHOWN IN THE PICTURE, INSERT THE METAL PLATE AND LEGS, THEN SCREW IN THE SCREWS.

4

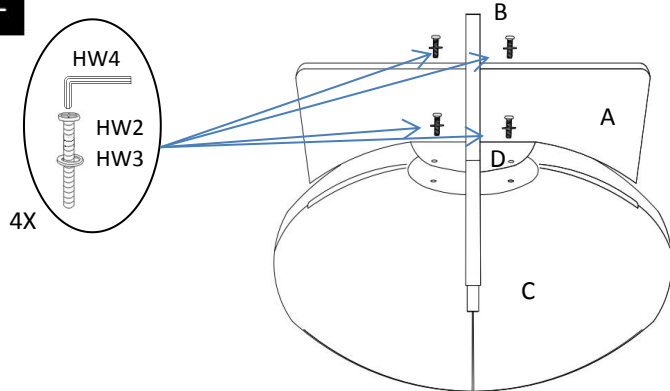

STEP 3: PUT THE WASHERS ON THE SCREW IN THE ORDER SHOWN IN THE PICTURE, INSERT THE METAL PLATE AND SEAT, THEN SCREW IN THE SCREWS.

3

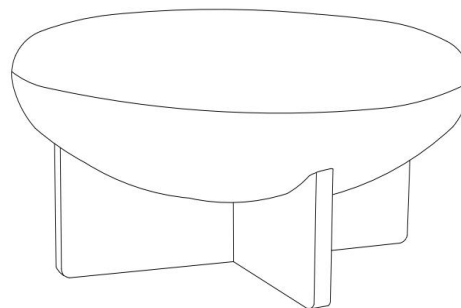

STEP 4: PUT THE OTTOMAN UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, IF THE OTTOMAN WOBBLY, YOU CAN EASY ADJUST LEG BOTTOM PLASTIC SCREW.