
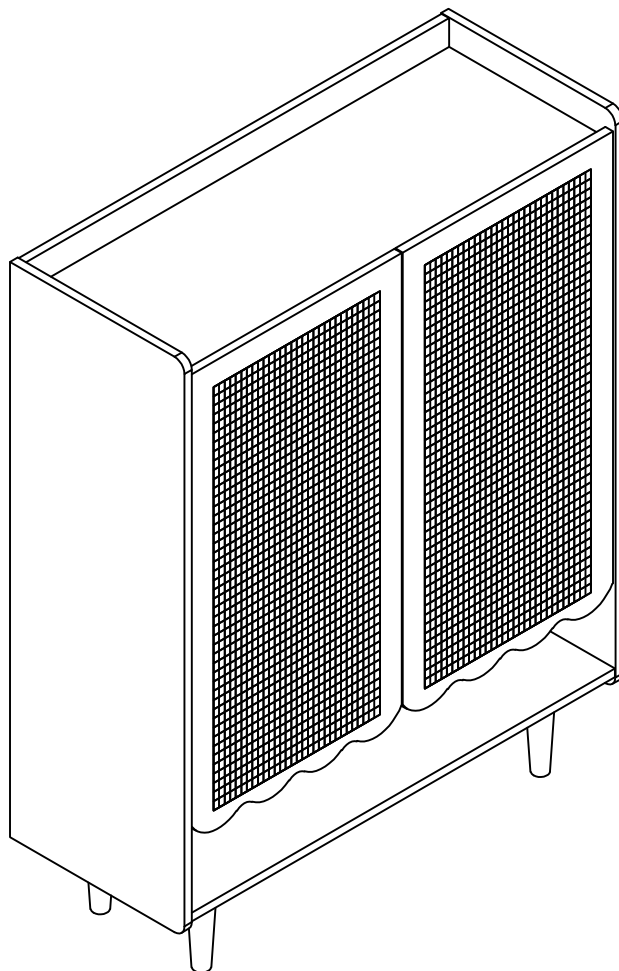
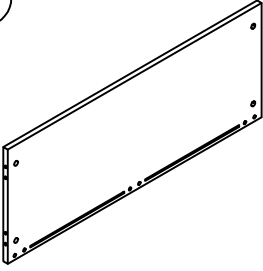
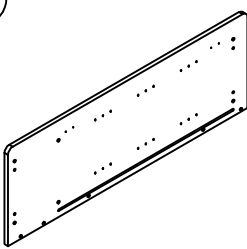
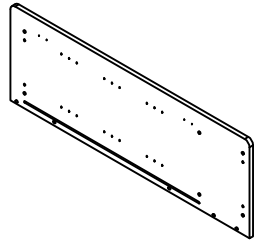
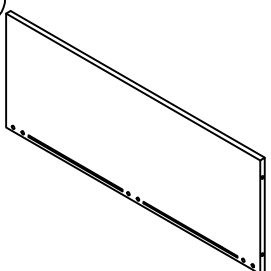
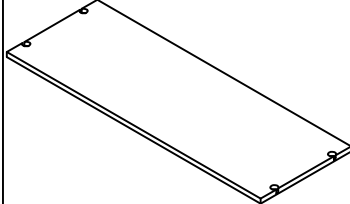
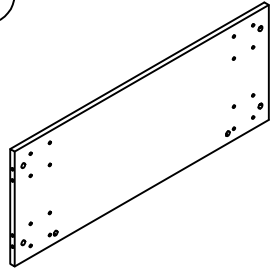
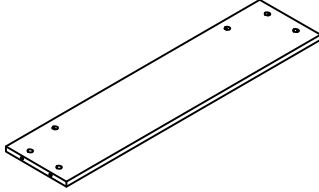
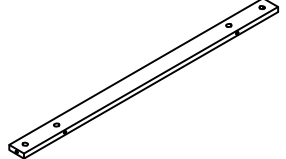
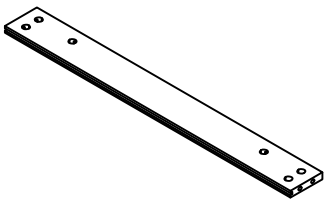
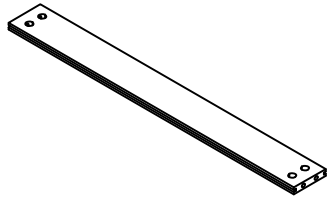
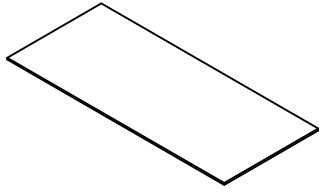



Assembly Guide












B2203Z Shoe cabinet




PARTS LIST

1 	2 	3 	4 
top cabinet=1	left side panel=1	right side panel=1	fixed laminate=1
5 	6 	7 	8 
movable laminate=3	bottom panel=1	lower back panel=1	top brace=1
9 	10 	11 	12 
left/right back brace=2	middle brace=1	back panel=2	left door panel=1
13 			
right door panel=1			

HARDWARE LIST

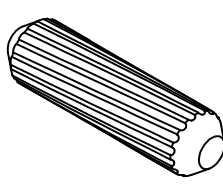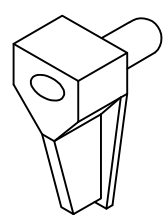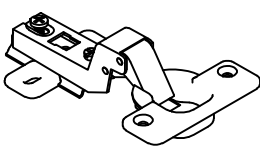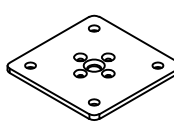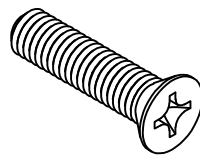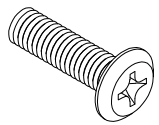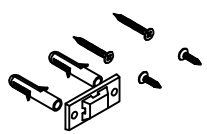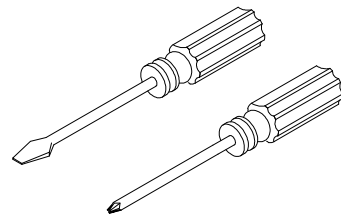A 	B 	C 	D 	E 
three in one=42	solid wood legs=4	8*30 wood dowels=8	3 in 1 sealing sticker=20	laminate support=12
F 	G 	H 	I 	J 
large curved door hinge=4	foot nail=4	90*90*4 mm iron sheet=4	M8*15 countersunk screw=4	M6*12 screw rods=16
K 	L 	M 		
anti fall device =2 sets	M3.5*20 self-tapping screws=16	M3.5*15 self-tapping screws=24		
				
			phillips head screw driver required for assemble---not include	


Step 1

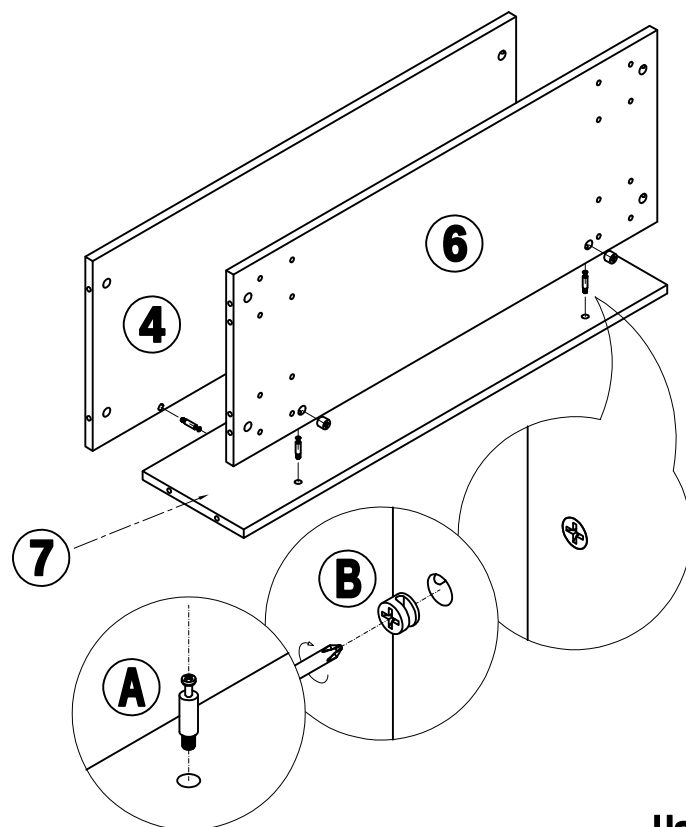


Use 4 pcs(A),
to connect panel ④⑥⑦

Step 2

1. Use 6 pcs(A),
to connect panel ④⑨⑩
2. Put back panel into the panel slot.

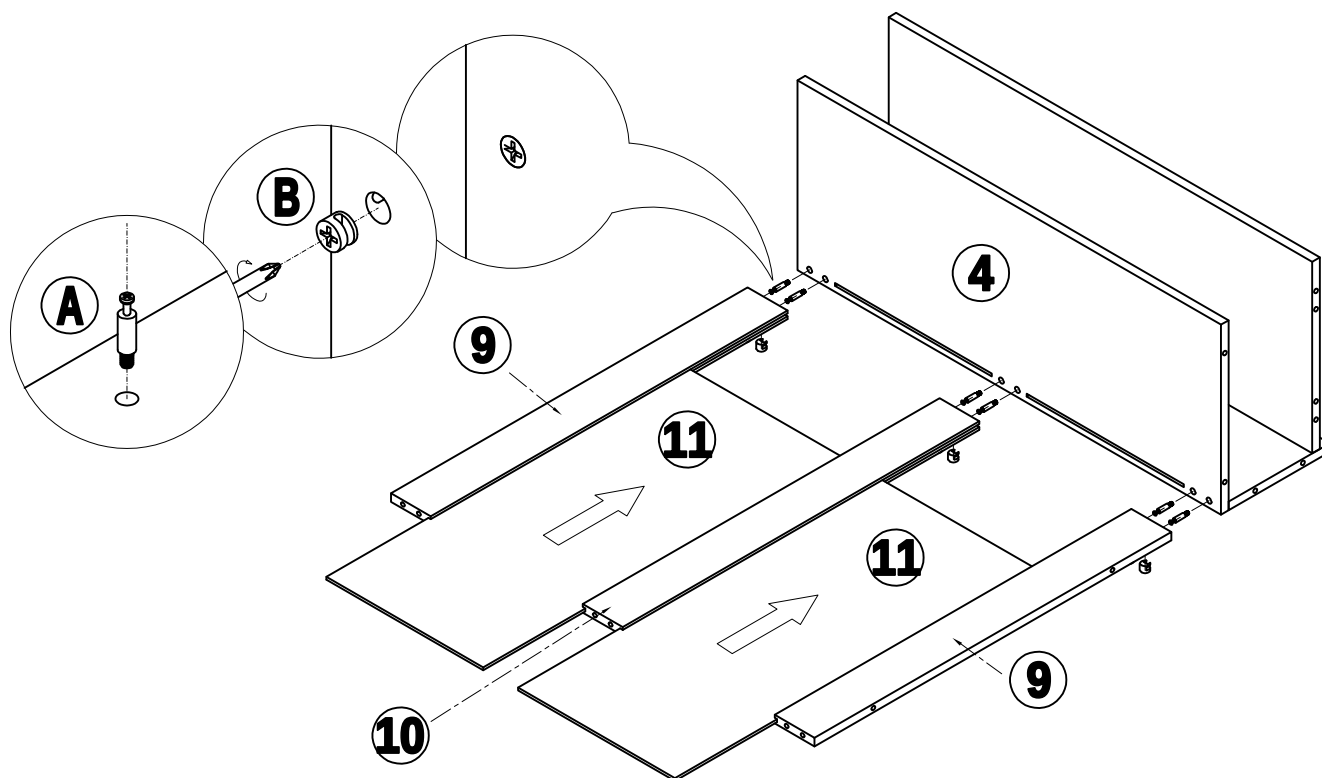


Step 3

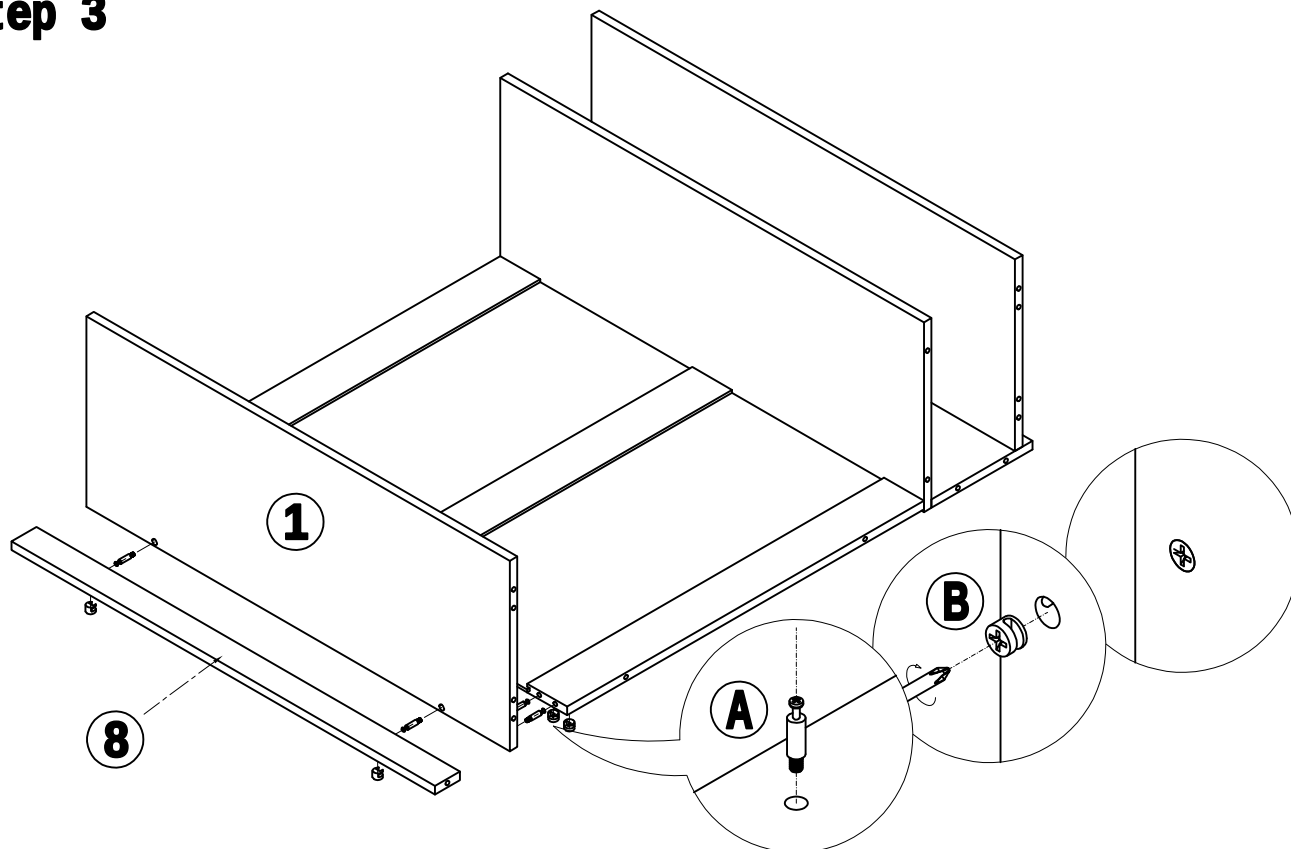

Use 8 pcs(A),
to connect panel ⑧①⑨⑩


Step 4

Use 22 pcs(A), 8 pcs(C)
to connect panel ①②③④⑥⑦⑧⑨

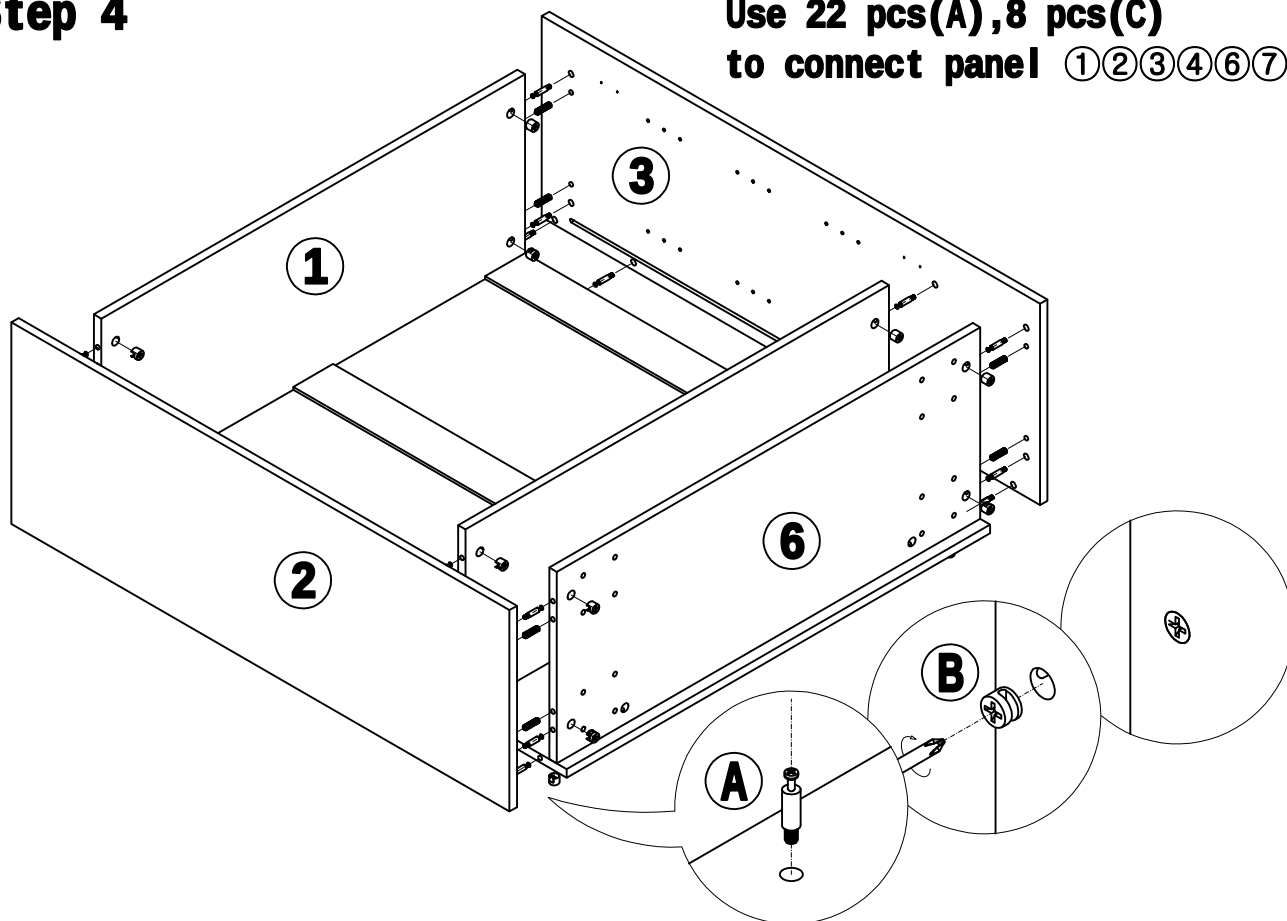


Step 5

1. Use four pcs(I), 16 pcs(L) and 16 pcs(J) to install (H) iron sheet on the top of ⑭ solid wood legs.

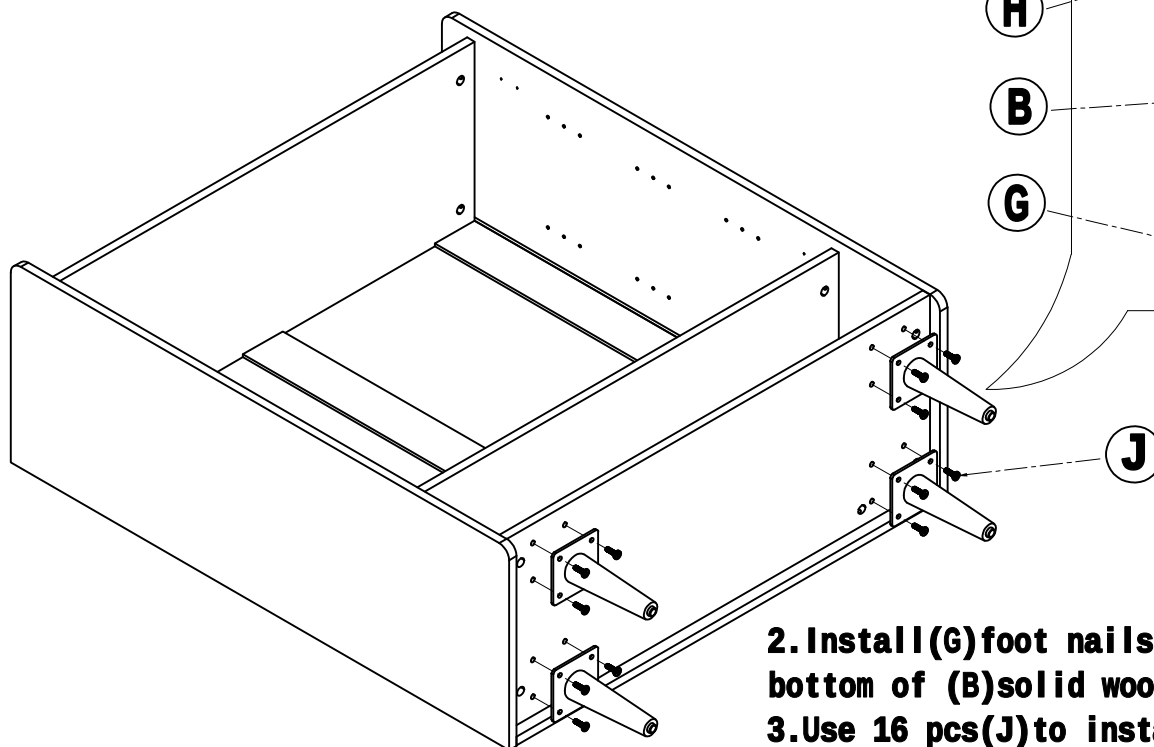

2. Install (G) foot nails on the bottom of (B) solid wood legs.
3. Use 16 pcs(J) to install ⑭ solid wood legs on the bottom of cabinet.

Step 6

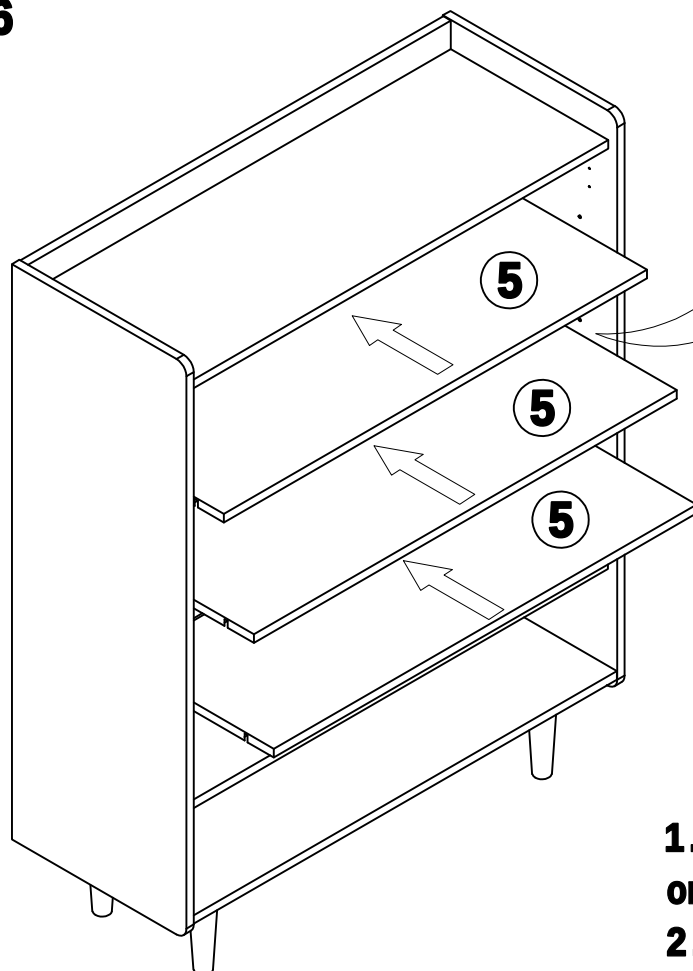

1. Install (E) laminate buckle on the ②③ side panel.
2. Place ⑤ laminate.

Step 7

