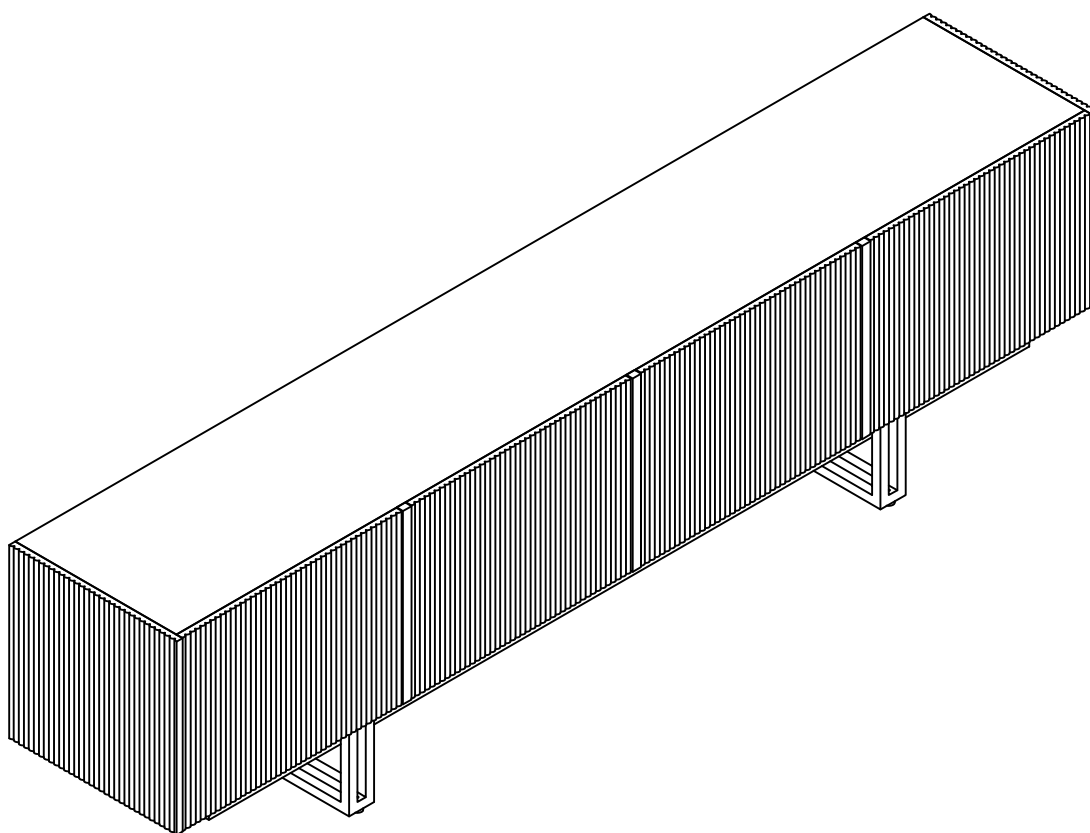
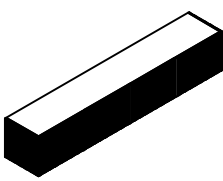


Assembly Guide



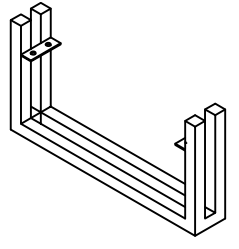
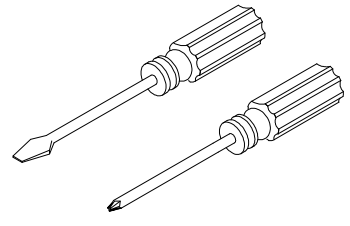
WB2201D Tv stand



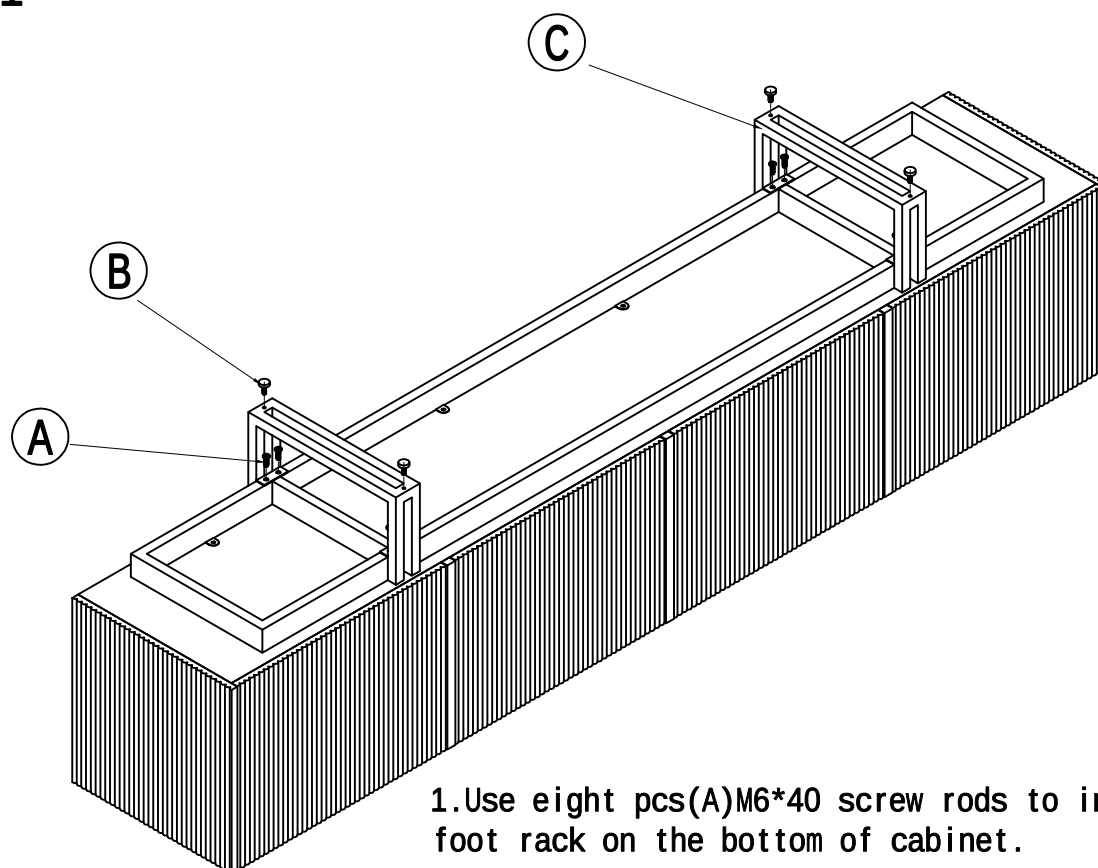
PARTS LIST

① 			
cabinet=1			

HARDWARE LIST

A 	B 	C 	
M6*40 screw rod=8	M6*10 adjustable feet=4	foot rack=2	
		 phillips head screw driver required for assemble---not include	

Step 1



1. Use eight pcs(A) M6*40 screw rods to install (C) foot rack on the bottom of cabinet.
2. Install (B) M6*10 adjustable feet on the bottom of (C) foot rack

Finished

