
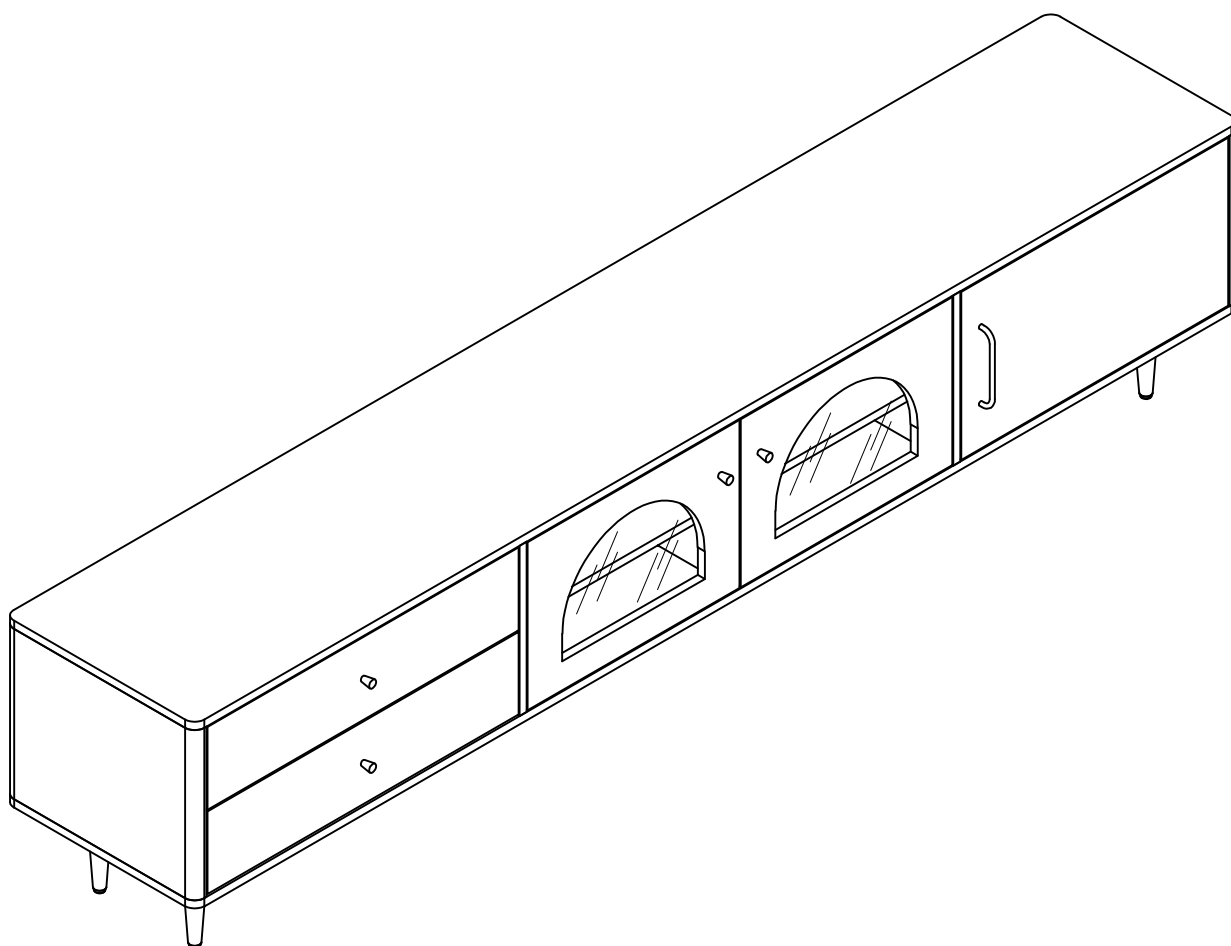
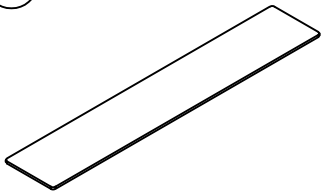
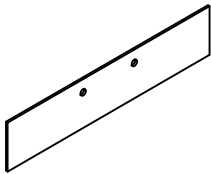
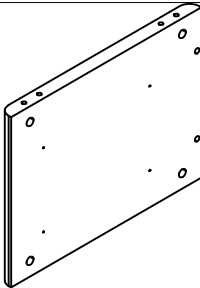
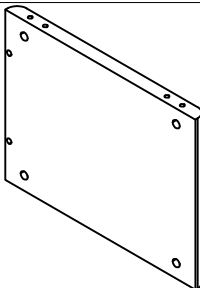
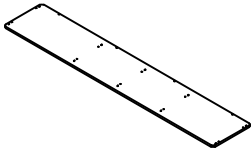
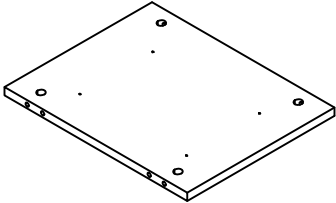
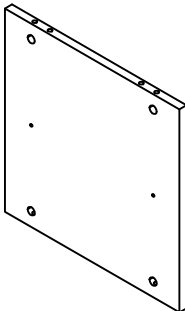
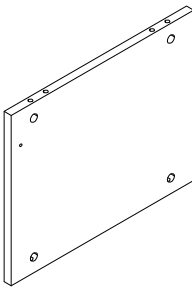
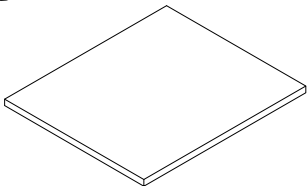
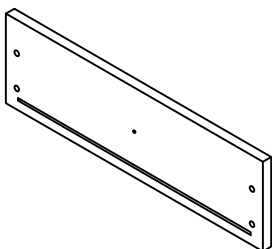
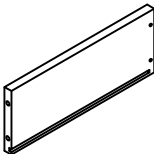
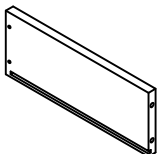
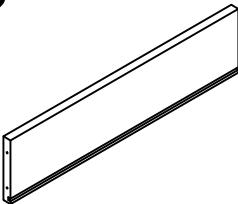
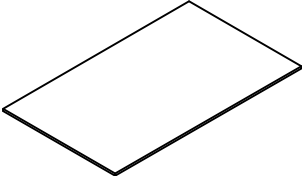
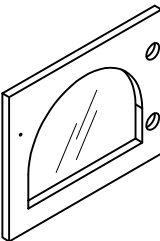
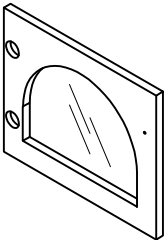


Assembly Guide







B2129D Tv stand

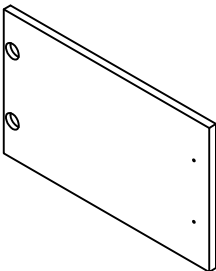


PARTS LIST

① 	② 	③ 	④ 
panel=1	back panel=1	left side panel=1	right side panel=1
⑤ 	⑥ 	⑦ 	⑧ 
bottom panel=1	left neutral panel=1	middle neutral panel=1	right neutral panel=1
⑨ 	⑩ 	⑪ 	⑫ 
movable laminate=2	drawer panel=2	drawer left side panel=2	drawer right side panel=2
⑬ 	⑭ 	⑮ 	⑯ 
drawer back panel=2	drawer bottom panel=2	left middle door panel=1	right middle door panel=1
⑰ 			
right door panel=1			

HARDWARE LIST

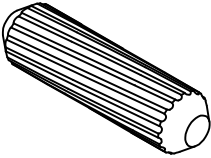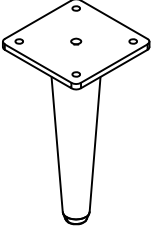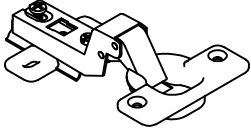A 	B 	C 	D 	E 
3 in 1 camlocks and rods=40	8*30 wood dowels=20	laminat support=8	wire cover=2	feet=5
F 	G 	H 	I 	J 
handle=4	long handle=1	ø4*18 handle screws=6	rubber panel support=1	guide rails=2sets
K 	L 	M 		
large curved door hing=6	ø3.5*14 self -tapping screws=80	ø3.5*20 self -tapping screws=8		
			phillips head screw driver required for assemble---not include	

Step 1

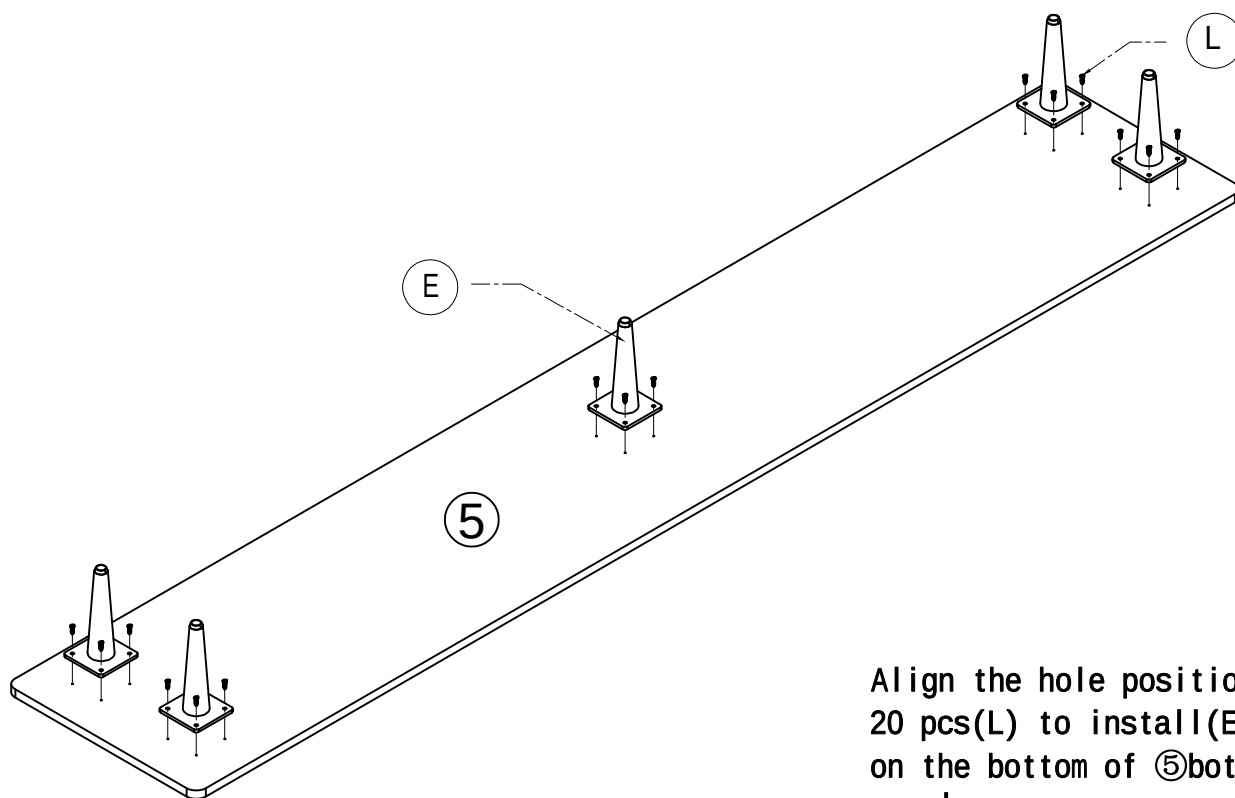


Align the hole position, use 20 pcs(L) to install (E) feet on the bottom of ⑤ bottom panel.


Step 2

Drawer guide rails installation:


When installing the guide rails, the second hole at the front end of the guide rails shall prevail. Align the lead holes, install (J) guide rails with (L) 3.5*14 self-tapping screws on ③ left side panel and ⑥ left neutral panel. Kindly reminder: Each set guide rails can be pulled out a small rails. The small rails are installed on the sides of drawers.

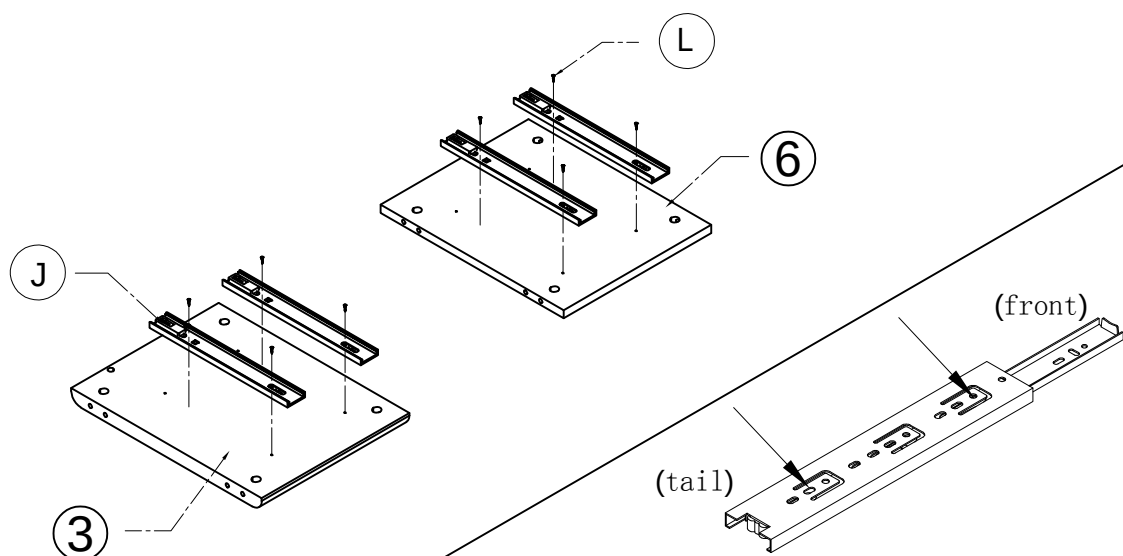


Step 3

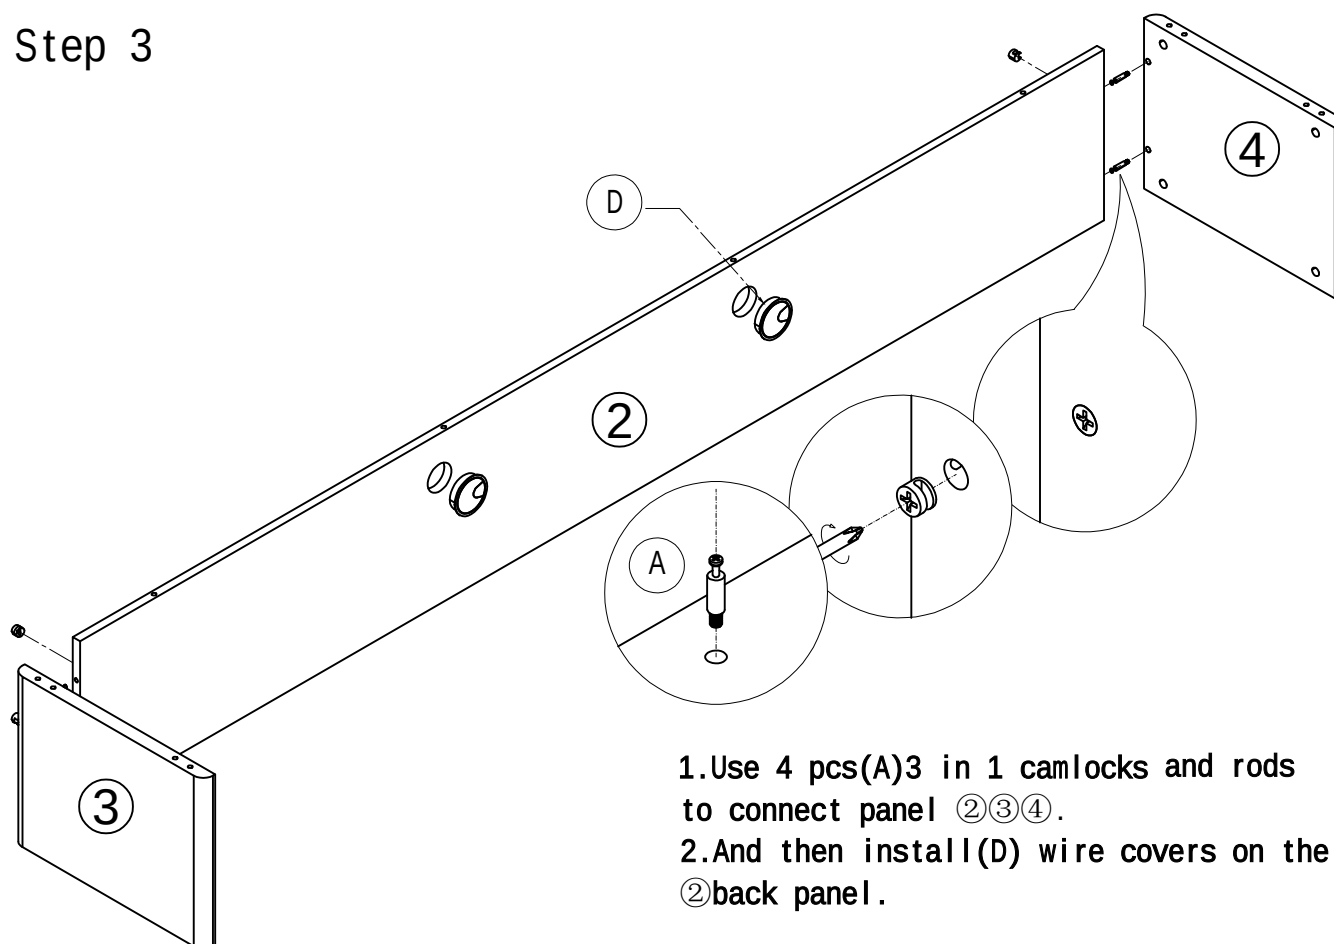


Step 4

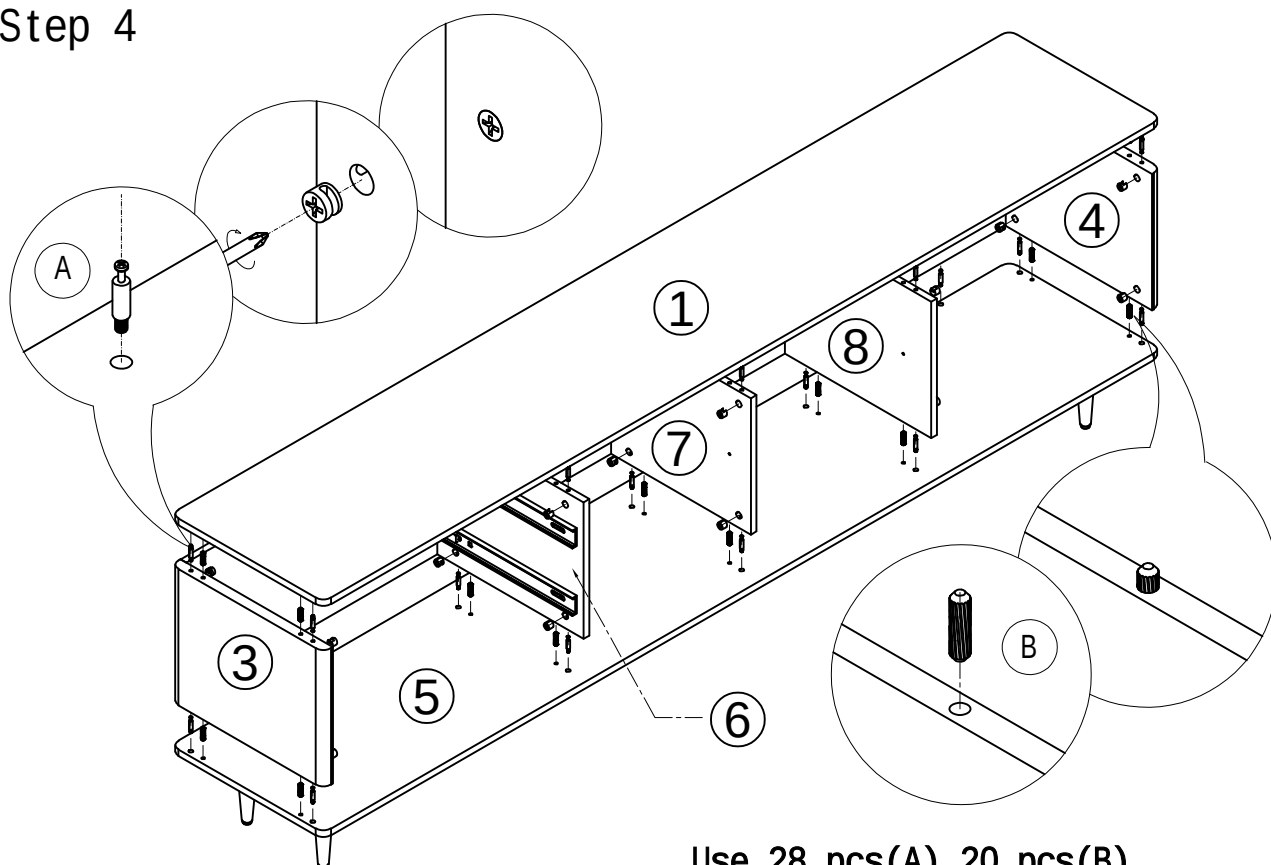

Step 5

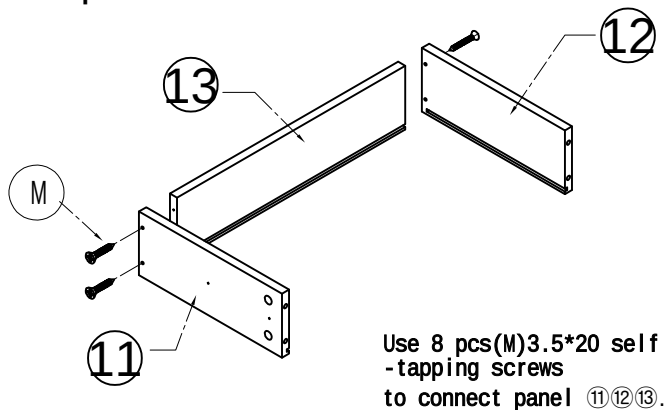


Step 6

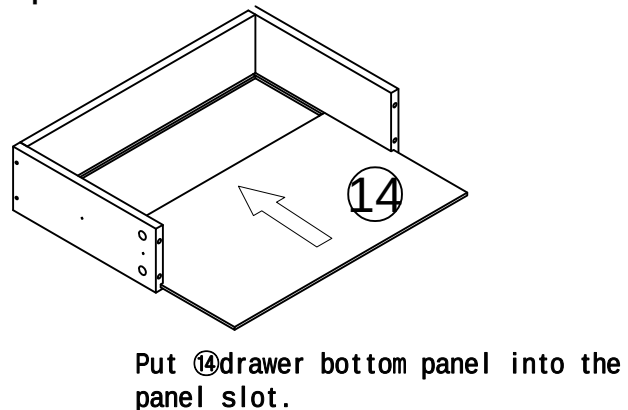


Step 7


1. Use 8 pcs(A) to connect panel ⑩⑪⑫.
2. Use 2 pcs(H) to install (F) on panel ⑩.

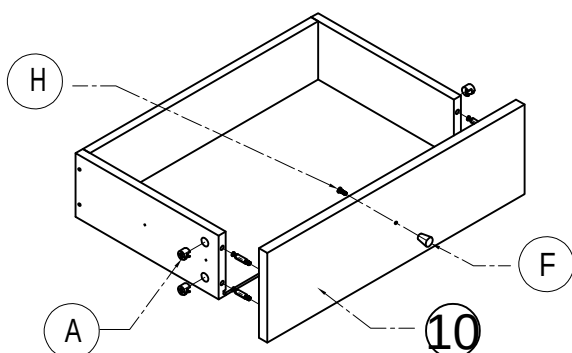

Step 8

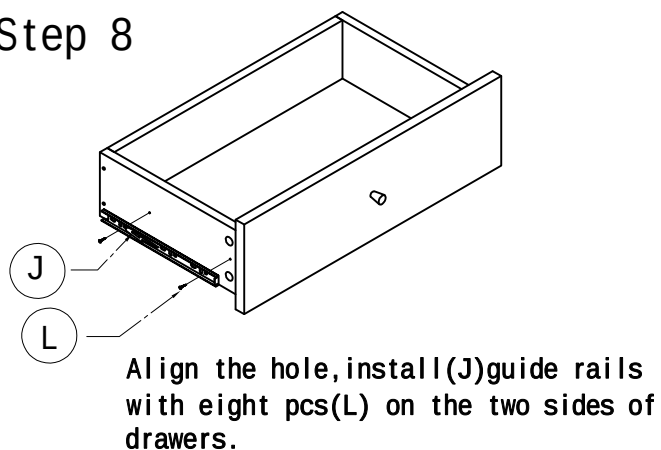


Step 9

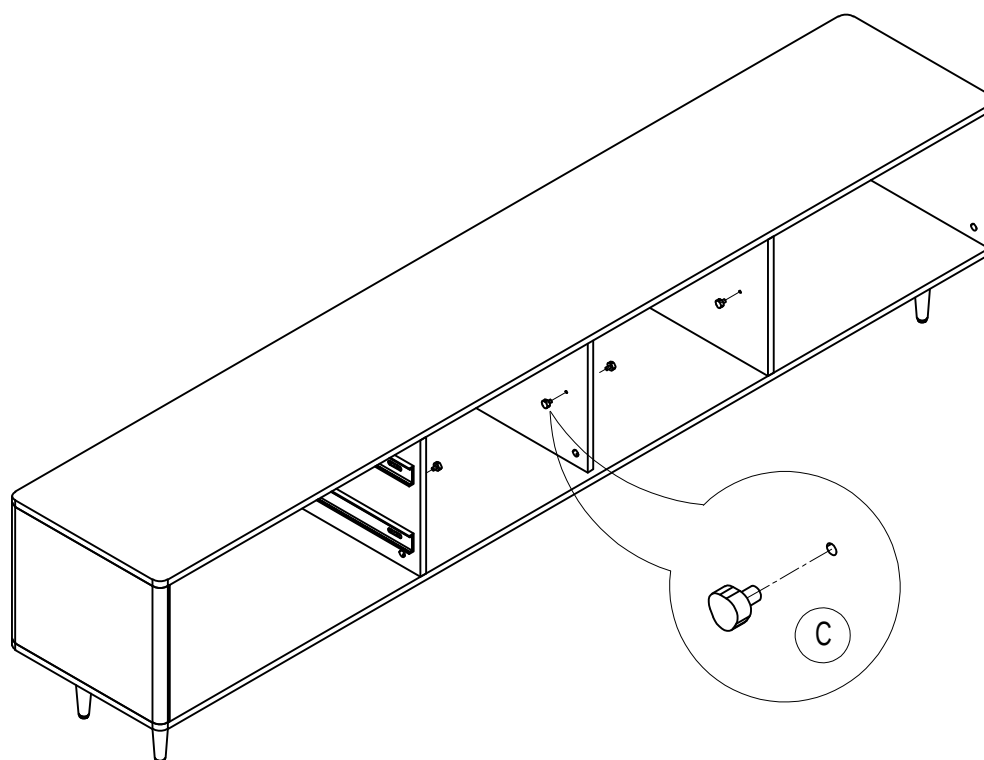


Install 8 pcs(C) laminate supports on panel ⑥⑦⑧.

Step 10

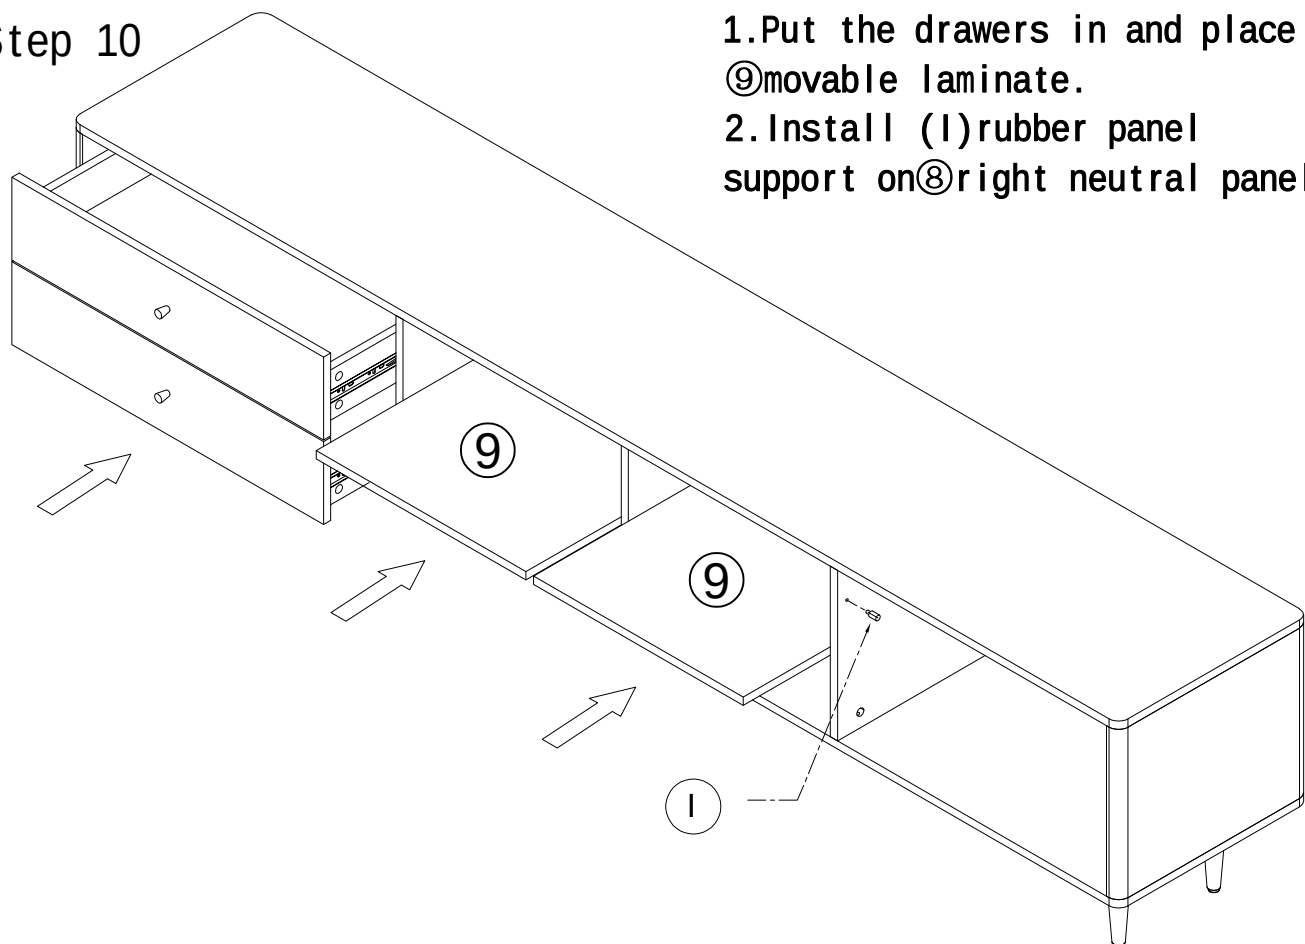

1. Put the drawers in and place ⑨movable laminate.
2. Install (I) rubber panel support on ⑧right neutral panel.

Step 11

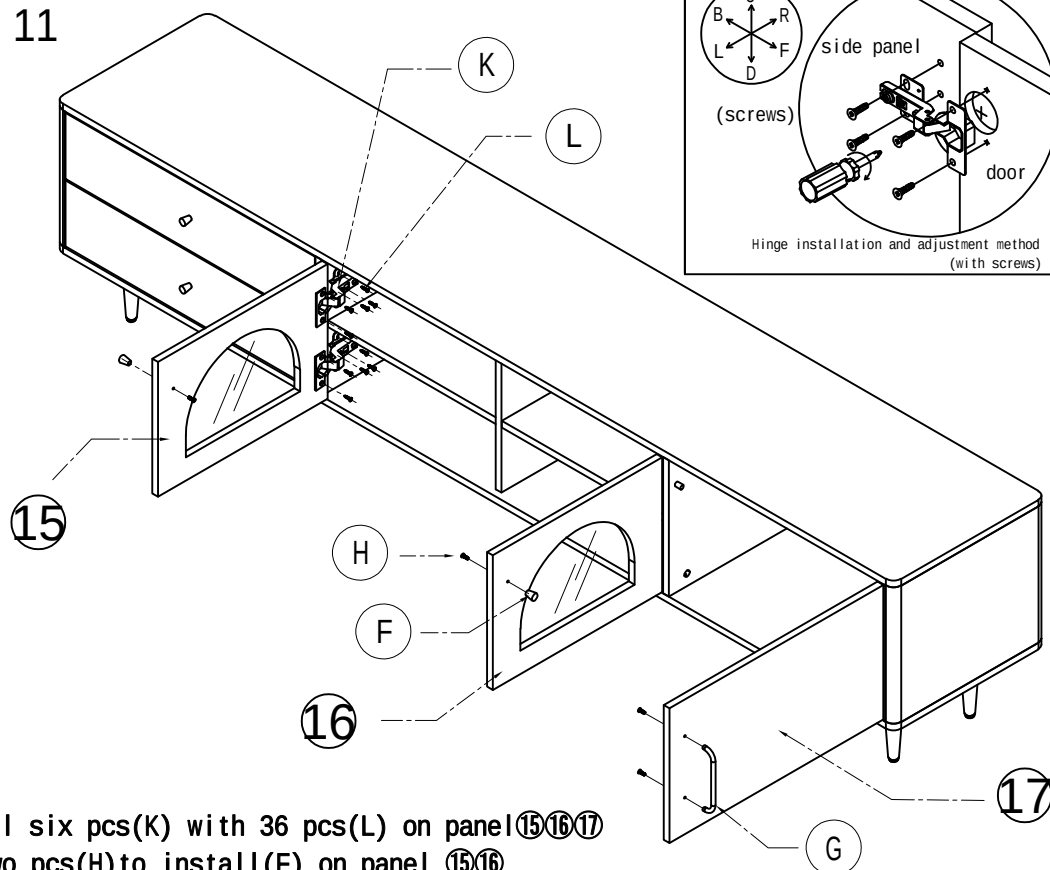

1. Install six pcs(K) with 36 pcs(L) on panel ⑮⑯⑰
2. Use two pcs(H) to install (F) on panel ⑮⑯
3. Use two pcs(H) to install (G) on panel ⑰