



ASSEMBLY INSTRUCTIONS

ITEM CODE: WF296086

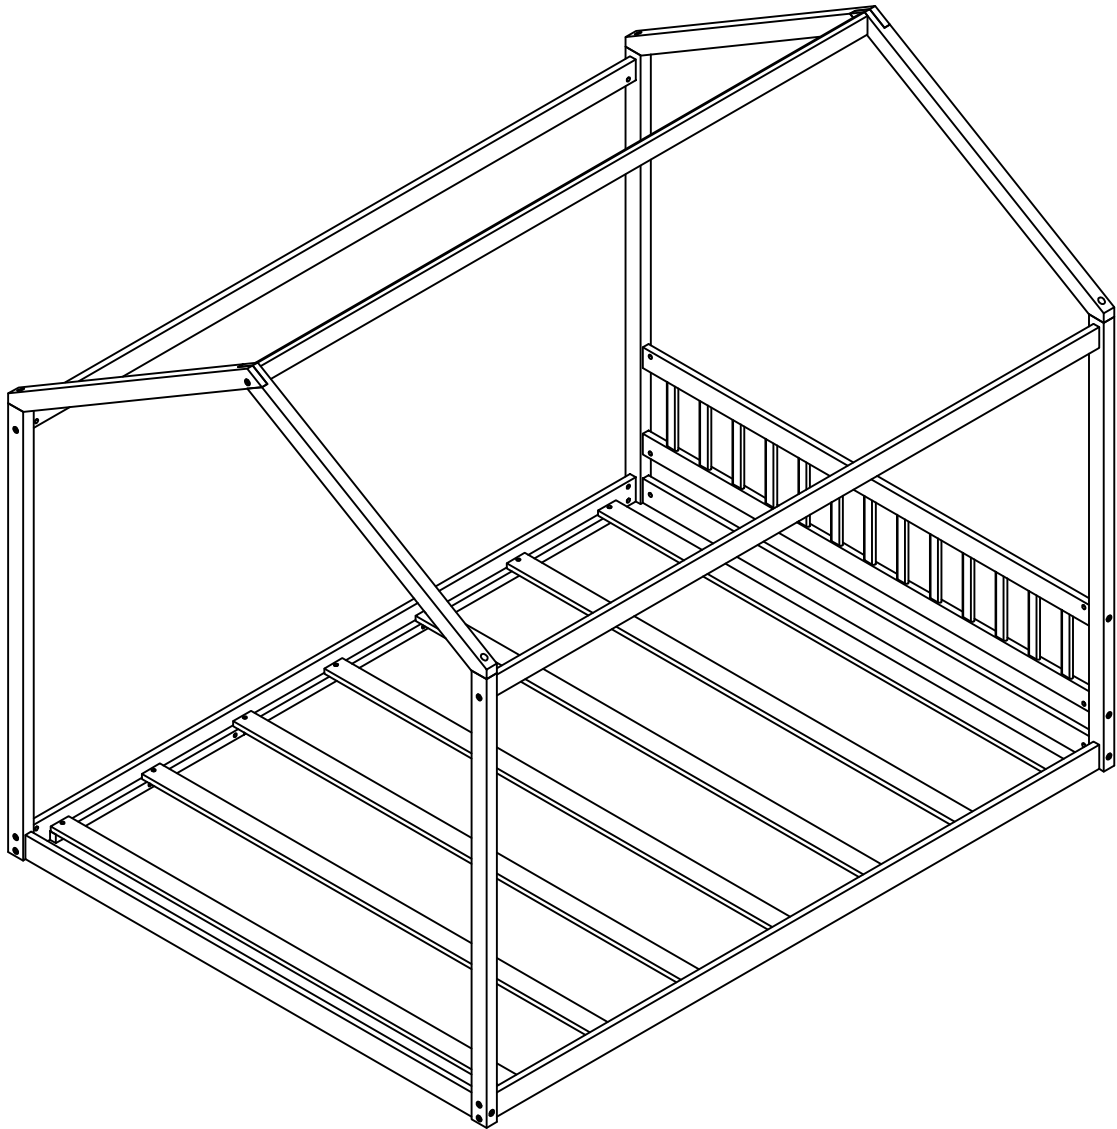

DETAIL VIEW

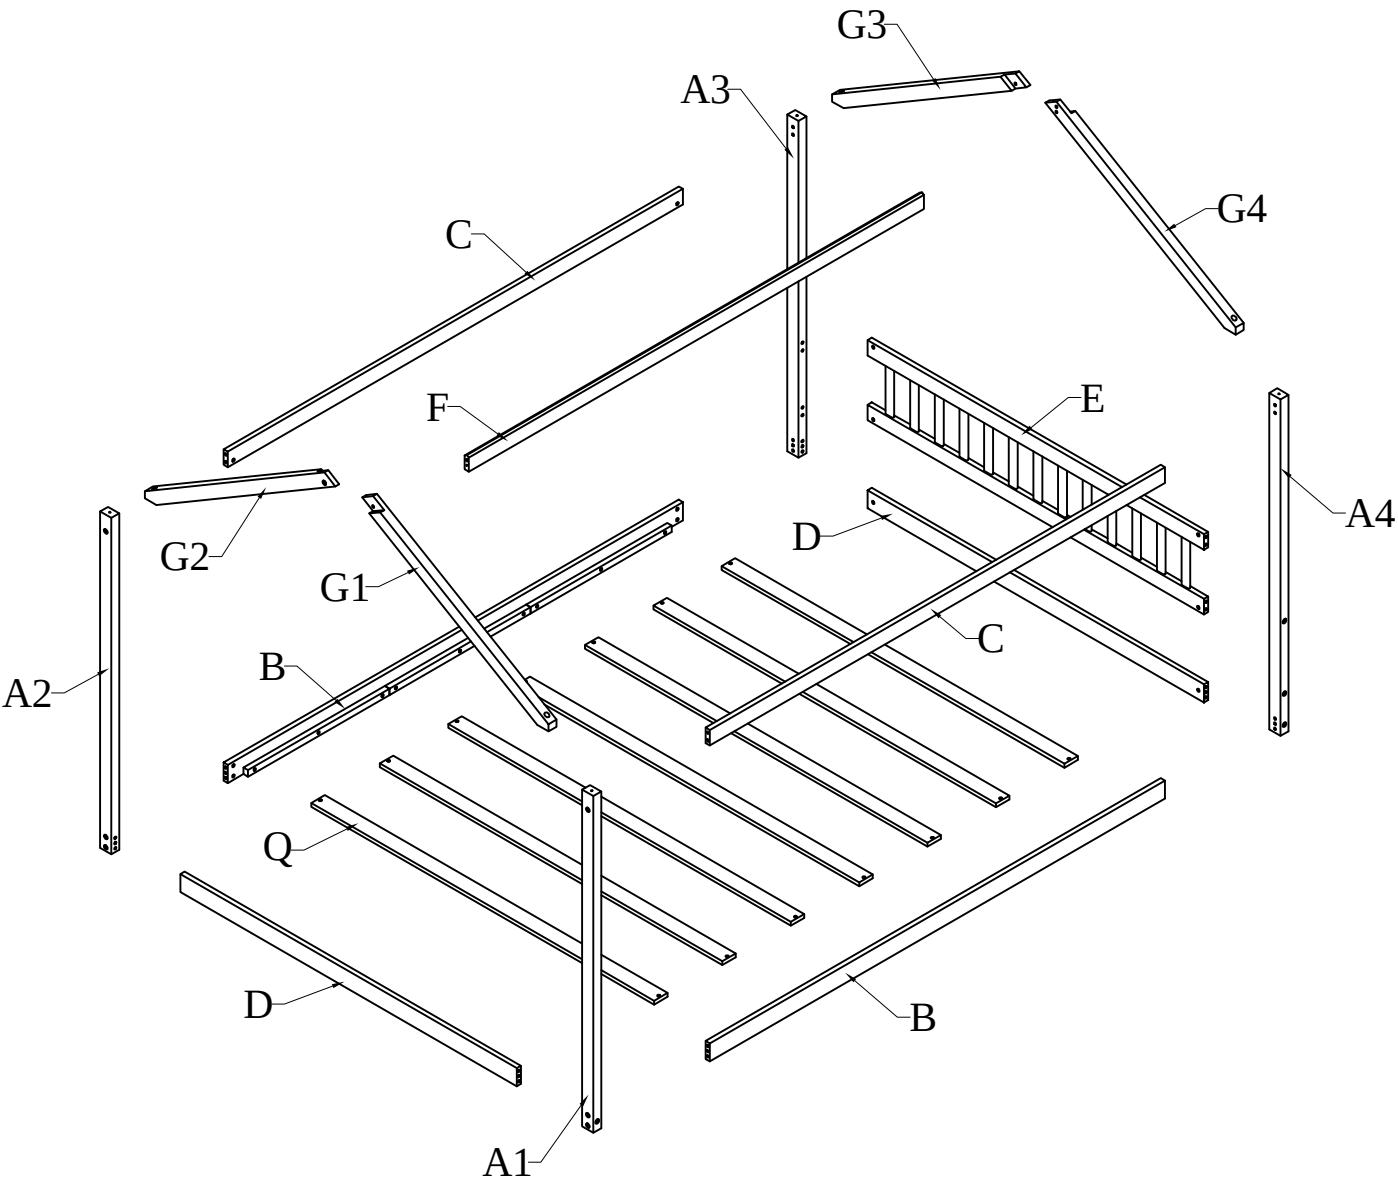


BOX: WF296086

A1



Front leg - left (1pc)

A2



Back leg - left (1pc)

A3




Back leg - right (1pc)

A4




Front leg - right (1pc)

B

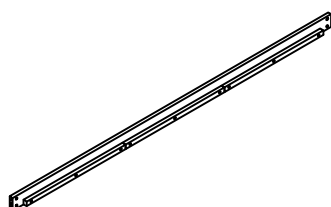


Side rail (2pcs)

C

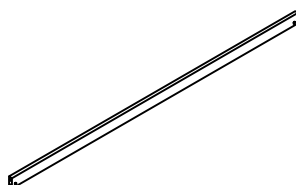


Guardrail (2pcs)

D

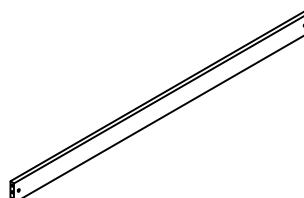


Horizontal rail (2pcs)

E

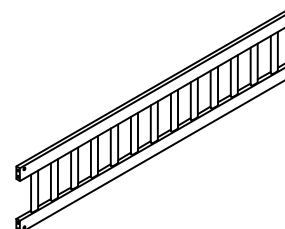


Side frame (1pc)

F

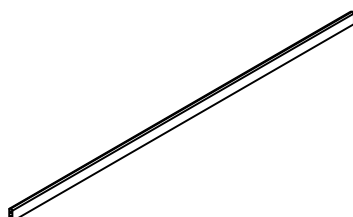


Guard rail top (1pc)

G1

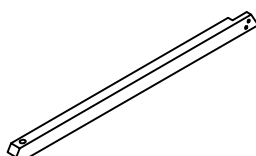


Vertical bar front - left (1pc)

G2

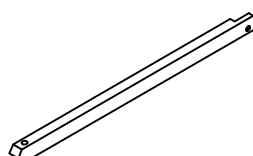


Vertical bar back - left (1pc)

G3

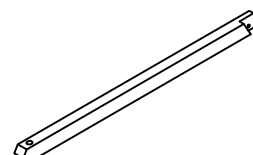


Vertical bar back - right (1pc)

G4

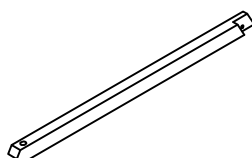






Vertical bar front - right (1pc)


Q

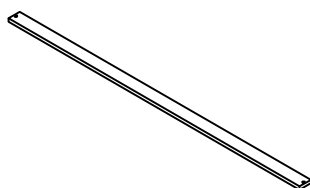

Slats (7pcs)


HARDWARE LIST: WF296086

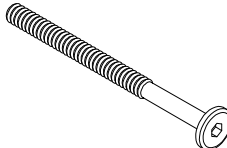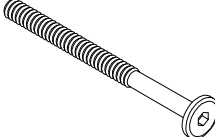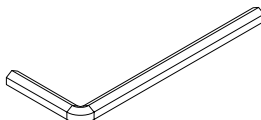1		2		3		4	
Hex - Head bolts Ø1/4" * 90 - 8pcs		Hex - Head bolts Ø1/4" * 80 - 12pcs		Horizontal - Hold bolts Ø1/4" - 20pcs		Hexagonal bolts catch wood Ø6 * 70 - 6pcs	
5		6		7			
Wood crews M4 * 25 - 14pcs		Wood dowel Ø8 * 30 - 22pcs		Allen key K4 - 1pc			




Assembly Tools Required (Not Included)


STEP 1

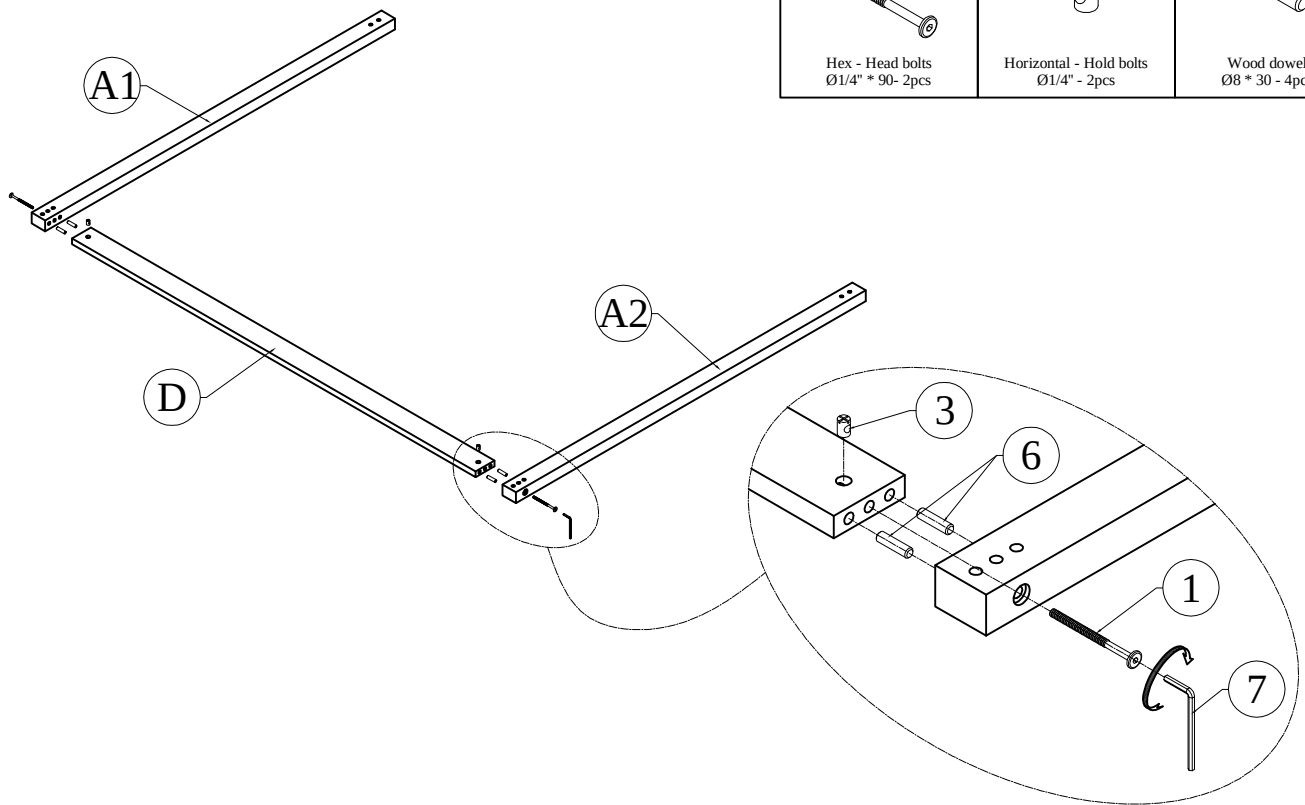


STEP 2

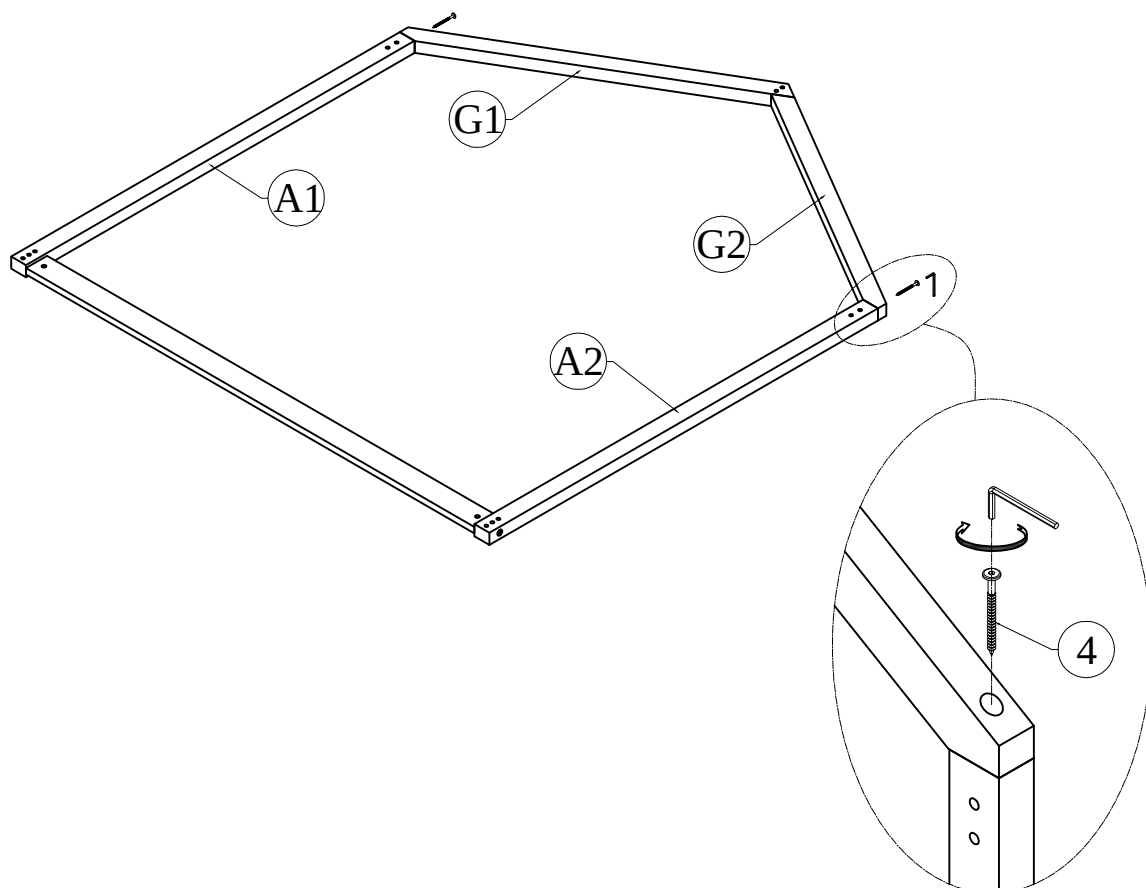

STEP 3

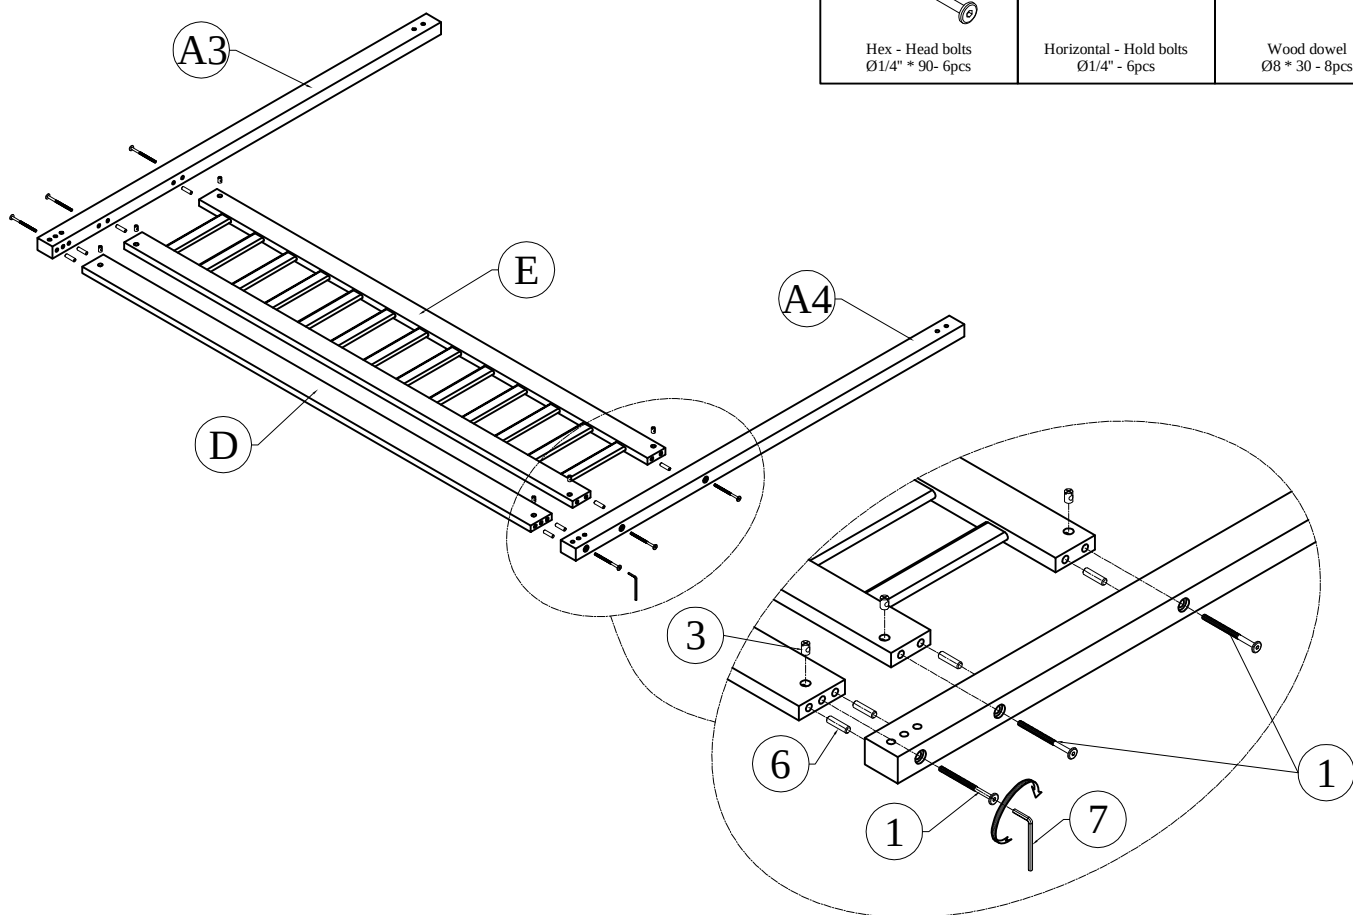


STEP 4

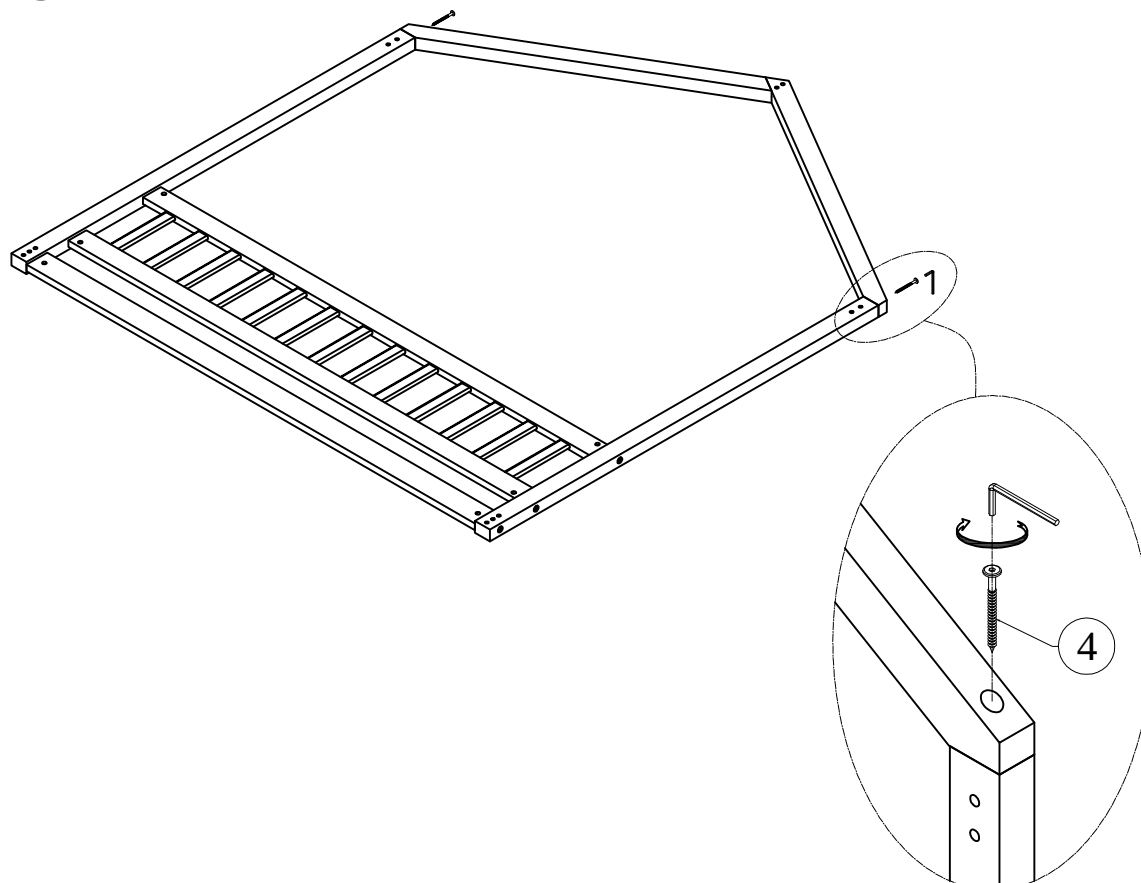


4

Hexagonal bolts catch wood
Ø6 * 70 - 2pcs

STEP 5

2		3	
Hex - Head bolts Ø1/4" * 80 - 12pcs		Horizontal - Hold bolts Ø1/4" - 12pcs	
4		6	
Hexagonal bolts catch wood Ø6 * 70 - 2pcs		Wood dowel Ø8 * 30 - 10pcs	


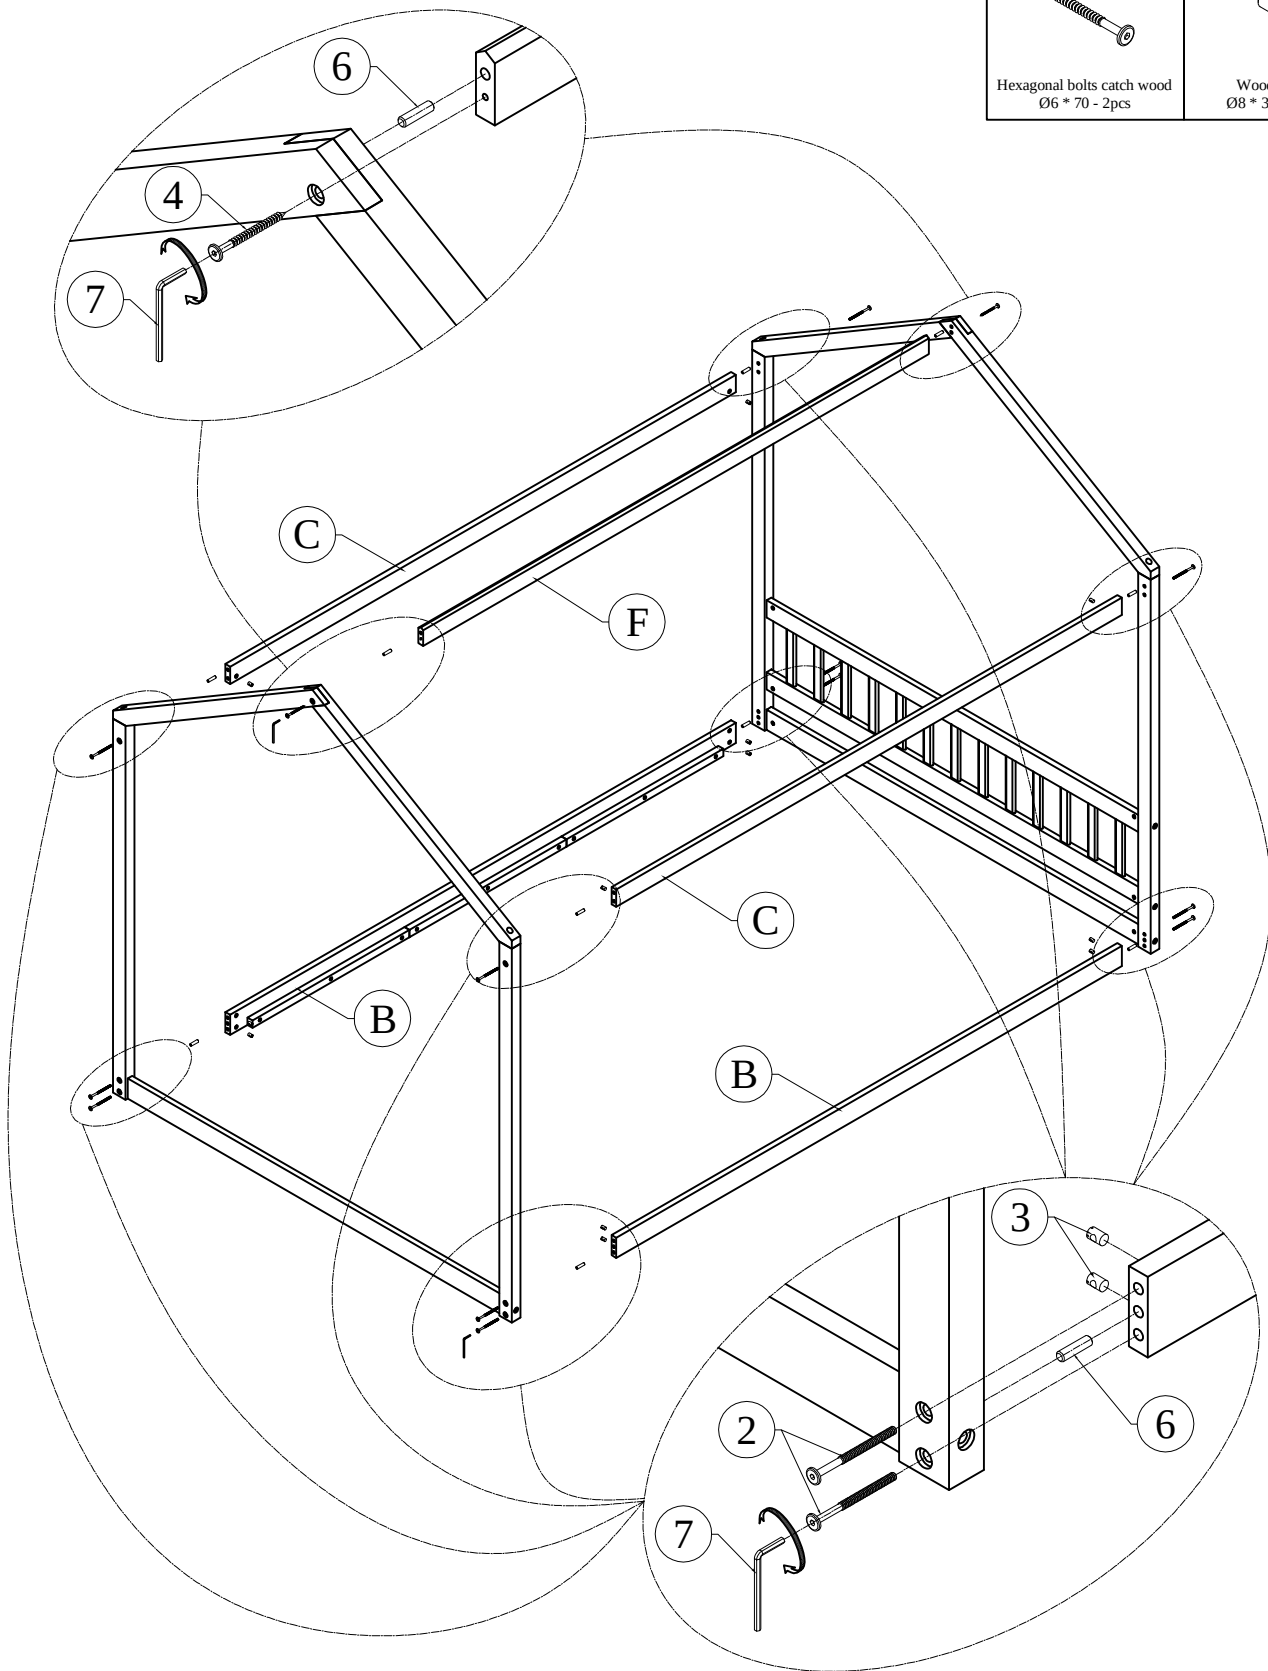


STEP 6

5



Wood crews
M4 * 25 - 14pcs

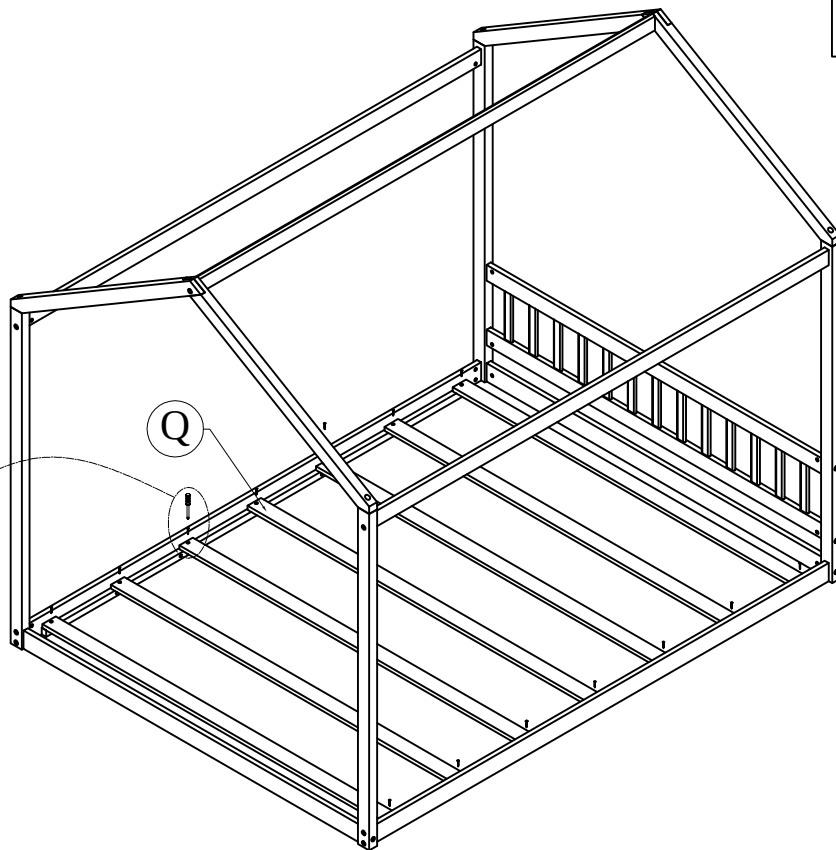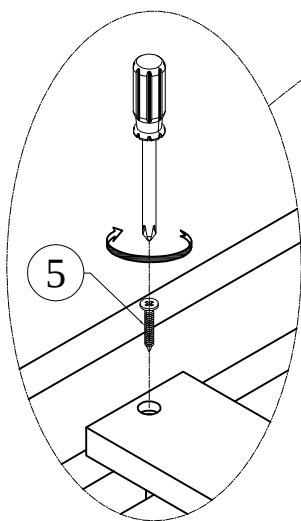

COMPLETED

