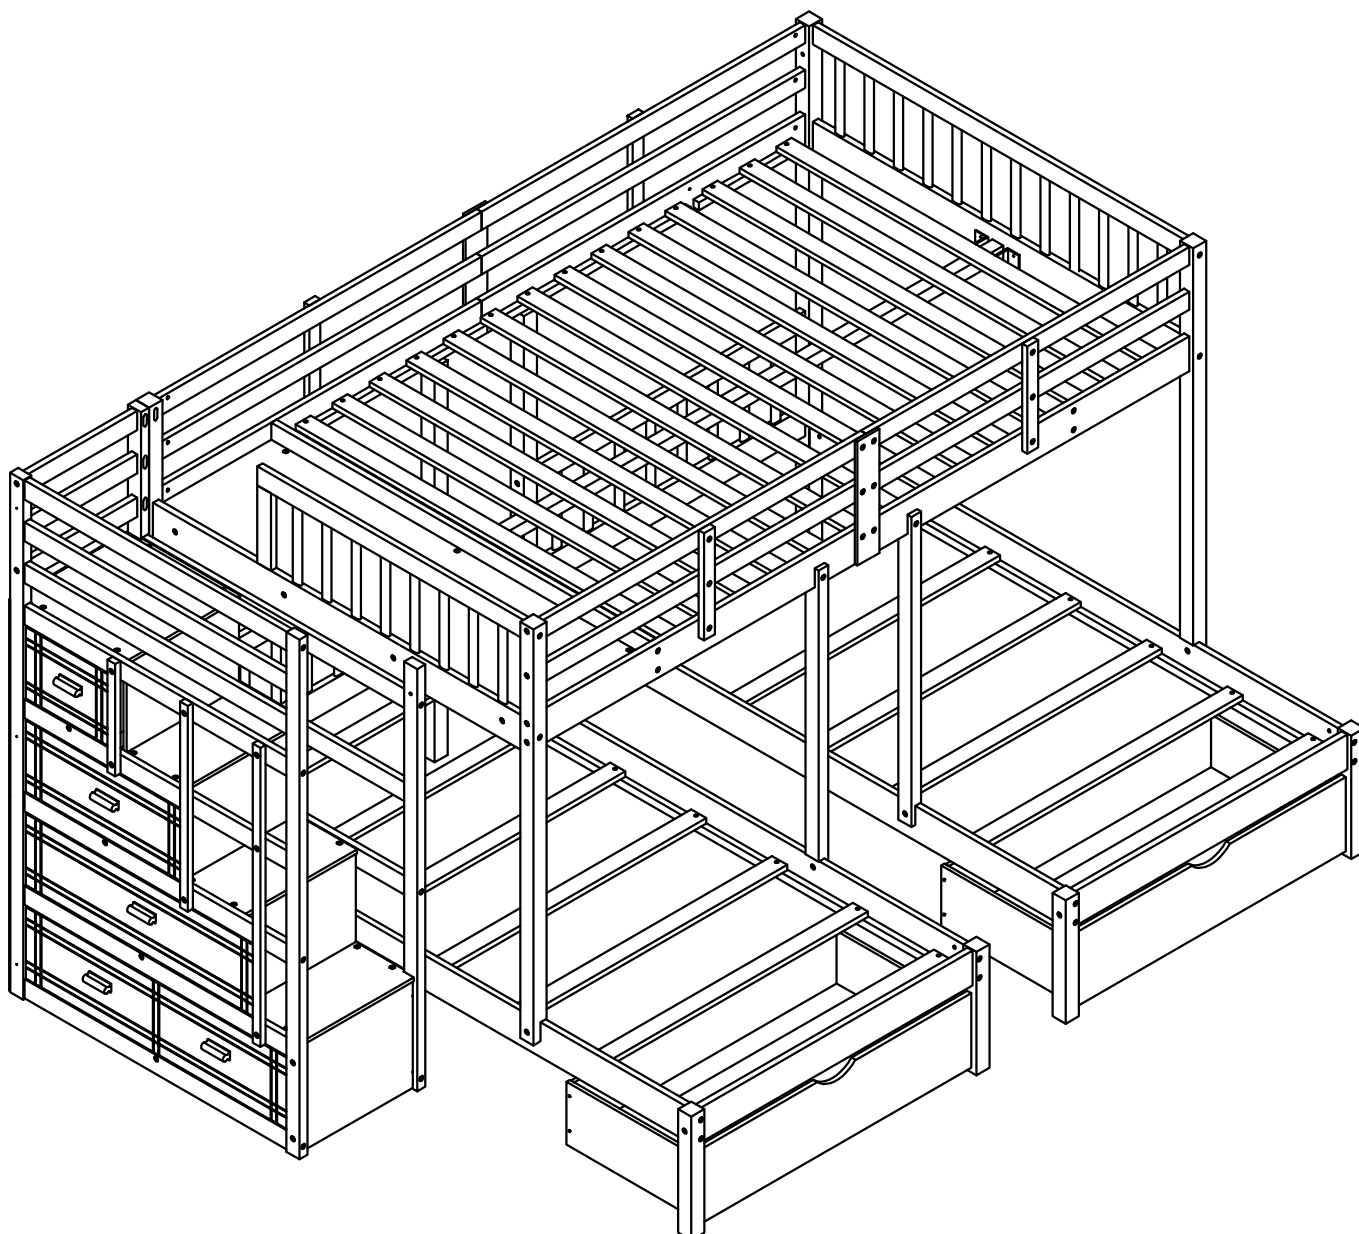


ASSEMBLY INSTRUCTION

SKU CODE: (WF293769-WF293770-WF293771)

This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team



! SAFETY WARNINGS !

1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk

Upper bed

Bed Type
Full Standard

Length
74" - 75"

Width
53 1/2"

Thickness
6" max

Lower bed

Bed Type
Twin Standard


Length
74" - 75"

Width
38 1/2"


Thickness
8" max

2. Replacement parts, including additional guardrails, maybe obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE CITY OF INDUSTRY, CA, 91748) dealers
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunkAlways use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part
11. Use of a night light may provide added safety precaution for a child using the upper bunk..
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes
15. Keep these instruction for future reference
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.

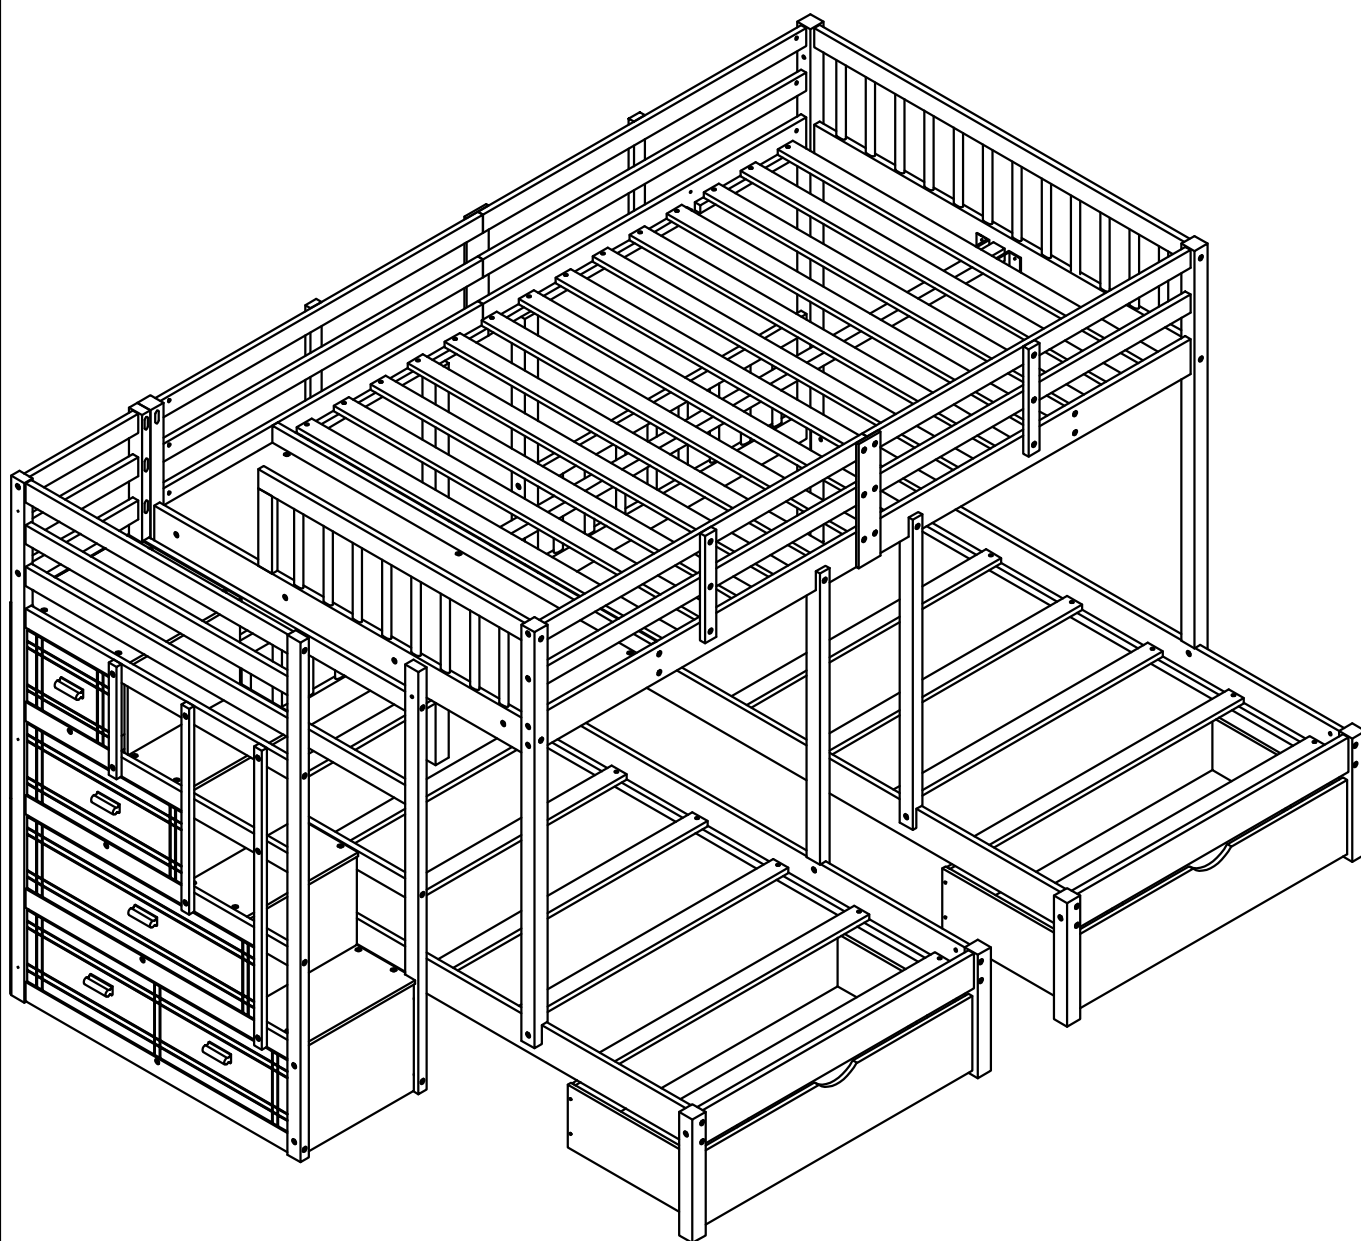
OPTION 1: STAIR IN LEFT
























OPTION 2: STAIR IN RIGHT

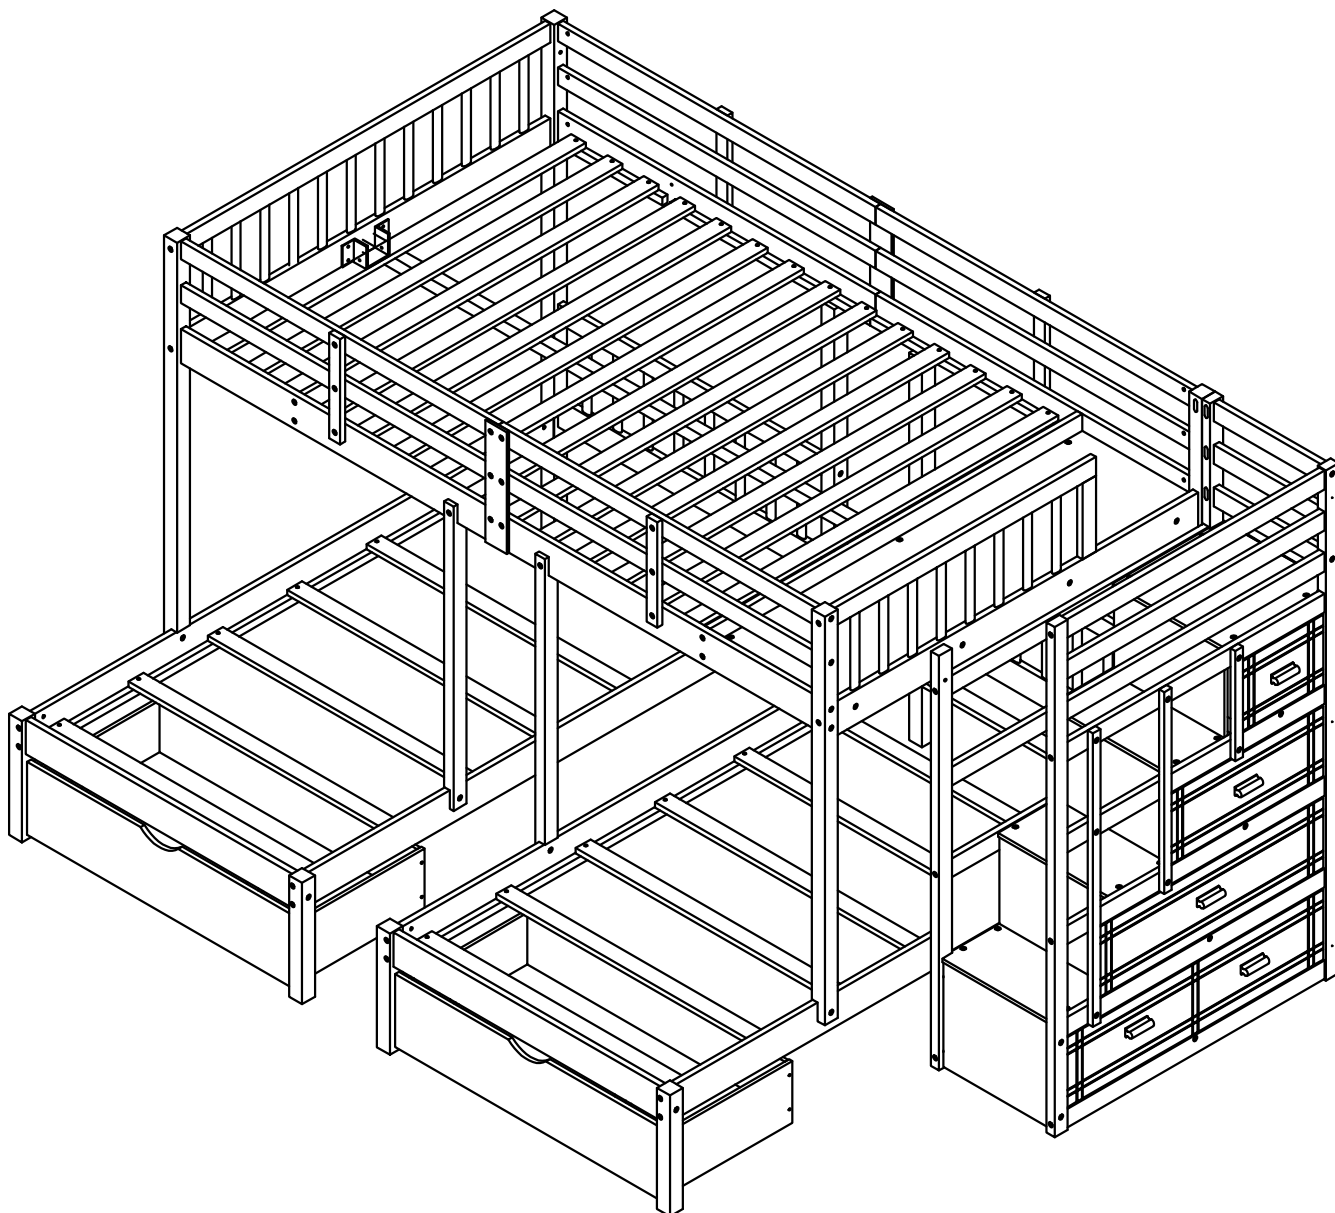





















ASSEMBLY INSTRUCTION

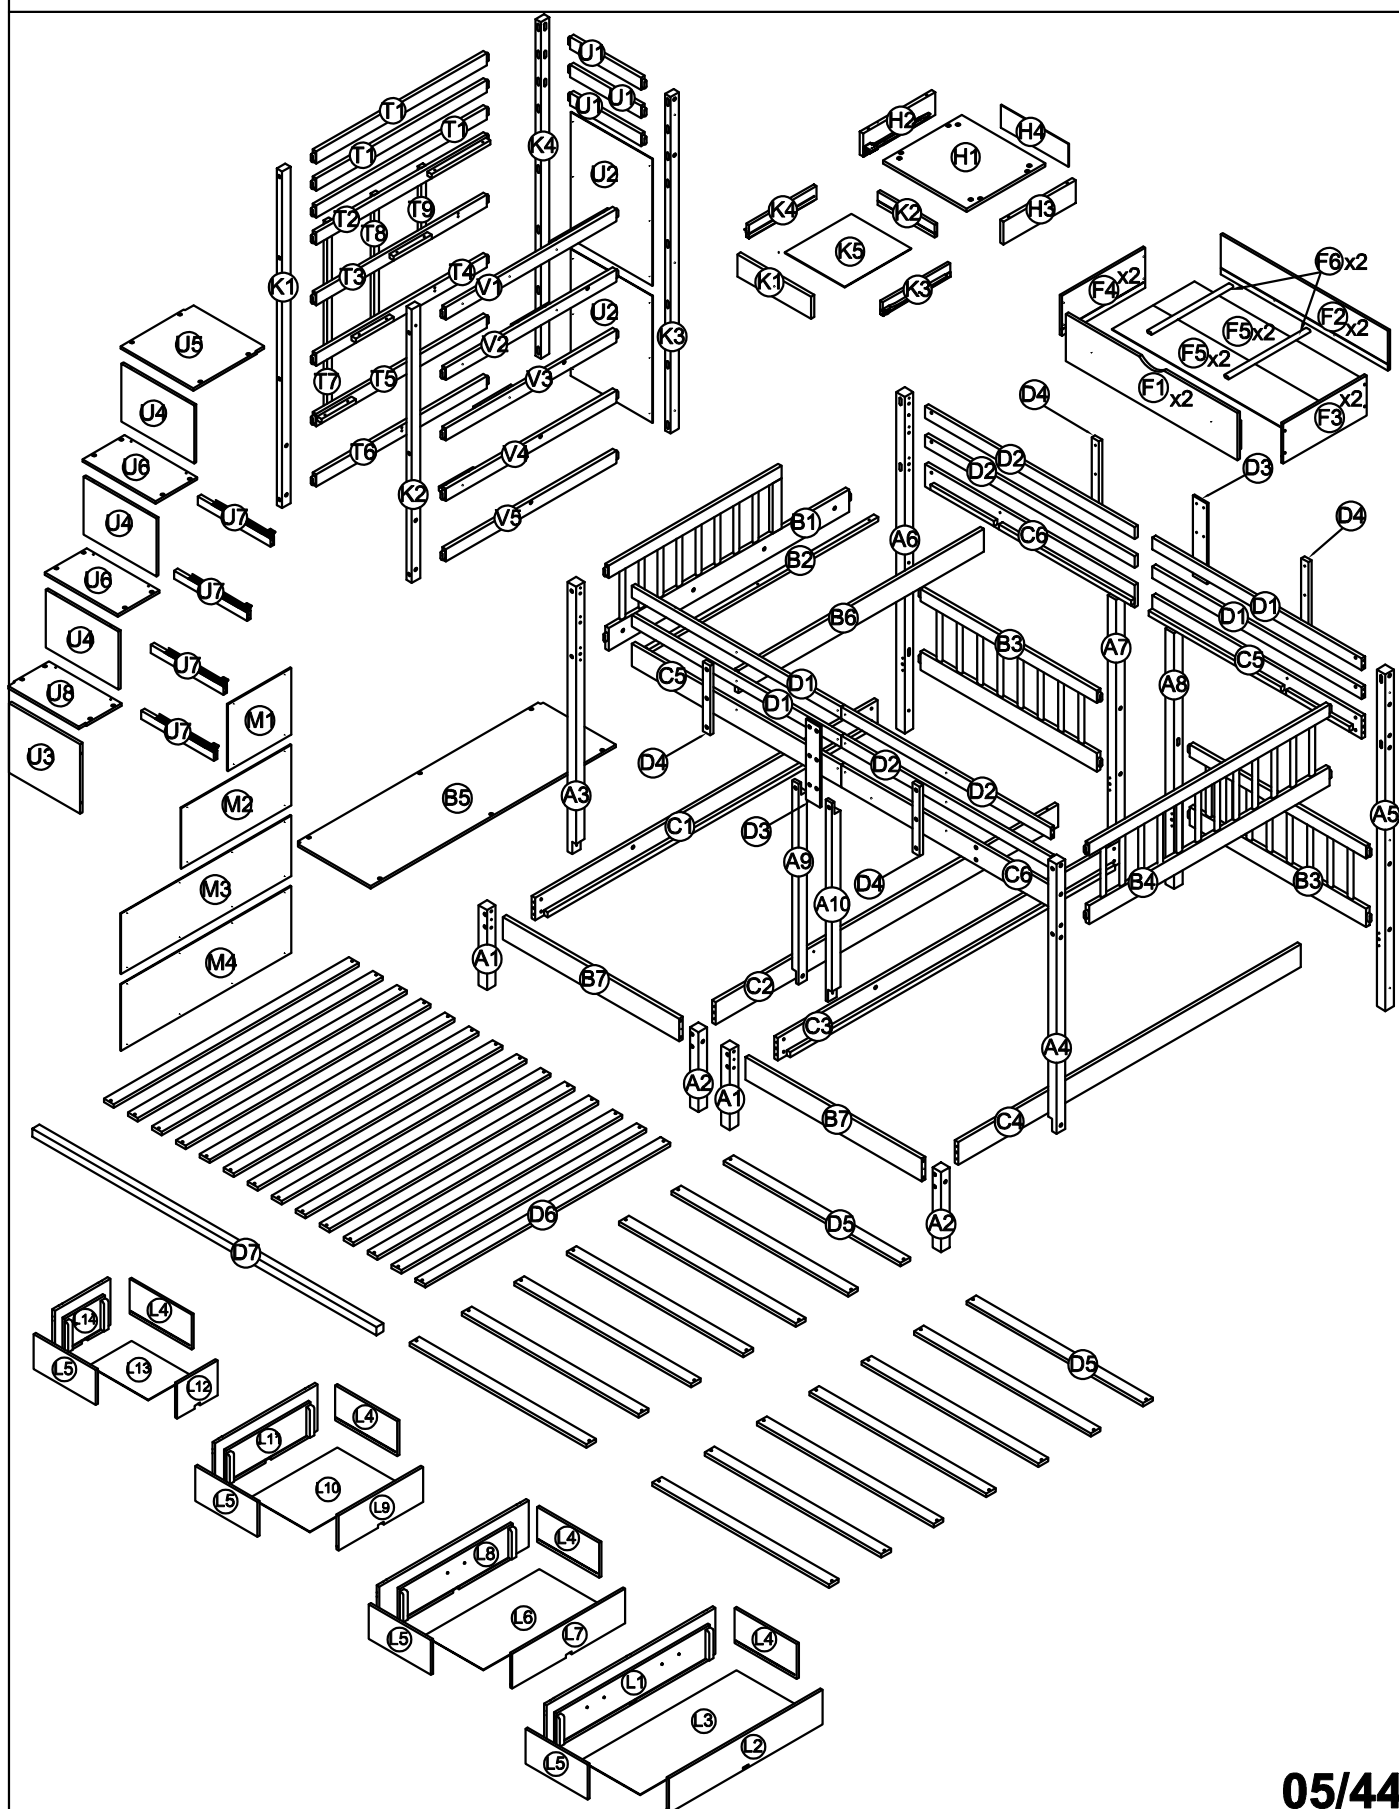

Part List(Box 1-WF293769)

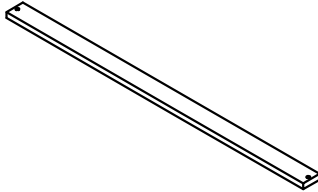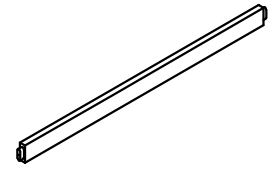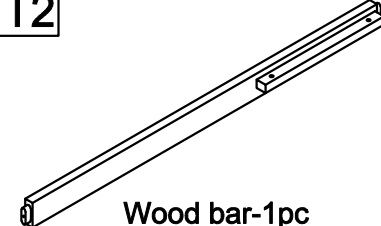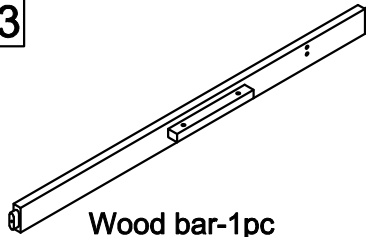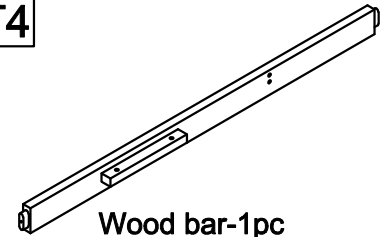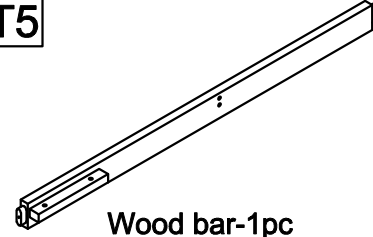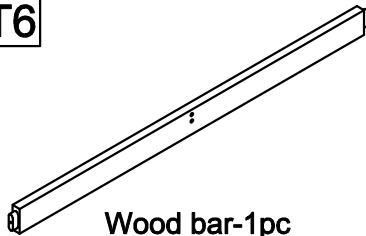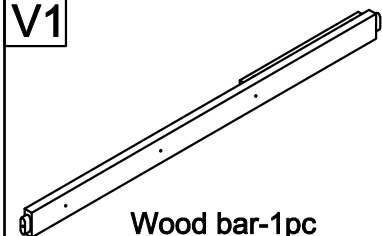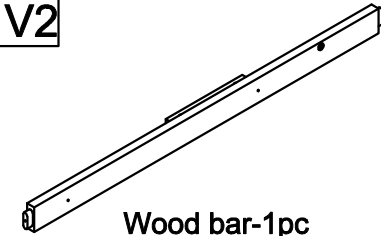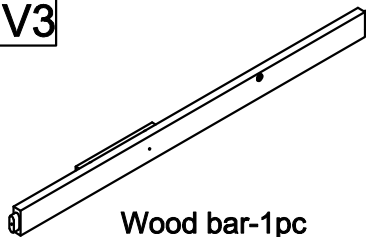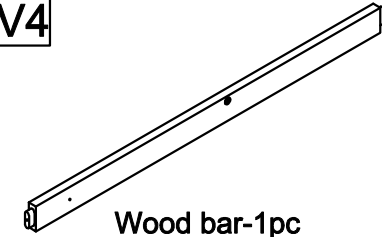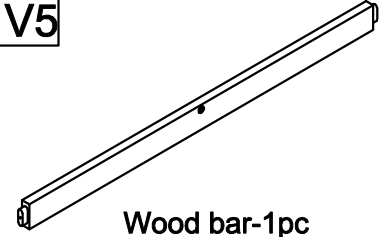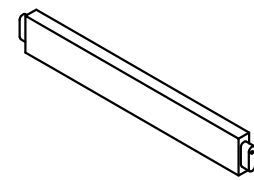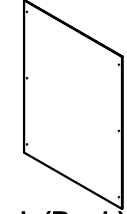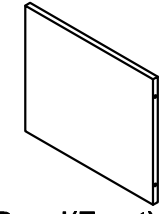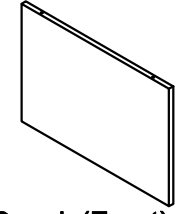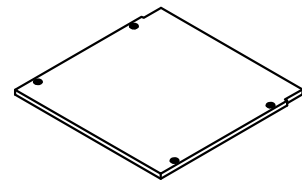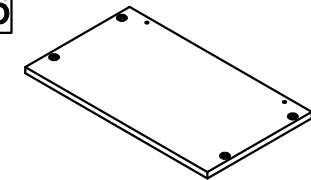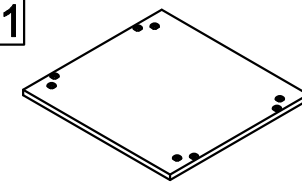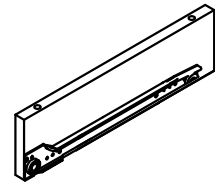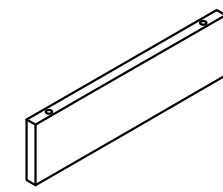
D5  Short Slant-14pcs	T1  Wood bars-3pcs	T2  Wood bar-1pc
T3  Wood bar-1pc	T4  Wood bar-1pc	T5  Wood bar-1pc
T6  Wood bar-1pc	V1  Wood bar-1pc	V2  Wood bar-1pc
V3  Wood bar-1pc	V4  Wood bar-1pc	V5  Wood bar-1pc
U1  Wood bars(Back)-3pcs	U2  Panels(Back)-2pcs	U3  Panel(Front)-1pc
U4  Panels(Front)-3pcs	U5  Panel(Top)-1pc	U6  Panels-2pcs
H1  Panle-1pc	H2  Side Panle-1pc	H3  Side Panle-1pc

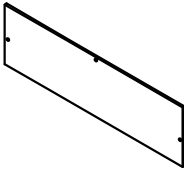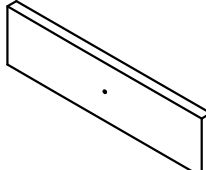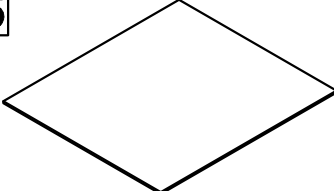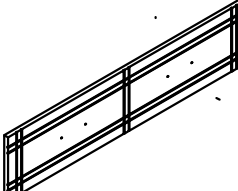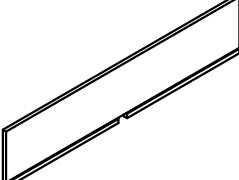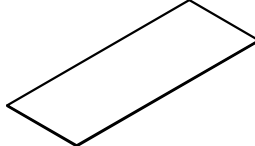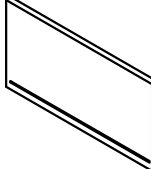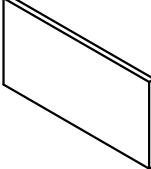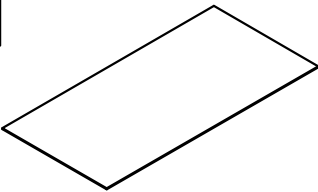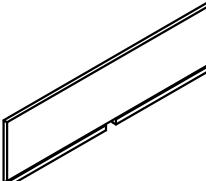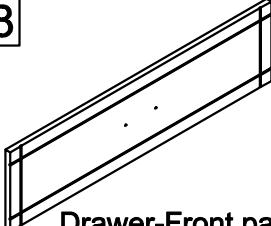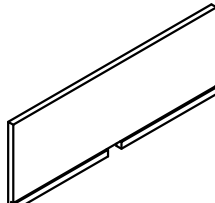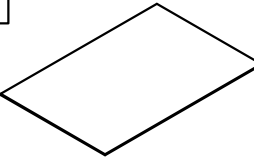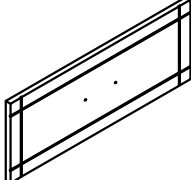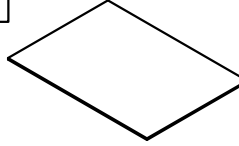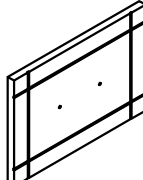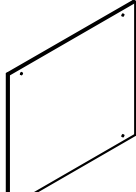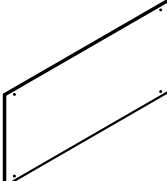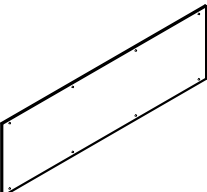Part List(Box 1-WF293769)

H4  Back Panel-1pc	K1  Drawer-Front Panel-1pc	K2  Drawer-Back Panel-1pc
K5  Drawer-Bottom Panel-1pc	L1  Drawer-Front panel-1pc	L2  Drawer-Back panel-1pc
L3  Drawer-Bottom panel-1pc	L4  Drawer-Side panels-4pcs	L5  Drawer-Side panels-4pcs
L6  Drawer-Bottom panel-1pc	L7  Drawer-Back panel-1pc	L8  Drawer-Front panel-1pc
L9  Drawer-Back panel-1pc	L10  Drawer-Bottom panel-1pc	L11  Drawer-Front panel-1pc
L12  Drawer-Back panel-1pc	L13  Drawer-Bottom panel-1pc	L14  Drawer-Front panel-1pc
M1  Panel-1pc	M2  Panel-1pc	M3  Panel-1pc


Part List(Box 1-WF293769)

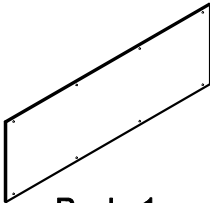M4








Panle-1pc

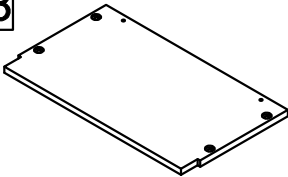U8








Panel-1pc









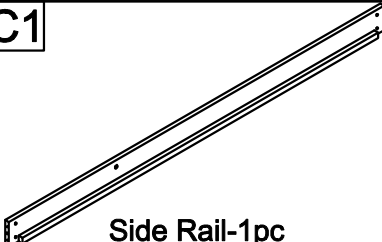
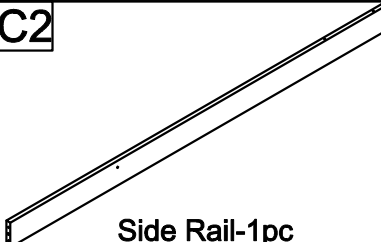
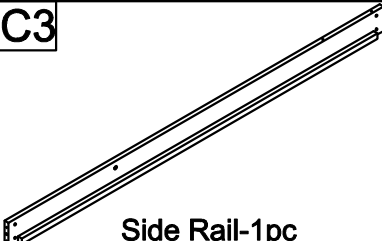
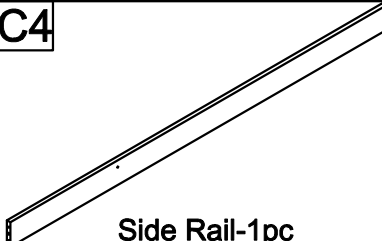
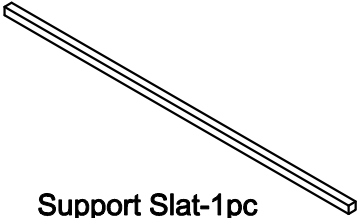
Part List (Box 2-WF293770)

A1  Legs-2pcs	A2  Legs-2pcs	A3  Leg-1pc
A4  Leg-1pc	A5  Leg-1pc	A6  Leg-1pc
A7  Leg-1pc	A8  Leg-1pc	A9  Leg-1pc
A10  Leg-1pc	C1  Side Rail-1pc	C2  Side Rail-1pc
C3  Side Rail-1pc	C4  Side Rail-1pc	D7  Support Slat-1pc
K1  Leg-1pc	K2  Leg-1pc	K3  Leg-1pc
K4  Leg-1pc	T7  Vertical Bar-1pc	T8  Vertical Bar-1pc



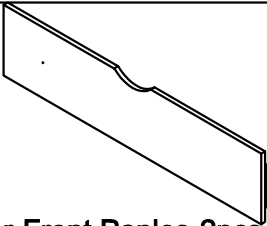
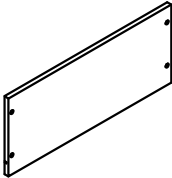
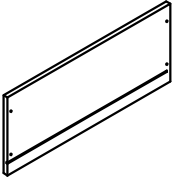
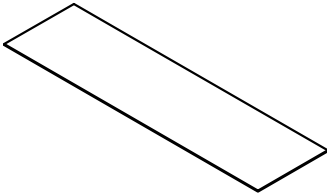
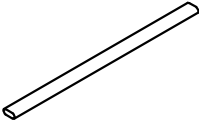
Part List (Box 2-WF293770)

T9  Vertical Bar-1pc	F1  Drawer-Front Panles-2pcs	F2  Drawer-Back Panles-2pcs
F3  Drawer-Side Panles-2pcs	F4  Drawer-Side Panles-2pcs	F5  Drawer-Bottom Panles-4pcs
F6  Drawer-Support Bottom Panles-4pcs		

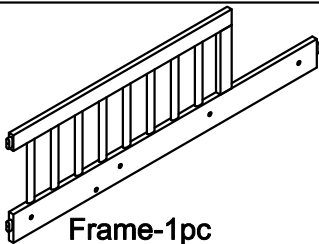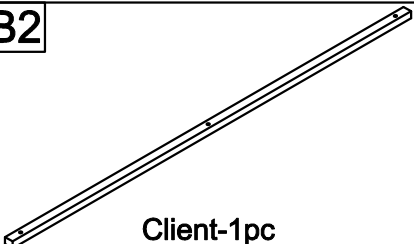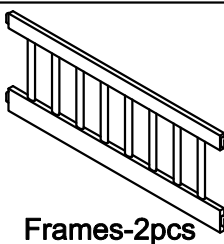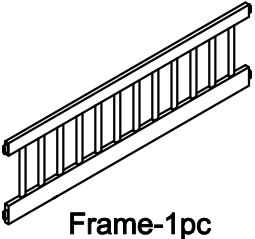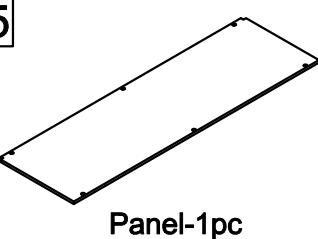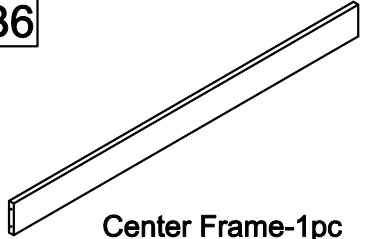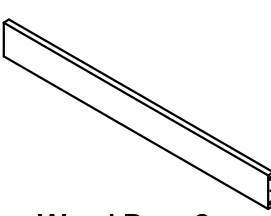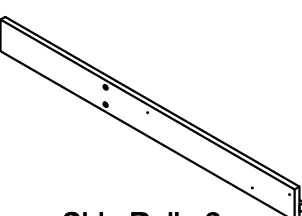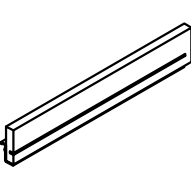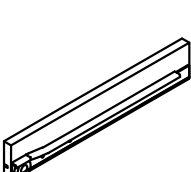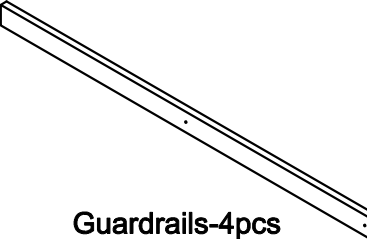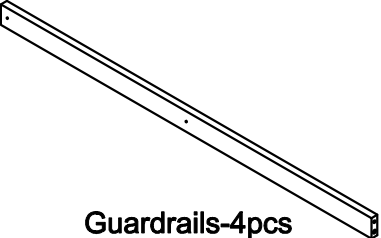
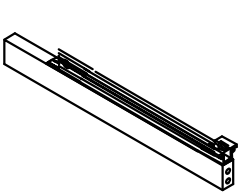
Part List & Hardware List(Box 3-WF293771)

B1  Frame-1pc	B2  Client-1pc	B3  Frames-2pcs
B4  Frame-1pc	B5  Panel-1pc	B6  Center Frame-1pc
B7  Wood Bars-2pcs	C5  Side Rails-2pcs	C6  Side Rails-2pcs
K4  Drawer-Side Panle-1pc	K3  Drawer-Side Panle-1pc	D1  Guardrails-4pcs
D2  Guardrails-4pcs	D3  Vertical Bars-2pcs	D4  Vertical Bars-4pcs
D6  Long Slant-14pcs	U7  Wood bars-4pcs	

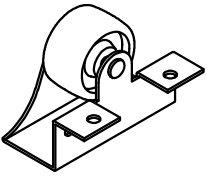Hardware List(Box 3-WF293771)

1		2		3	
	M4 x 30 mm Wood Screws 120pcs		Ø10 x 40 mm Wood dowel 28pcs		Screws 1/4" x80 4pcs
4		5		6	
	Screws 1/4" x70 31pcs		Ø1/4" x 35 mm Hex-Head bolts 6pcs		Ø1/4" x 100 mm Hex-Head bolts 32pcs
7		8		9	
	Ø1/4" x 13 mm Horizontal-Hole bolts 32pcs		Allen Key 1pc		Ø1/4" x 15 mm Canopy head though -4pcs
10		11		12	
	Screws 1/4" x30 35pcs		Screws 1/4" x50 16pcs		Ø1/4" x 25 mm Hex-Head bolts 32pcs
13		14		15	
	Ø1/4" x 40 mm Hex-Head bolts 4pcs		Ø8 x 30 mm Wood dowel 24pcs		Stop Drawer-4pcs
16		17		18	
	M4 x 15 mm Wood Screws 39pcs		Screws 1/4" x40 1pc		Ø1/6" x 25 mm Hex-Head bolts 1pc
19		20		21	
	Handle Wood 1pc		M3.5x 12 mm Wood Screws 24pcs		Wheels 8pcs

Hardware List(Box 3-WF293771)


22  Handle 5pcs	23  Small Bolts M4x15 10pcs	24  Runner(4pcs) 340*30mm
25  Screw M3.5x12 mm 12pcs	26  Steel Bracket 2pc	27  M4 x 20 mm Wood Screws 8pcs

STEP1: Following below illustration Assembly Bottom bed's Footboard .

-Using hardware #1 connect B7 Woodbar with Stop Drawer #15

-Using hardware #3 and dowel #2 connect A1(x2) ,A2(x2) legs with B7 Woodbar



3	2	1
		
2x2pcs	4x2pcs	4x2pcs
		15
		
		2x2pcs

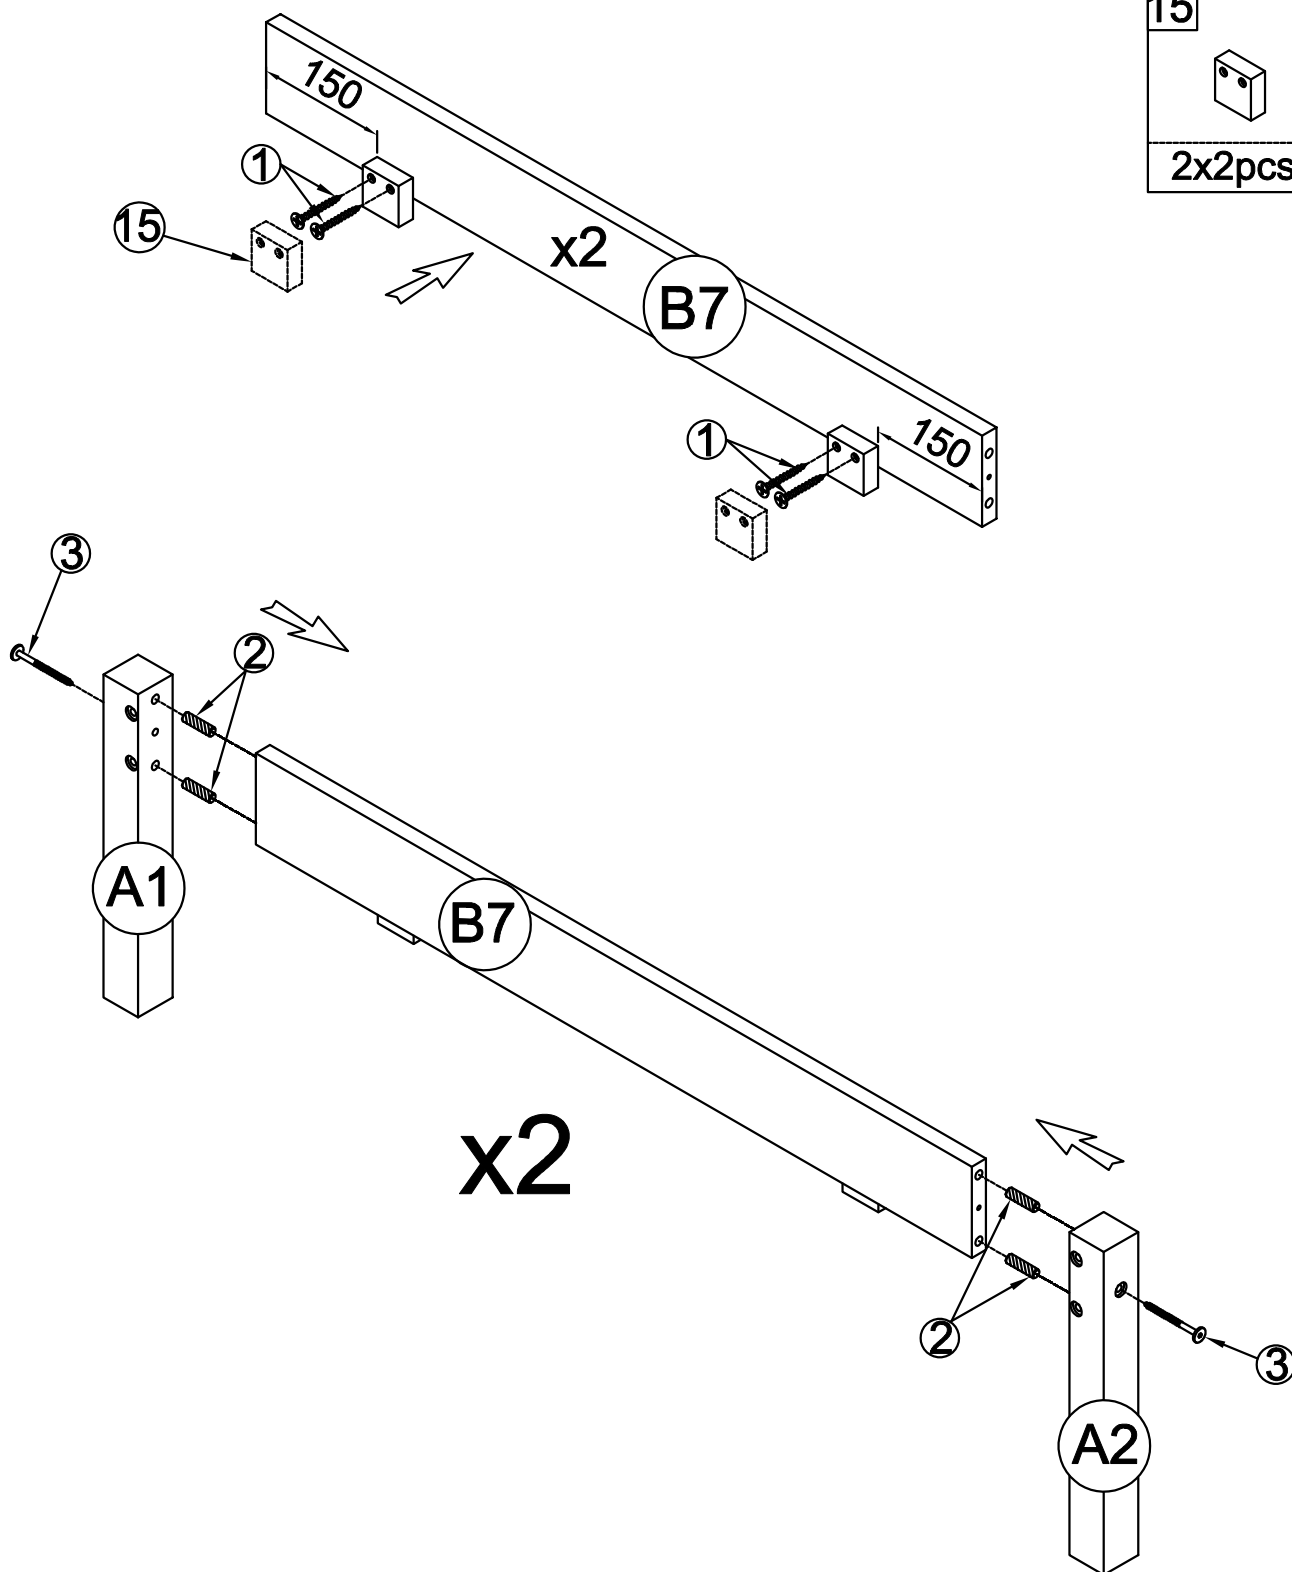

STEP 2: Following below illustration. .

Using hardware #27 connect Steel Bracket(#26) with B4 and B6.

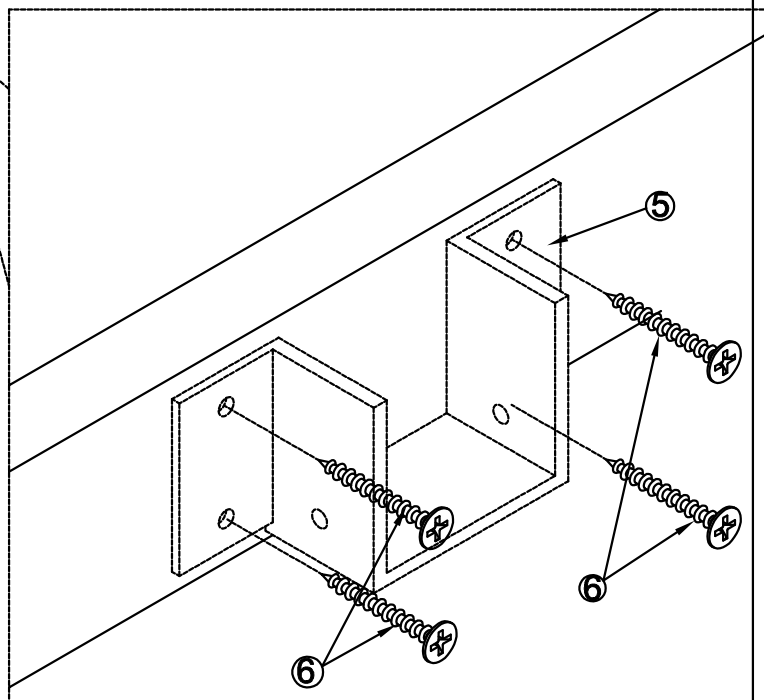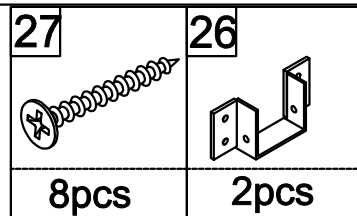Look at detail view for more detail



STEP 3: Following below illustration Assembly Bottom bed's Headboard .

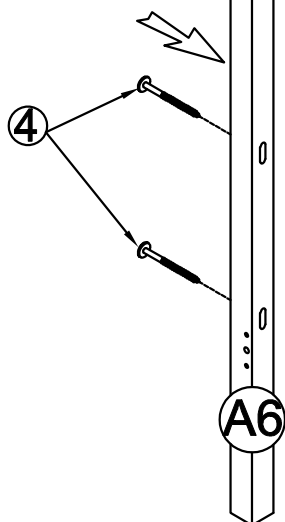
-Using hardware #4 connect B3 Frame with A6,A7 Legs

-Using hardware #3 connect B3 Frame with A5,A8 Legs



4





4x2pcs



LEFT

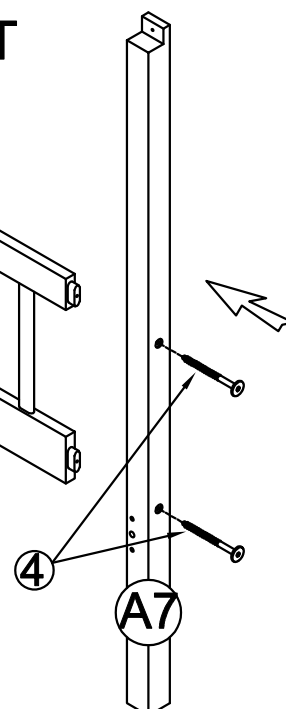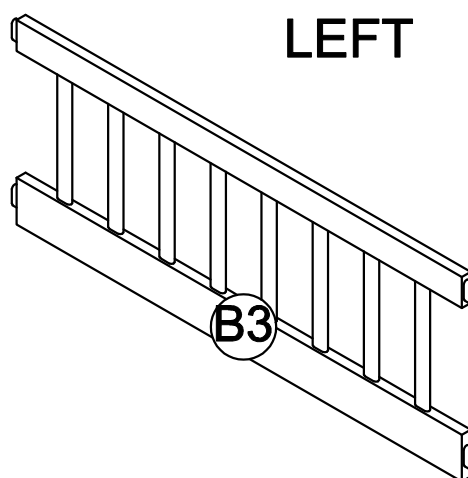

RIGHT

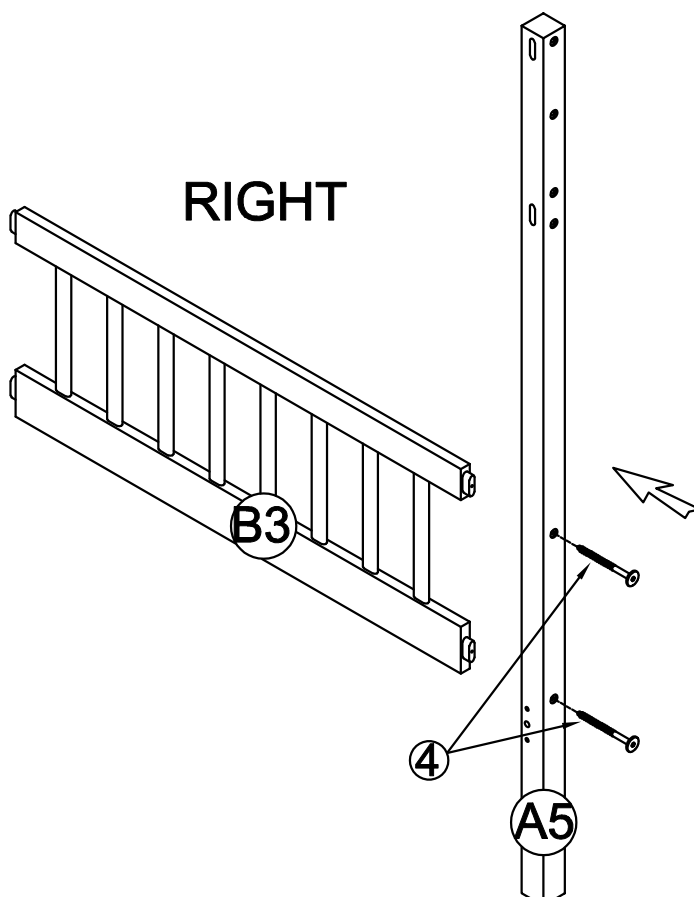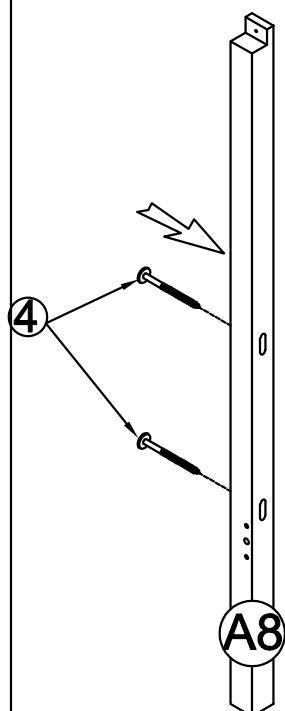


STEP 4: Following below illustration:

-Using hardware #5 connect B2 Woodbar with B1 Frame

5




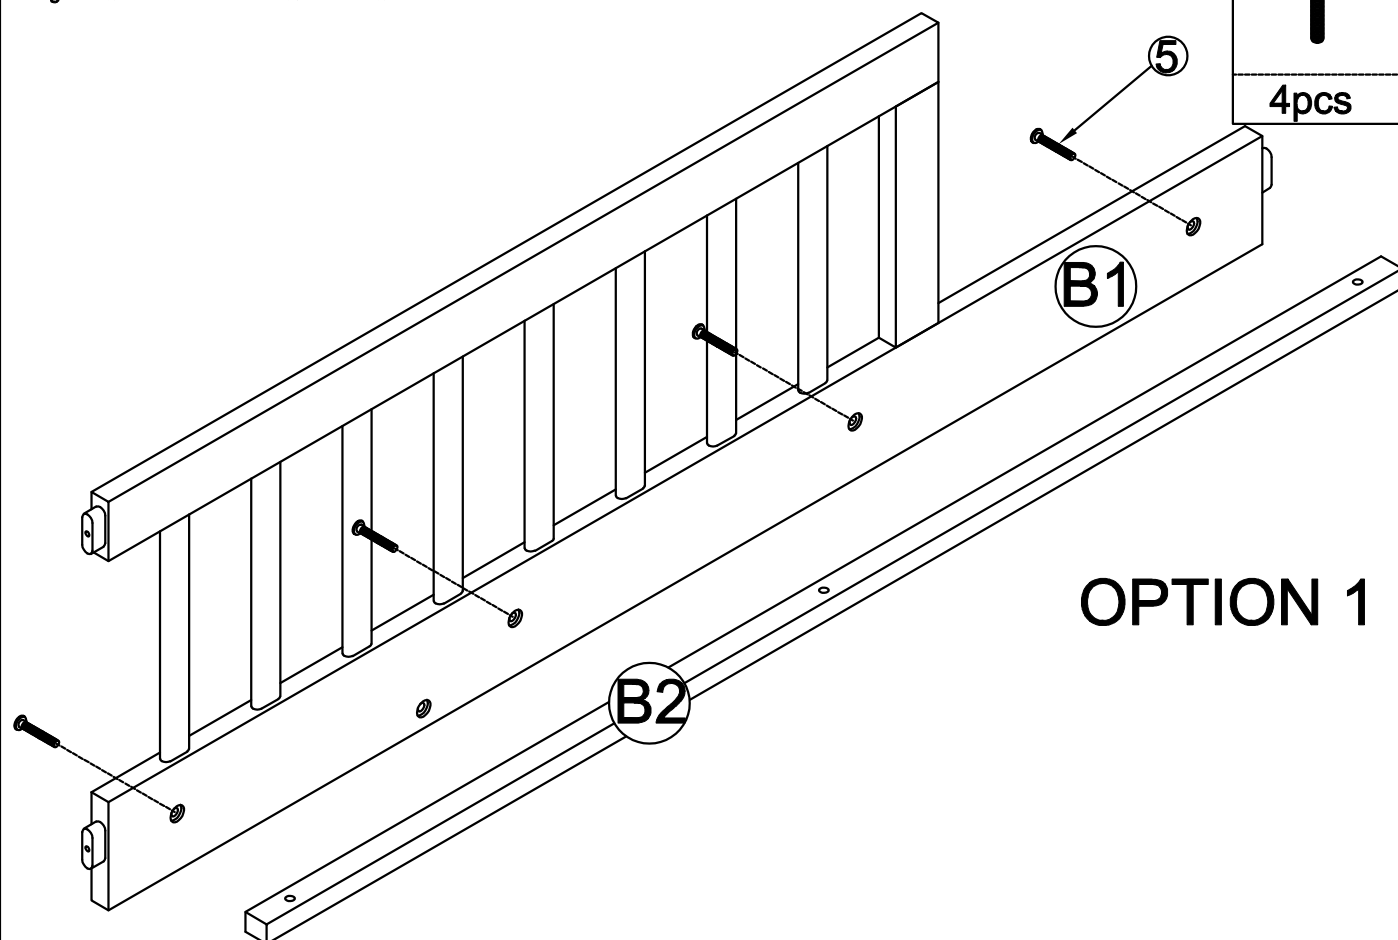4pcs



OPTION 1

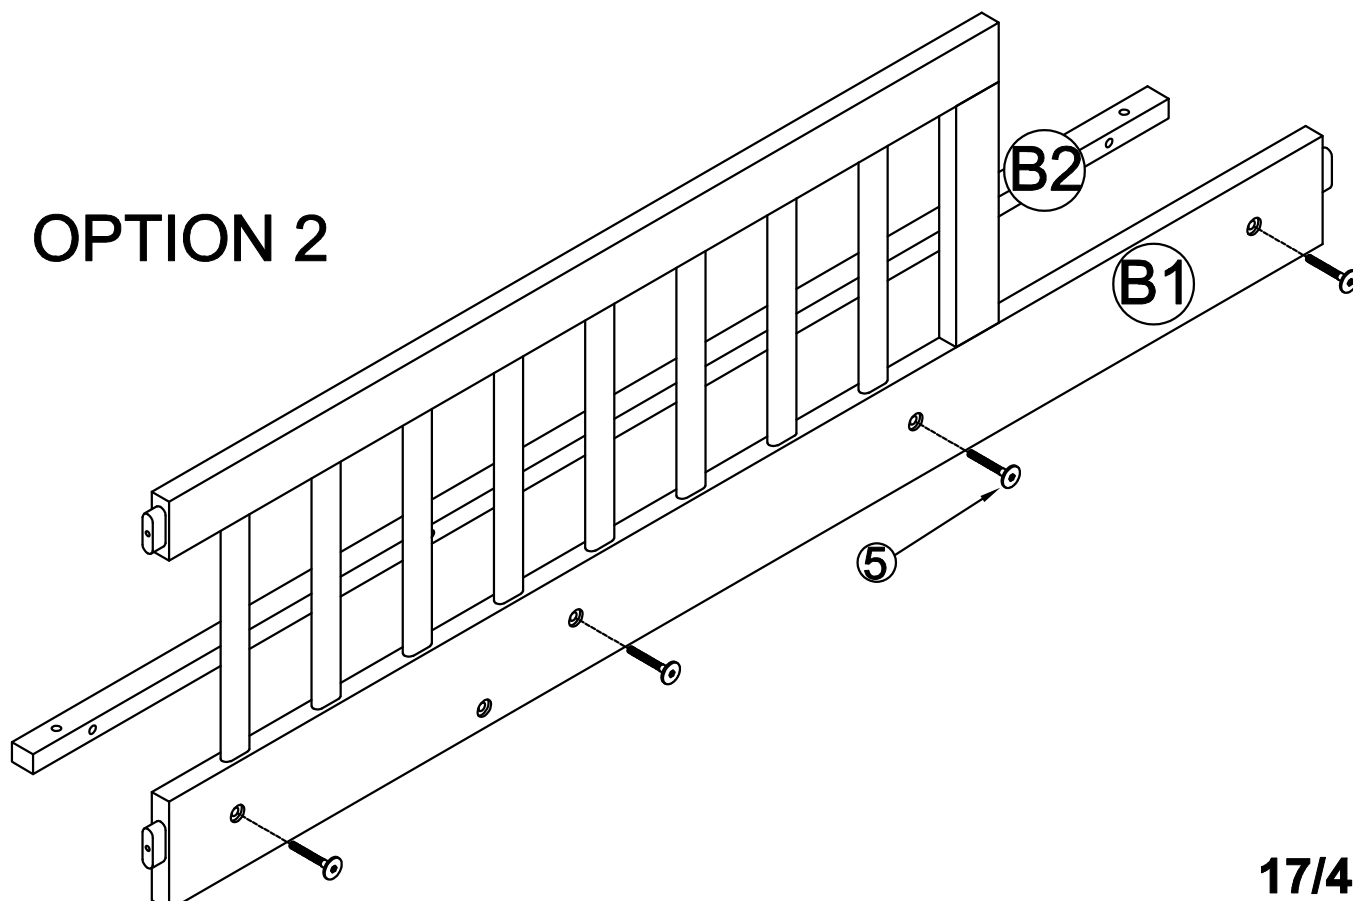OPTION 2



STEP 5(OPTION 1): Following below illustration

- Using hardware #4 connect B1 Frame with A3 Leg
- Using hardware #4 connect B4 Frame with A4 Leg

4

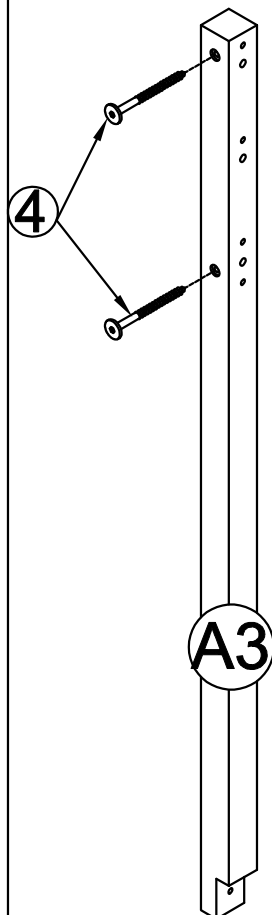


4pcs


LEFT

B1

Completed on step 4-OPTION 1



A3

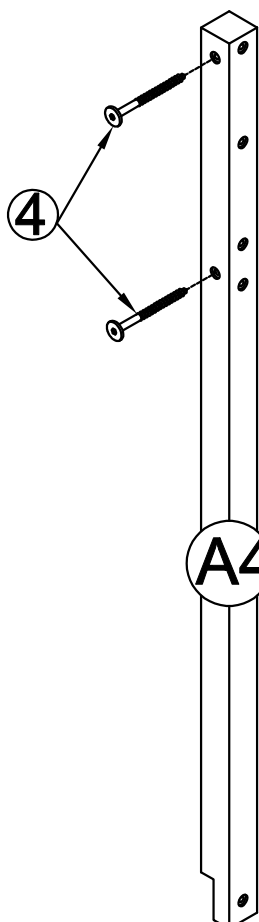

A4

B4

RIGHT

STEP 5(OPTION 2): Following below illustration

-Using hardware #4 connect B1 Frame with A4 Leg

-Using hardware #4 connect B4 Frame with A3 Leg

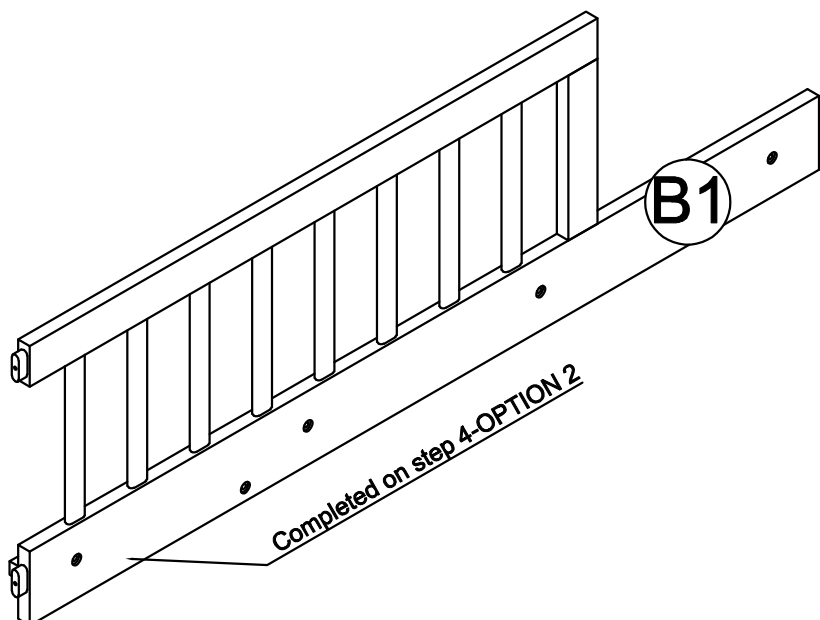
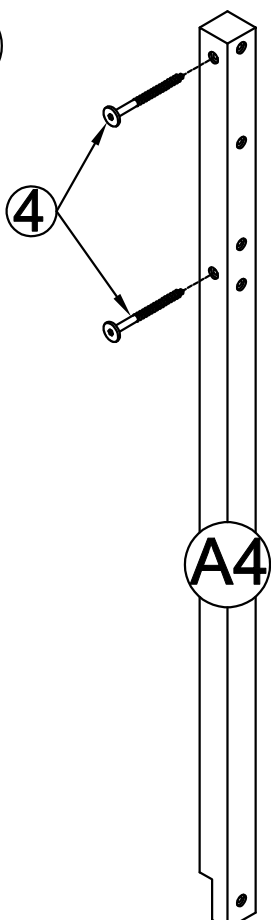
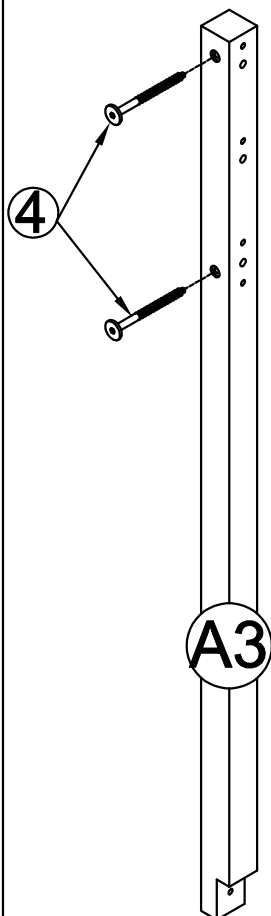
4



4pcs

LEFT

B4




RIGHT

STEP 6: Following below illustration:

-Using hardward #6, #7 and dowel #2 to Assembly Frames (Completed on step 1,3) with siderail C3,C4.

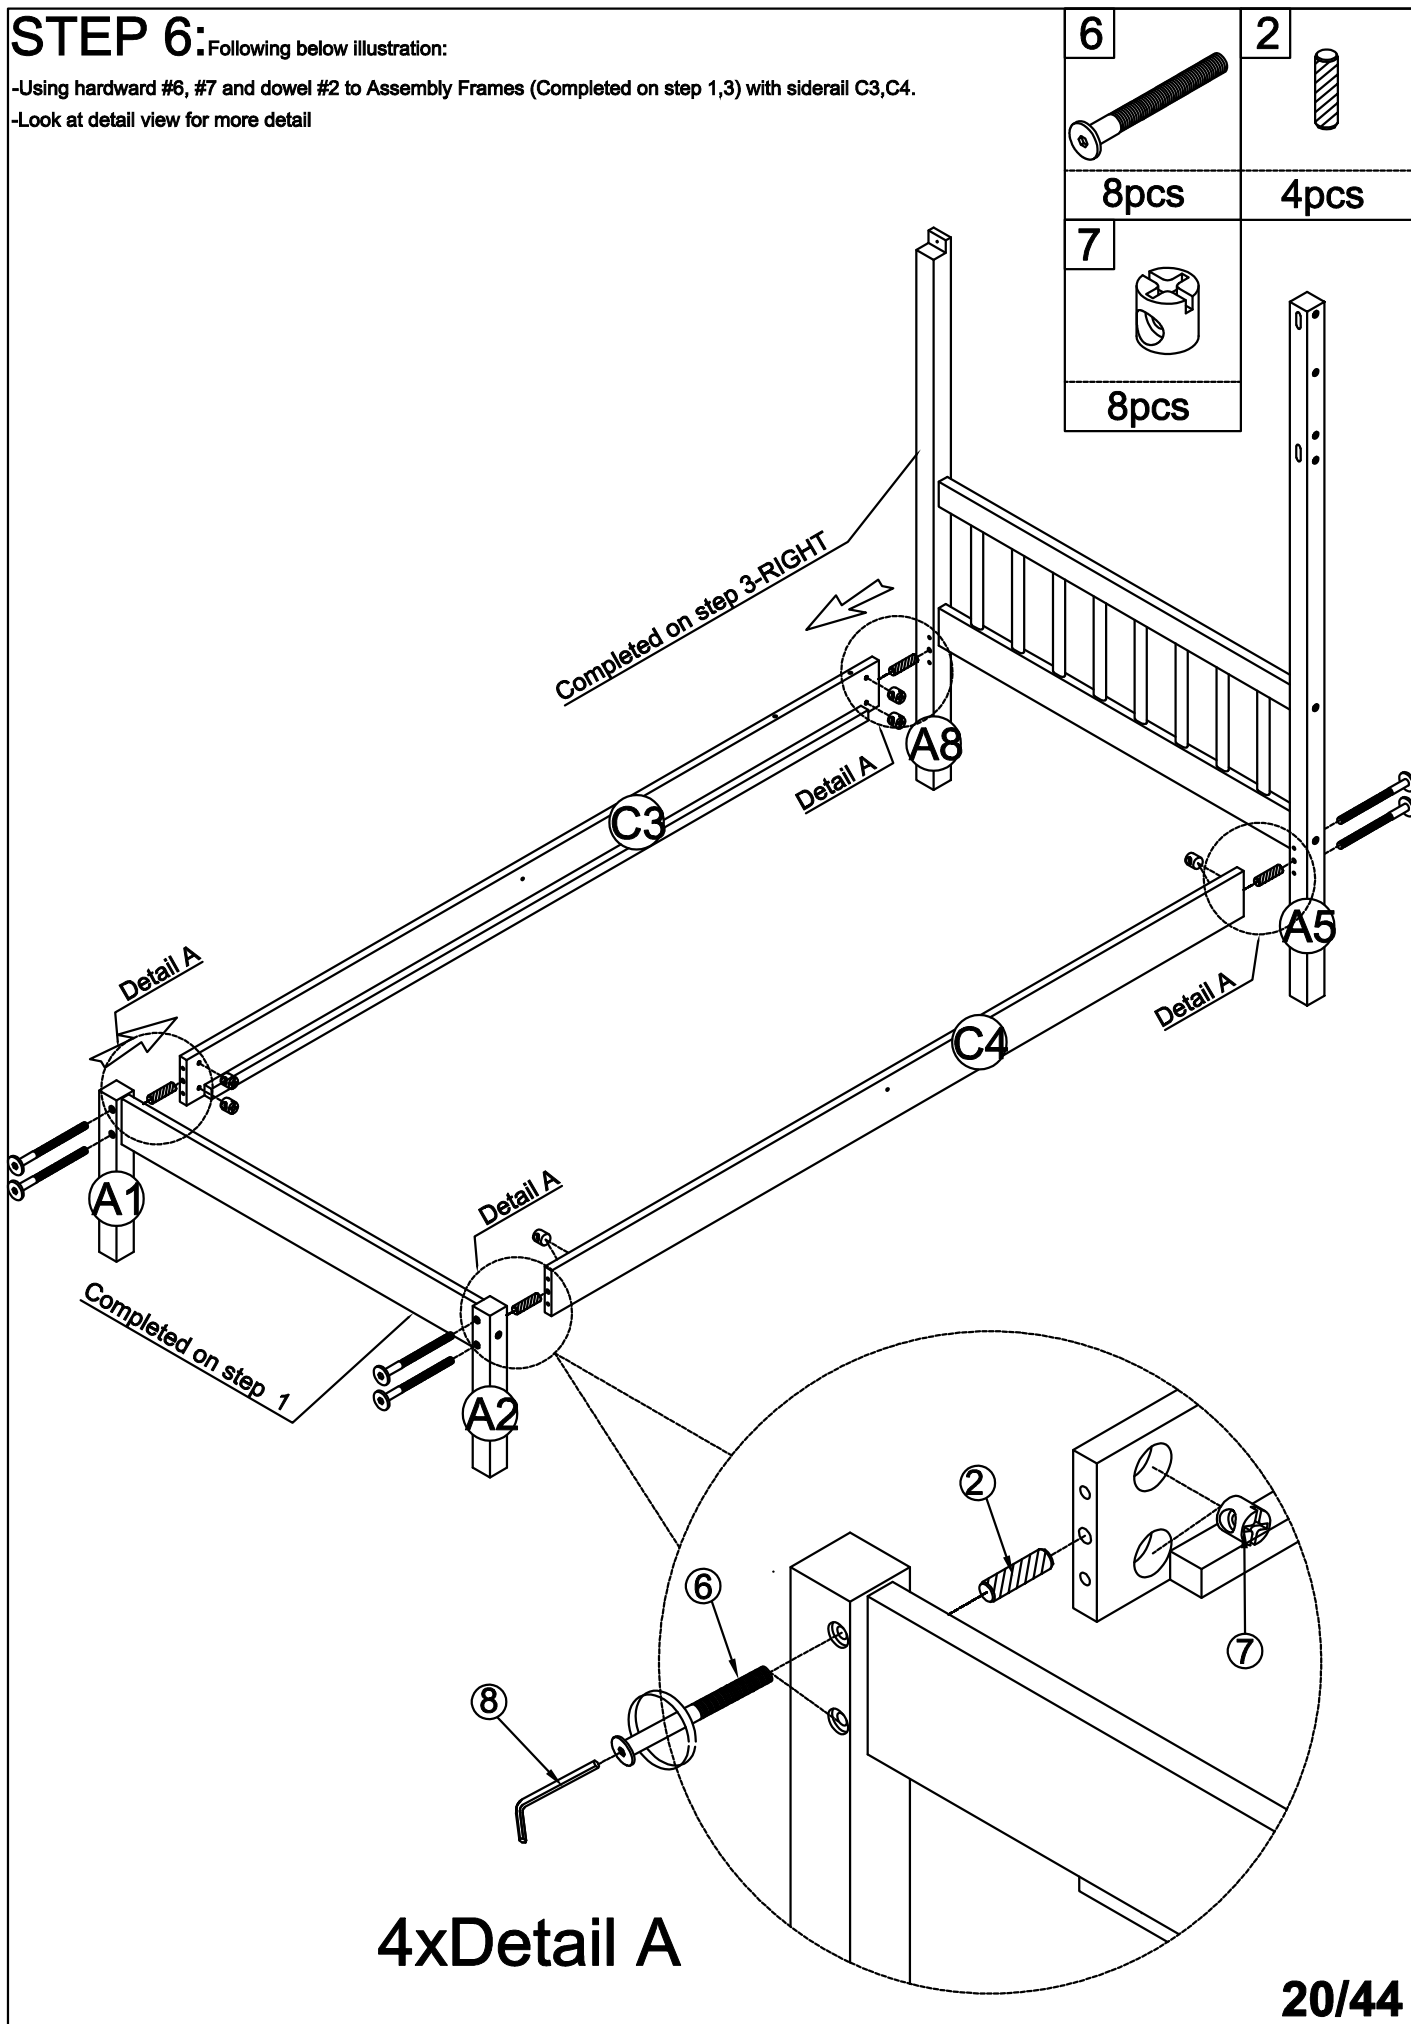-Look at detail view for more detail





STEP 7: Following below illustration

-Using hardware #4,#5,#9 connect Frame(completed on step 5 OPTION 1-RIGHT) with Frame (completed on step 6)

Option 2:

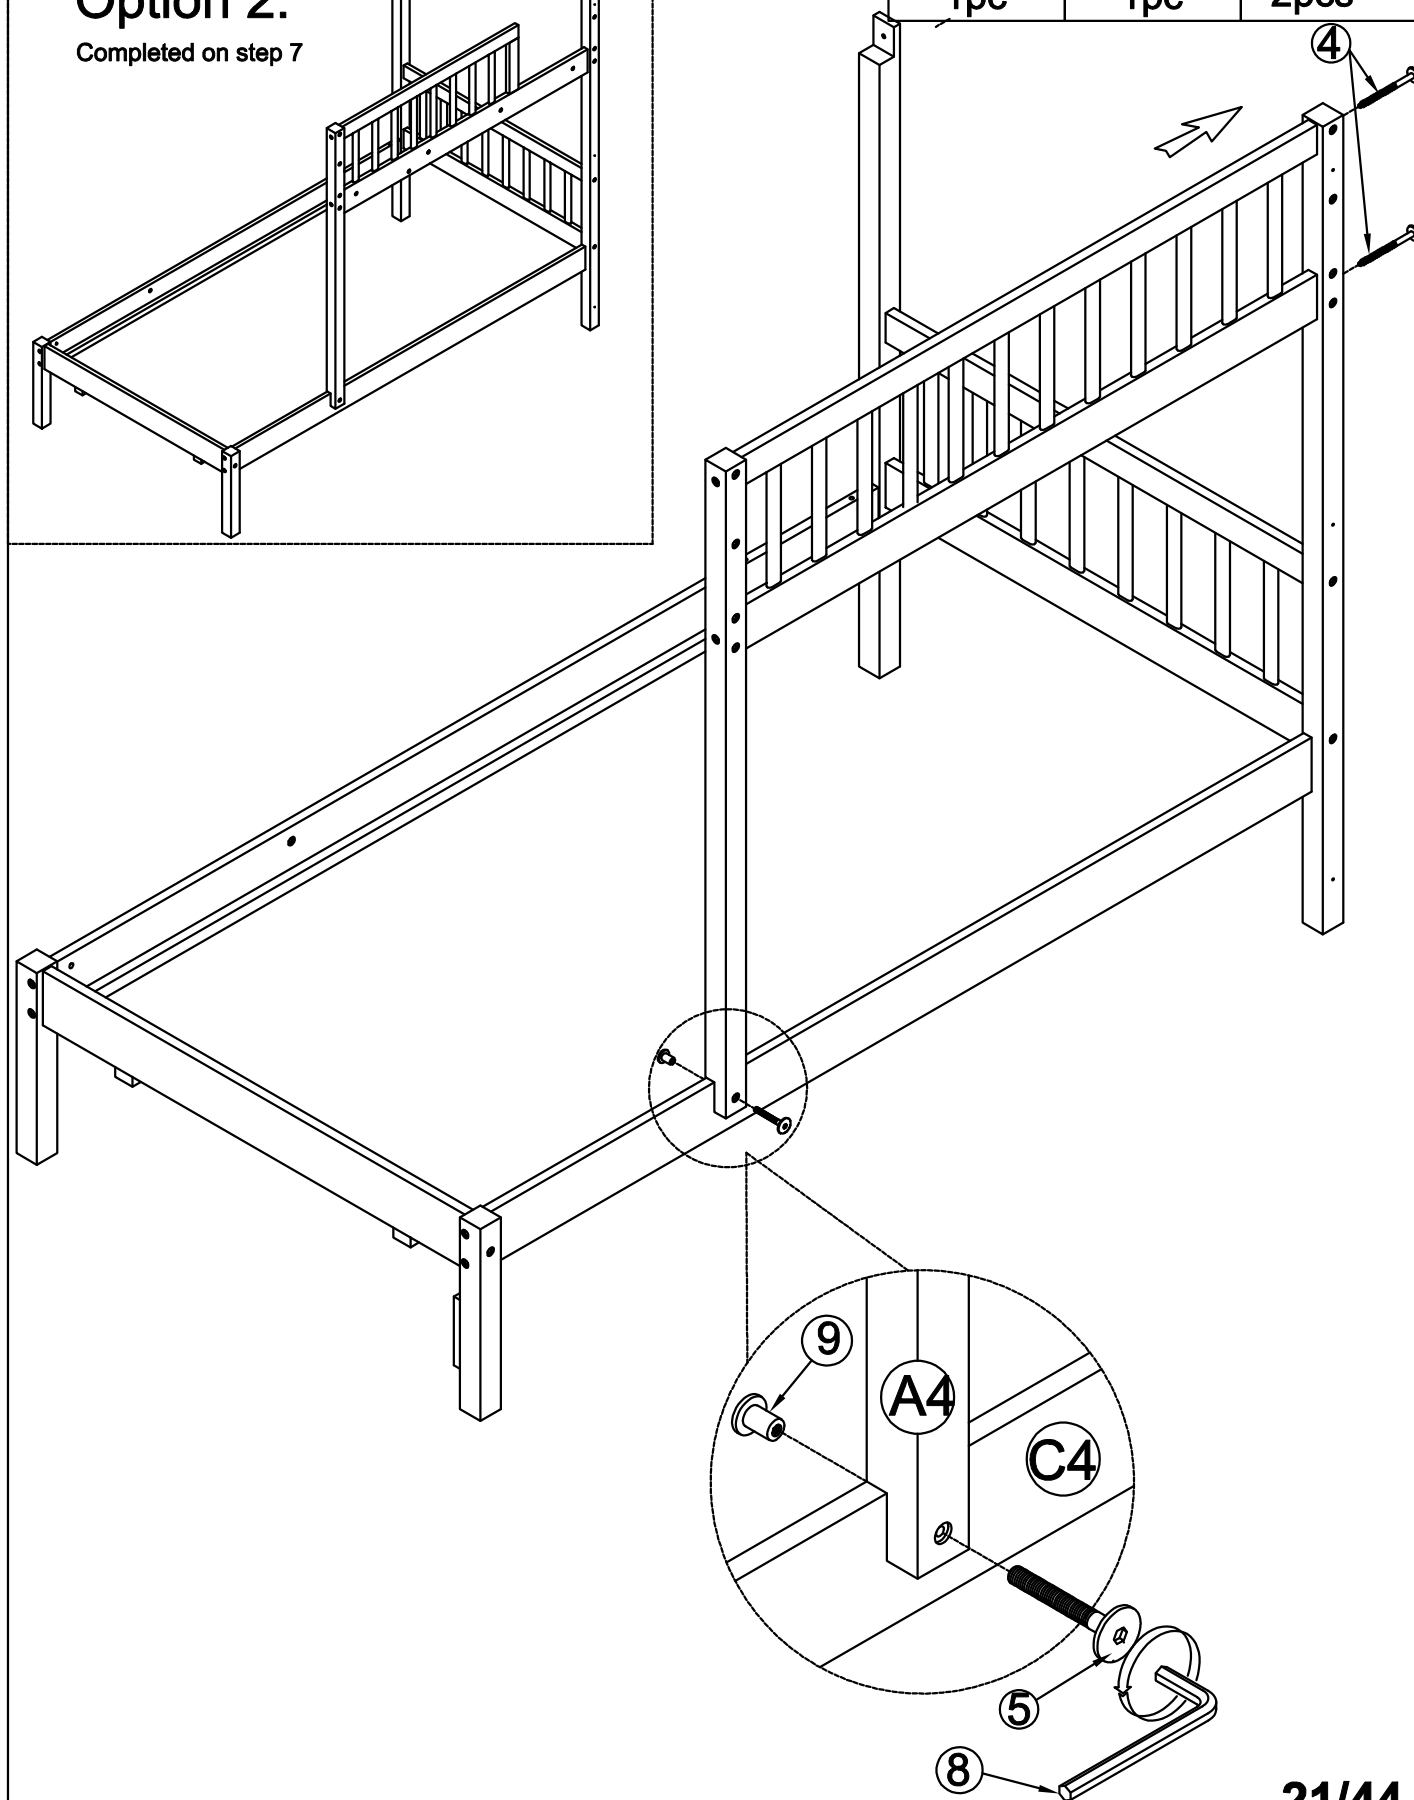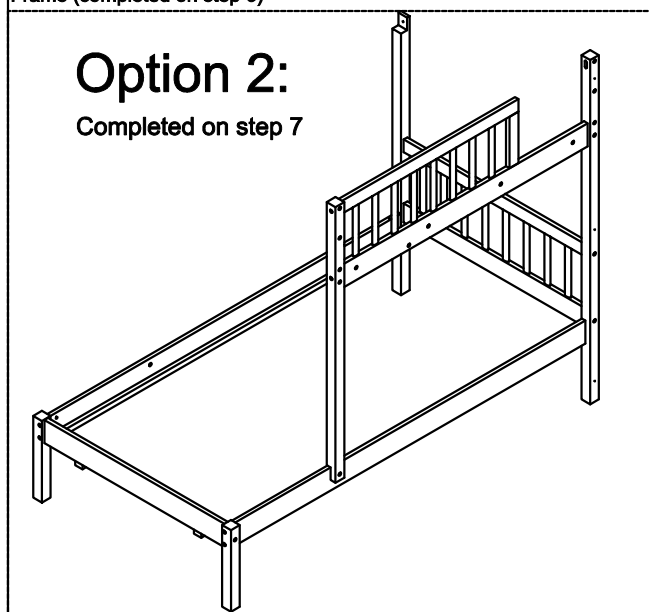Completed on step 7




9	5	4
1pc	1pc	2pcs

STEP 8: Following below illustration:

-Screw 7slats D5 with Side Rail C3,C4 by using hardward #1.

- Look at detail view for more detail

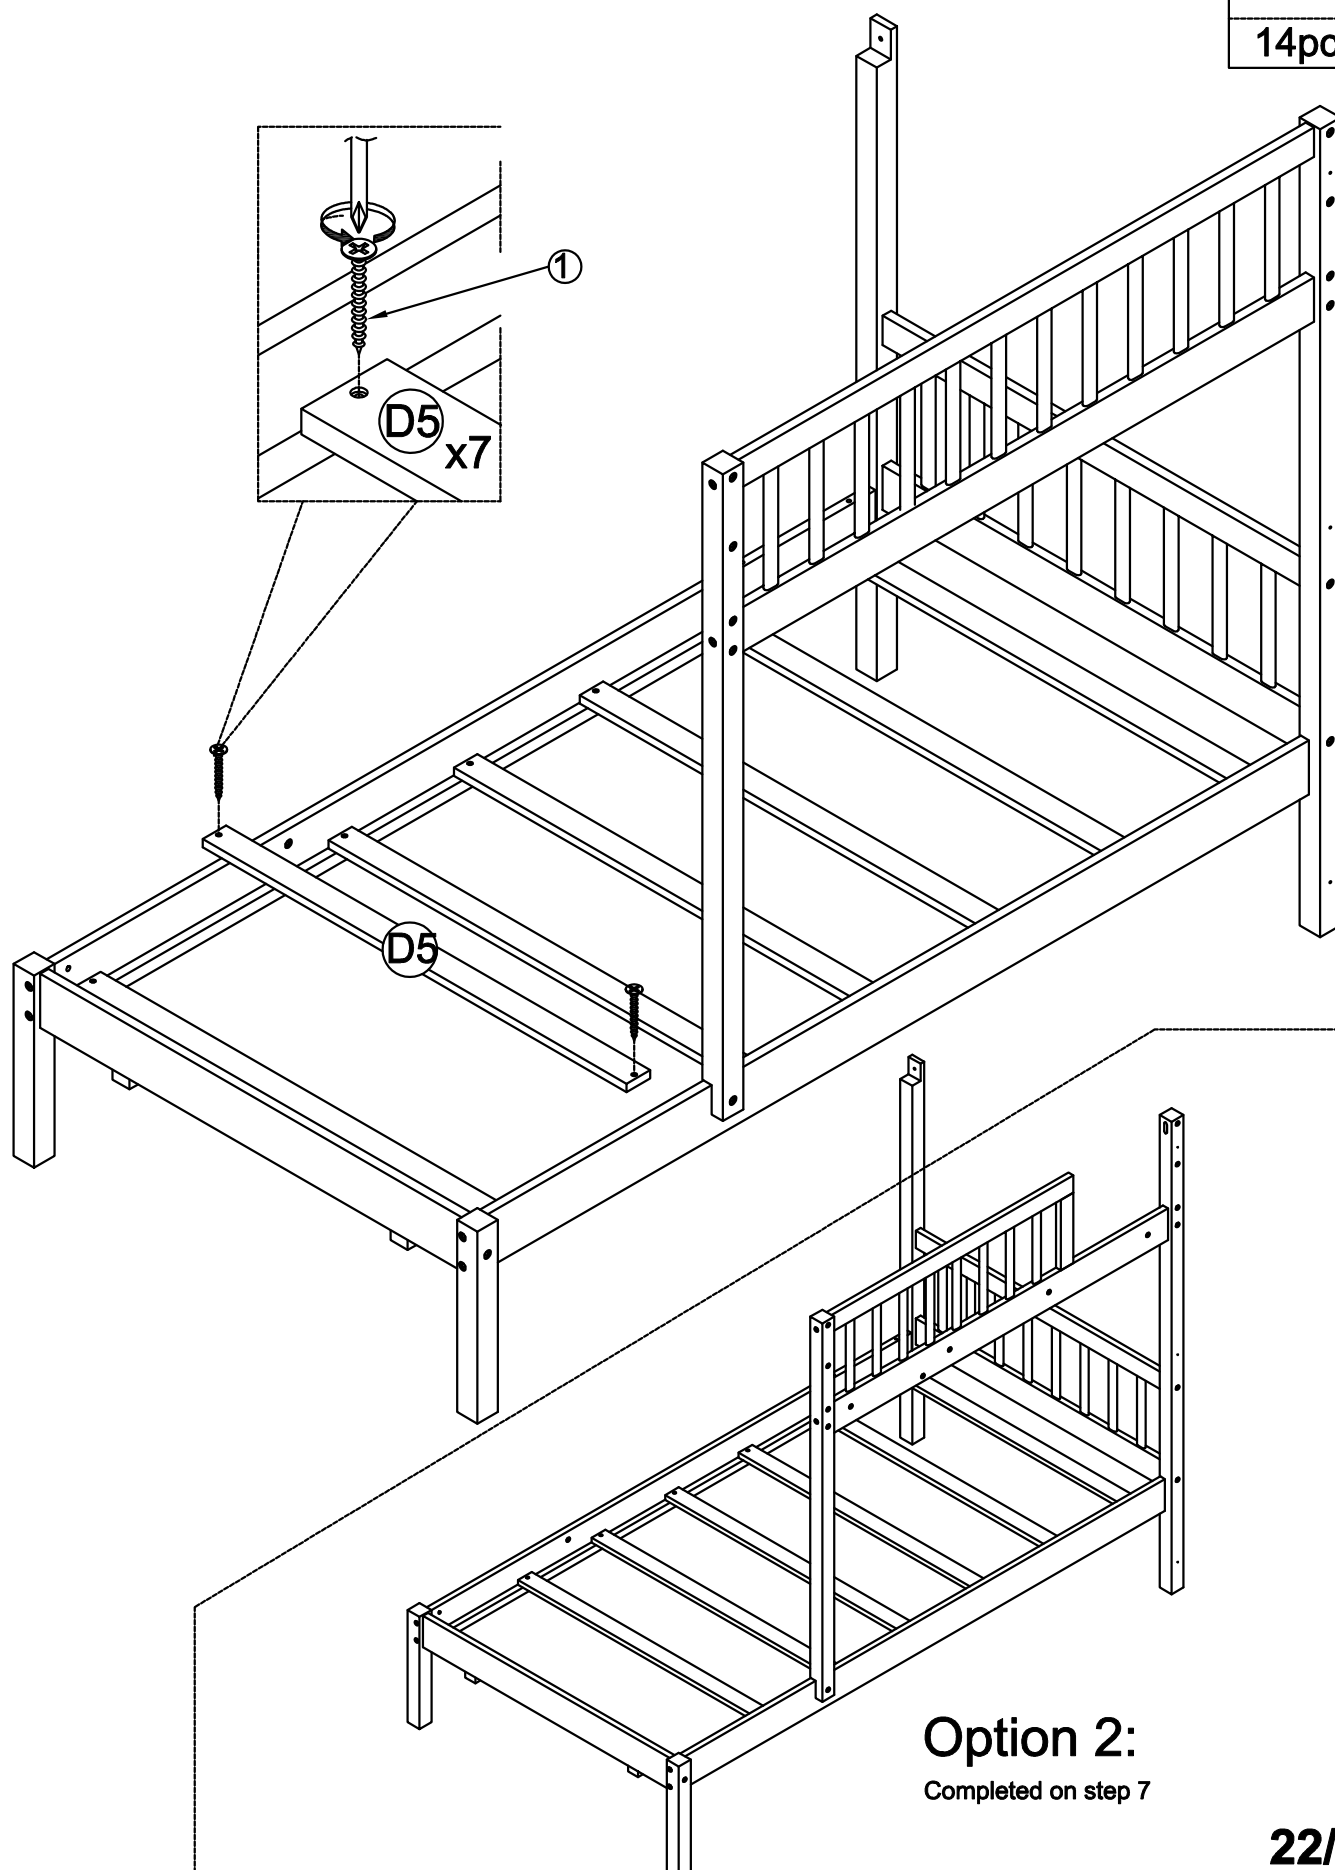14pcs





Option 2:

Completed on step 7

STEP 9: Following below illustration:

- Using hardward #6, #7 and dowel #2 to Assembly Frames (Completed on step 1,3) with siderail C1,C2.
- Look at detail view for more detail

6	2
	
8pcs	4pcs
7	
	
8pcs	

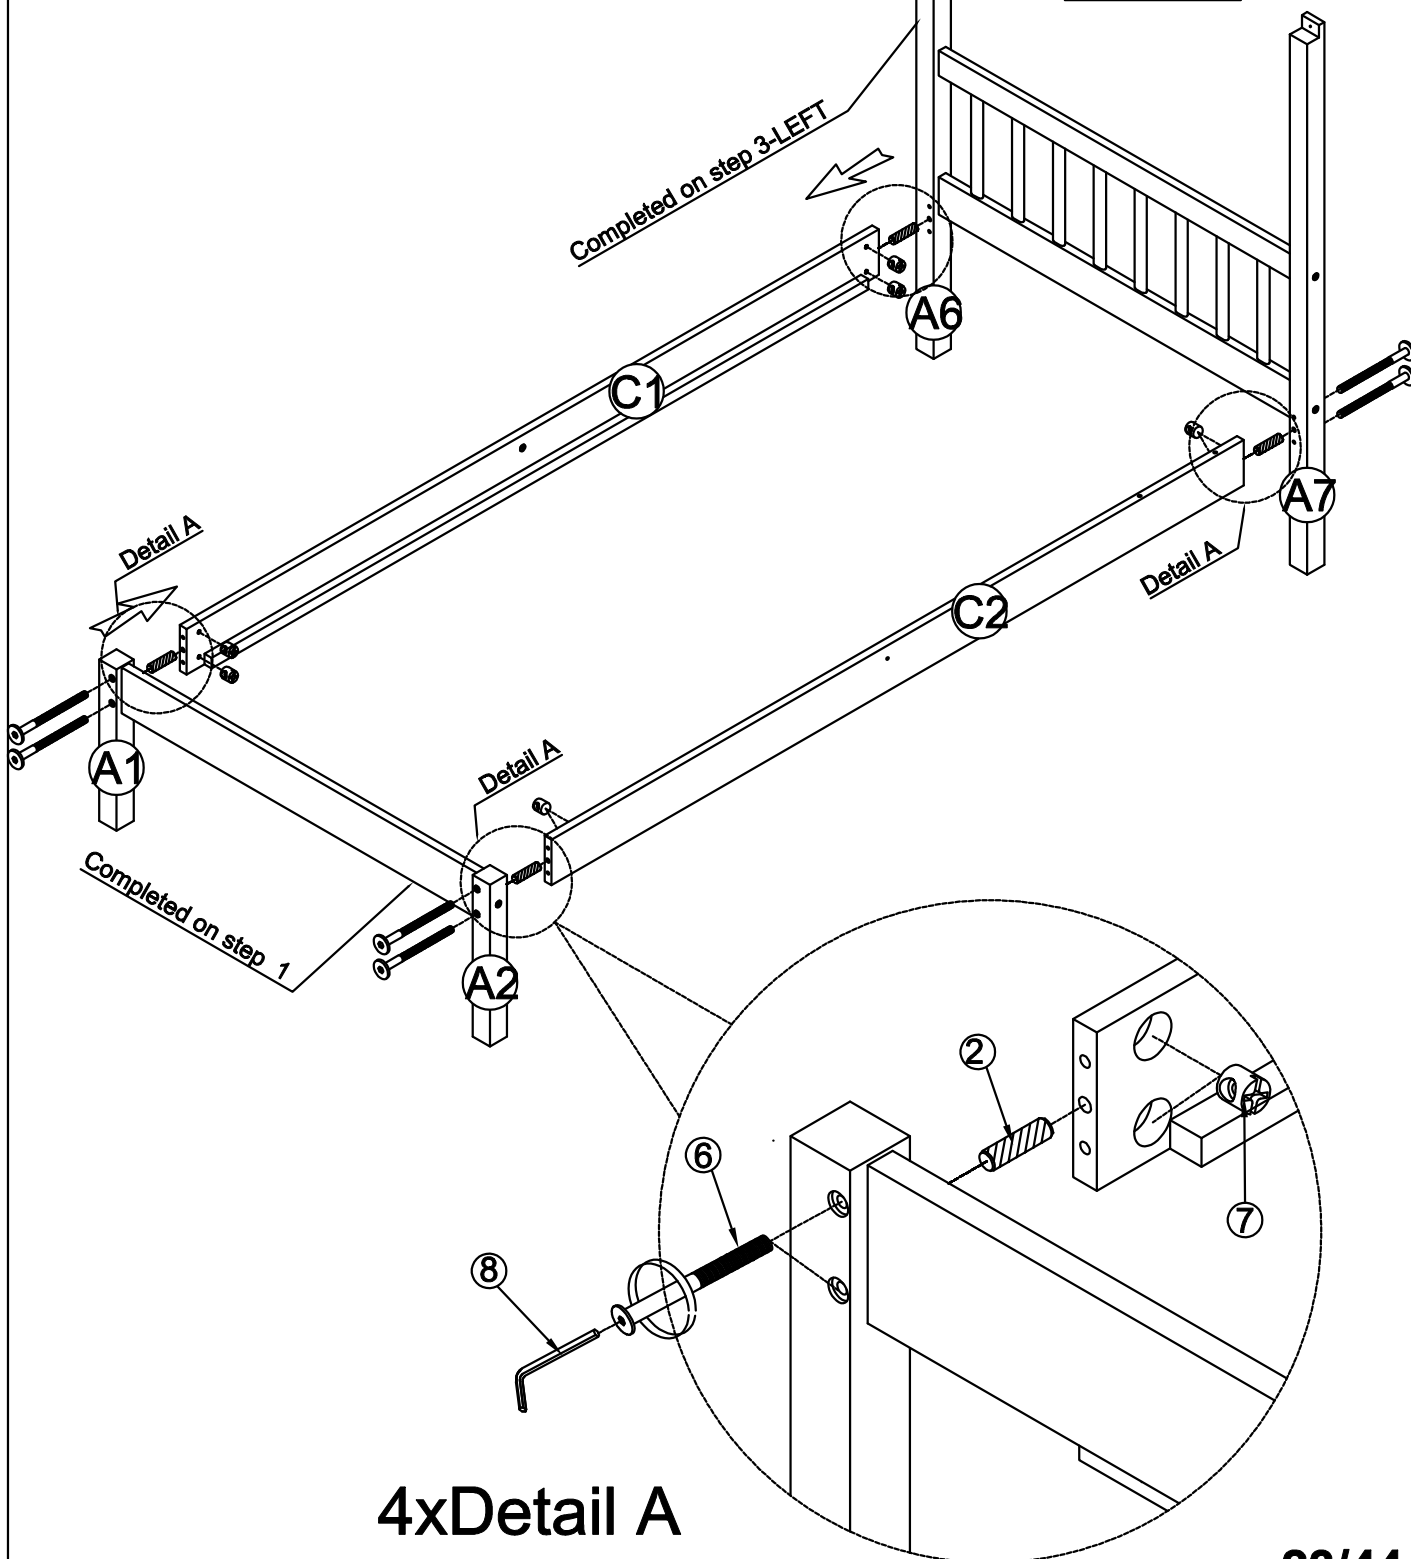


STEP 10: Following below illustration

-Using hardware #4,#5,#9 connect Frame(completed on step 5 OPTION 1-LEFT) with Frame (completed on step 9)

9	5	4
		
1pc	1pc	1pc

Option 2:

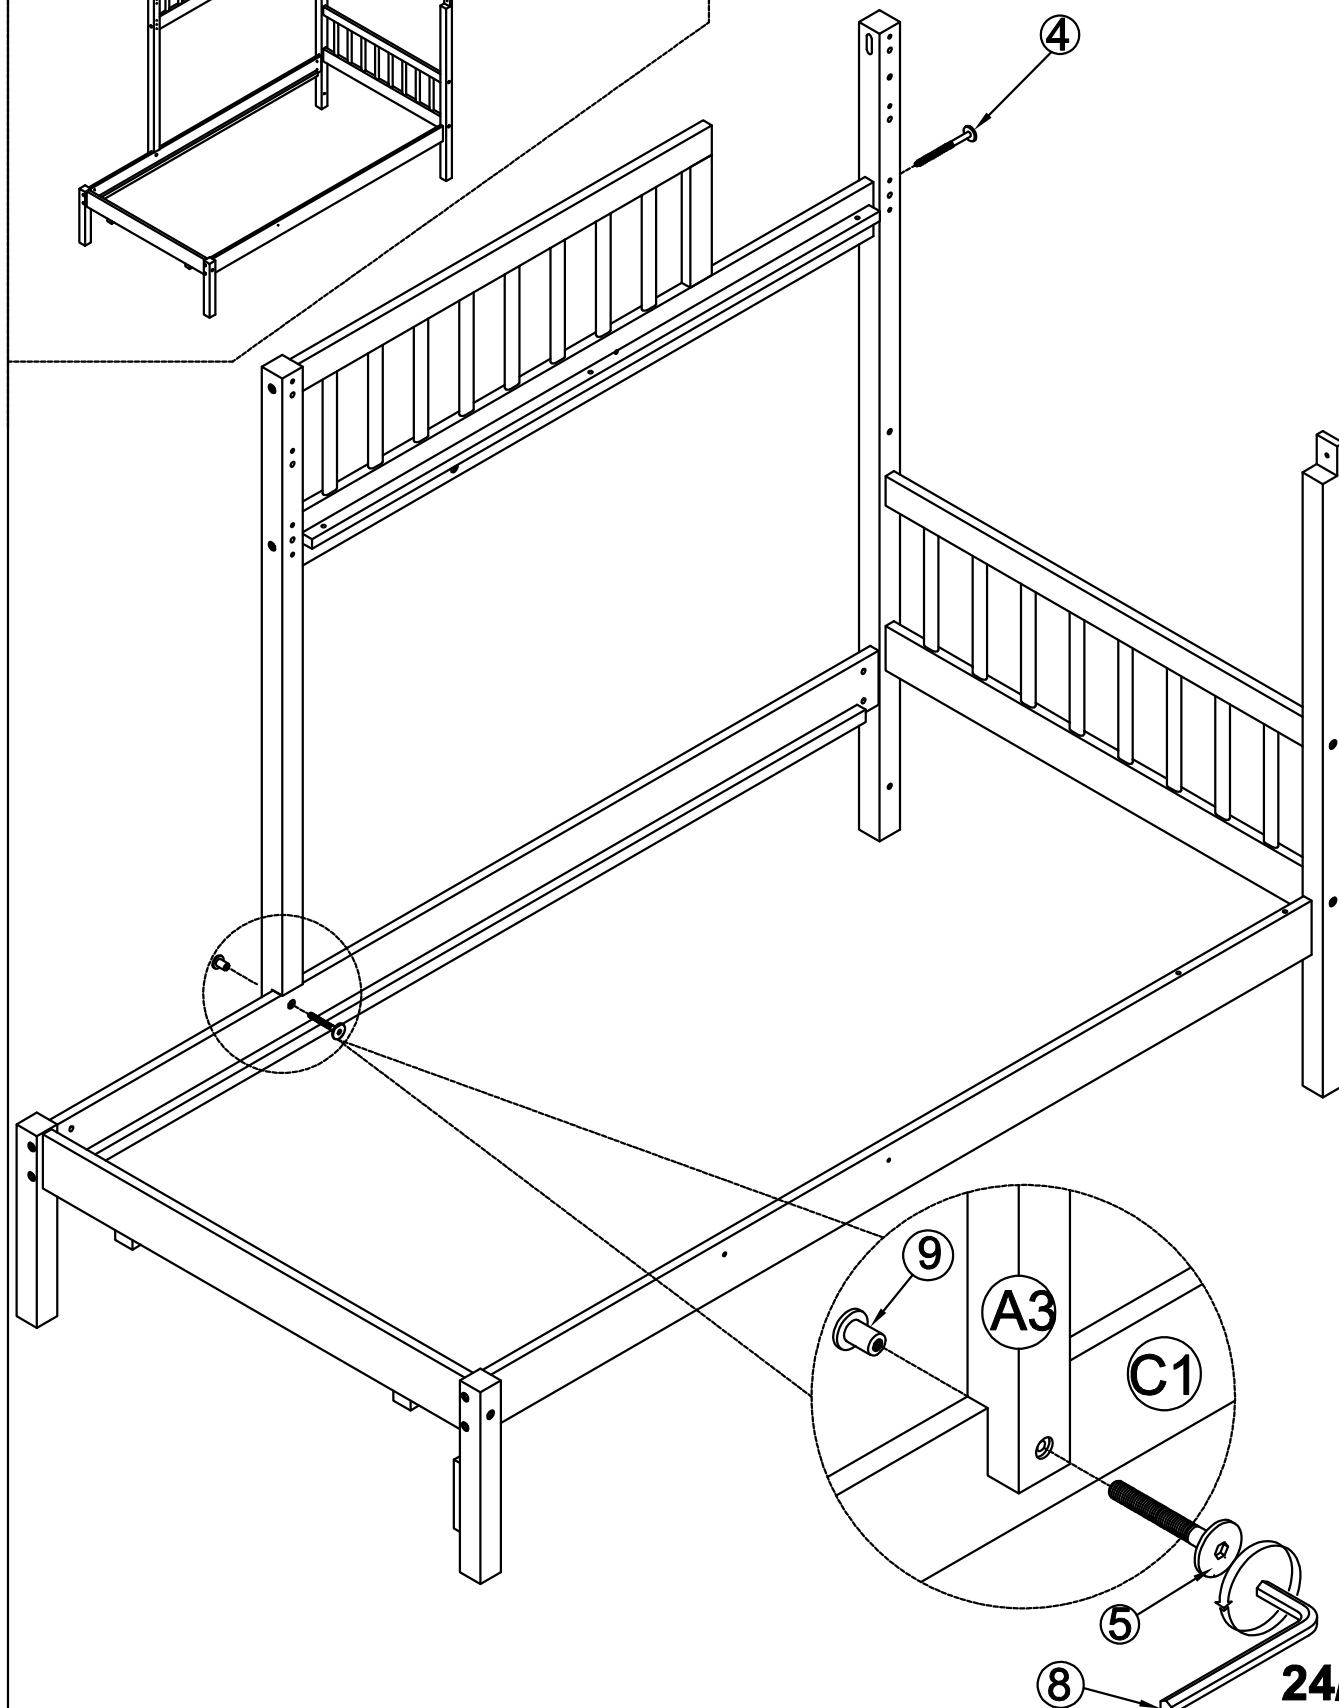Completed on step 10



STEP 11: Following below illustration:

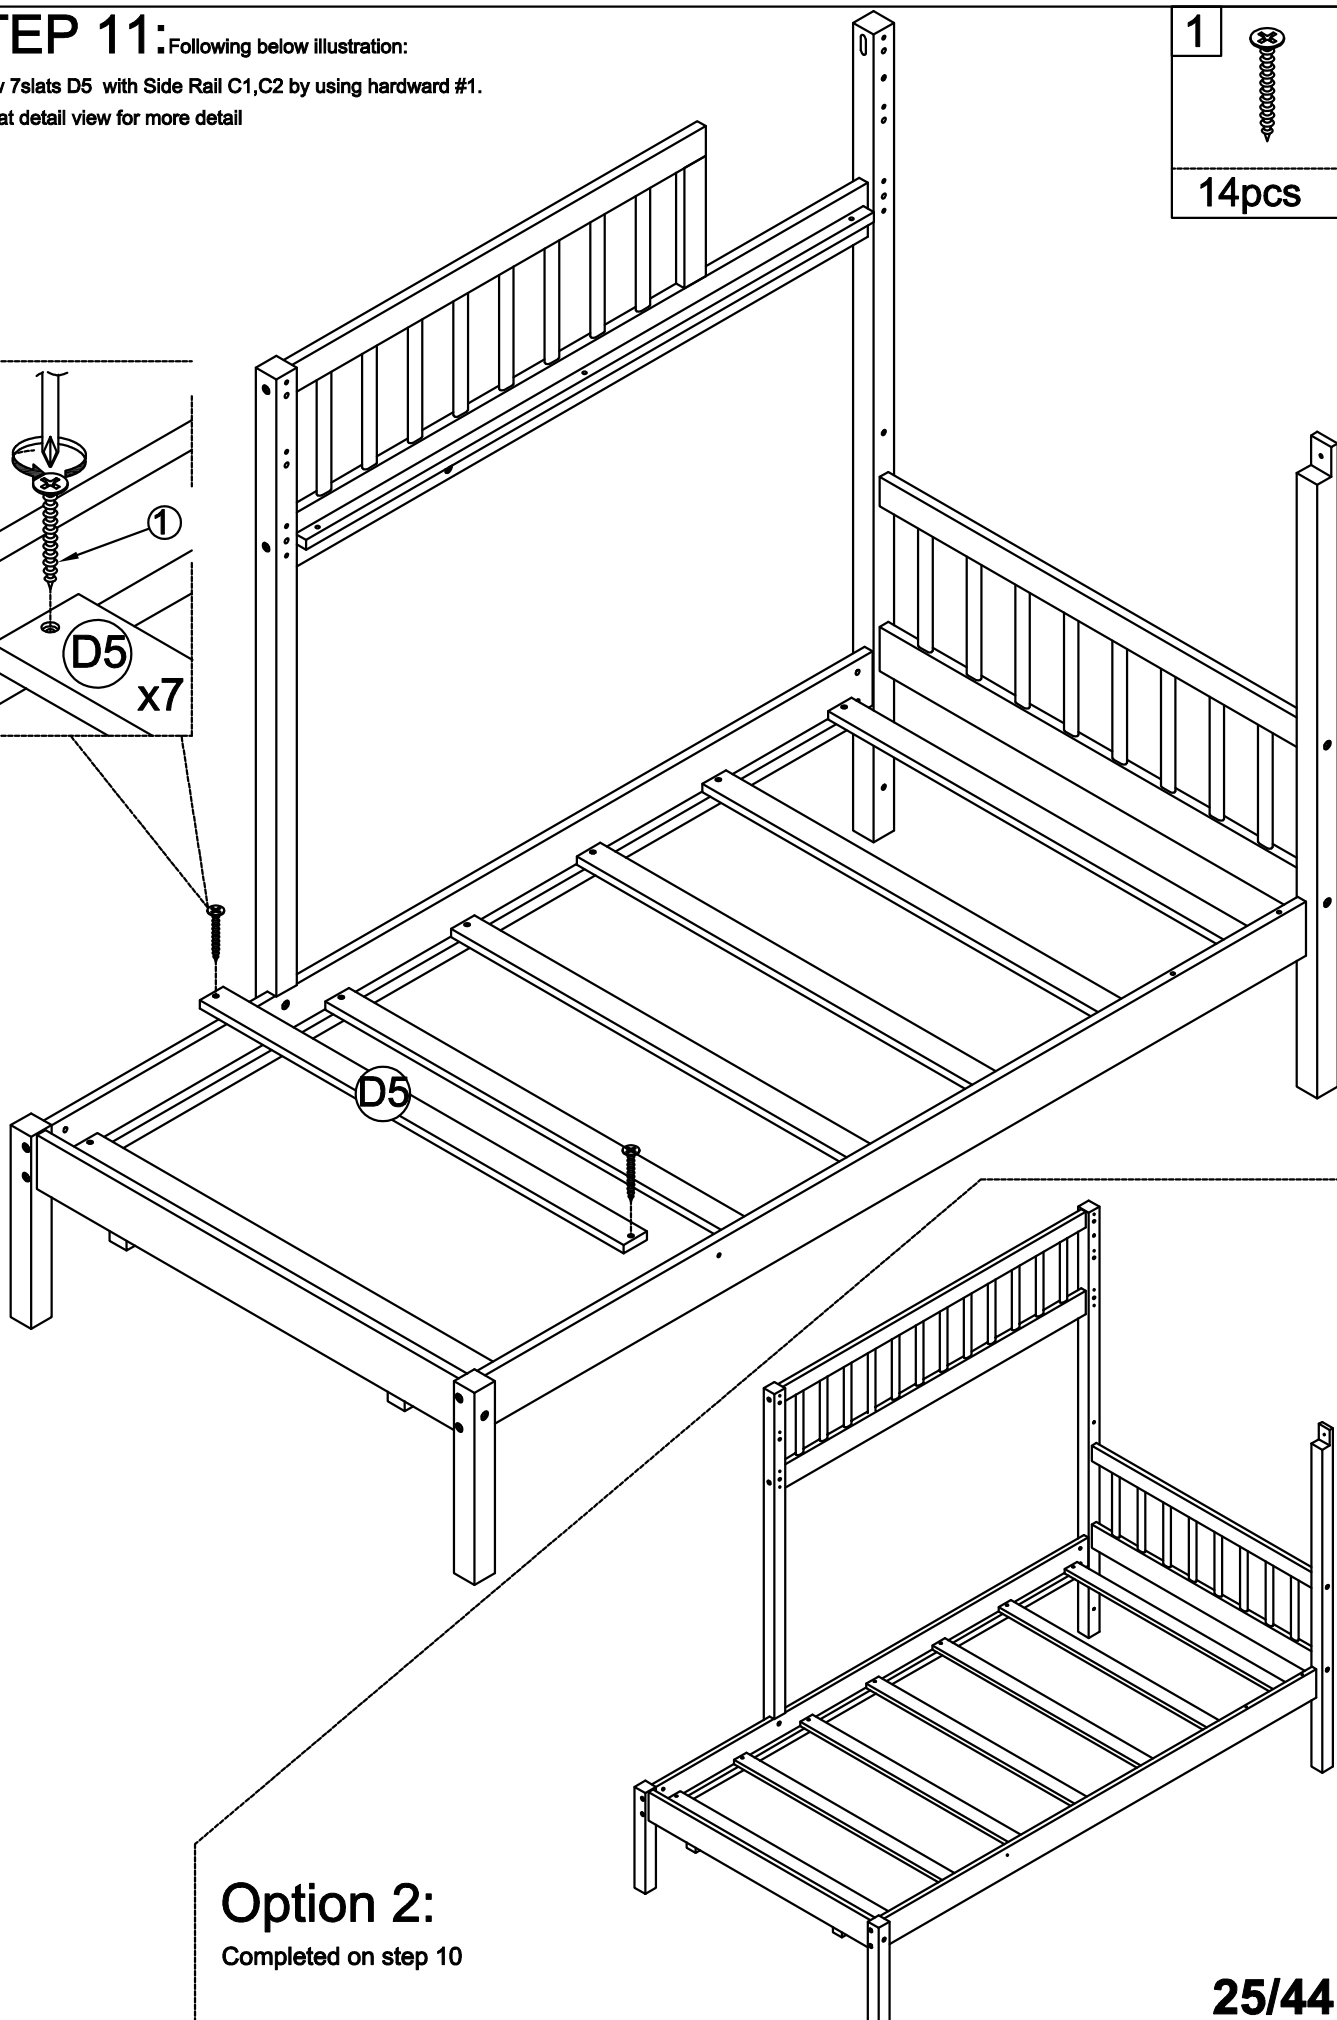
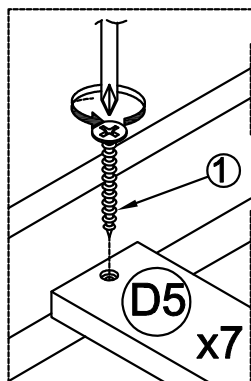
-Screw 7slats D5 with Side Rail C1,C2 by using hardward #1.

-Look at detail view for more detail

1



14pcs



Option 2:


Completed on step 10

25/44


STEP 12: Following below illustration:

- Using hardware #10 connect Side Rails C5,C6 and Guardrails D1(x2) ,D2(x2) with Rails D3,D4(x2)
- Using hardware #10 connect Side Rails C5,C6 and Guardrails D1(x2) ,D2(x2) with Rails D3,D4(x2)
- Look at detail view for more detail

10



24pcs


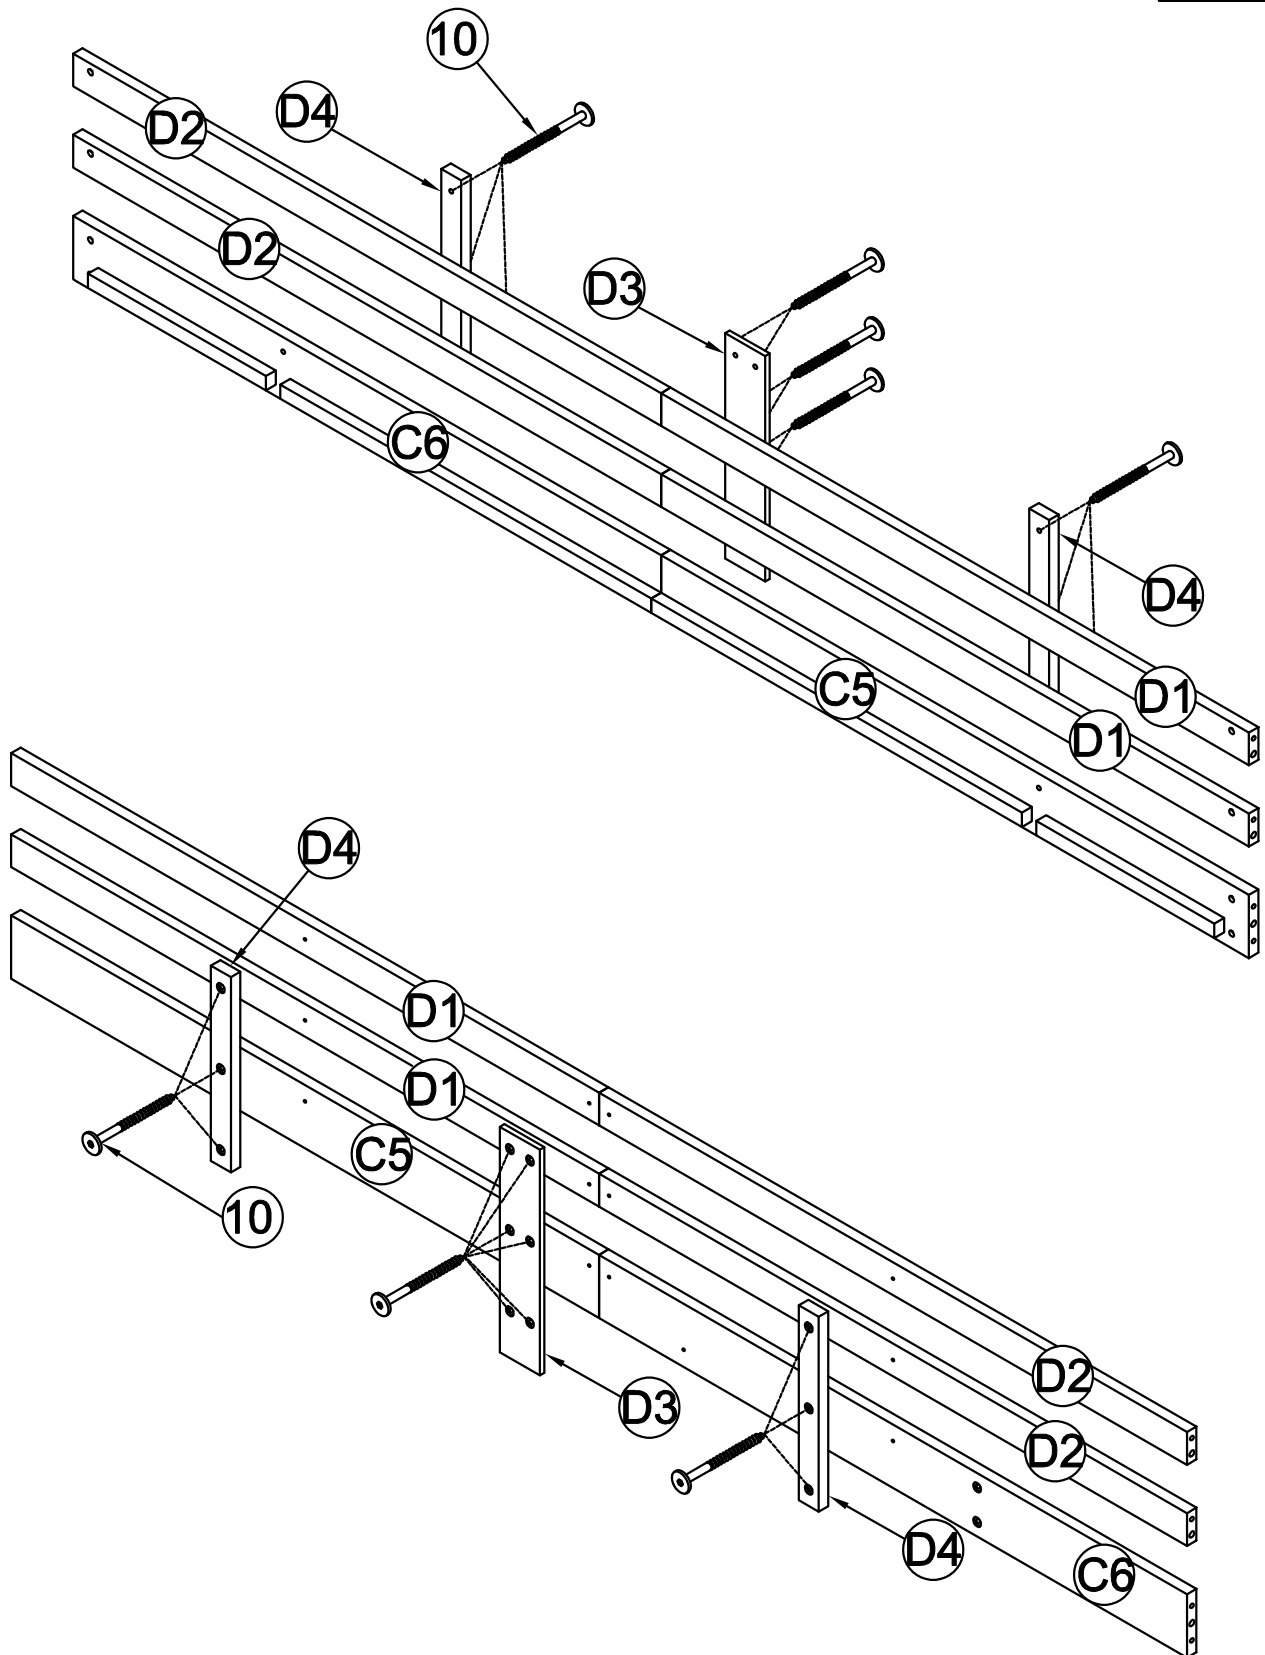


- Using hardware #6,#7,#10 and dowel #2 connect Frames (Completed on step 8,11) with Frame (Completed on step 12).
- Look at detail view for more detail

Back View



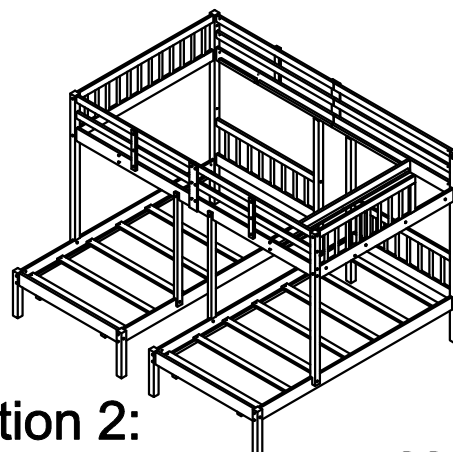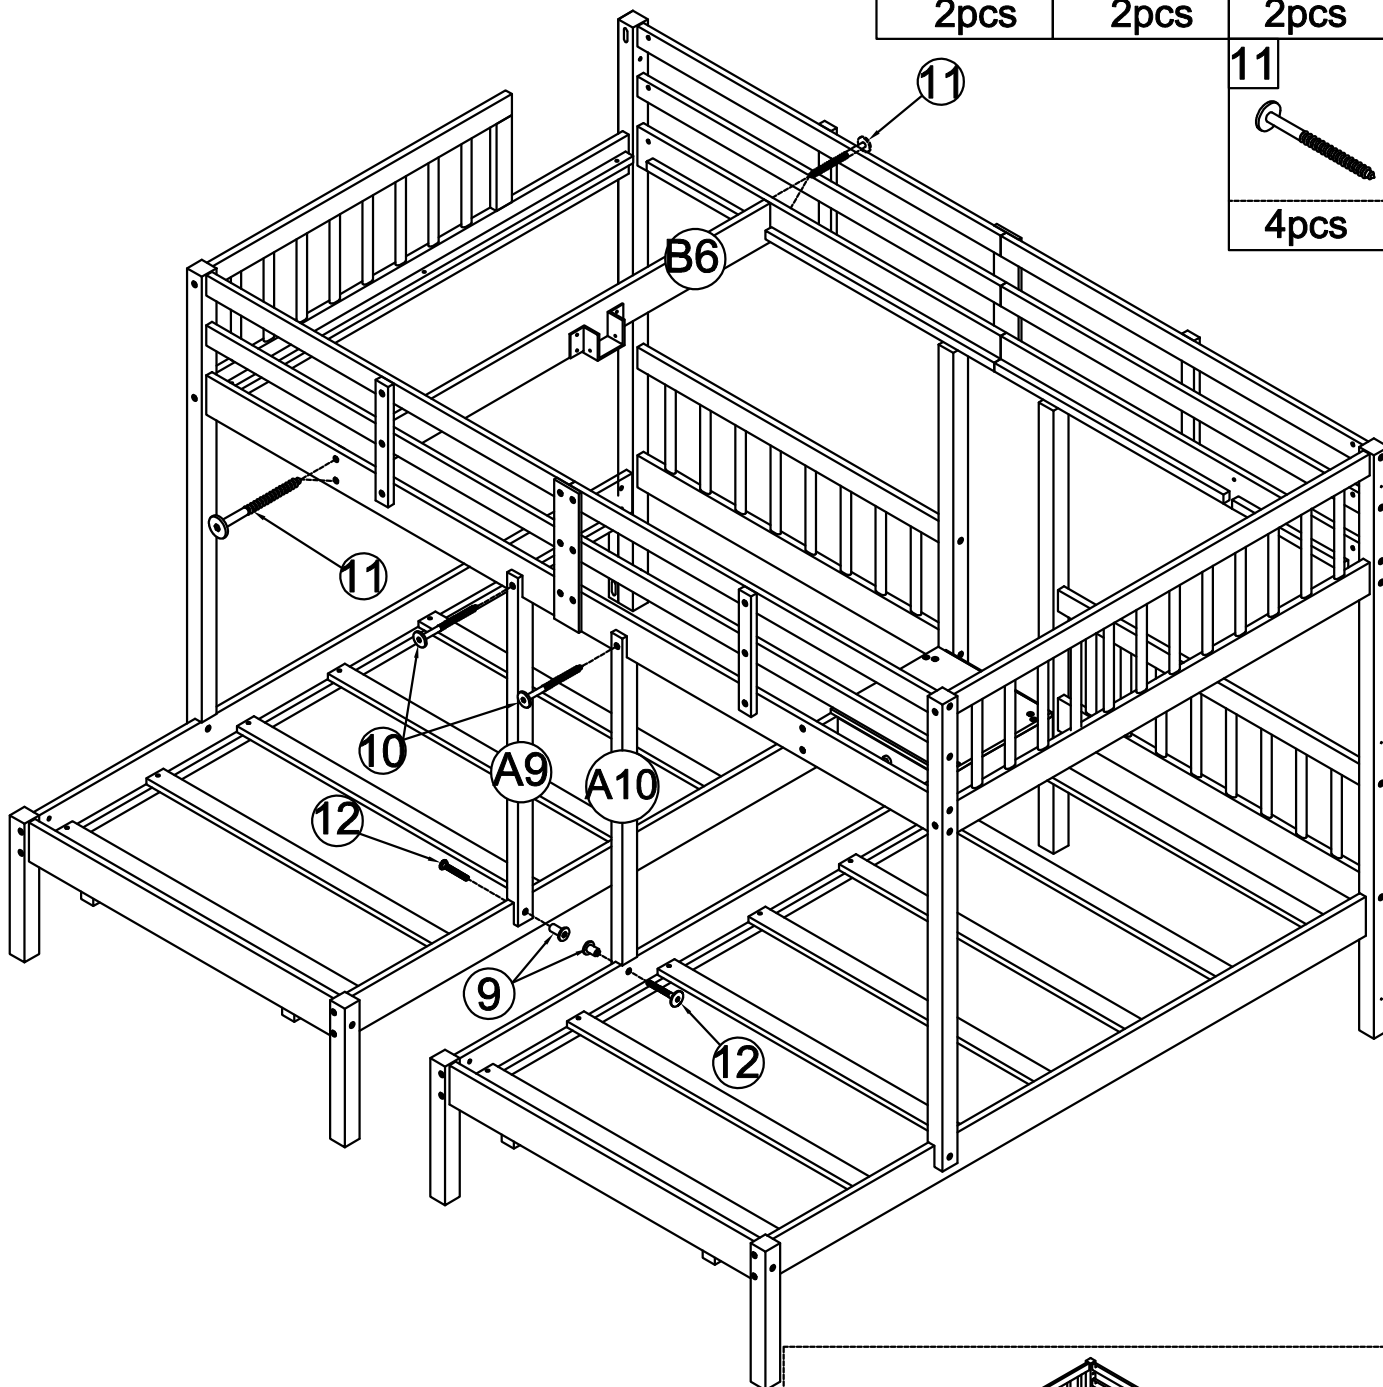- Using hardware #11 connect Frame (completed on step 13) with B6 Frame
- Using hardware #9,#10,#12 connect Frame (Completed on step 13) with A9,A10 Legs



Completed on step 14

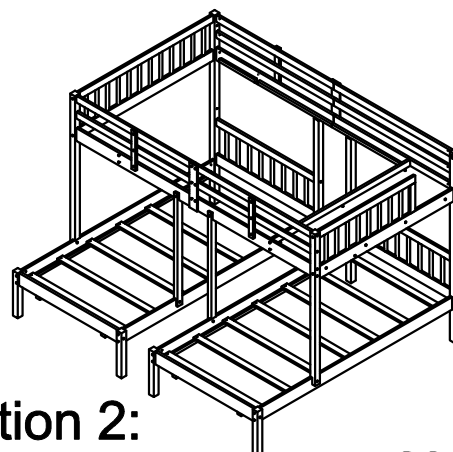
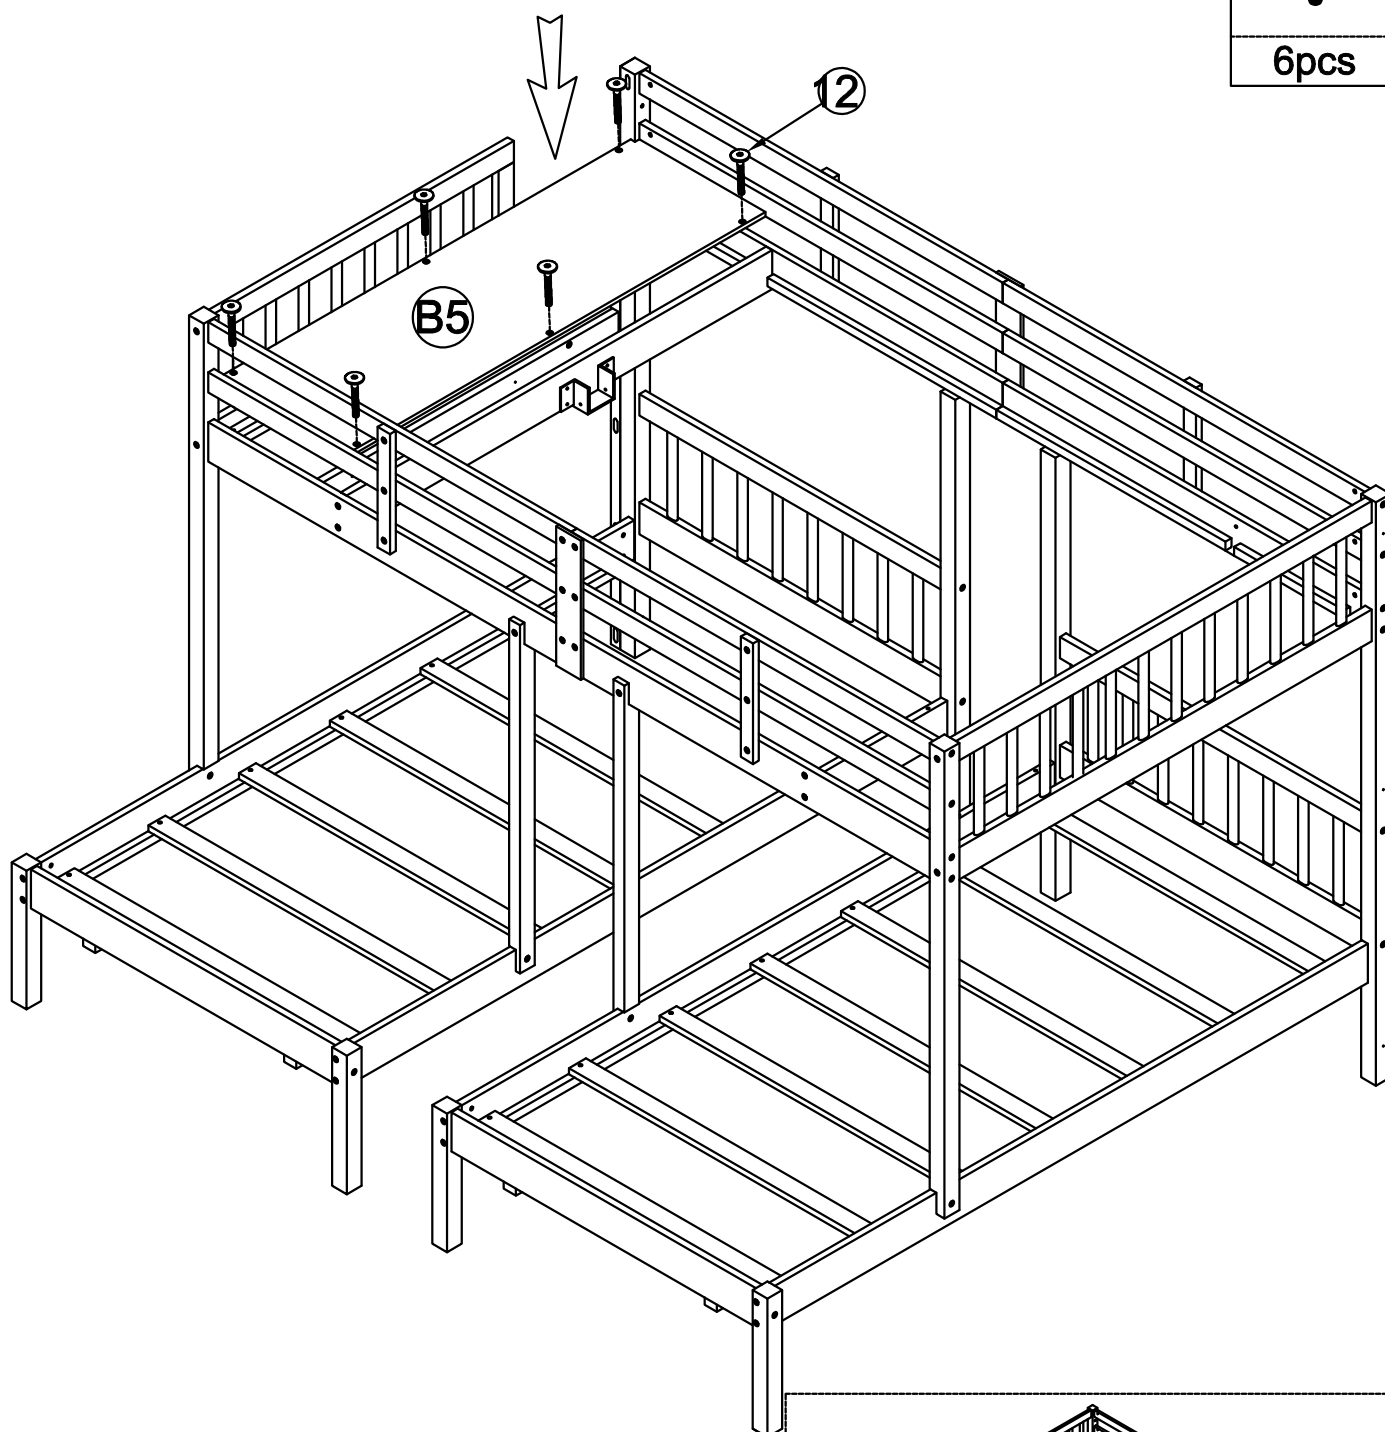
STEP 15: Following below illustration

-Using hardware #12 connect Frame(completed on step 14) with Panel B5

12



6pcs




Option 2:

Completed on step 14

29/44

STEP 16: Following below illustration:

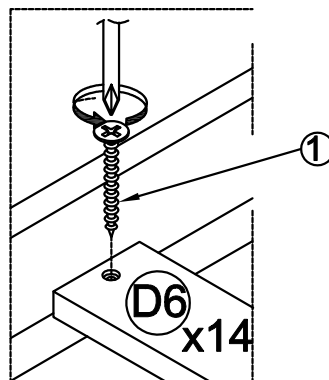
- Put Support Slat (D7) on Bracket
- Screw 14 slats D6 with Side Rail C5,C6 by using hardware #1.
- Look at detail view for more detail



1



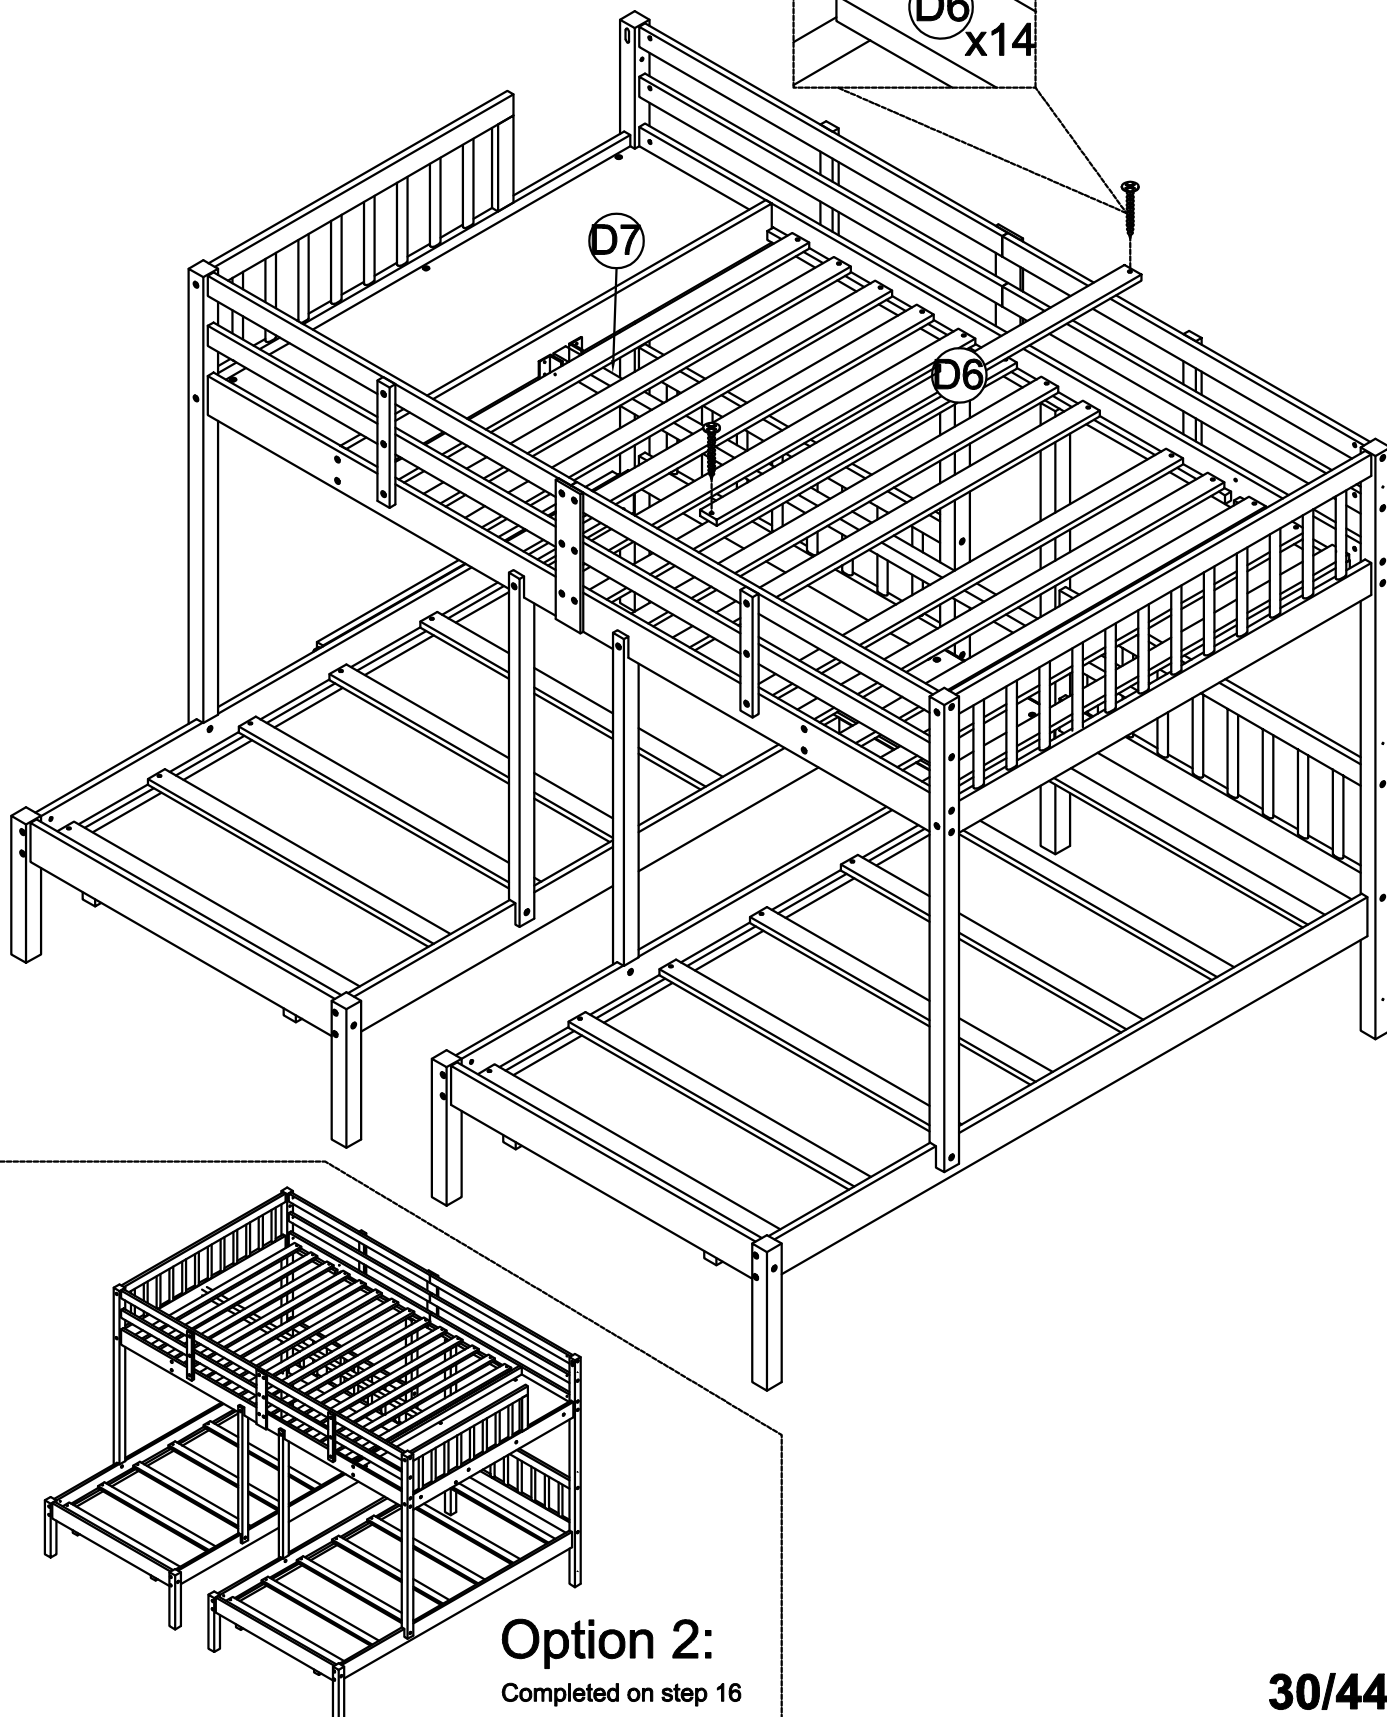28pcs



Option 2:


Completed on step 16

30/44

STEP 17(OPTION 1): Following below illustration:

- 17.1:Using hardware #4 connect K1,K4 Legs with T1(x3),T2,T3,T4,T5 Wood Bars
- 17.2:Using hardware #10 connect Frame(completed on step 17.1) with T7,T8,T9 Wood Bars
- 17.3:Using hardware #4 connect K2,K3 Legs with V1,V2,V3,V4,V5 Wood Bars


10	4
7pcs	14pcs

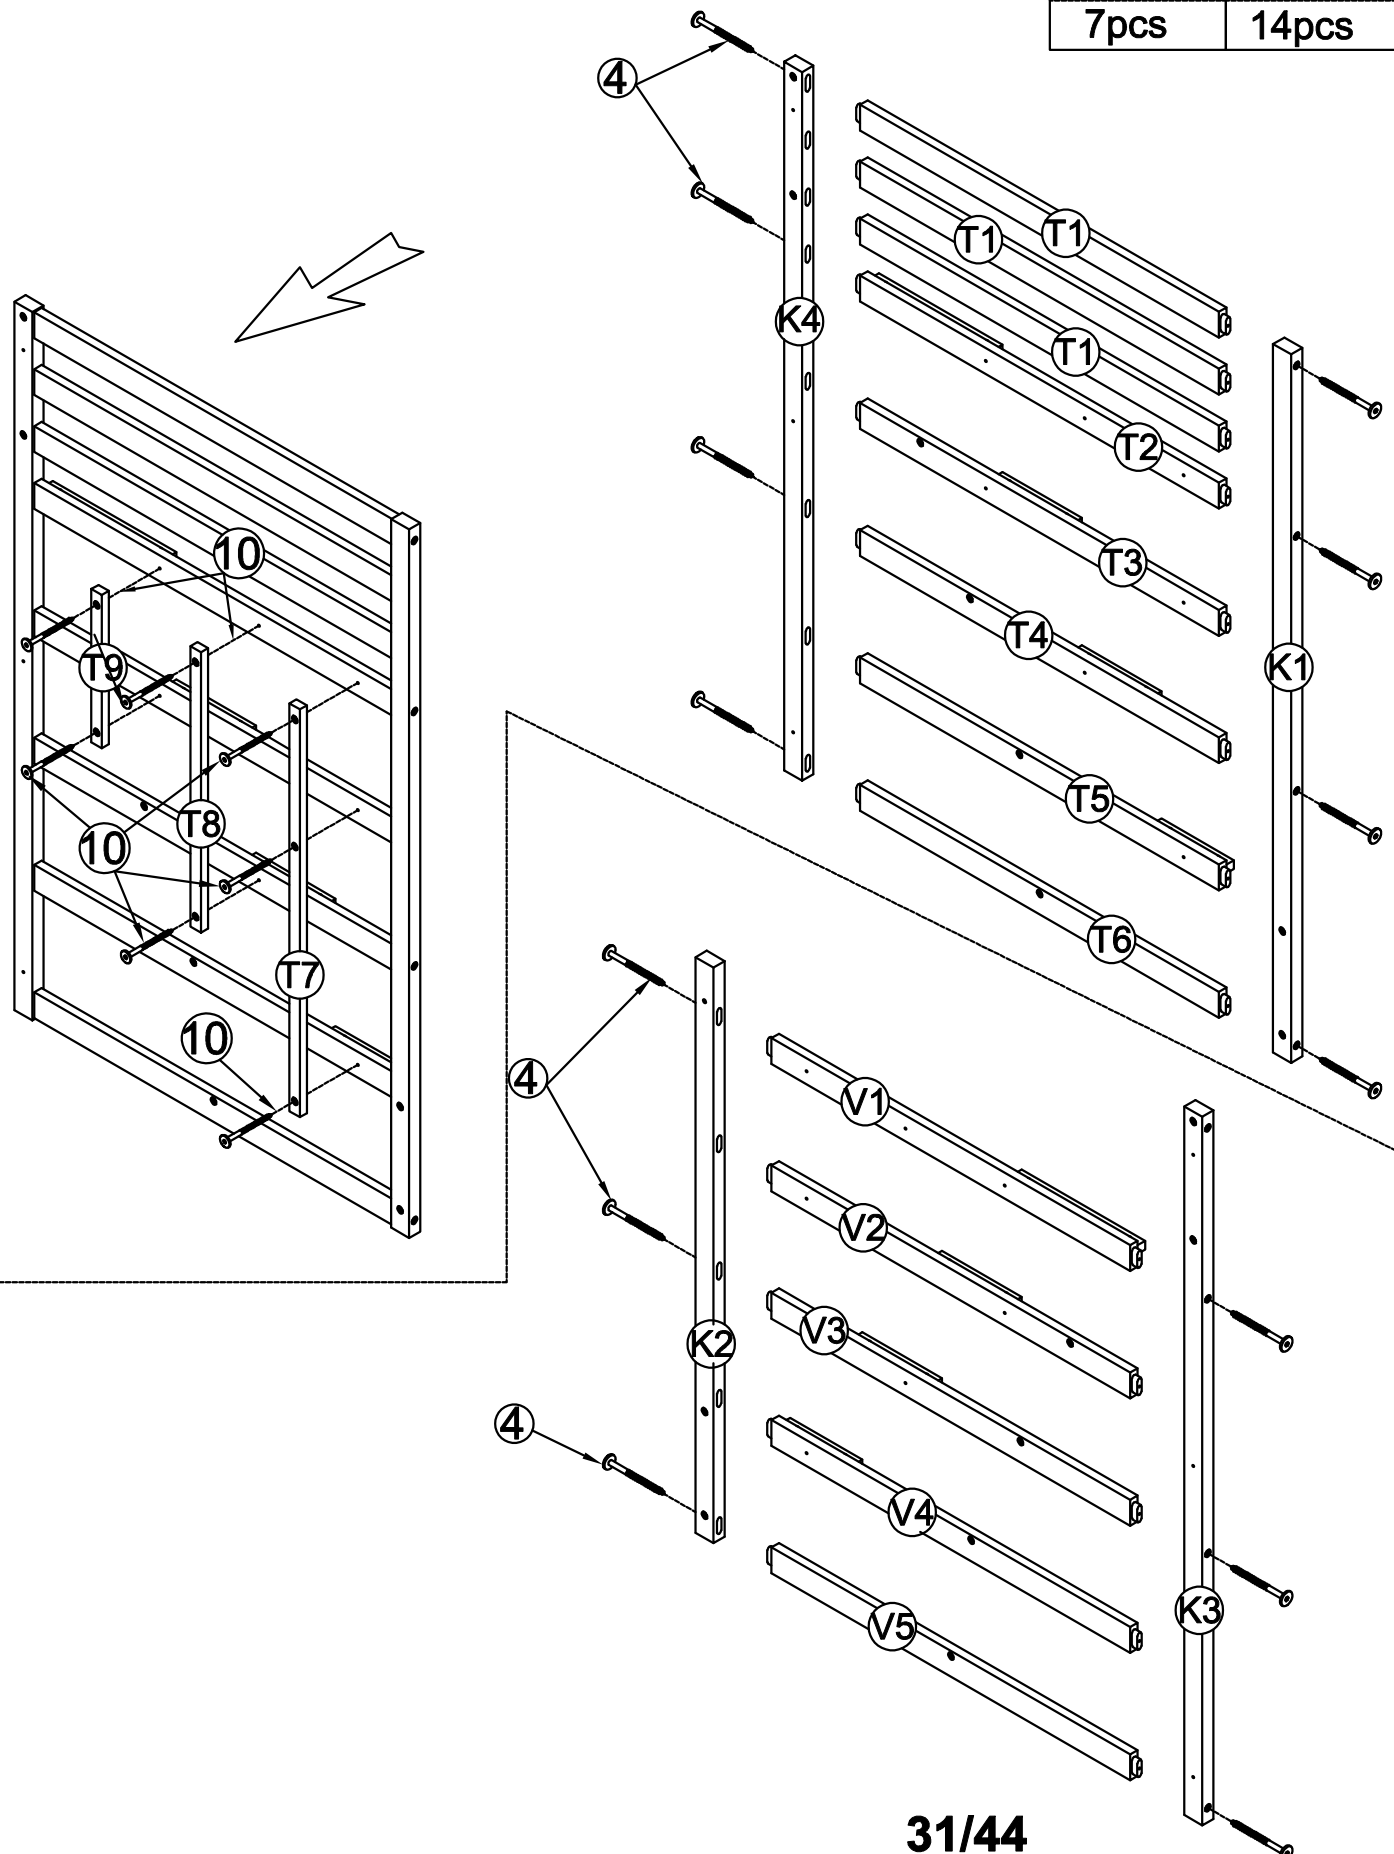

STEP 17(OPTION 2): Following below illustration:


- 17.1: Using hardware #4 connect K1, K3 Legs with T1(x3), V1, V2, V3, V4, V5 Wood Bars
- 17.2: Using hardware #10 connect Frame (completed on step 17.1) with T7, T8, T9 Wood Bars
- 17.3: Using hardware #4 connect K2, K4 Legs with T2, T3, T4, T5, T6 Wood Bars

10	4
7pcs	14pcs

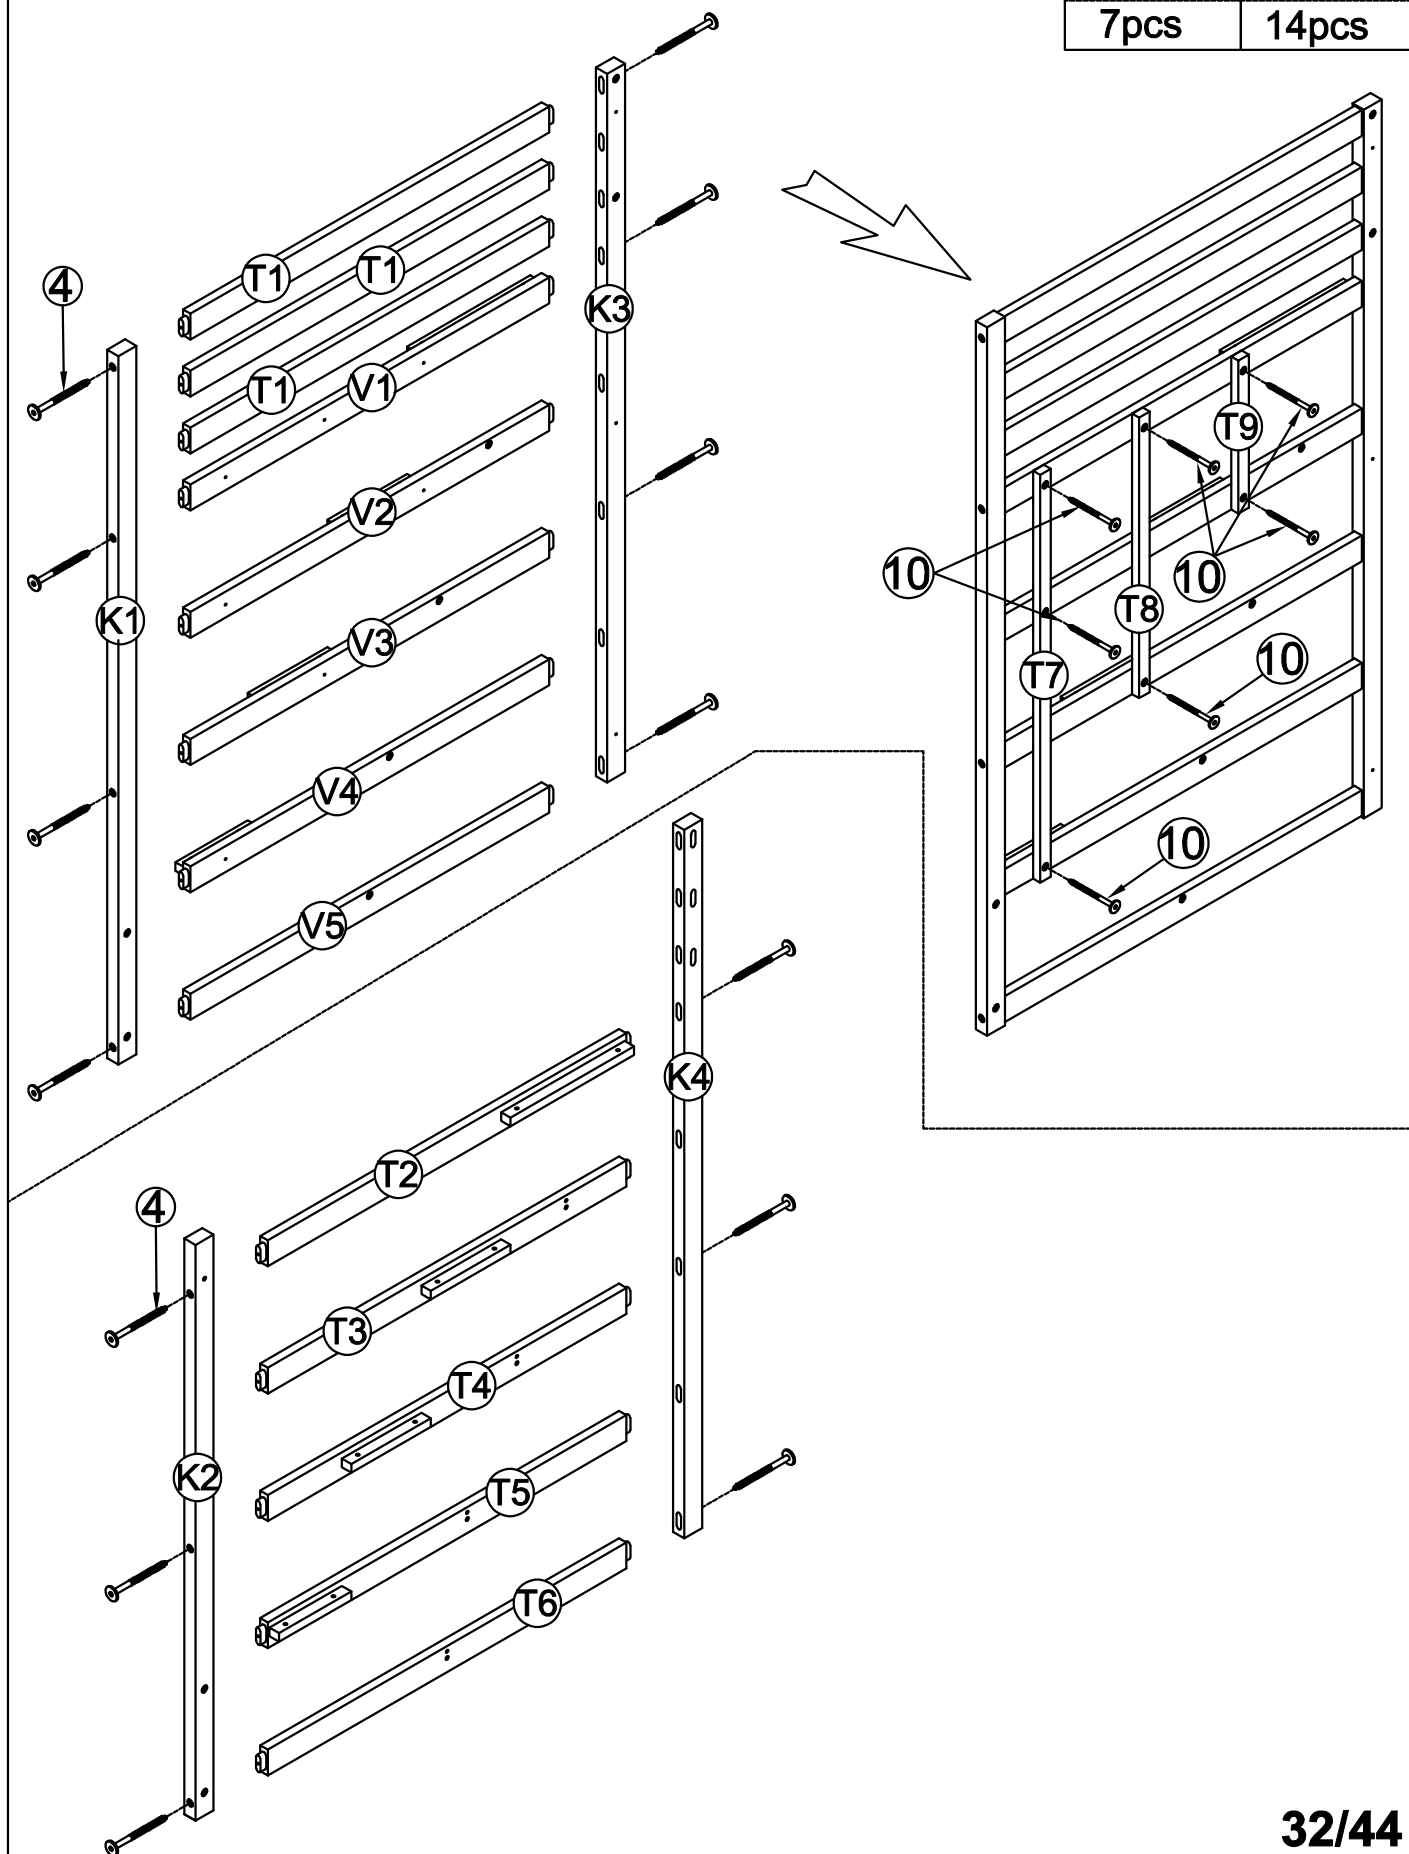


STEP 18: Following below illustration:


-Using hardware #11, #13 and Dowel 14 connect U1(x3), U7(x4) Wood Bars and U3 Panel with Frames (completed on step 17)

13	14
	
4pcs	8pcs
	11
	
	12pcs

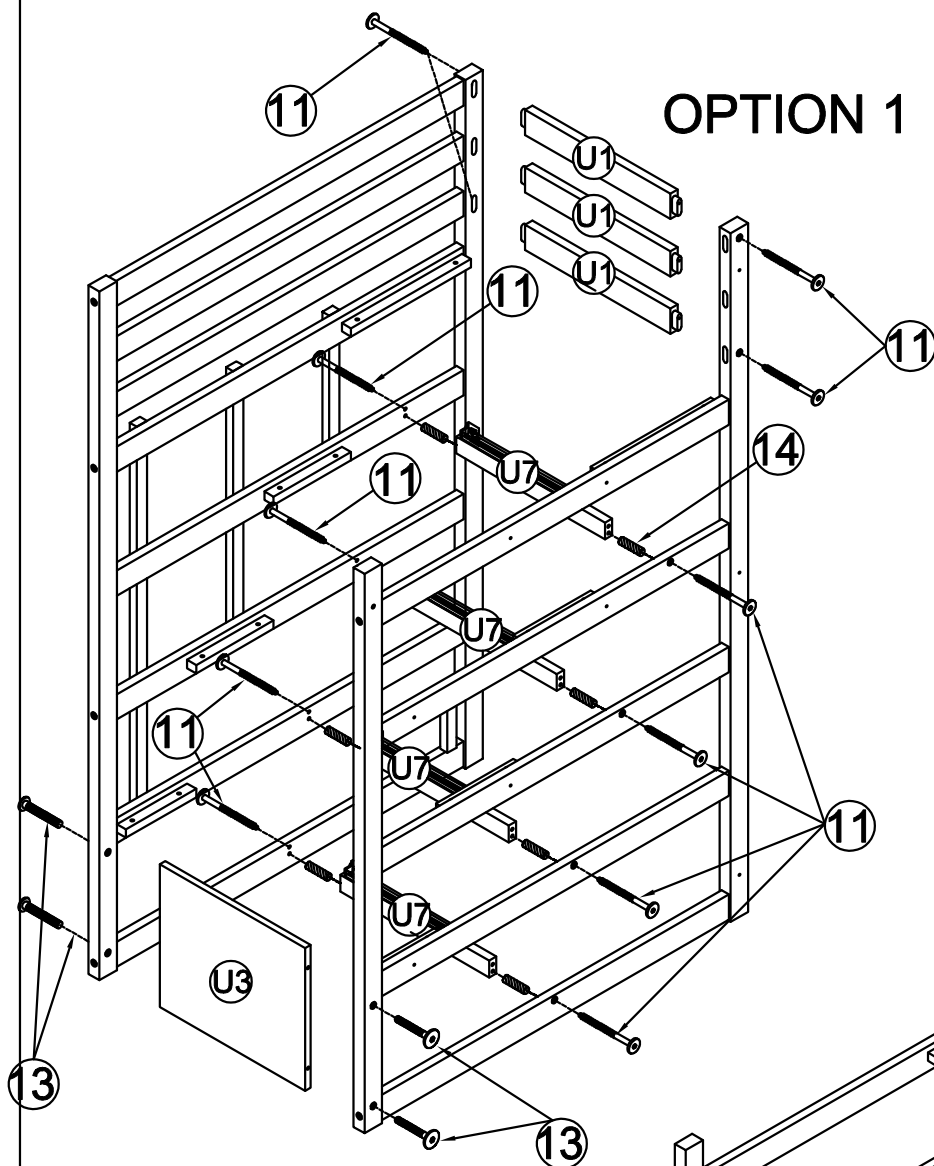OPTION 1




OPTION 2

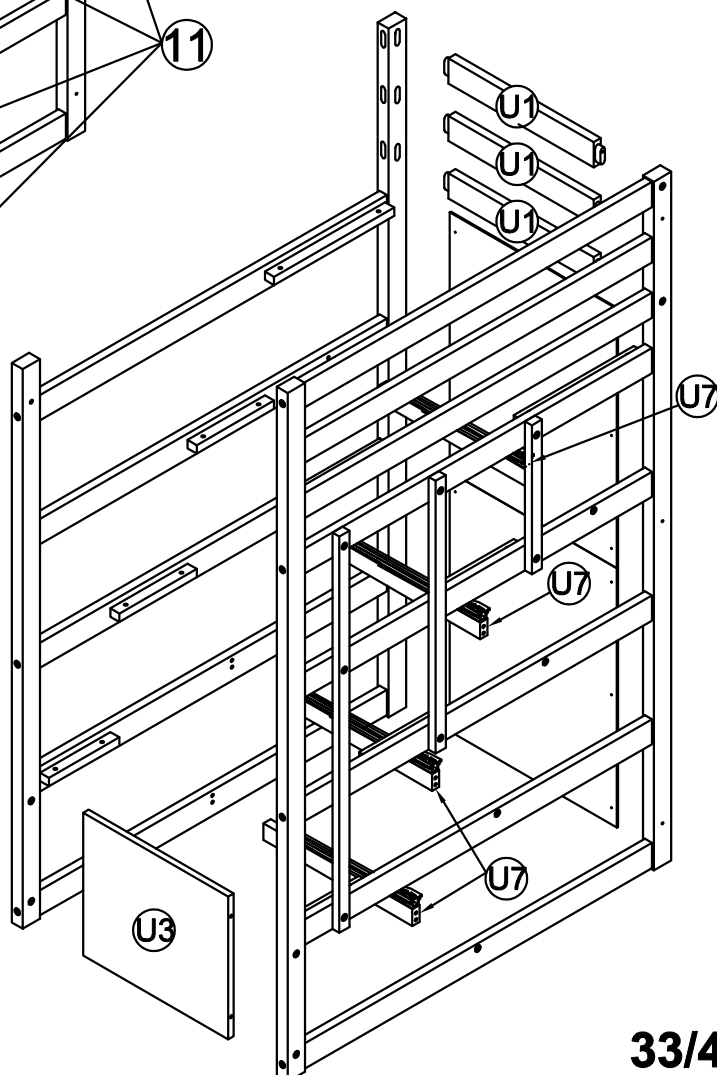

STEP 19: Following below illustration:


-Using hardware #12 and Dowel 14 connect U5,U4(x3),U6(x2),U8 Panels with Frame(completed on step 18)
with Frames(completed on step 18)

14		12	
	12pcs		16pcs

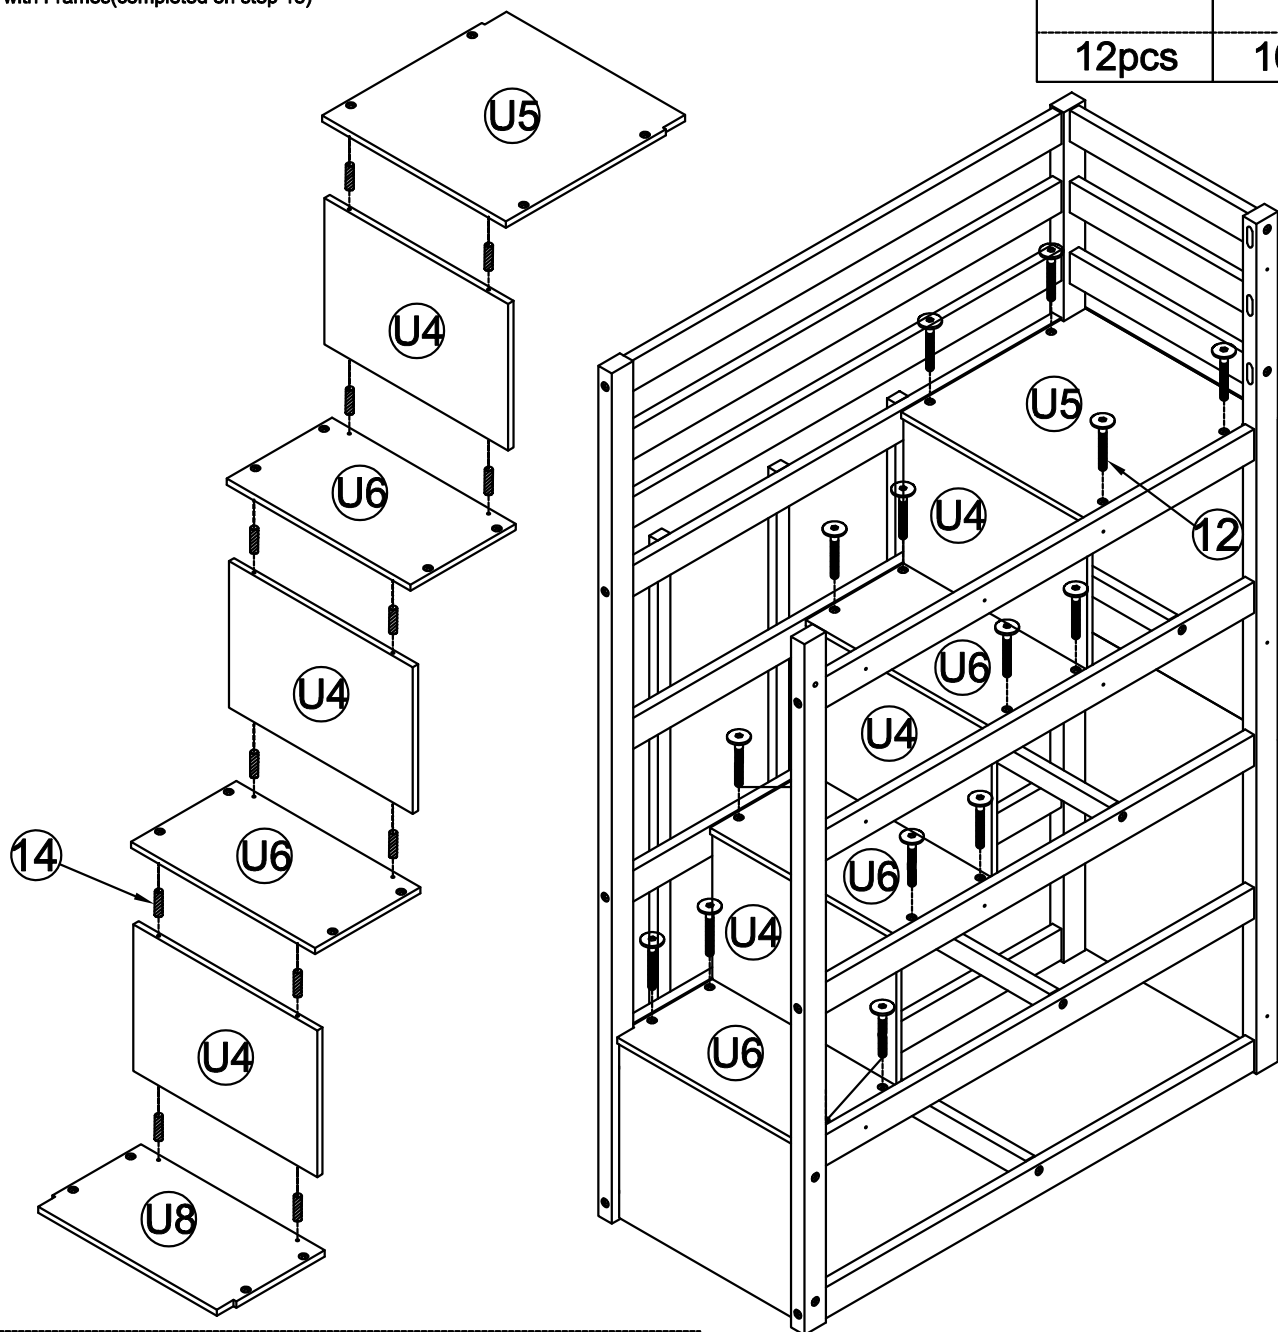

Option 2:

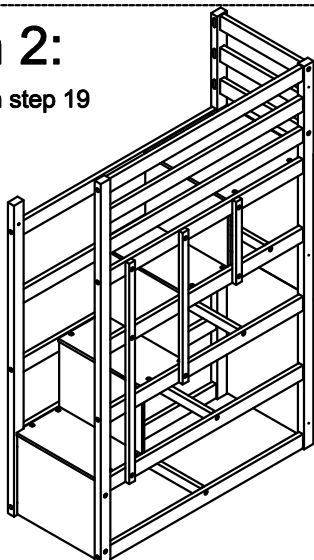
Completed on step 19





STEP 20: Following below illustration:

-Using hardware #16 connect U2(x2),M1,M2,M3,M4 Panels with Frame(completed on step 19)

16



36 pcs

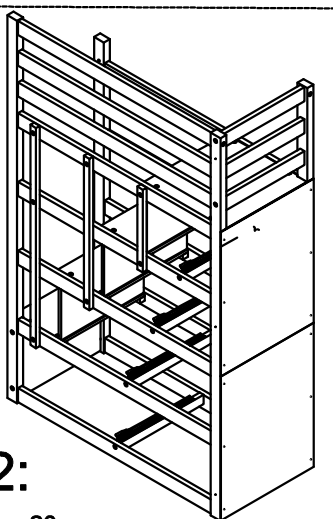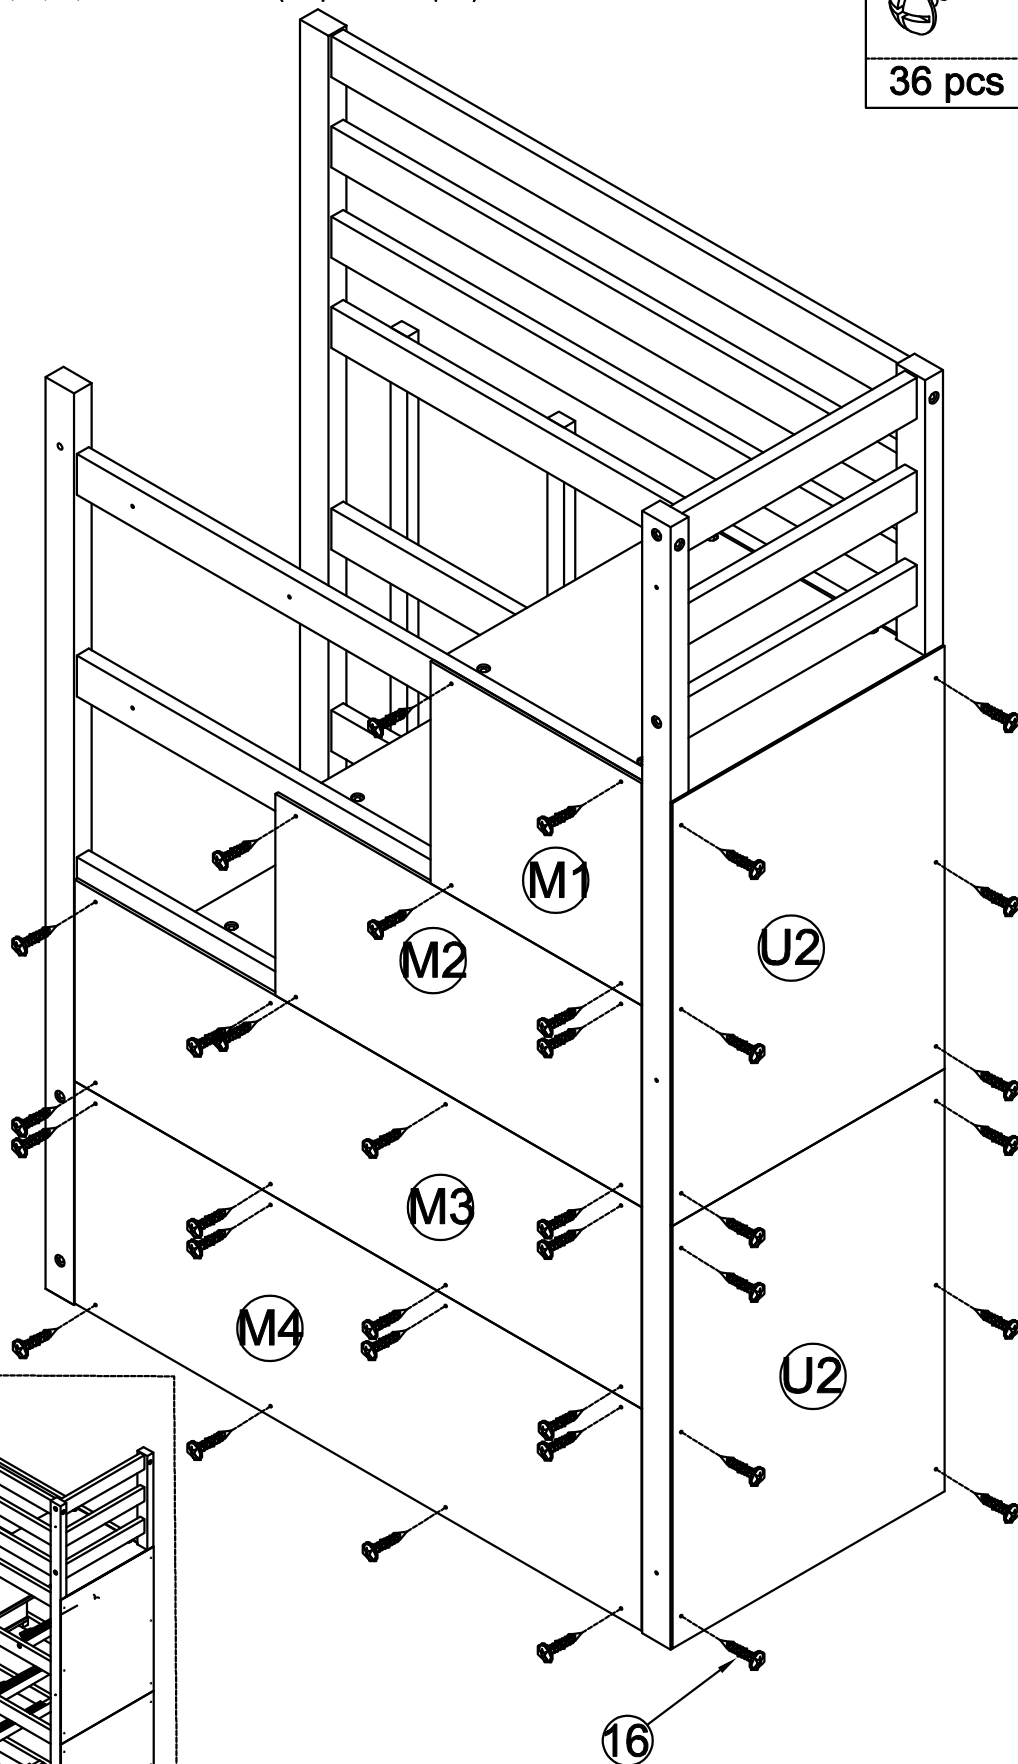

Option 2:



Completed on step 20

35/44

STEP 21: Following below illustration:

-Using hardware #4,#17 connect Frame(completed on step 16) with Frames(completed on step 20)

4	17
	
2pc	1pc

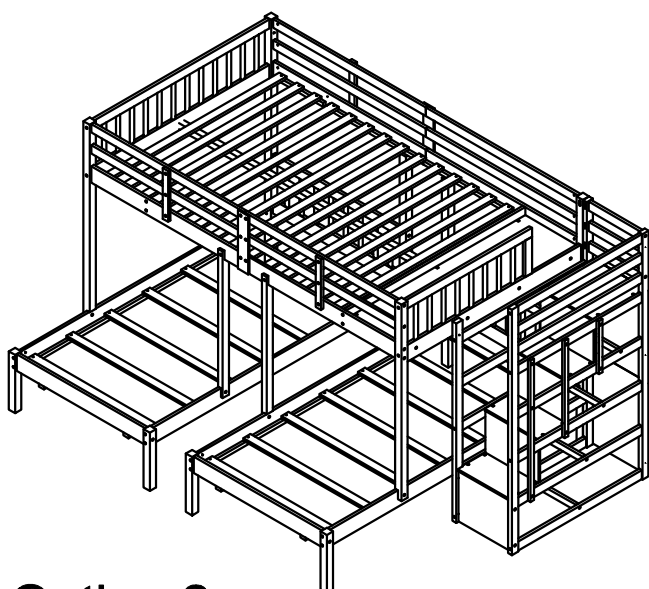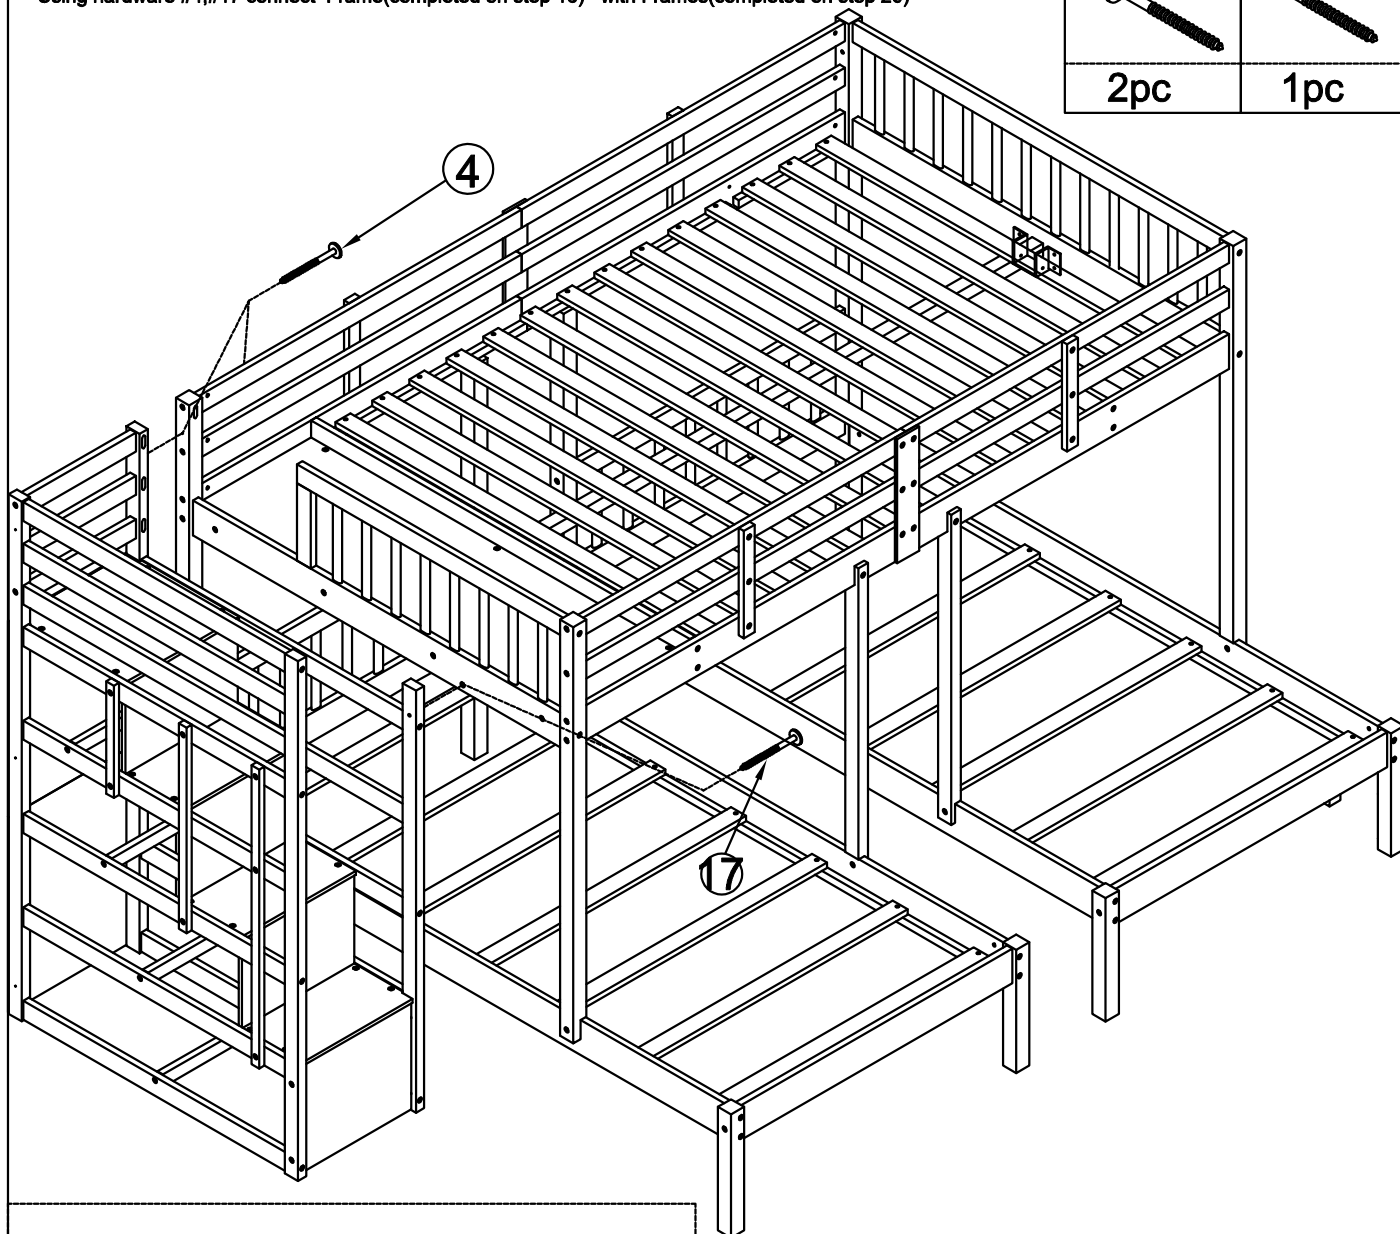


Option 2:

Completed on step 21

STEP 22-1: Following below illustration:


-Using hardward #12 and dowel #14 to connect H2,H3 panels with H1 panel


12	14
	
4pcs	4pcs

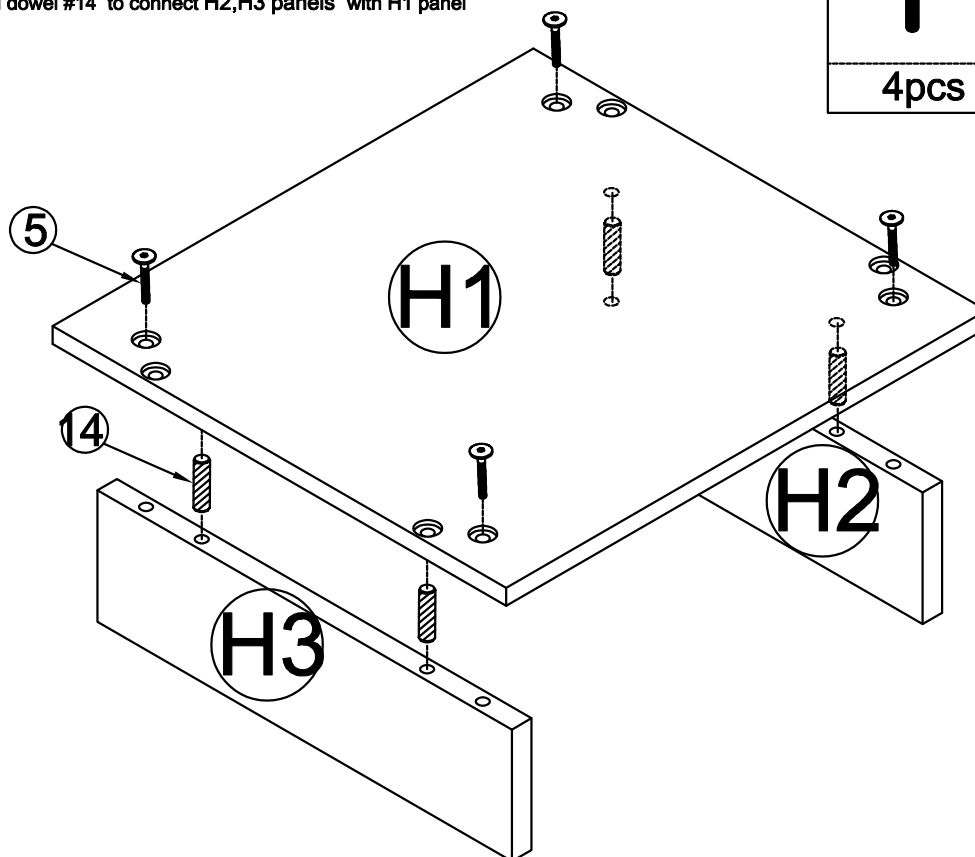

STEP 22-2: Following below illustration:

-Using hardward #16 to connect Frame(completed on step 22-1) with Back panel H4

16

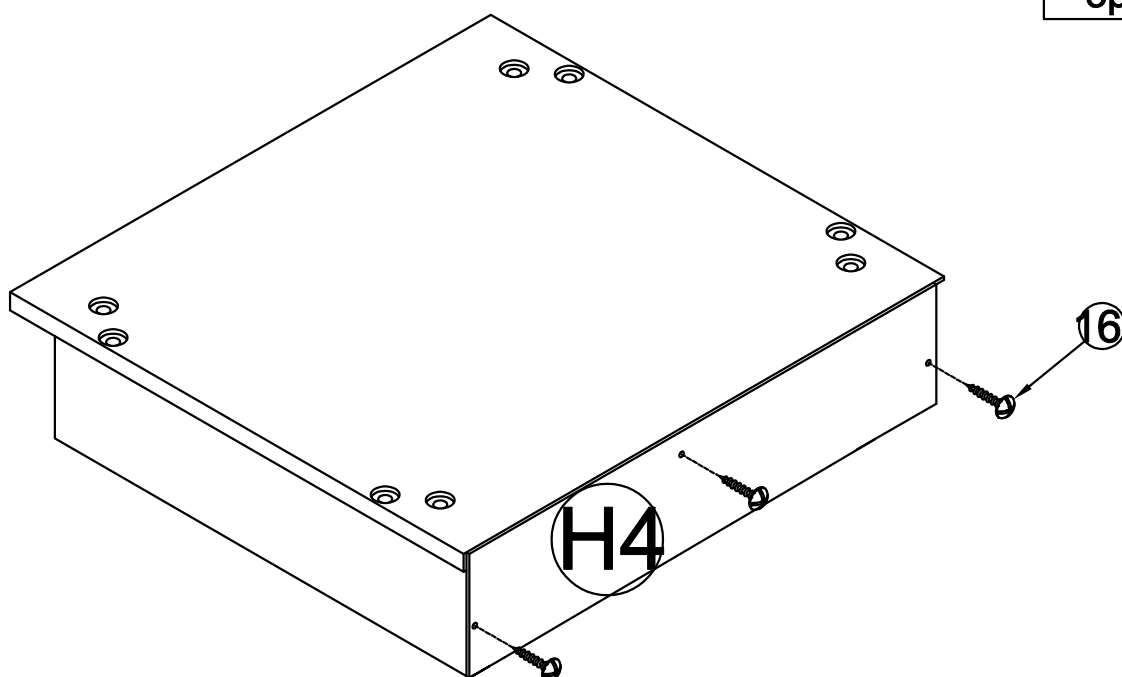3pcs



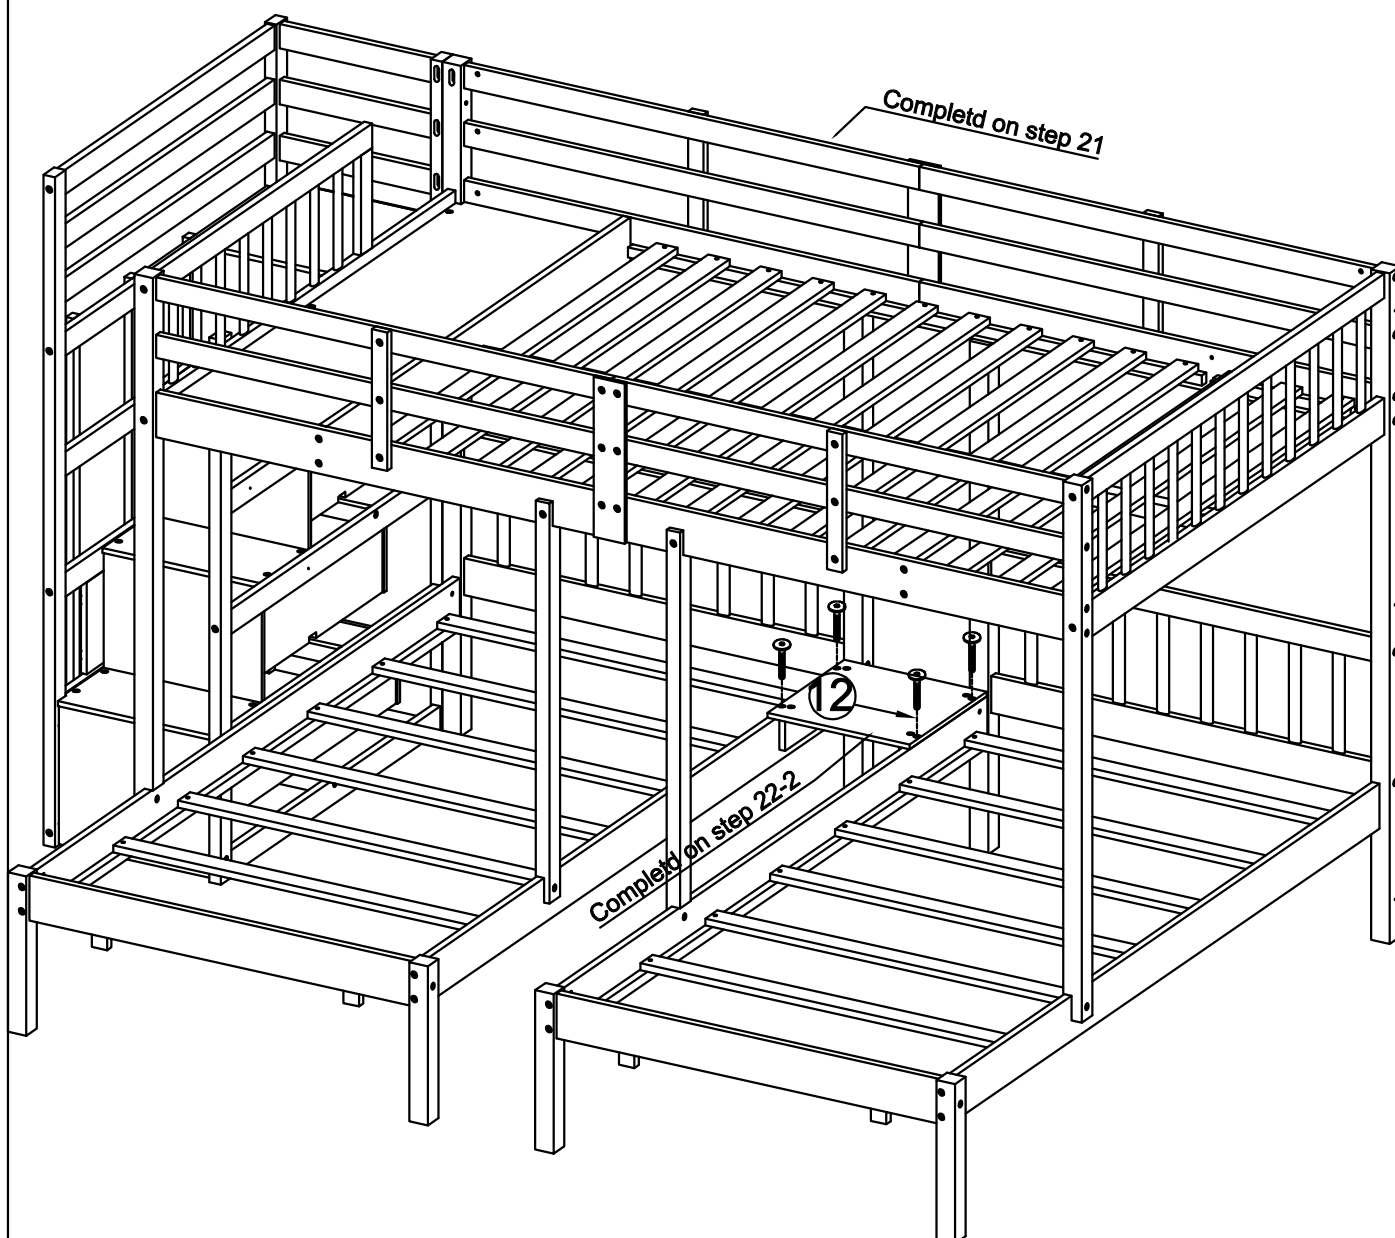
STEP 23: Following below illustration:

-Using hardware #12 connect Frame (completed on step 21) with Frame (completed on step 22-2)




12





4pcs



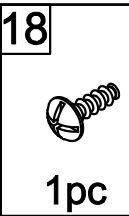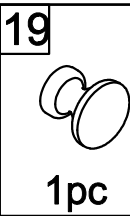
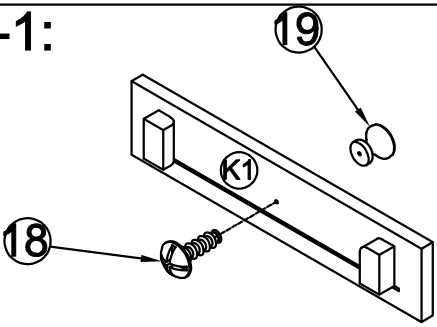
STEP 24-1:



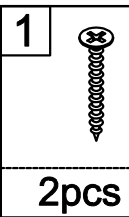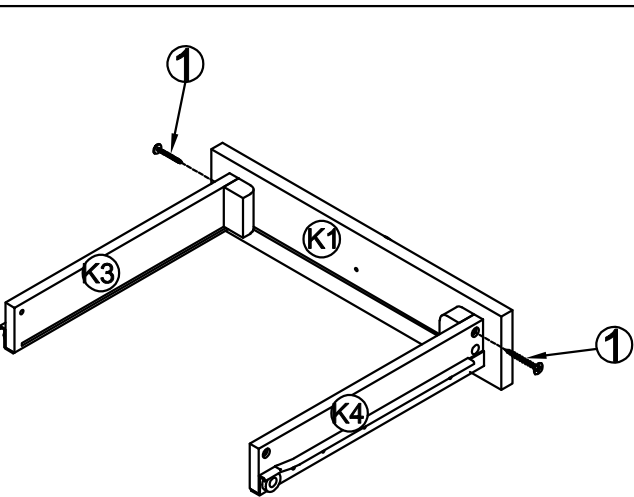
STEP 24-2:



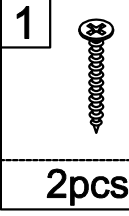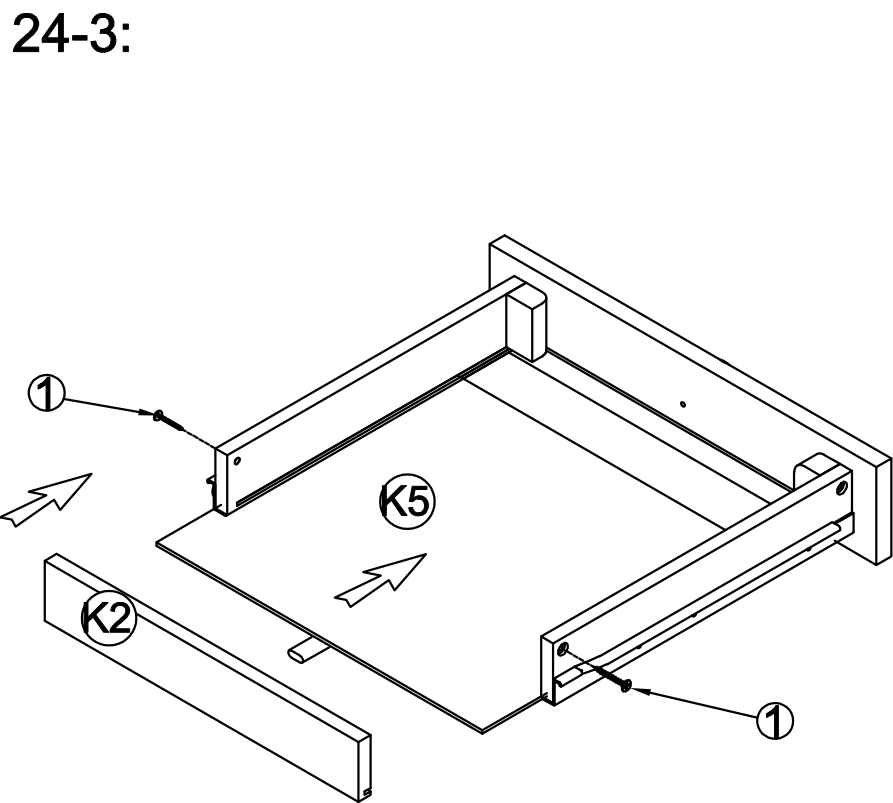STEP 24-3:




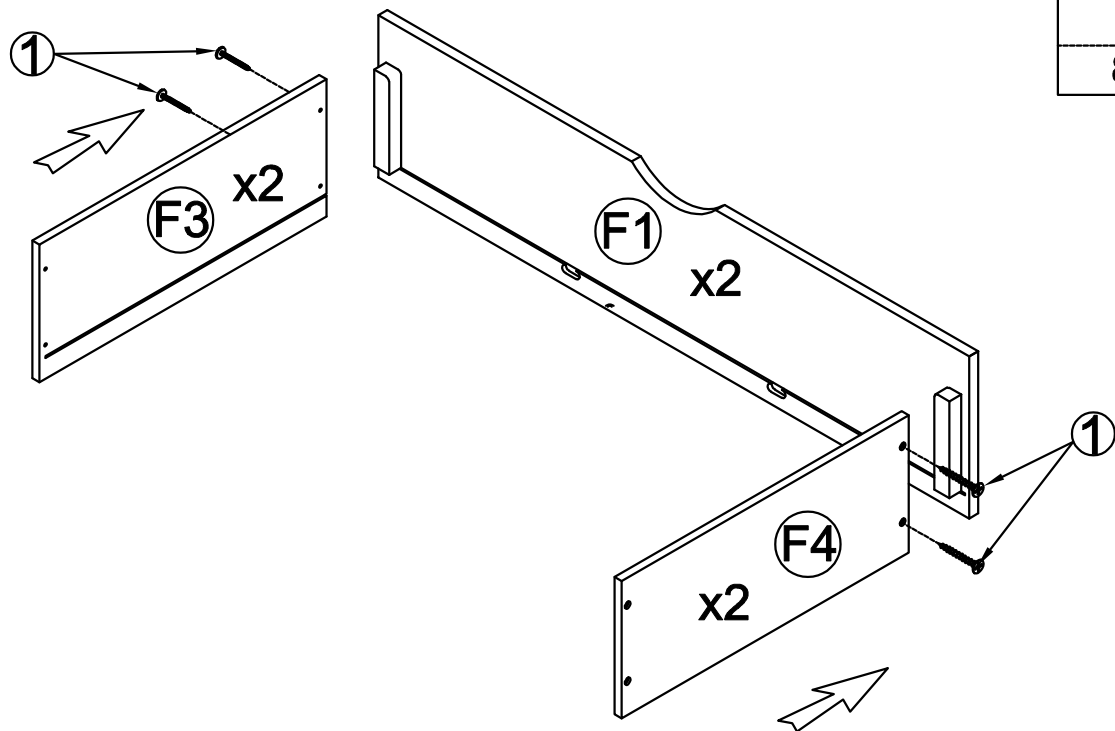STEP 25-1:




1
8pcs

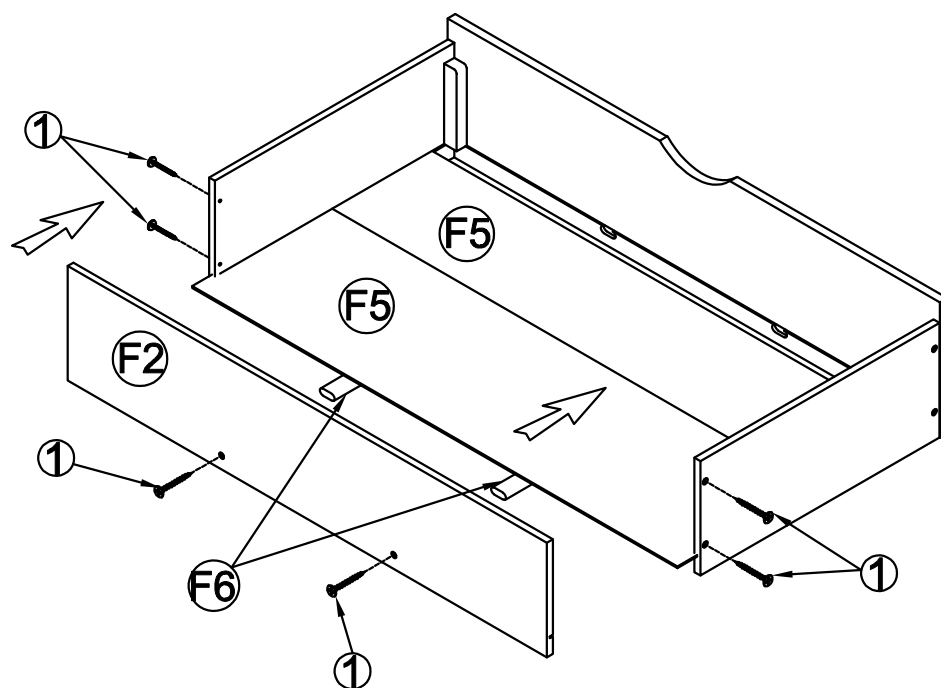STEP 25-2:




1
12pcs

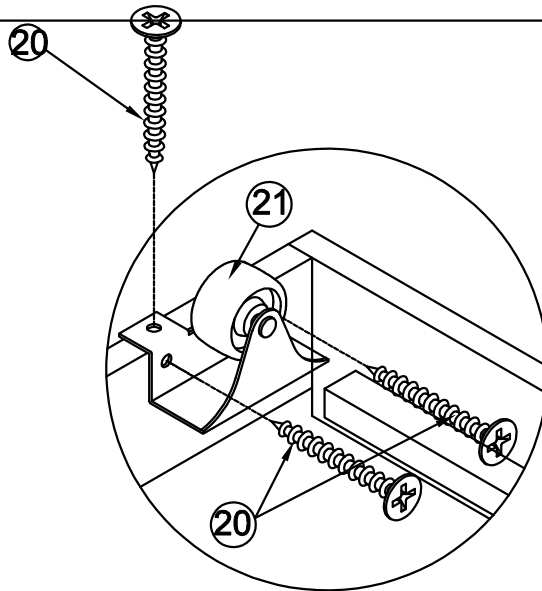
STEP 25-3




21	20
	
2x4pcs	2x12pcs

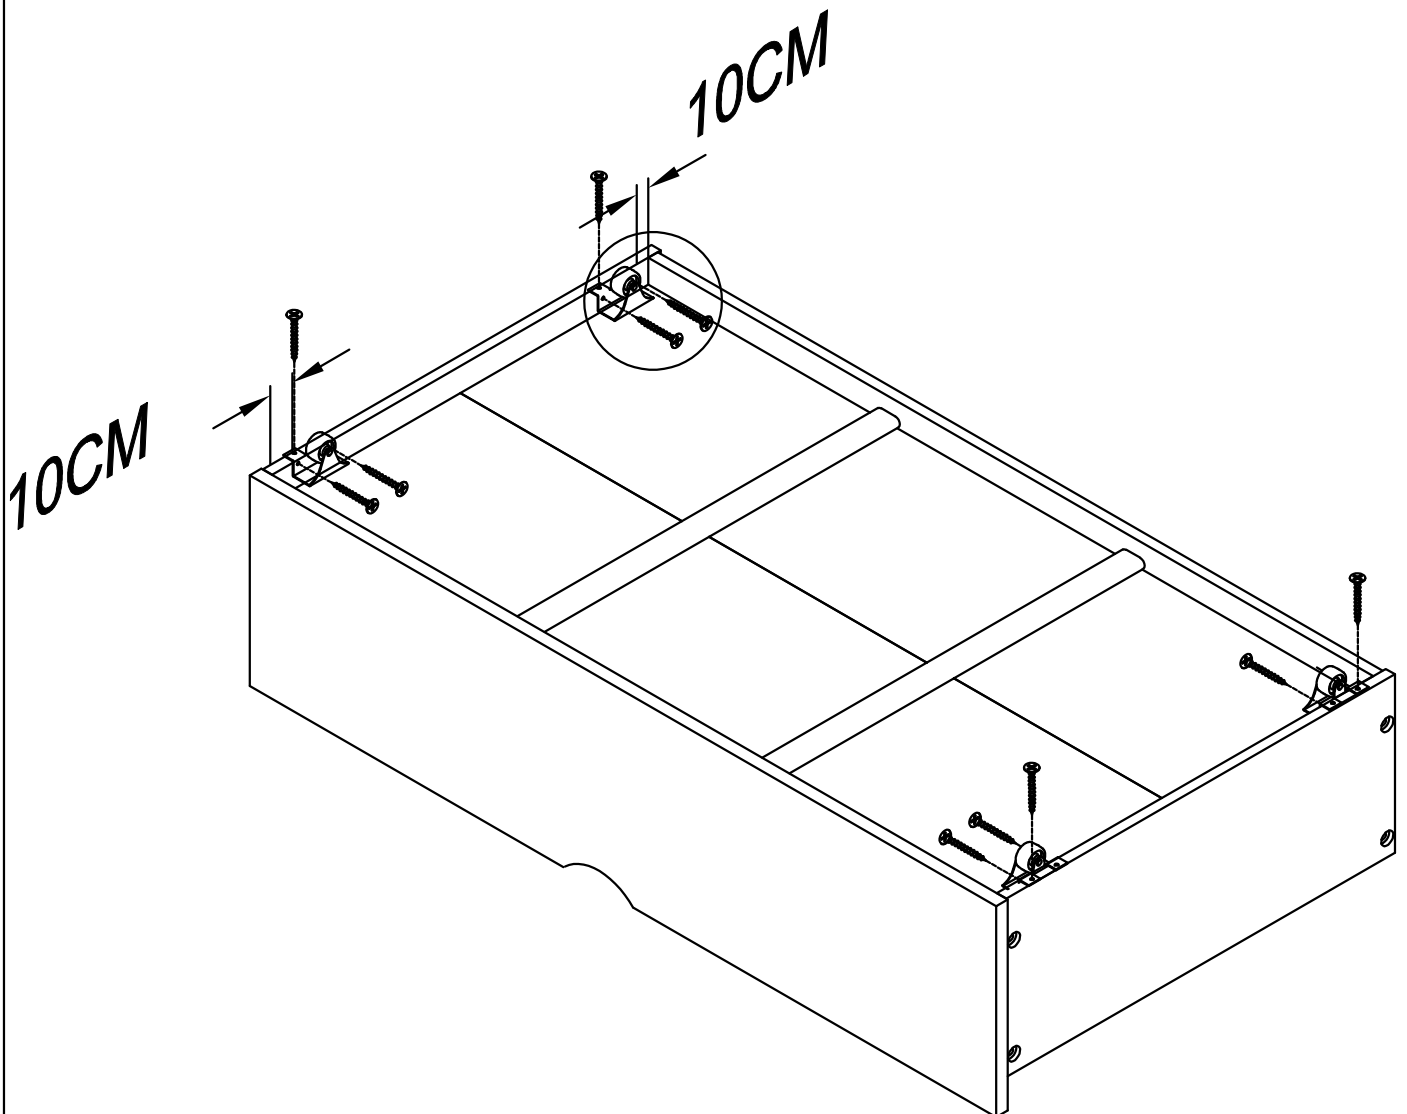

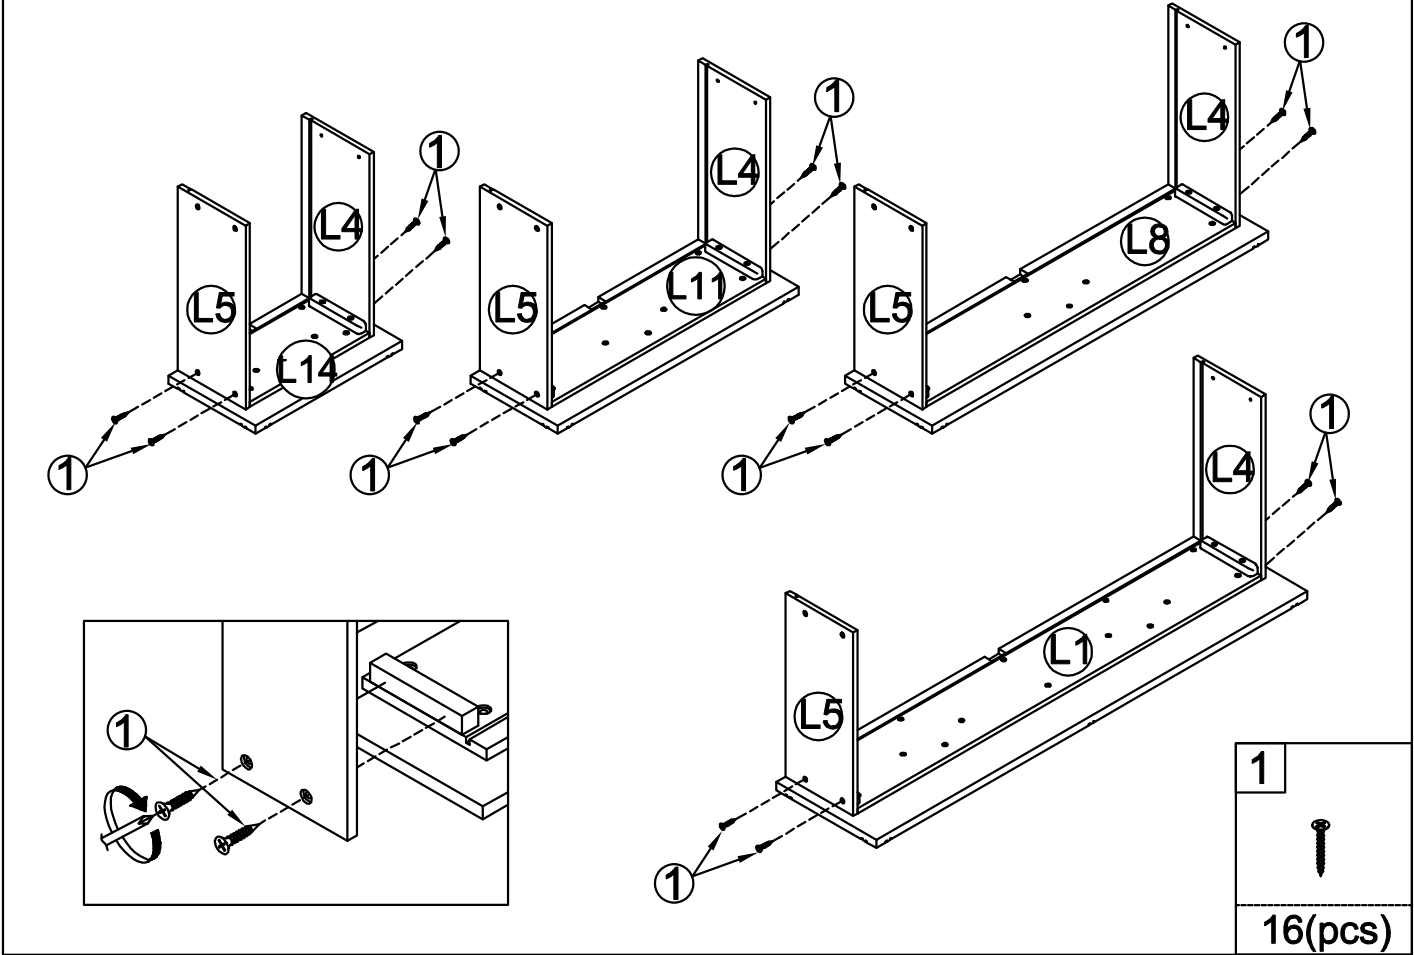
STEP 26-1:ASSEMBLY DRAWER



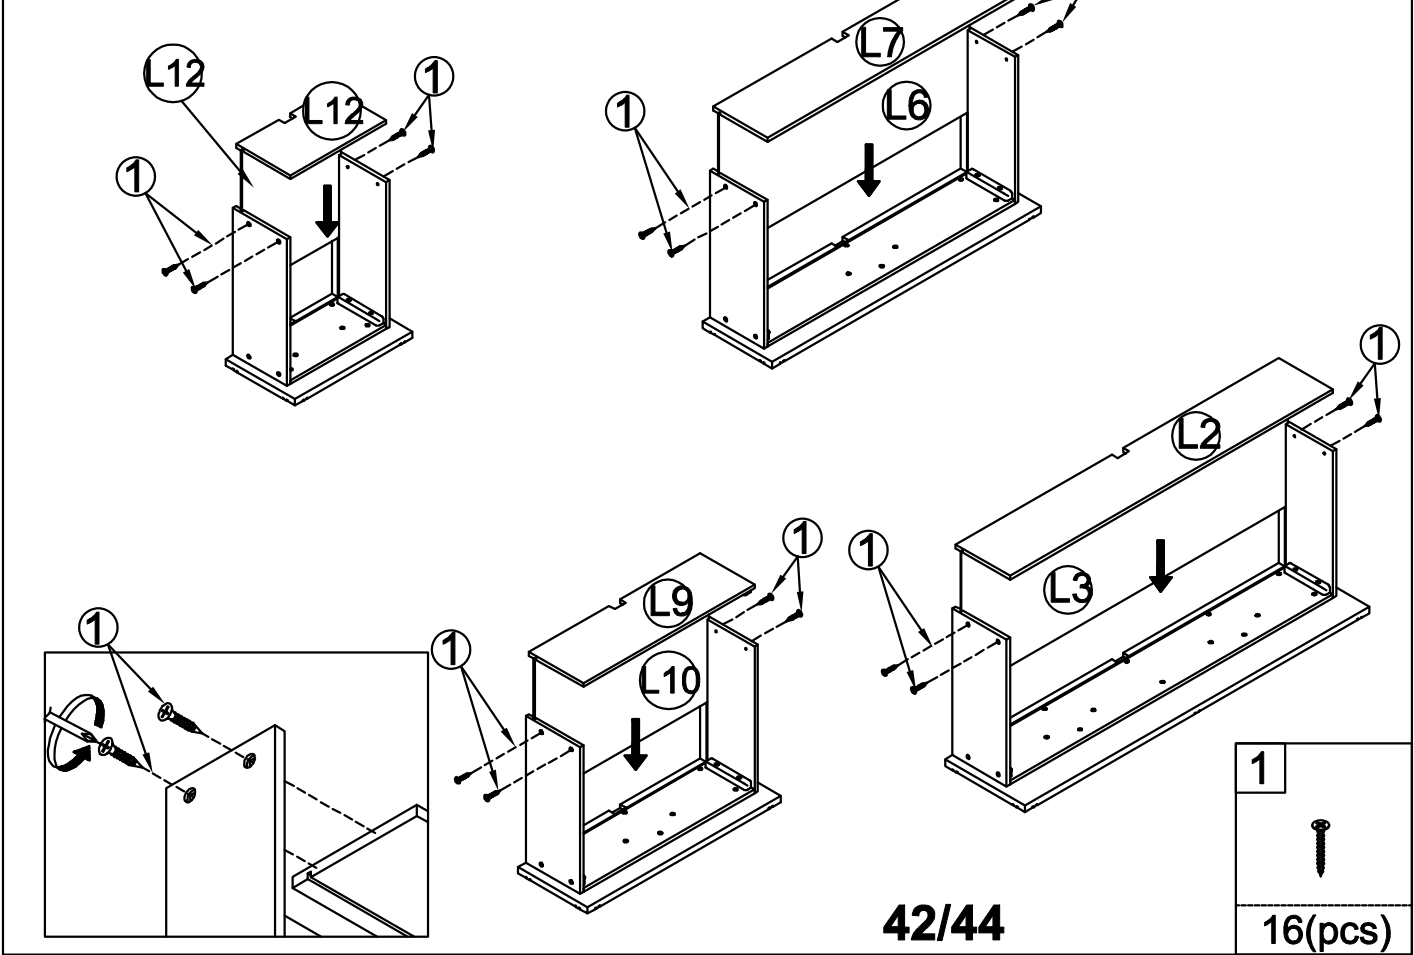
STEP 26-2:ASSEMBLY DRAWER



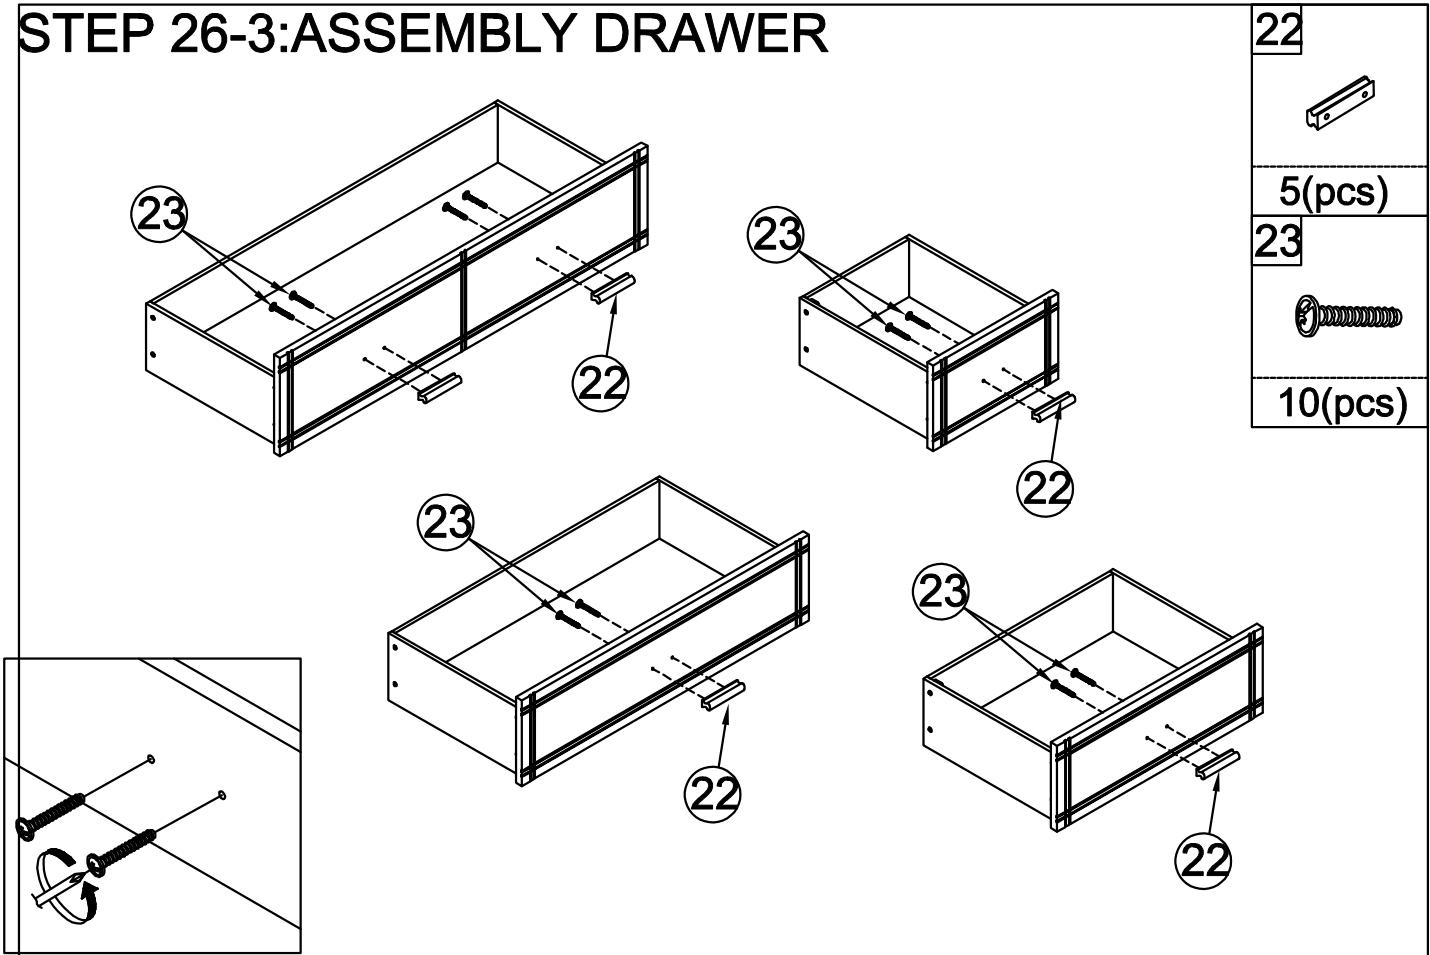STEP 26-3:ASSEMBLY DRAWER



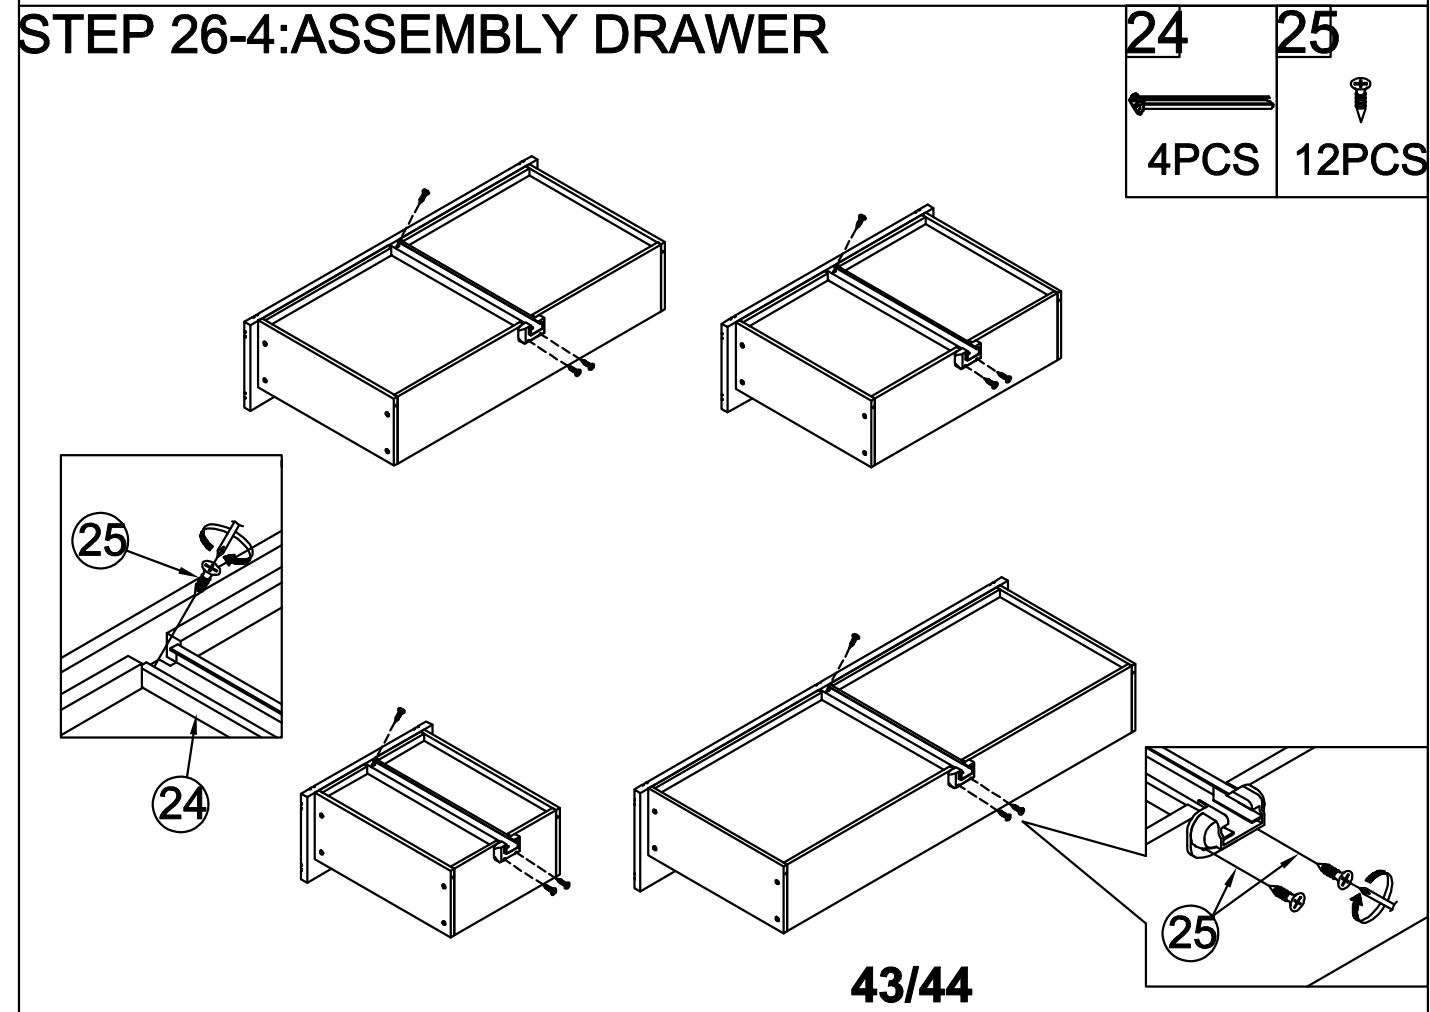STEP 26-4:ASSEMBLY DRAWER



STEP 27: CONGRATULATION. YOU HAVE COMPLETED THE BED

Push 7 drawer into it position

