


## HOW TO CARRY THE TOP

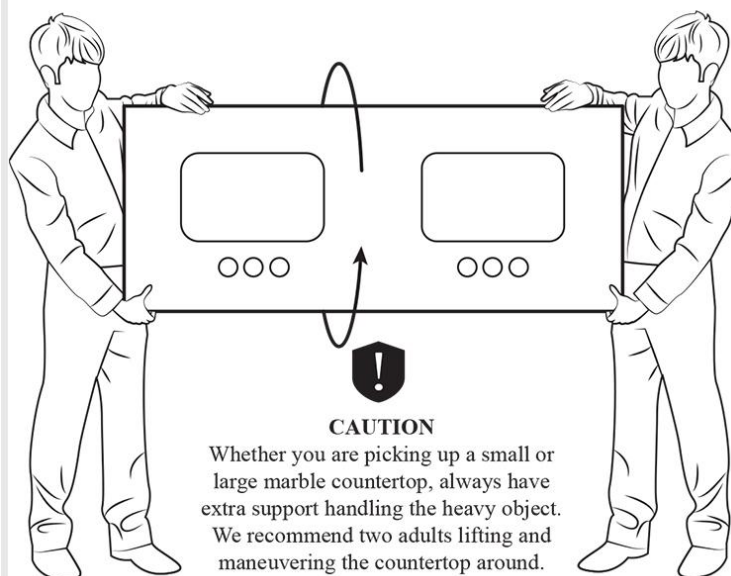


1

Apply a continuous stream of silicone glue around the top of the cabinet.



2

Carry the countertop and gently place it onto the cabinet.

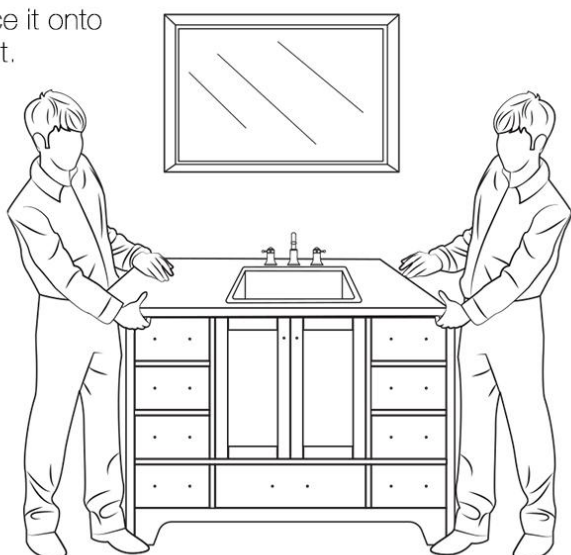

3

Install the backsplash by applying silicone glue near the edge of the countertop. Then place the backsplash onto the silicone area. Add additional silicone onto the edges for sealant if necessary.

