


ASSEMBLY INSTRUCTION


SKU CODE: (WF299339/WF299340)

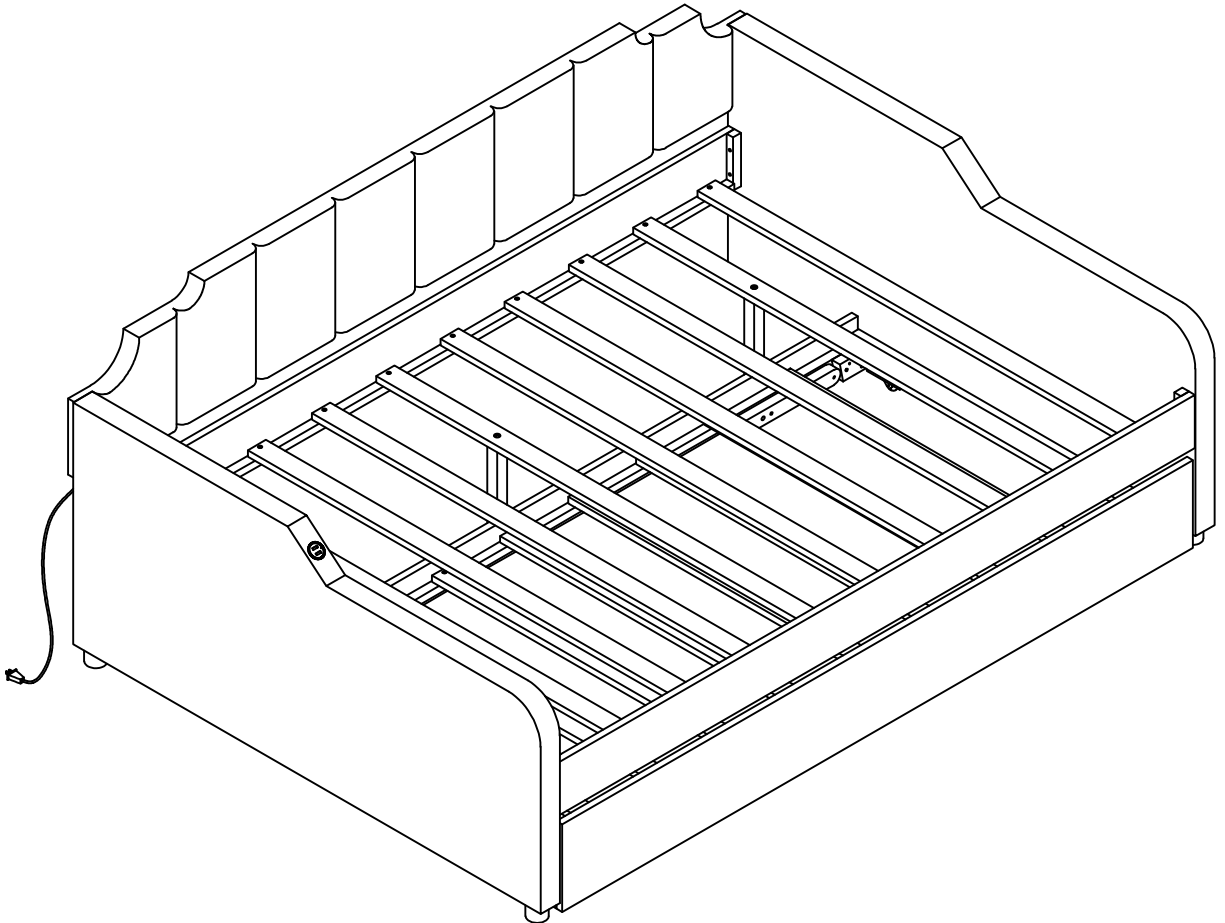





! SAFETY WARNINGS !

1. This bed is designed for use FULL Mattress 74 inch Long 54 inch Wide and 74 inch Long 39 inch Wide.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed
4. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
5. Keep these instructions for future reference



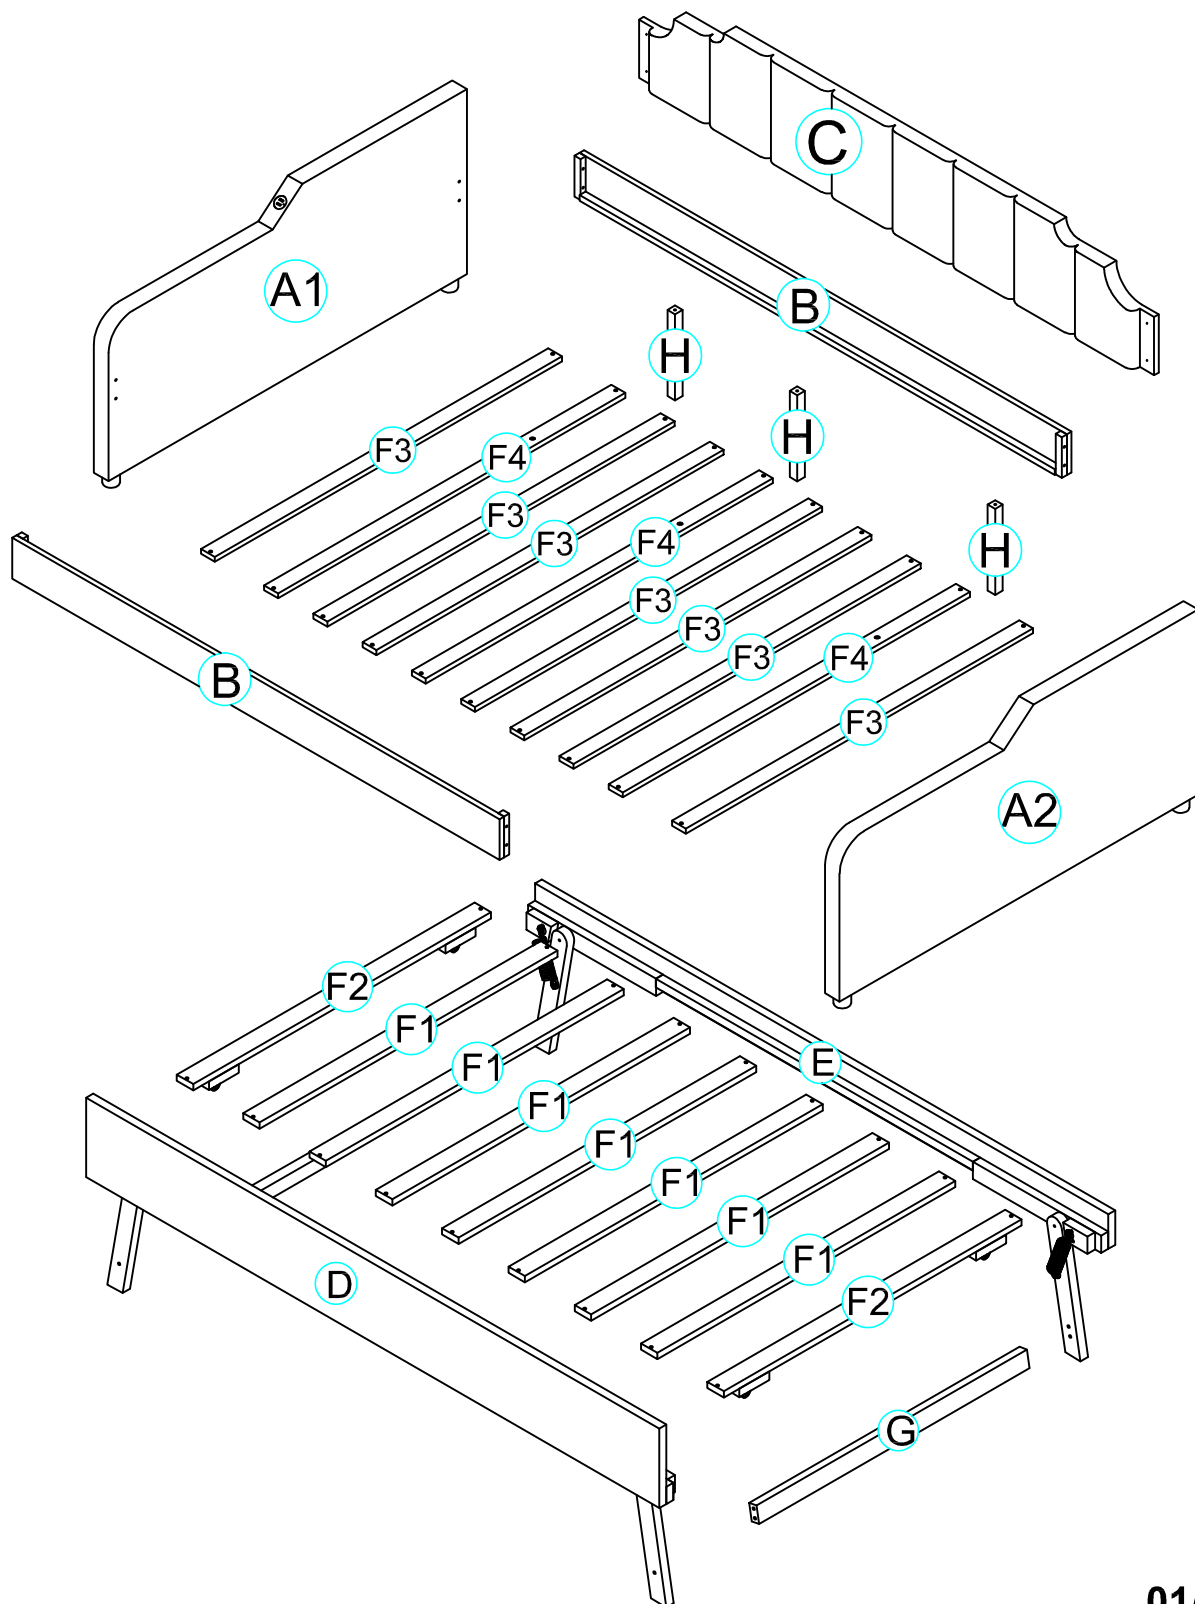

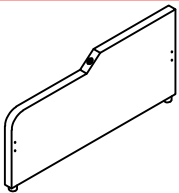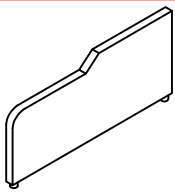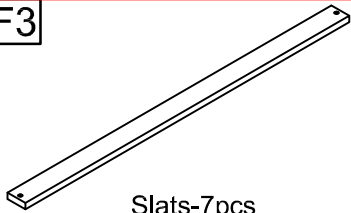
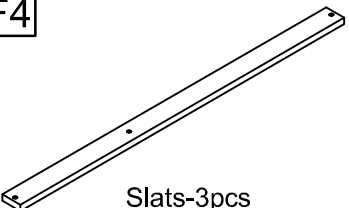






ASSEMBLY INSTRUCTION











Part List(WF299339)

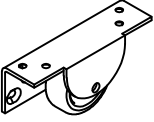
A1  HeadBoard-1pcs	A2  FootBoard-1pcs	F3  Slats-7pcs
F4  Slats-3pcs		

Hardware List

1  Plastic Feet(Ø50x40) 4pcs	2  Ø11.5 x 15 mm Horizontal-Hole bolts 4pcs	3  Ø1/4" x 60 mm Wood Screws 12pcs
4  M4 x 30 mm Wood Screws 44pcs	5  Ø10 x 30 mm Wood dowel 4pcs	6  Wheels 4pcs
7  Allen Key 1pcs	8  Steel Bracket 3pcs	9  M4 x 15 mm Wood Screws 16pcs
10  Ø1/4" x 60mm Hex-Head bolts 4pcs	11  Ø1/4" x 25mm Hex-Head bolts 3pcs	12  Plastic Drawer Stopper 4 pcs

Part List(WF299340)
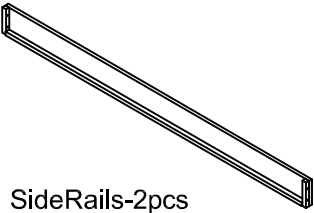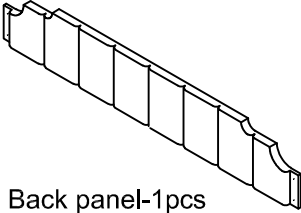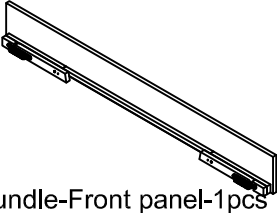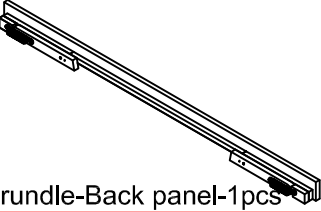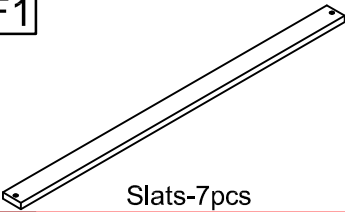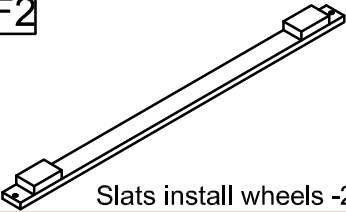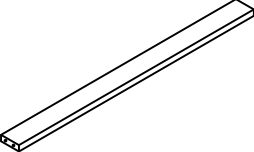
<div>B</div> <div></div> <div>Side Rails-2pcs</div>	<div>C</div> <div></div> <div>Back panel-1pcs</div>	<div>D</div> <div></div> <div>Trundle-Front panel-1pcs</div>
<div>E</div> <div></div> <div>Trundle-Back panel-1pcs</div>	<div>F1</div> <div></div> <div>Slats-7pcs</div>	<div>F2</div> <div></div> <div>Slats install wheels -2pcs</div>
<div>G</div> <div></div> <div>Trundle Legs Bar-2pcs</div>	<div>H</div> <div></div> <div>Support Legs - 3pcs</div>	





Assembly Tools Required (Not Included)

STEP 1: Following below illustration Assembly Plastic Feet(#1) With Headboard and Footboard use HW #2

1




4pcs

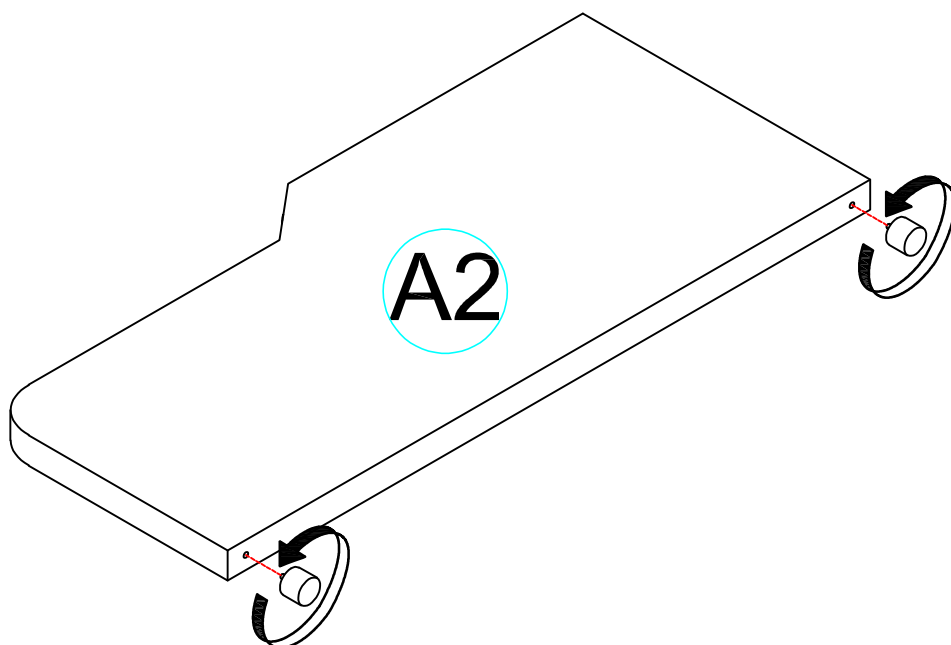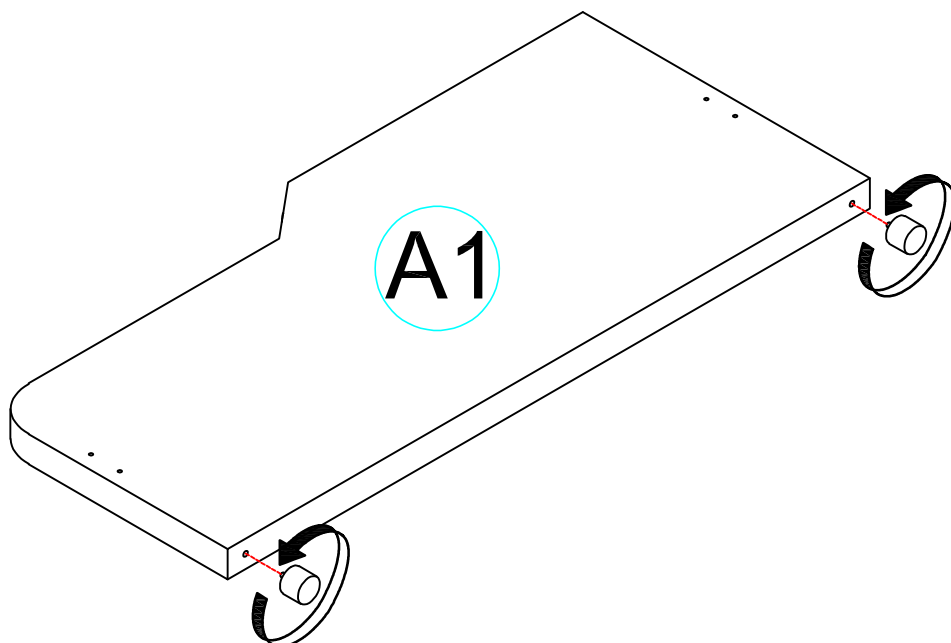

STEP 2:


Following below illustration Using hardware #2 to Assembly Headboard and Footboard with siderail B(x2). Look at detail view for more detail

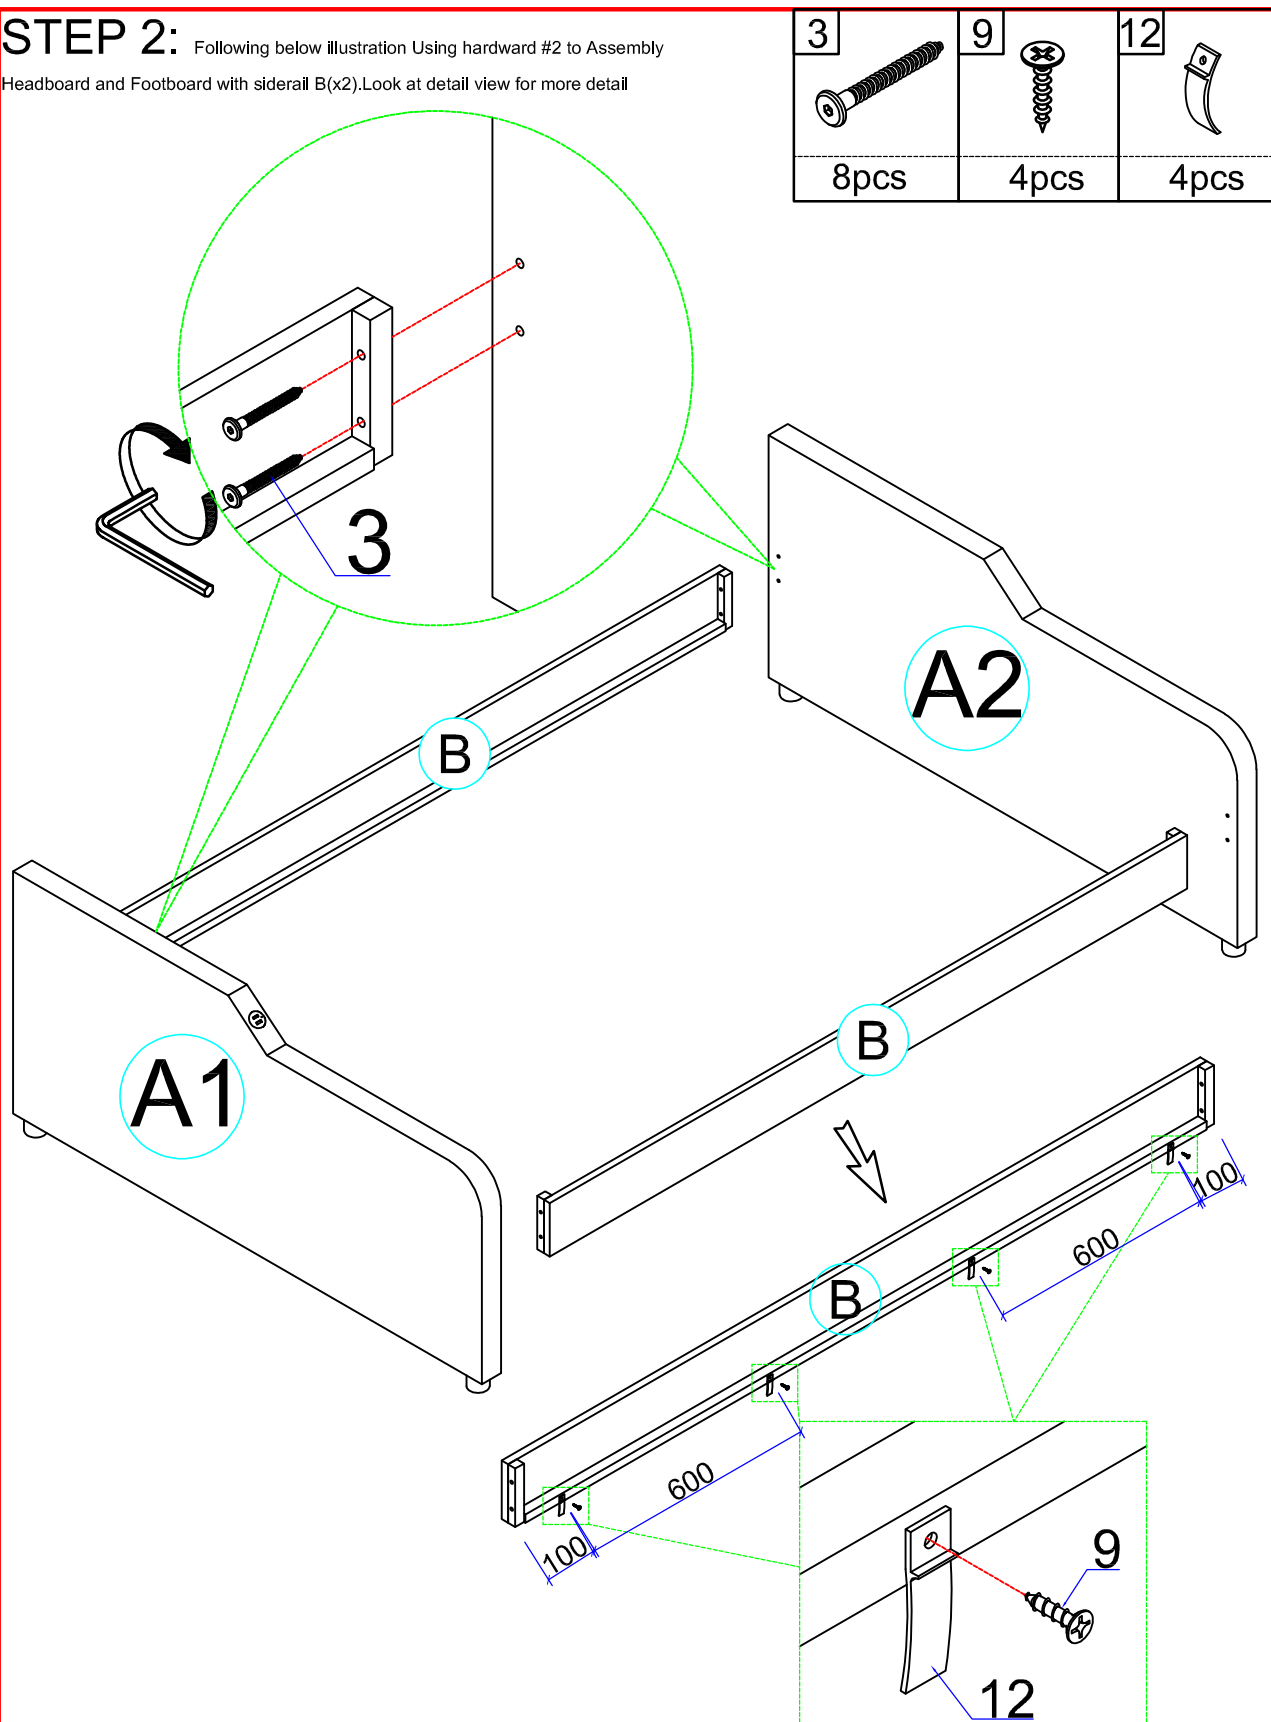


STEP 3: Following below illustration

-Using hardward #3 to Assembly Frame(completed on step 2) with Bach Frame C

3



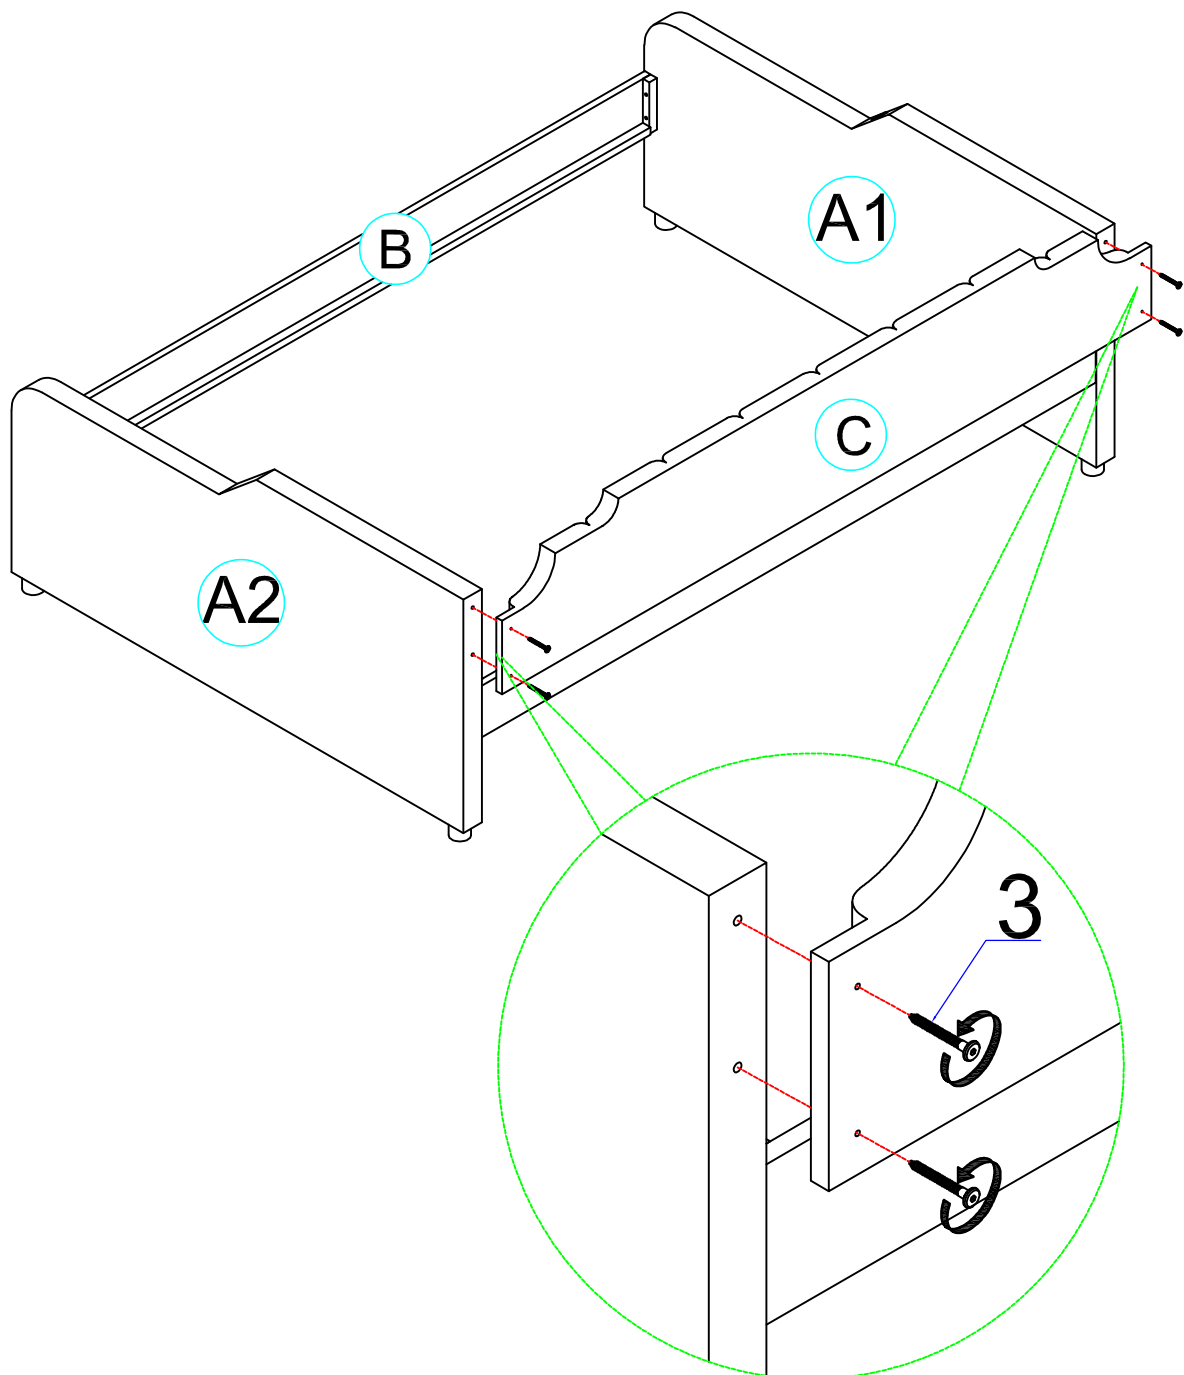

4pcs








STEP 4: Following below illustration:

-Screw 10 slats F with Side Rail B by using hardward #4.


-Look at detail view for more detail

11	4
	
3pcs	20pcs


11

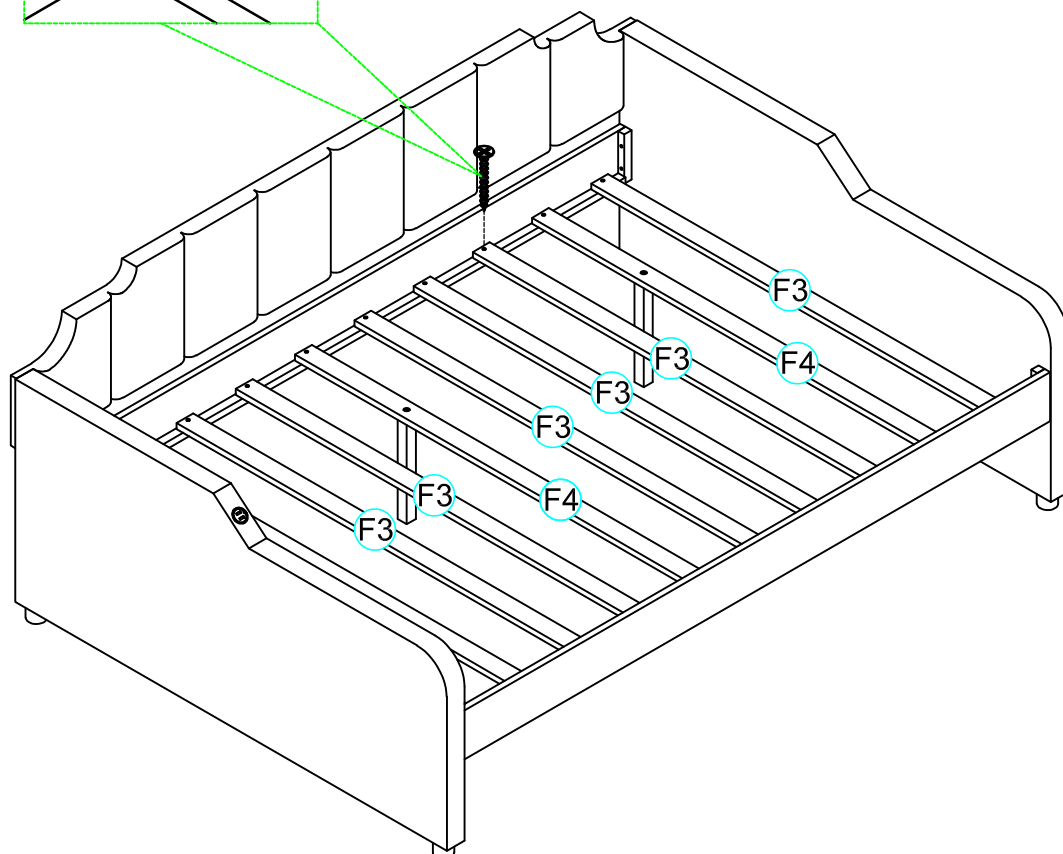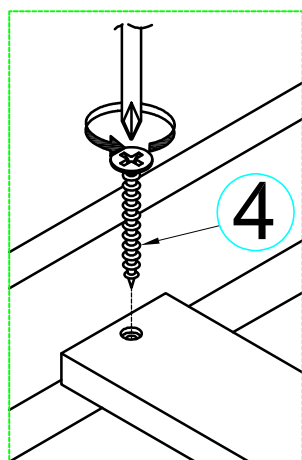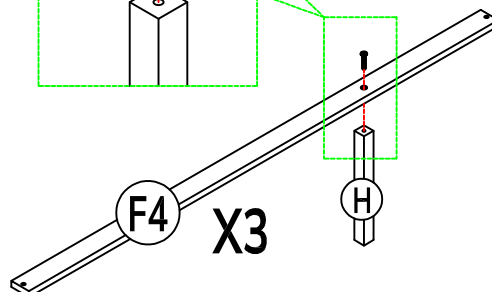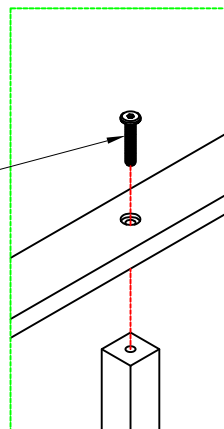




STEP 5-1: Following below illustration:

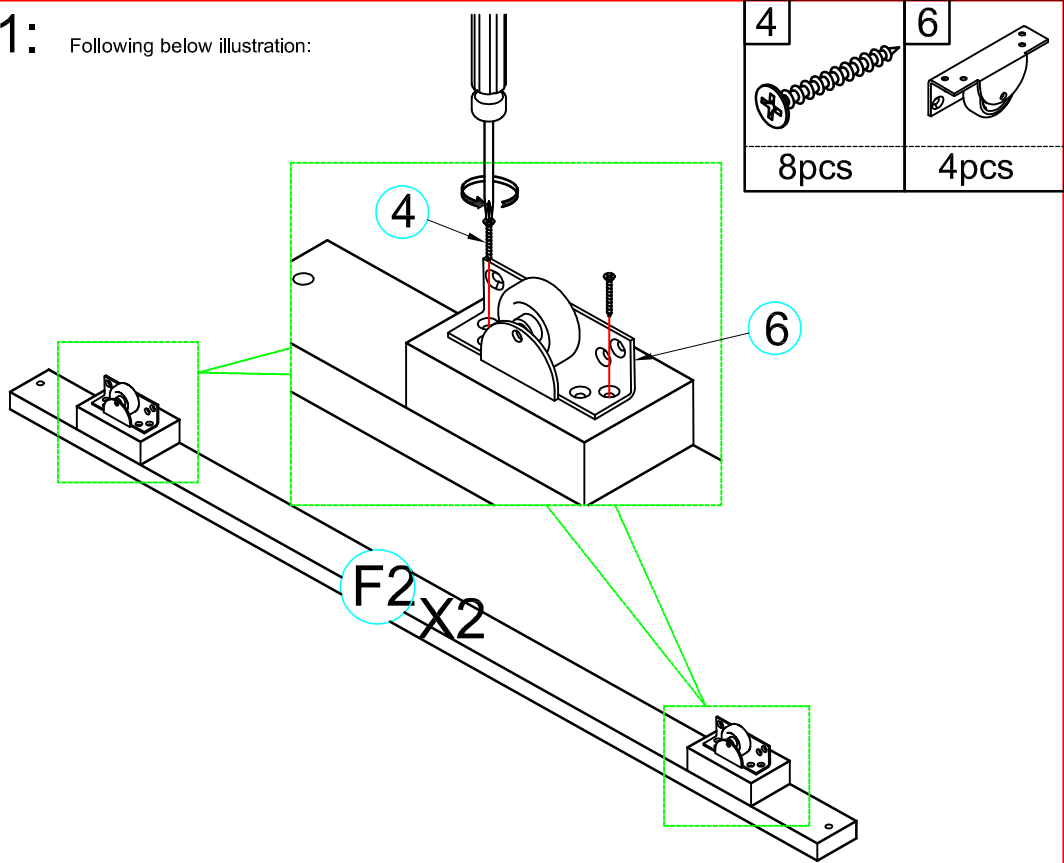


STEP 5-2: Loosen a screw number 4 and keep for step 6

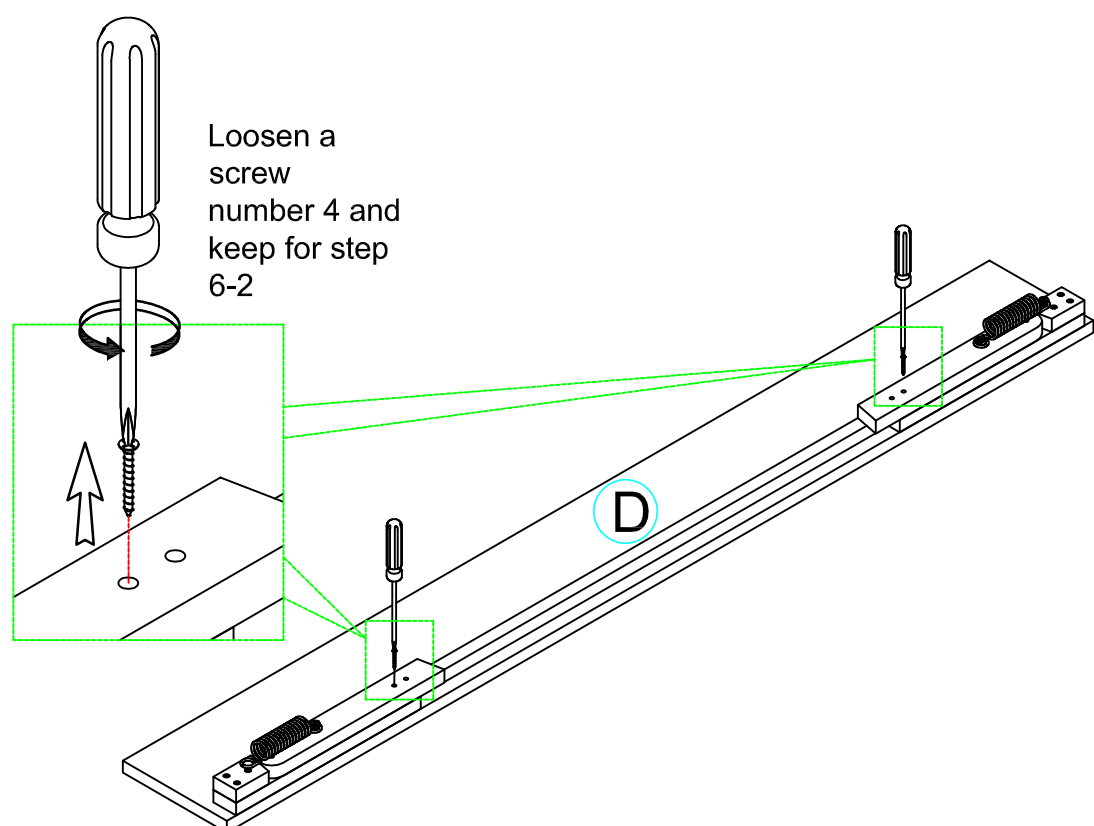


STEP 6-1: Following below illustration:


2	10	5
		
4pcs	4pcs	4pcs

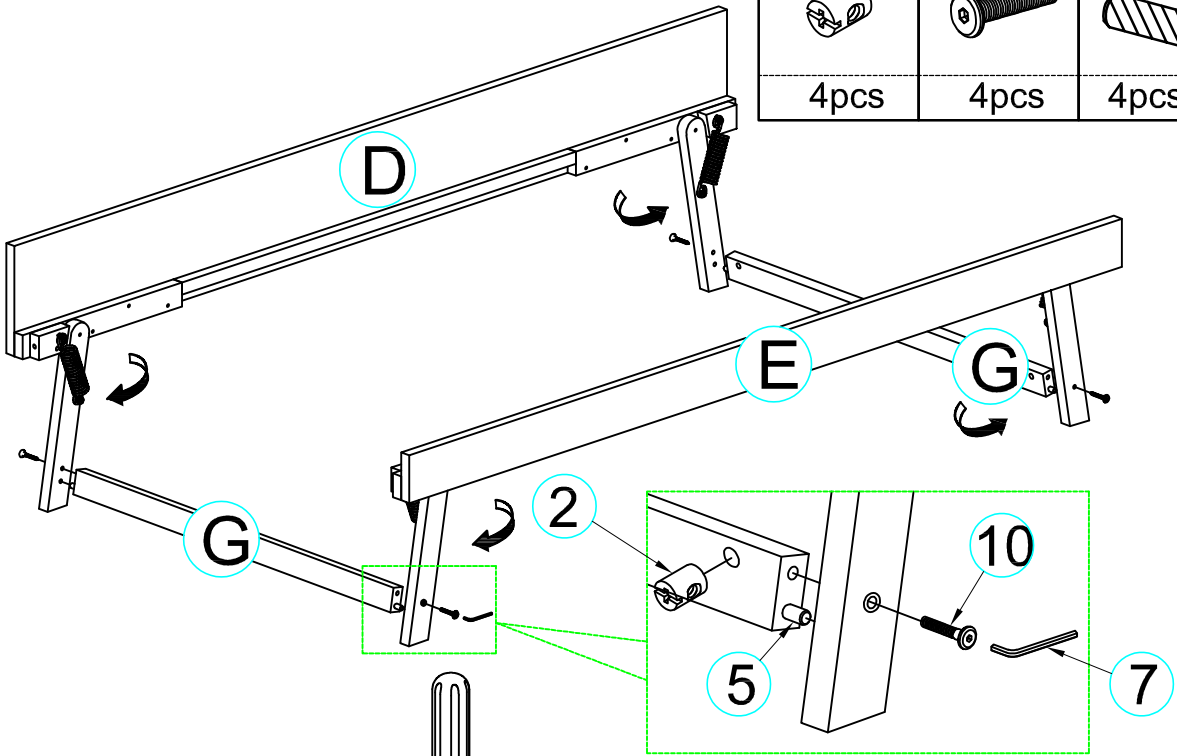



STEP 6-2:


Following below illustration:

4

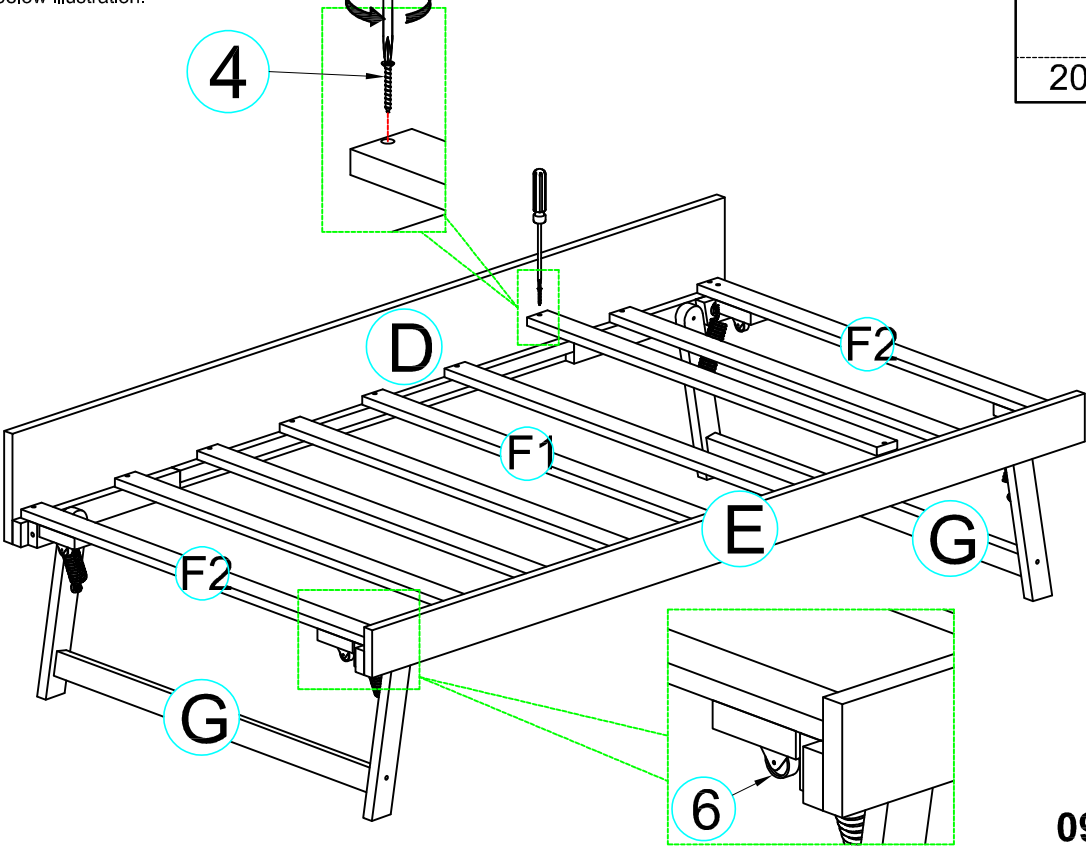20pcs



STEP 7: Following below illustration:

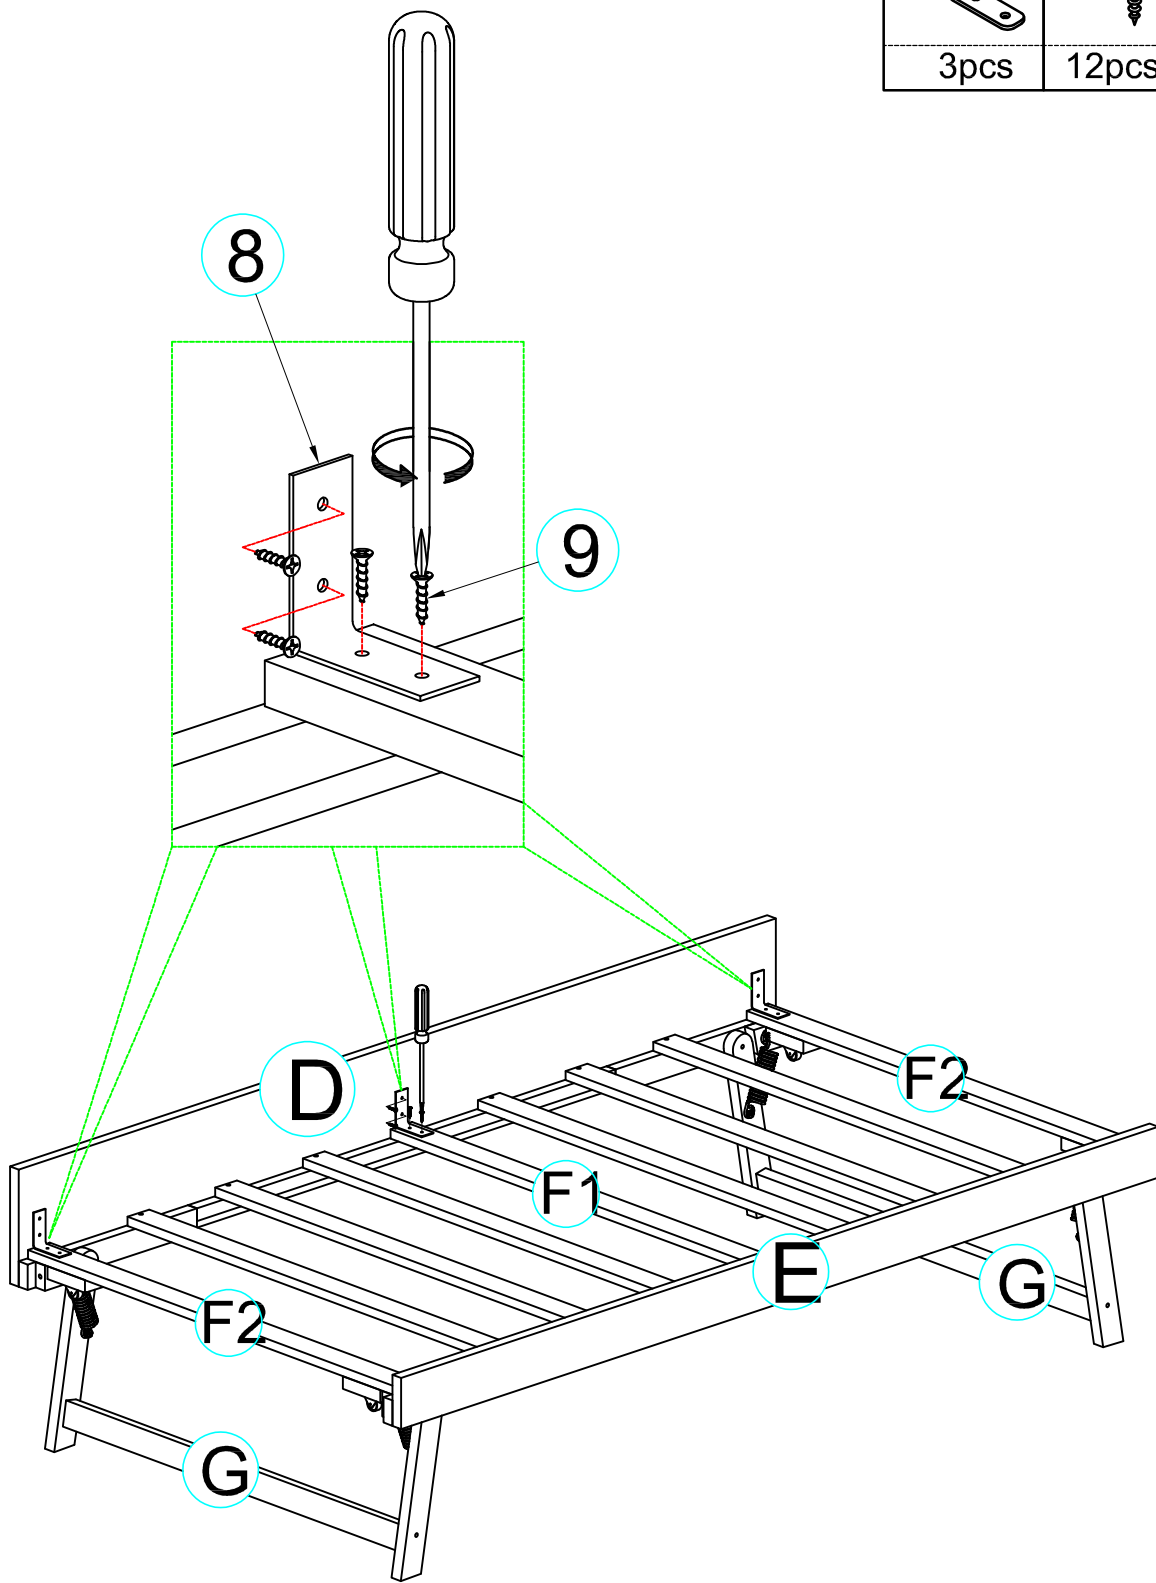8	9
	
3pcs	12pcs



FINISH

