




1.Tighten the screw to the hole on the board of the high table.

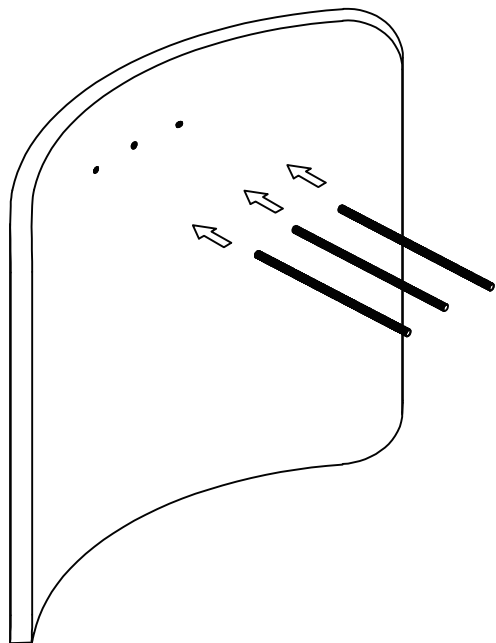


2.Tighten the screw to the hole on the board of the high table.

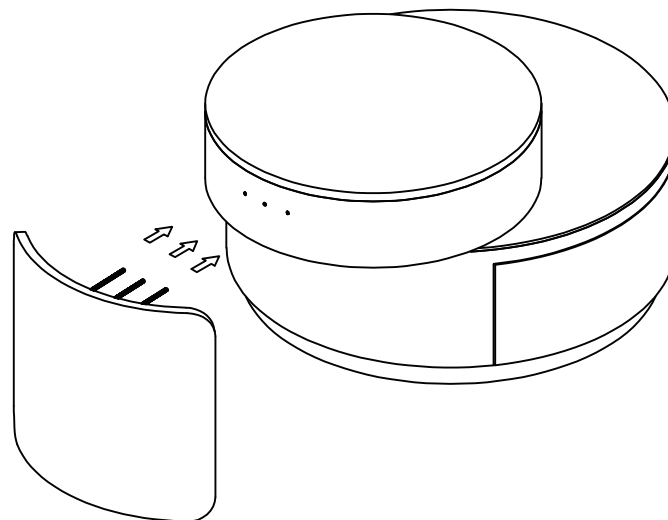

3.Lift the top of the high table ,place the nuts and spacers on the screws ,and then tighten them.

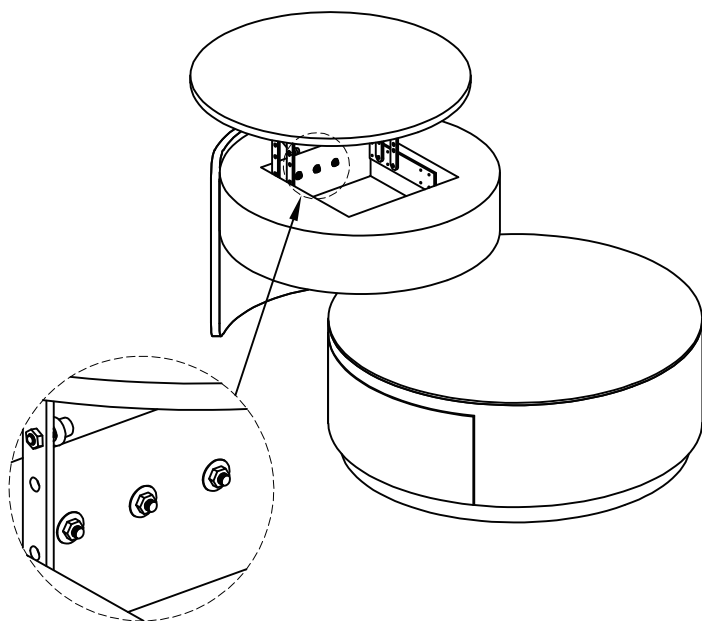


4.Installation finish.

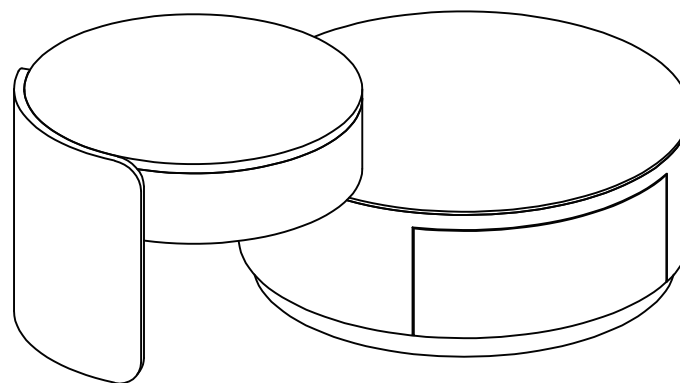




POVISON

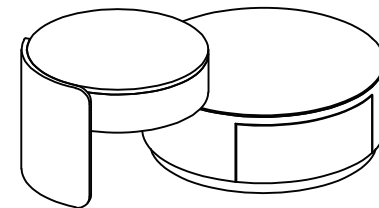Installation instruction



CT016AW Installation Suggested
Number of People for
Assembly: 1

1. Please read the manual carefully before installing this product. And strictly follow the installation process.
2. Please take good care of this manual for your next installation

NO.	Shape	Name	Quantity
A		screw	3
B		spacer	3
C		nut	3