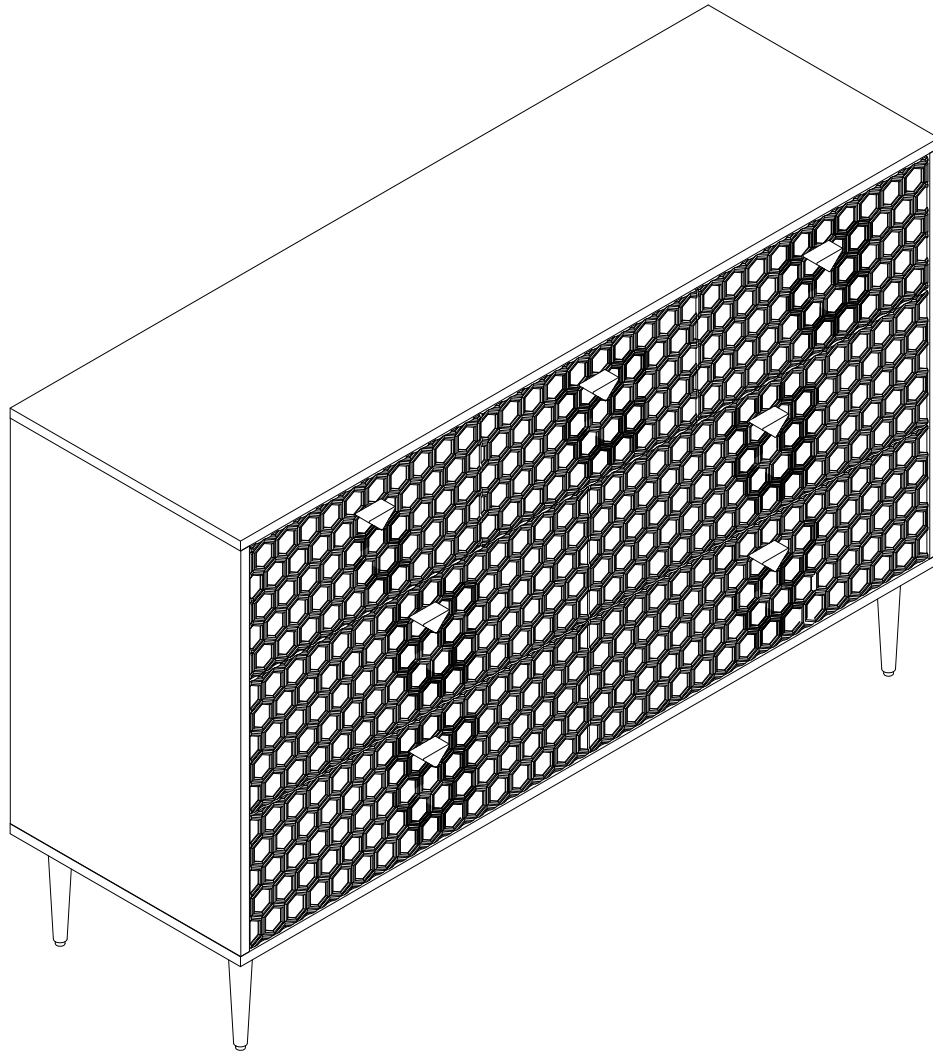


ASSEMBLY INSTRUCTIONS

1. Before installation, please read the Assembly Instruction carefully.
2. Please check whether the Parts and Hardware are consistent with the list.
3. It is normal for the sealed environment to smell, not a product quality problem.

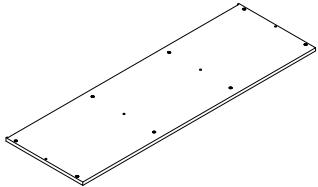
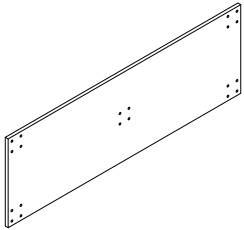
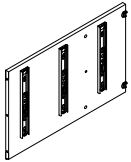

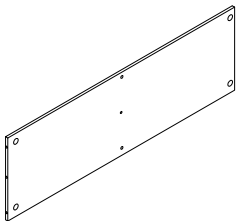



Phone number: (833) 998-6986
service@boyelliving.com
Web: www.boyelliving.com


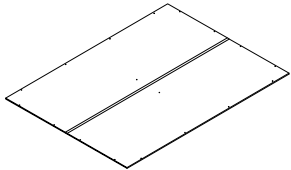




ASSEMBLY INSTRUCTIONS

Page 2 of 21

Part List:

ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Fixed shelf		1
6	Upper cross middle rail		2



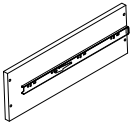
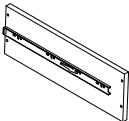
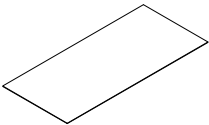

Part List:

ITEM	DESCRIPTION	PART	QTY
7	Bottom cross middle rail		1
8	Back panel		1
9	Leg		5
10	Left upper drawer front		1
11	Right upper drawer front		1
12	Middle upper drawer front		1

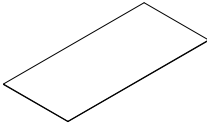

MADE IN CHINA

ASSEMBLY INSTRUCTIONS

Part List:

ITEM	DESCRIPTION	PART	QTY
13	Left Bottom Drawer front		2
14	Right Bottom Drawer front		2
15	Drawer Left Side		7
16	Drawer Right Side		7
17	Side Upper Drawer bottom		3
18	Side Upper Drawer back		3









Part List:

ITEM	DESCRIPTION	PART	QTY
19	Bottom Drawer bottom		4
20	Bottom Drawer back		4







ASSEMBLY INSTRUCTION

Page 4 of 21

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Wooden dowel	 Φ8*30mm	12
B	Short bolt	 Φ1/4"*1/2"	20
C	Cam Bolt		6
D	Cam Lock		6
E	Allen wrench		1
F	Round head screw	 Φ3*16mm	18
G	Safety wall strap		2
H	Plastic anchor		2

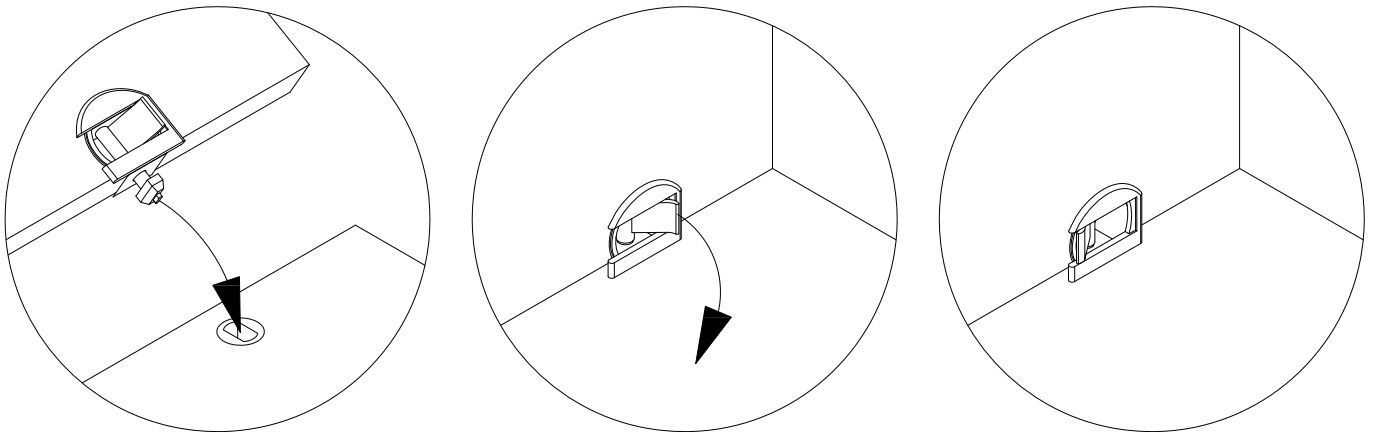
Hardware List:

ITEM	DESCRIPTION	PART	QTY
I	Mounting screw	 Φ4*38mm	2
J	Flat Head screw	 Φ4*30mm	56
K	Handle		7
L	Bolt	 Φ5/32"*1-1/8"	14
M	Washer		4
N	Long bolt	 Φ1/4"*1"	10

MADE IN CHINA

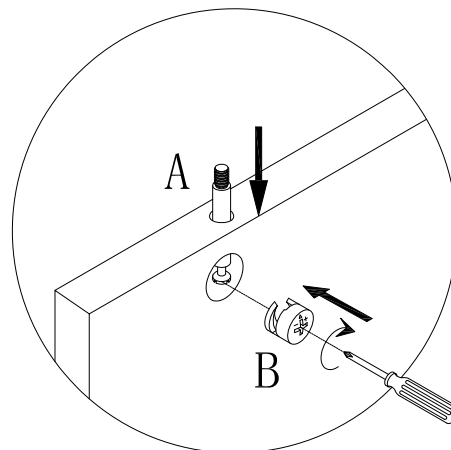
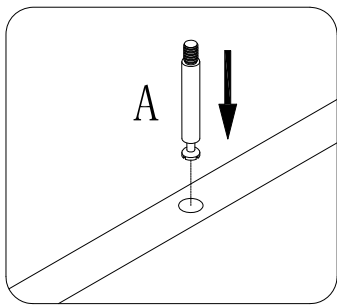
- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Plastic Lock



- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Cam Lock(A & B)






Screw camlock bolt (A) to wood part.

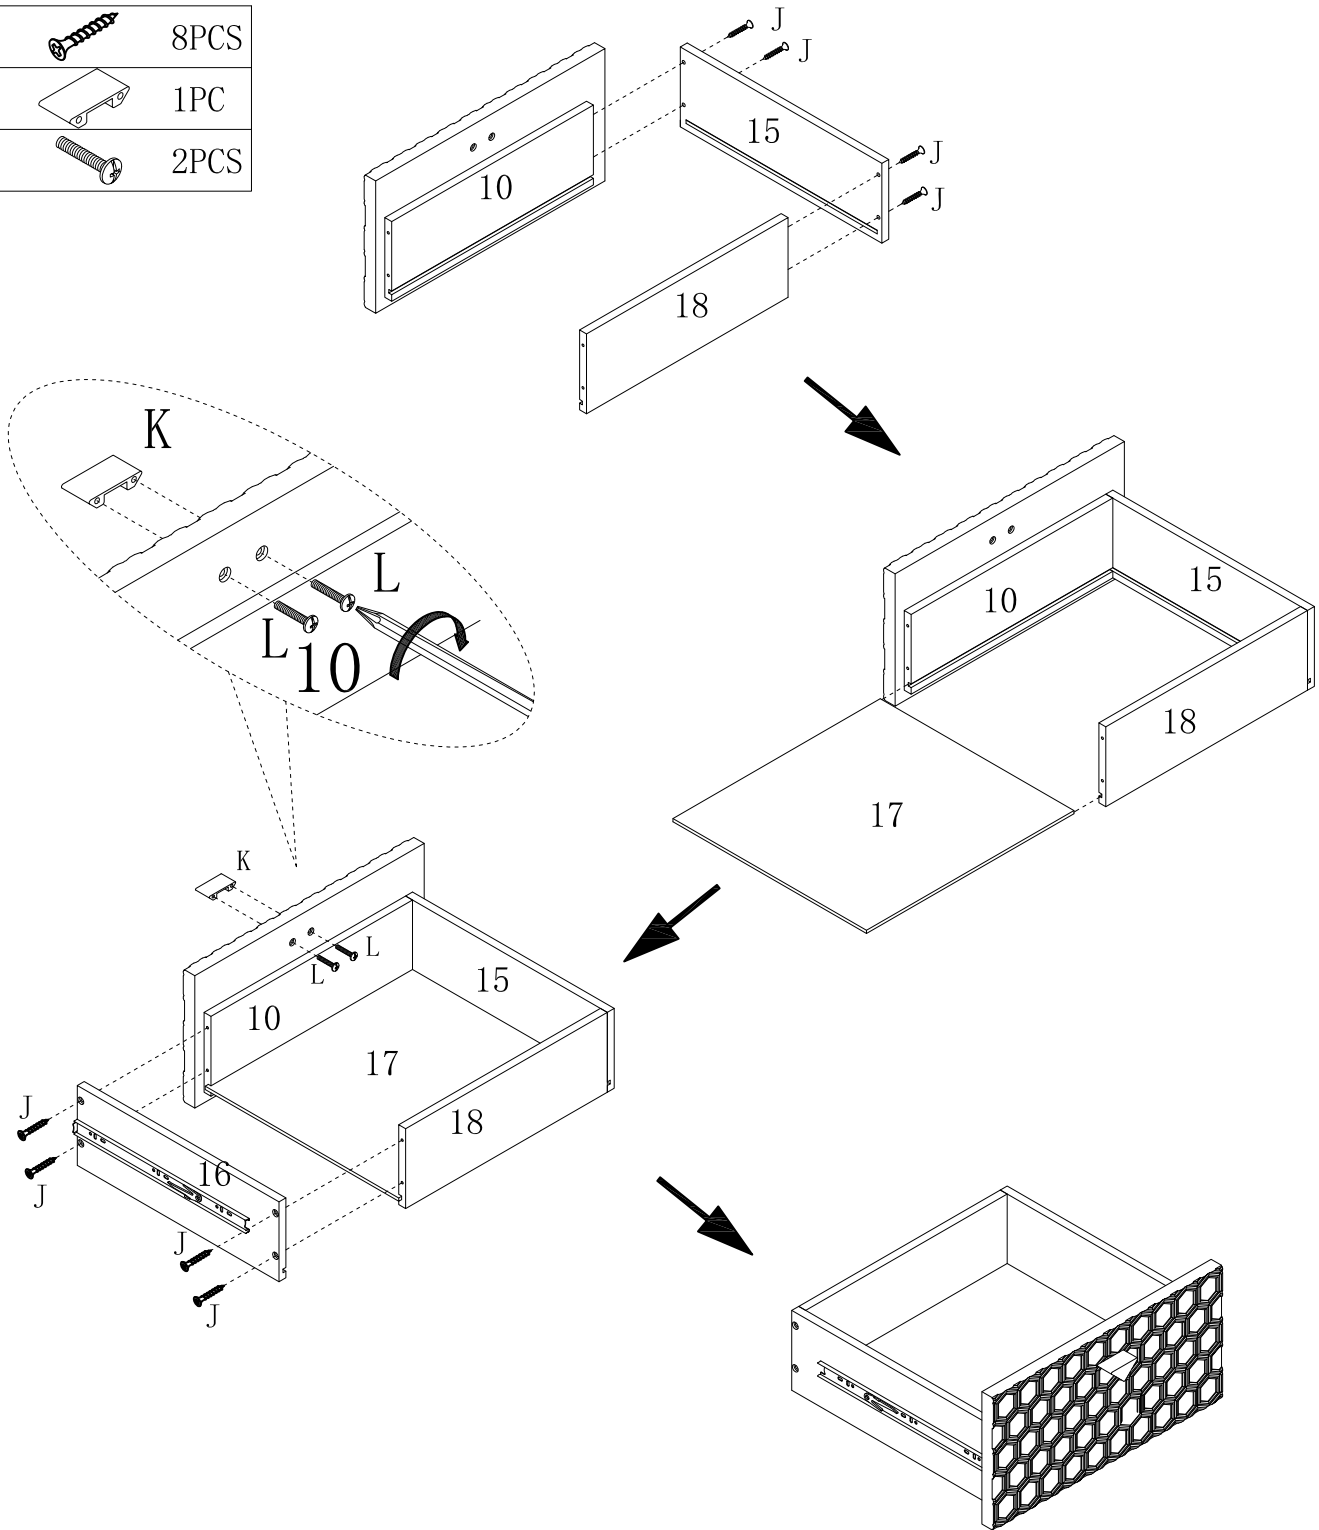
Do not assemble camlock (B) unless instructed.

To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

ASSEMBLY INSTRUCTION




STEP 1

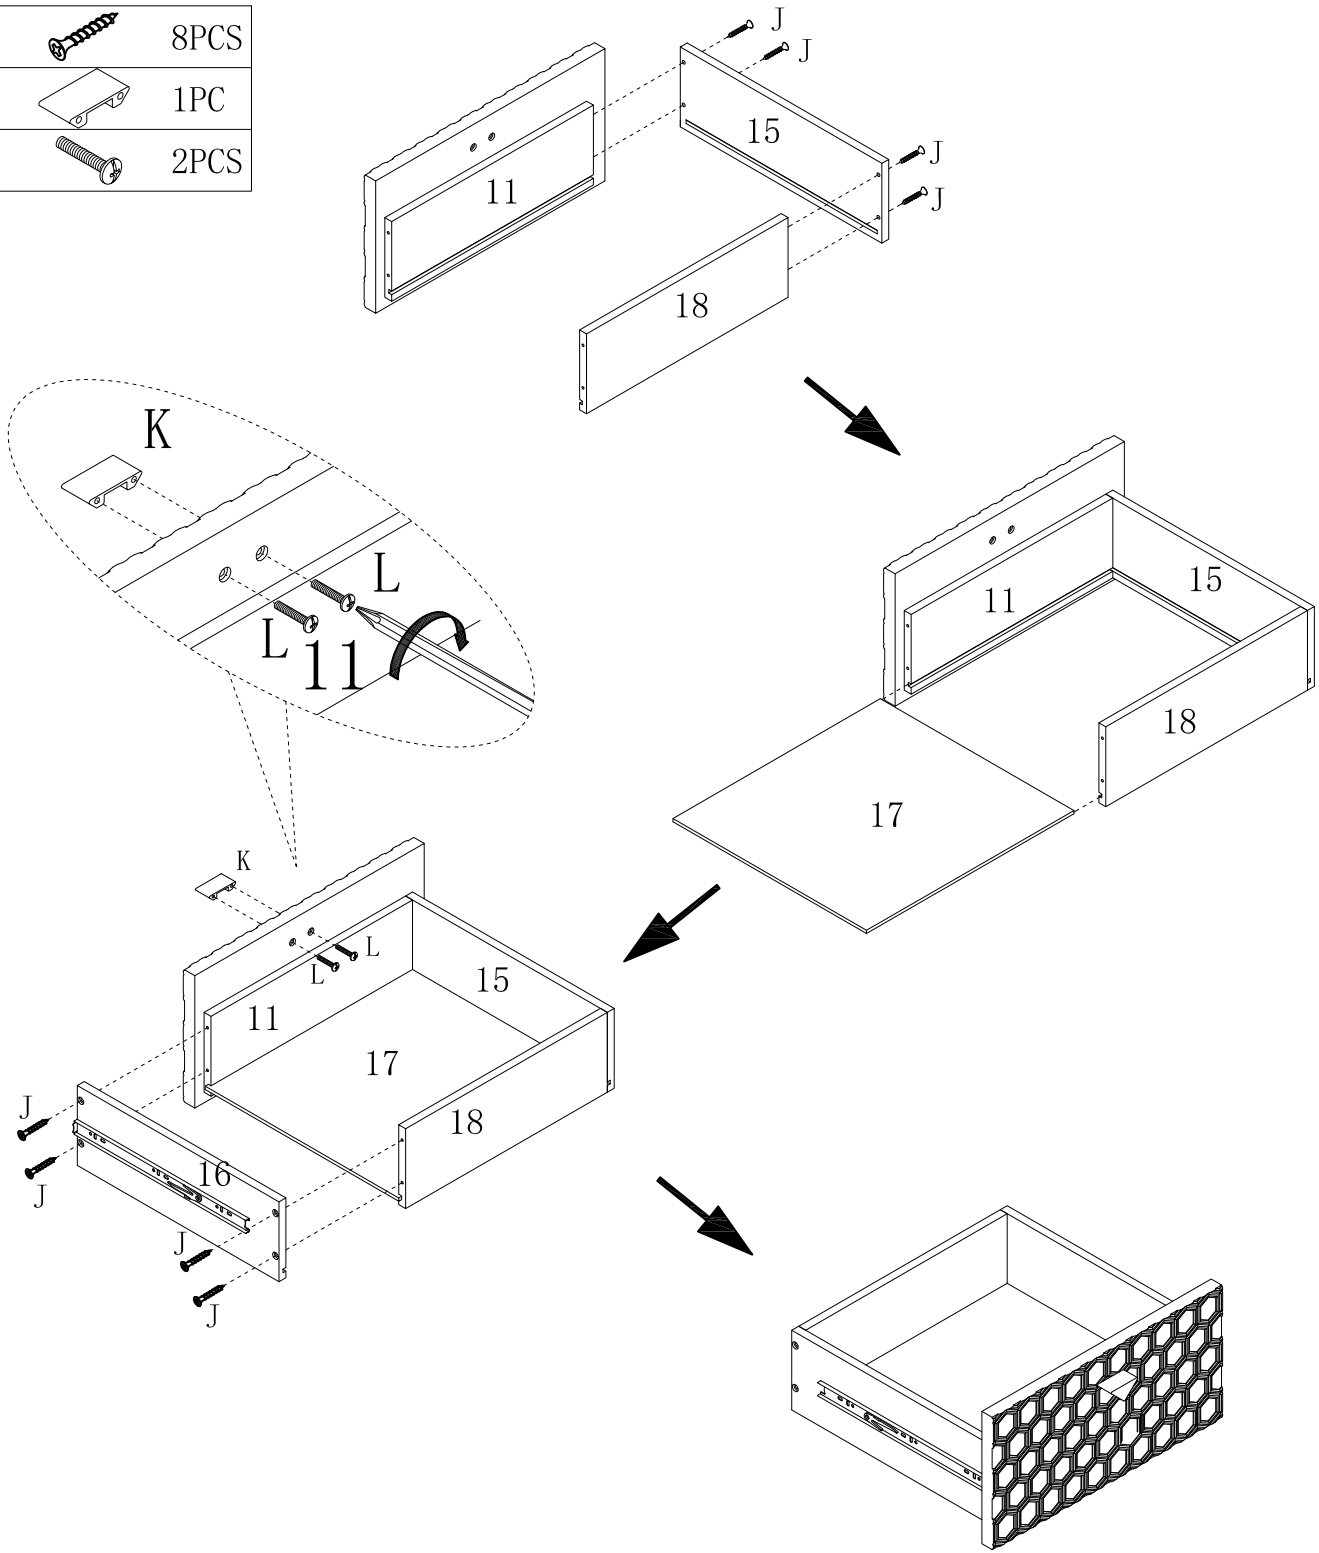
J:		8PCS
K:		1PC
L:		2PCS



ASSEMBLY INSTRUCTION




STEP 1

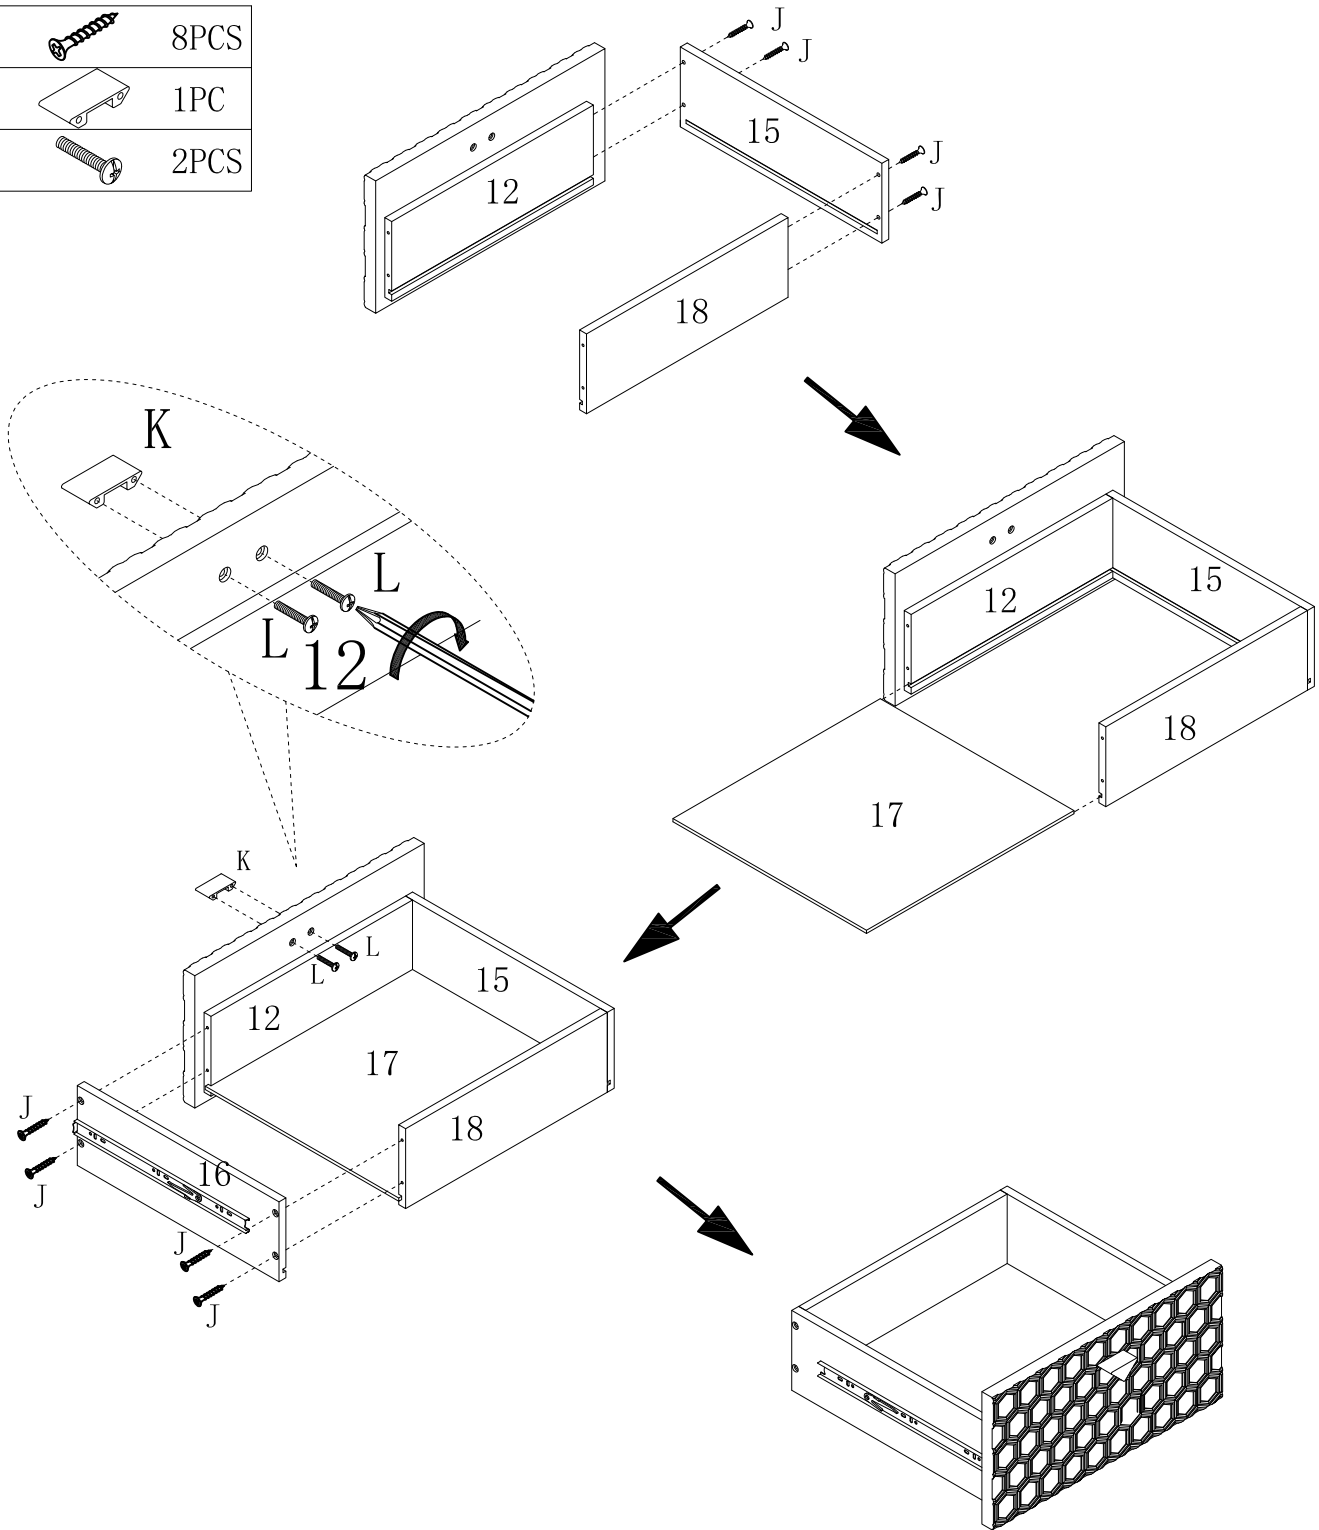
J:		8PCS
K:		1PC
L:		2PCS



ASSEMBLY INSTRUCTION




STEP 1

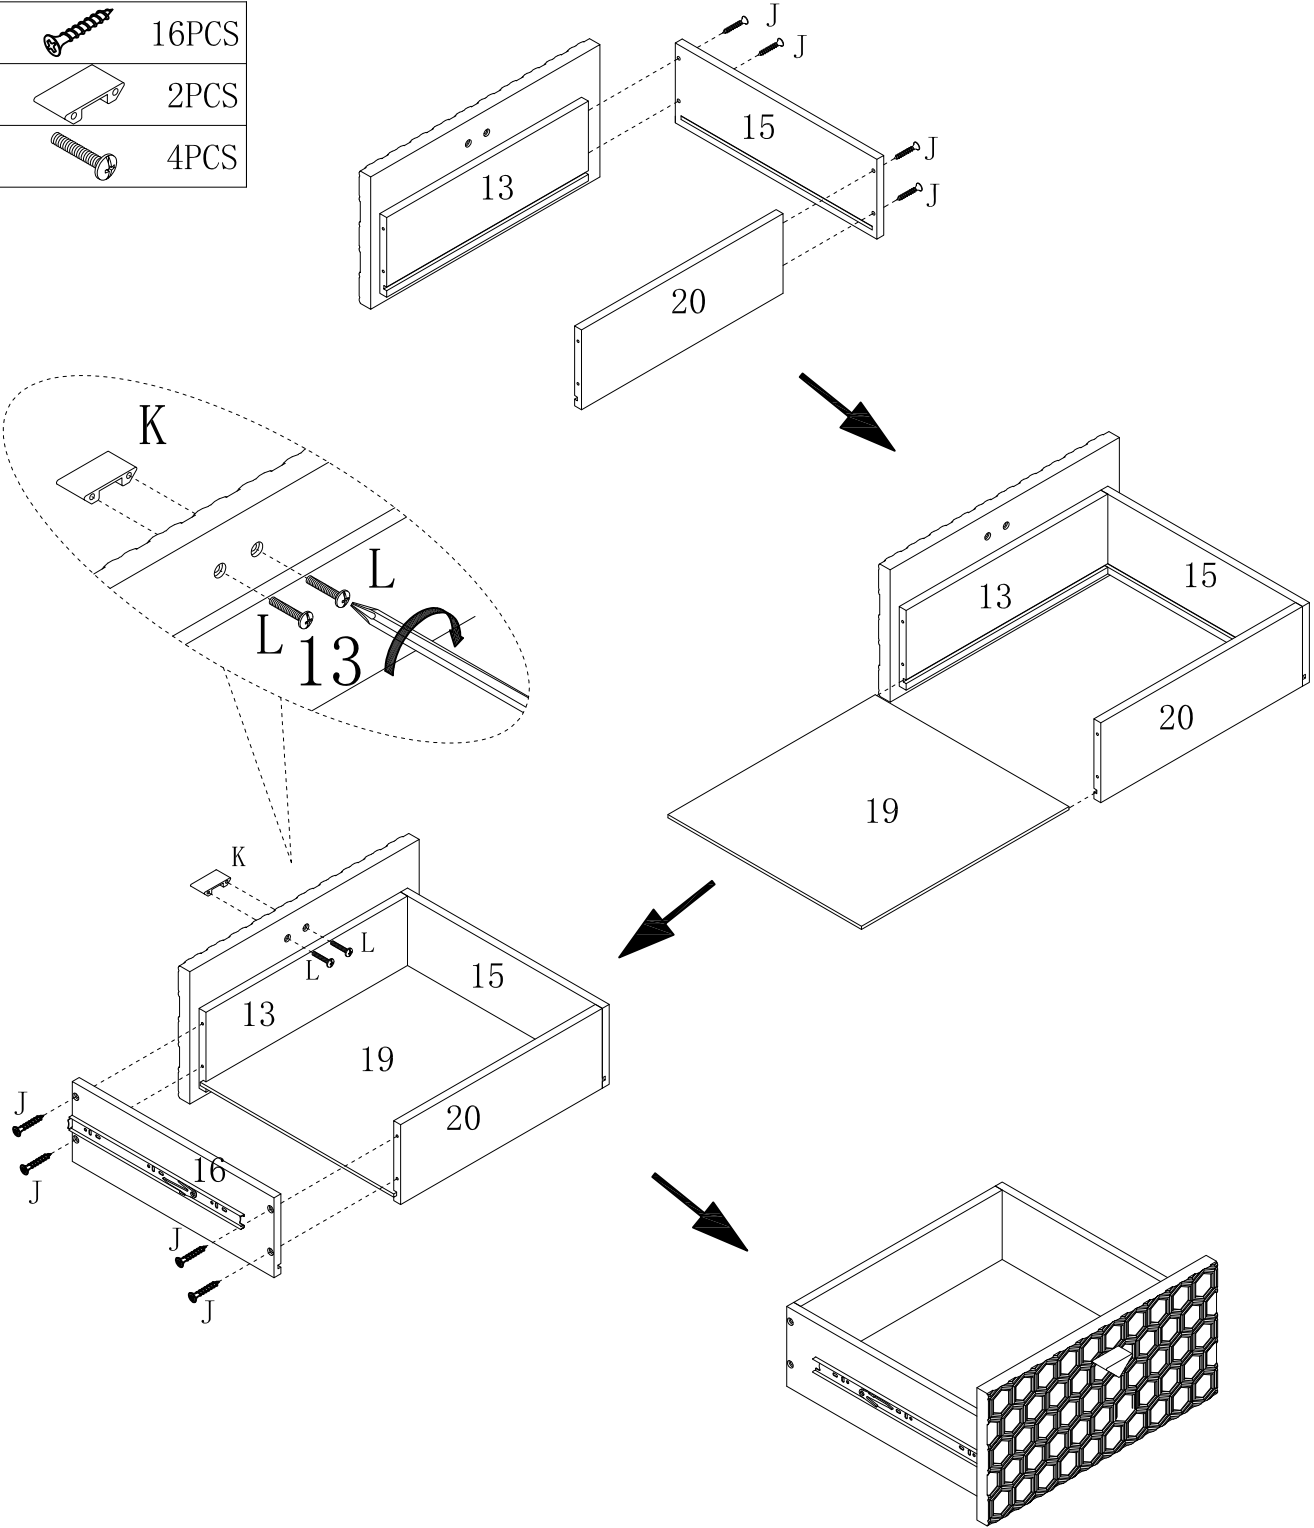
J:		8PCS
K:		1PC
L:		2PCS



ASSEMBLY INSTRUCTION




STEP 1

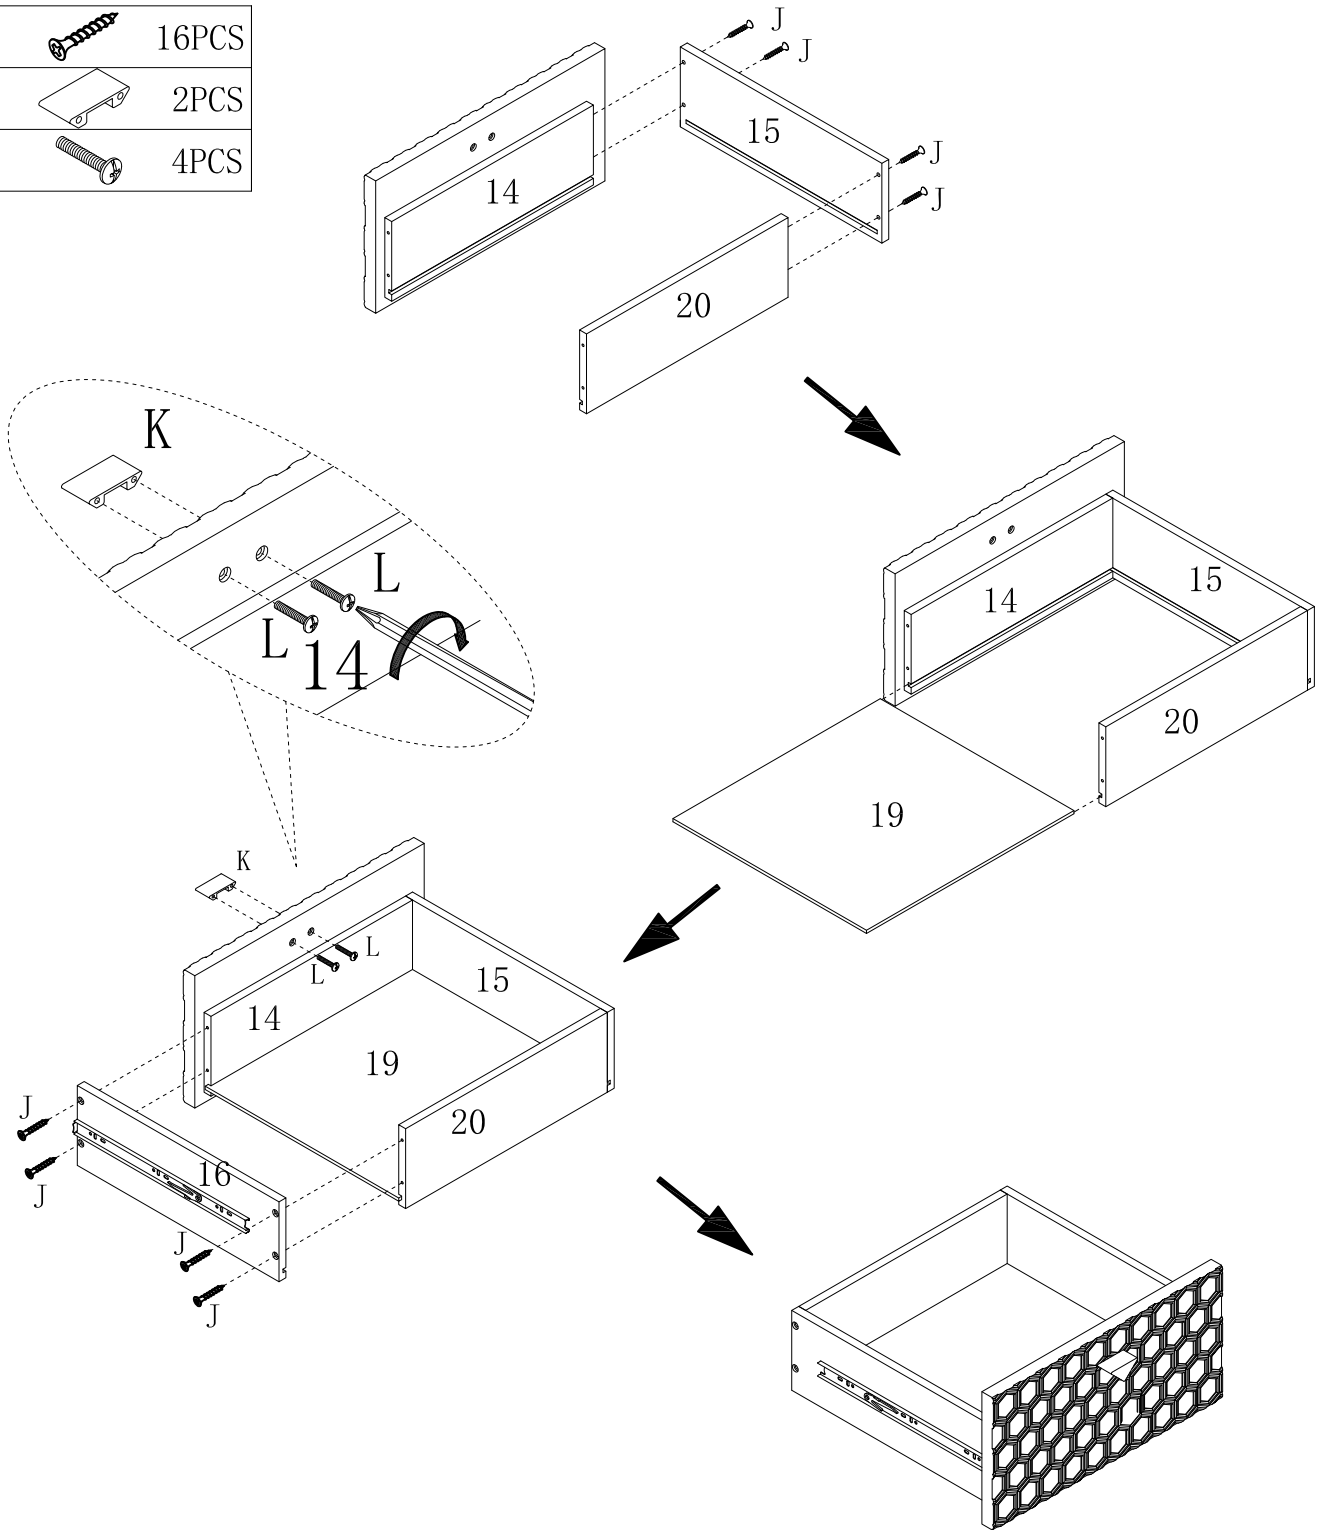
J:		16PCS
K:		2PCS
L:		4PCS




ASSEMBLY INSTRUCTION

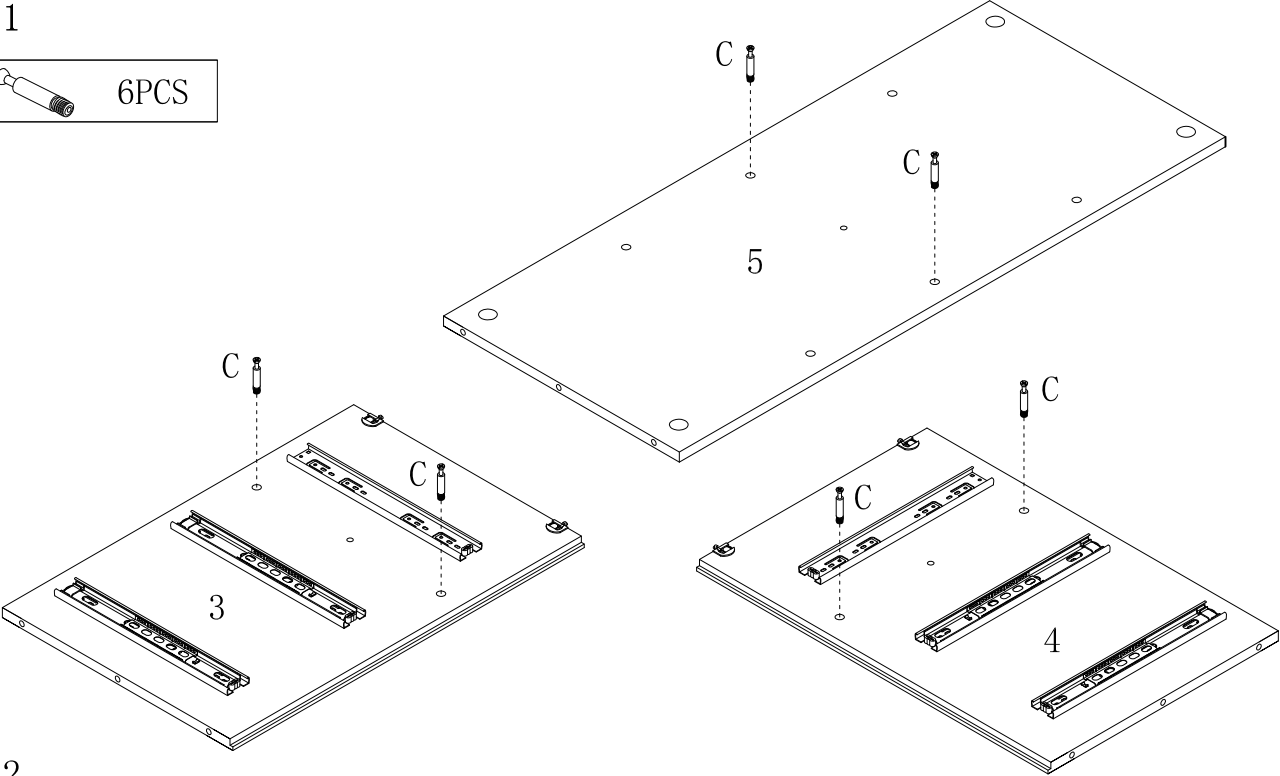
STEP 1

J:		16PCS
K:		2PCS
L:		4PCS







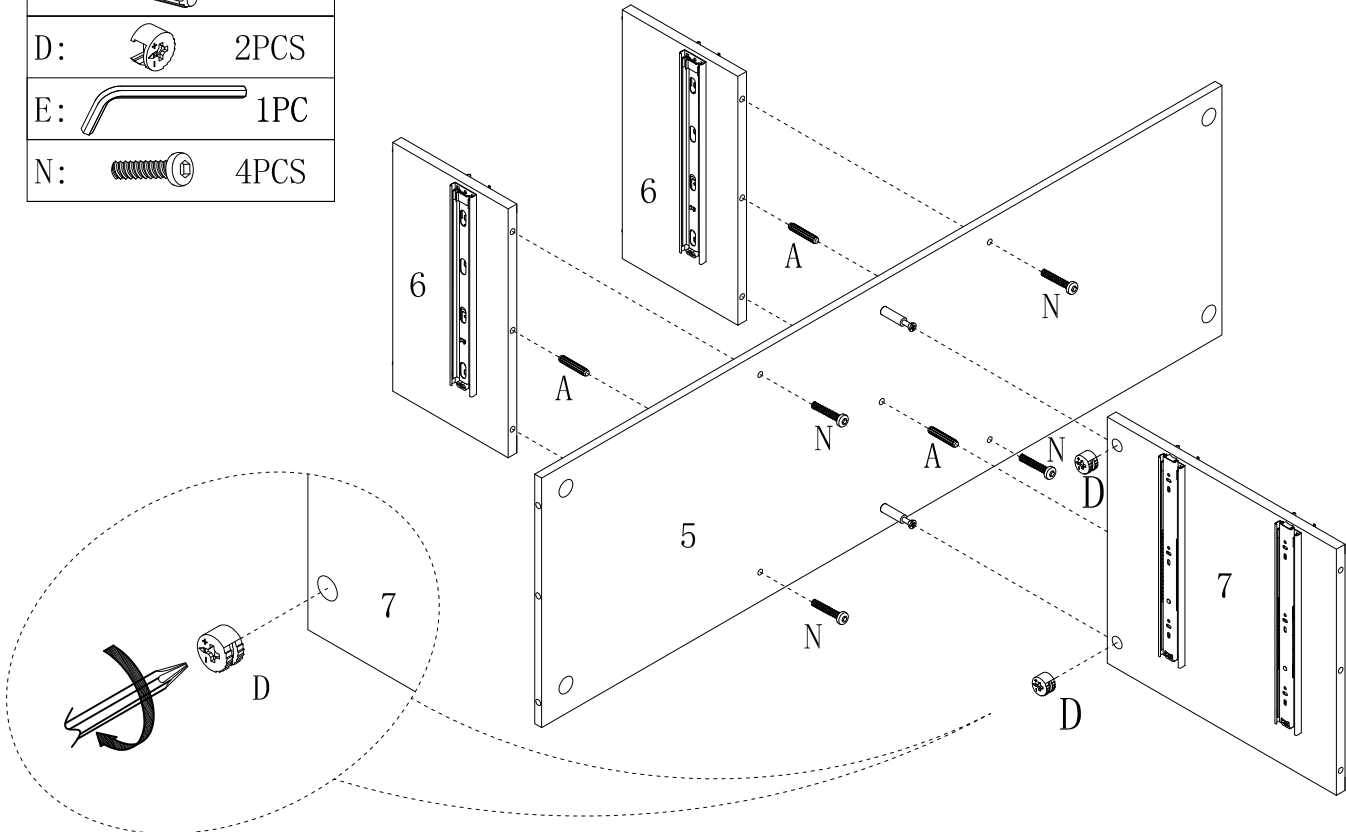
STEP 1

C:  6PCS





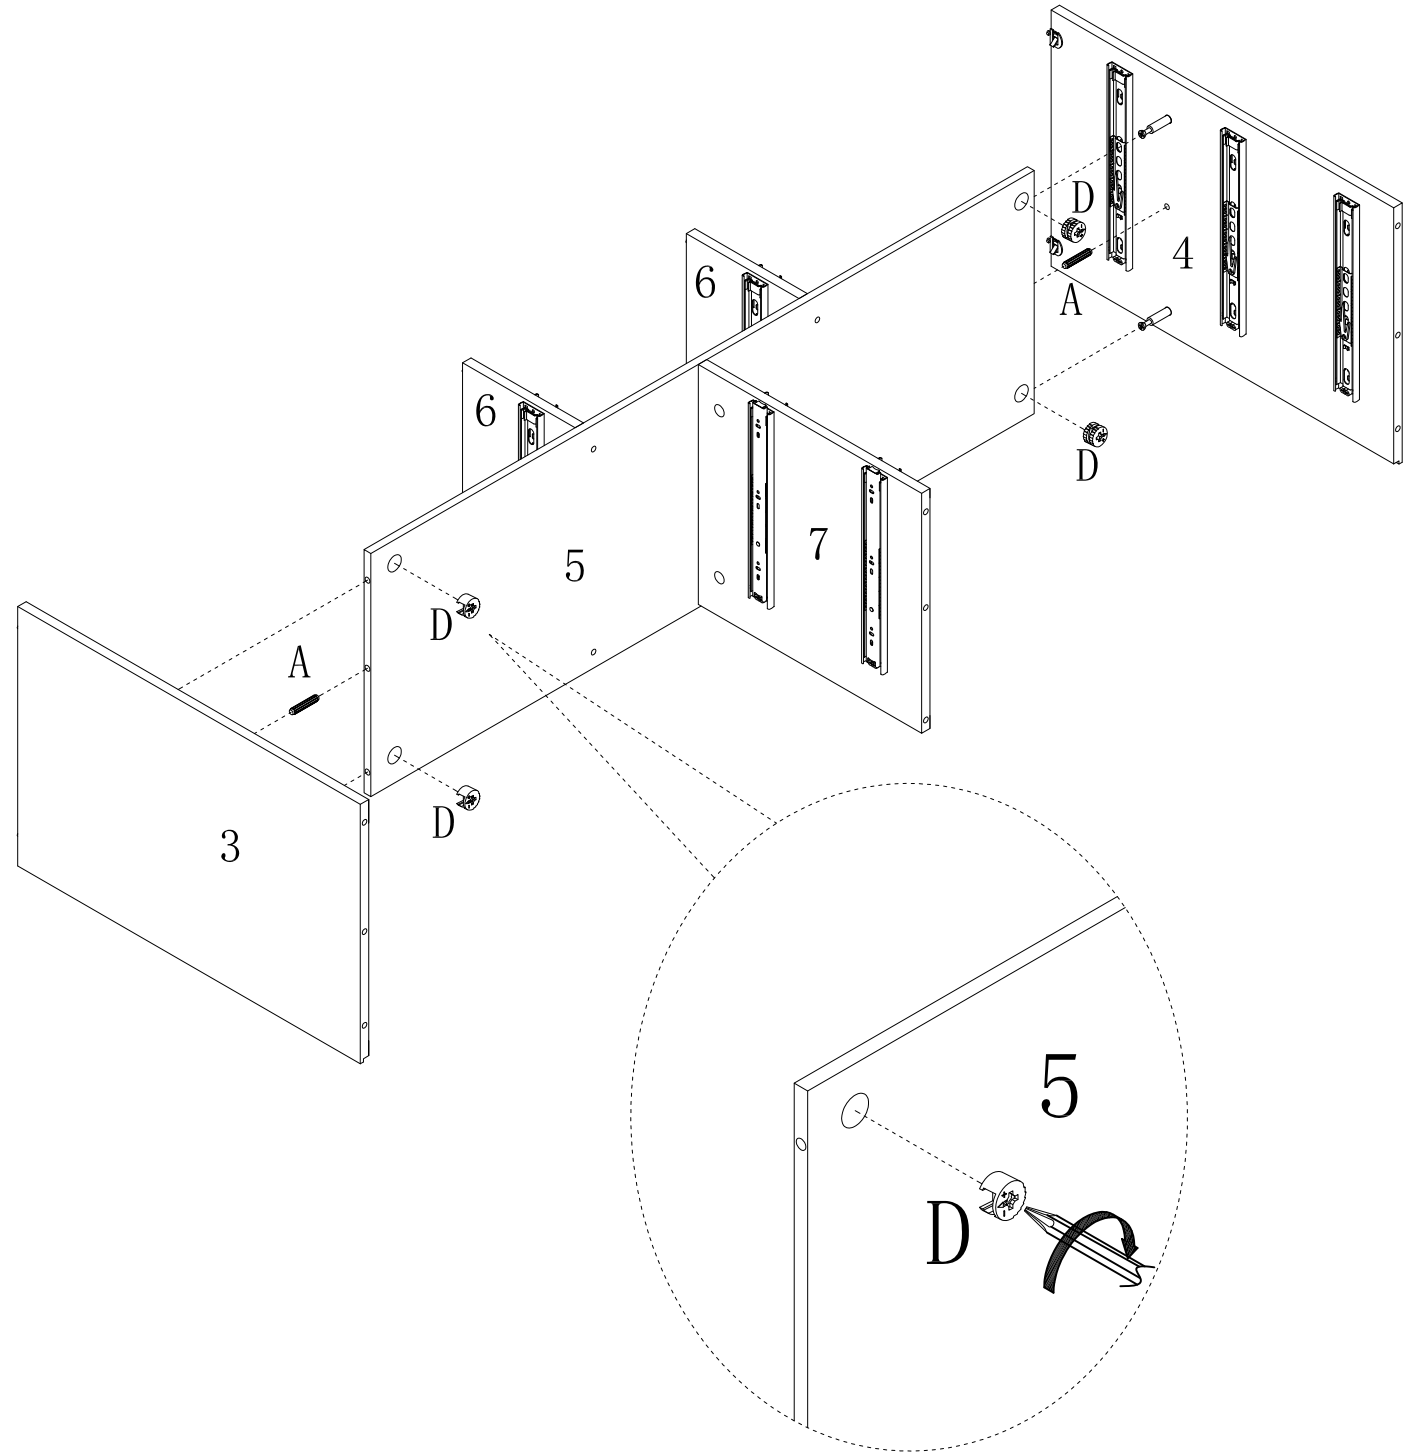
STEP 2

A:  3PCS
D:  2PCS
E:  1PC
N:  4PCS






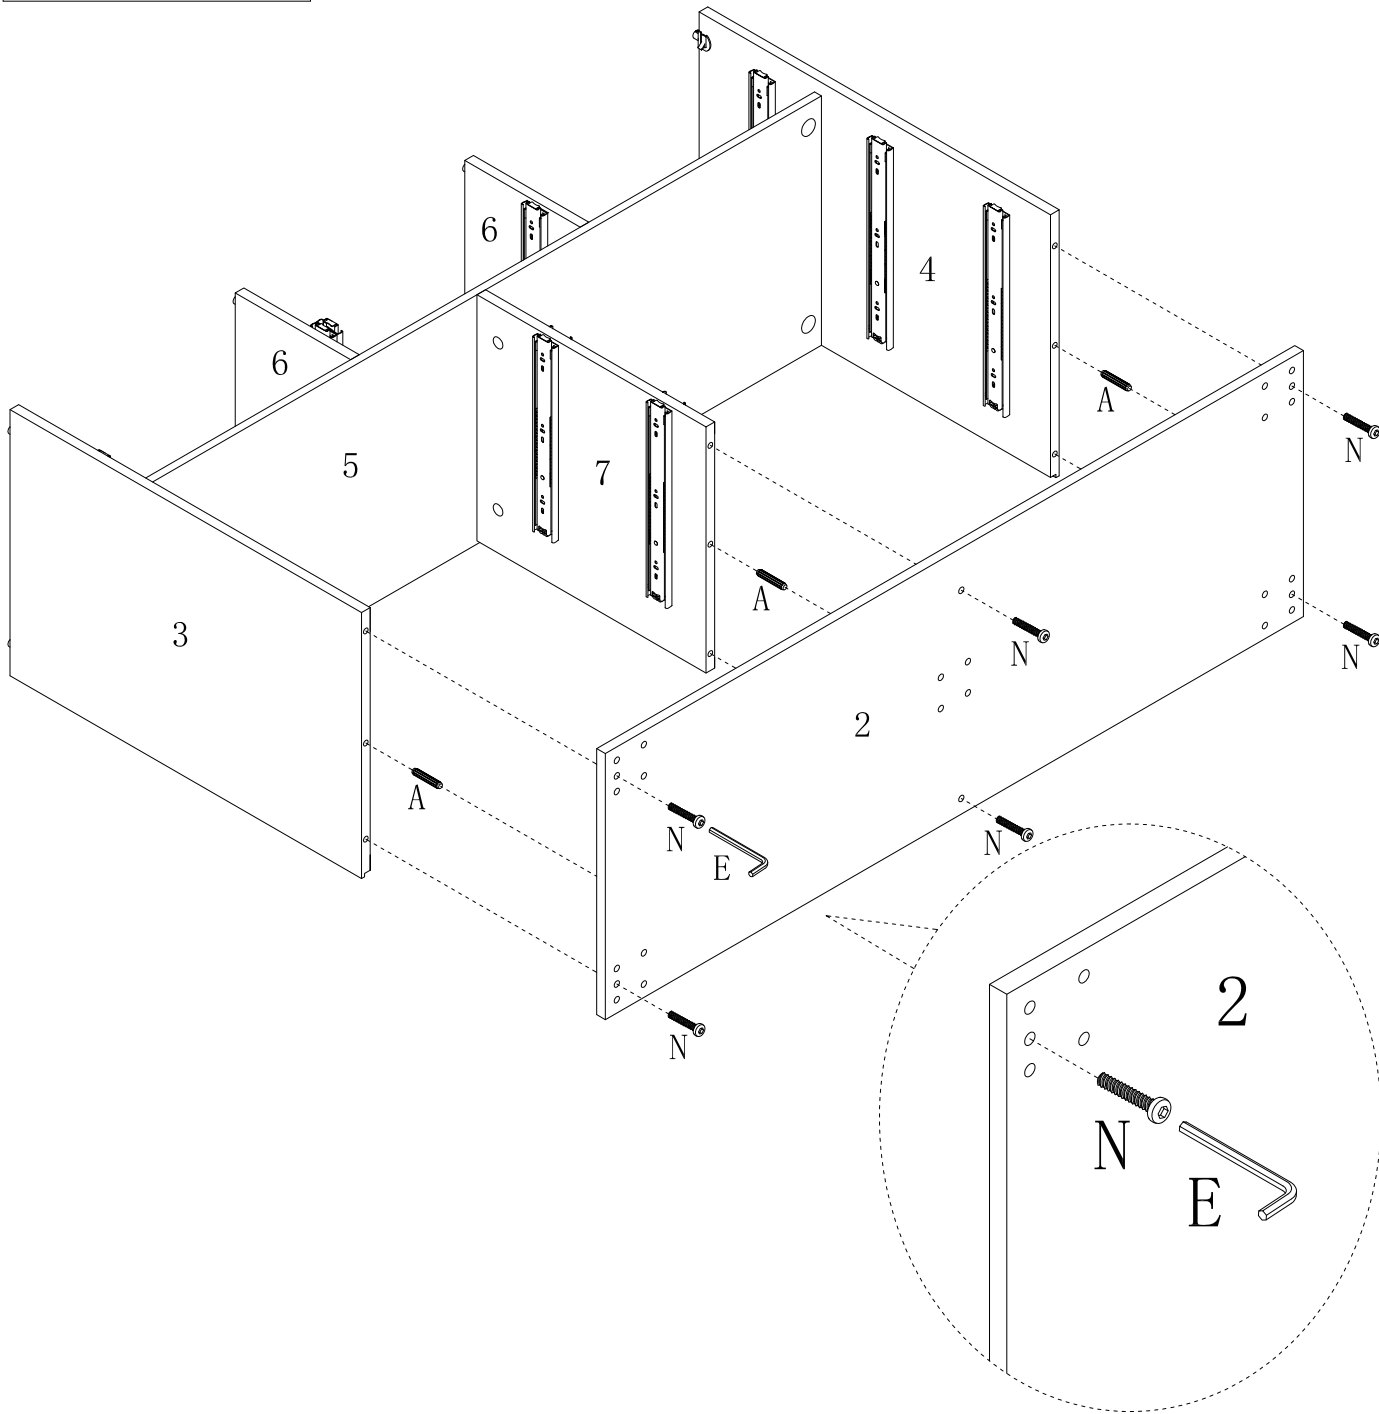
STEP 3

A:		2PCS
D:		4PCS





STEP 4

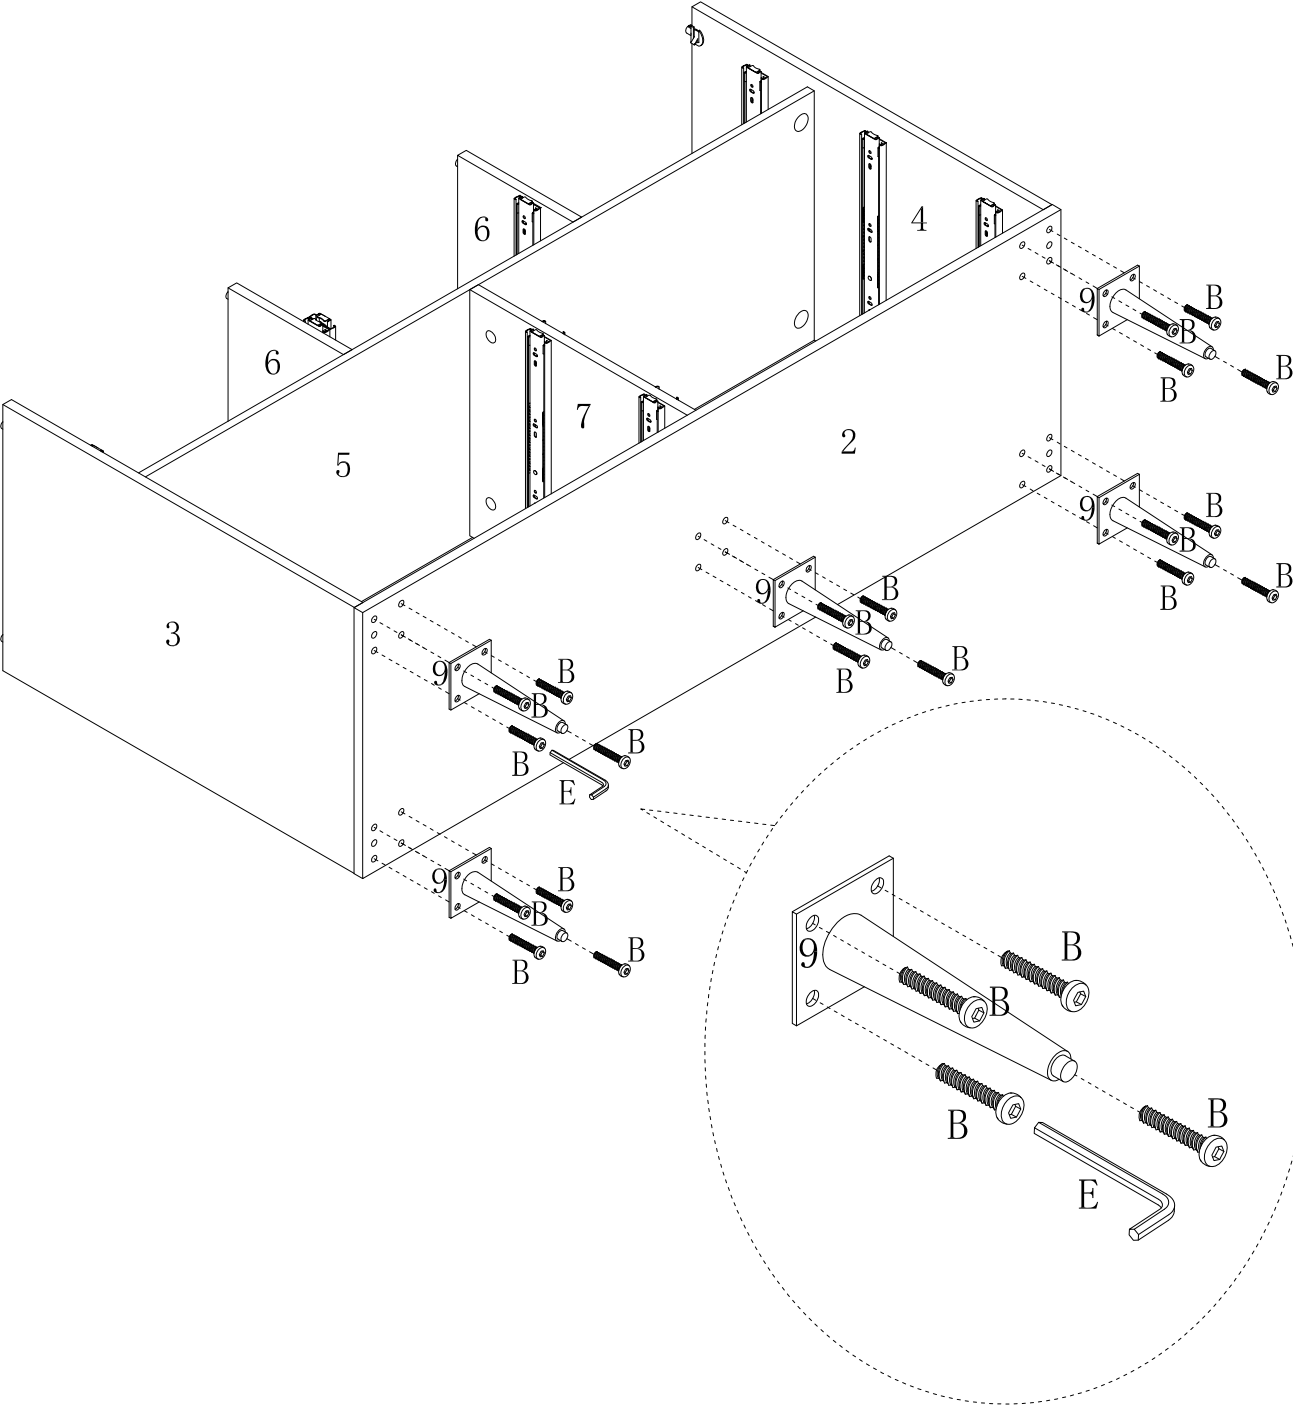
A:		3PCS
N:		6PCS
E:		1PC




ASSEMBLY INSTRUCTION

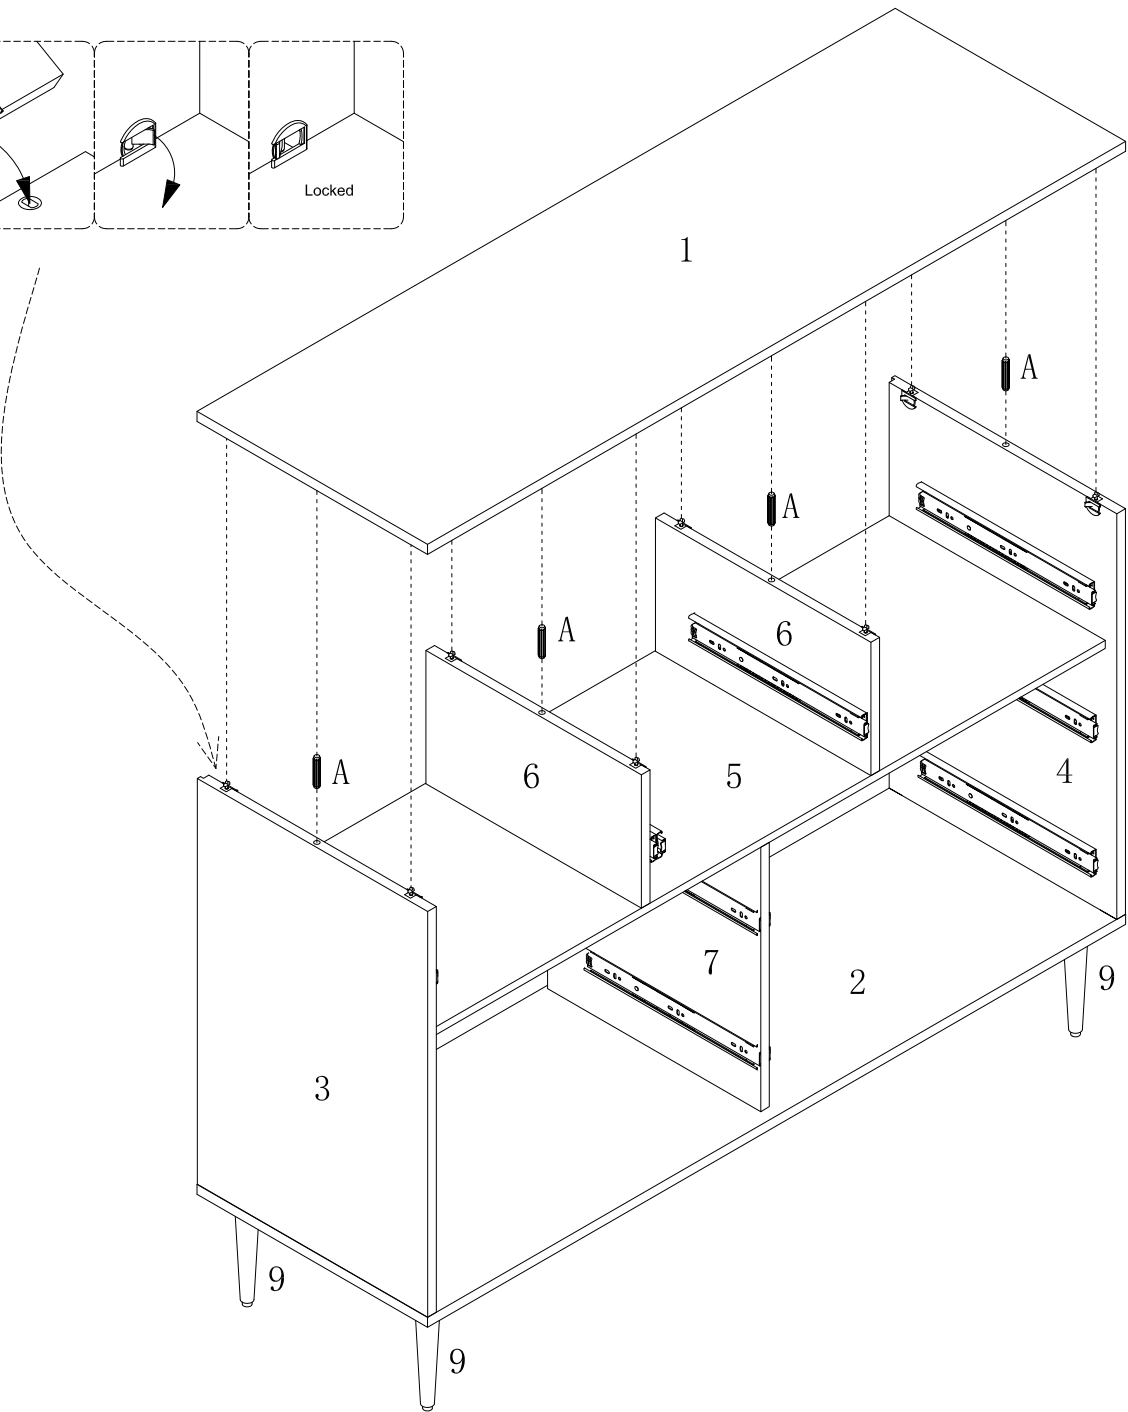
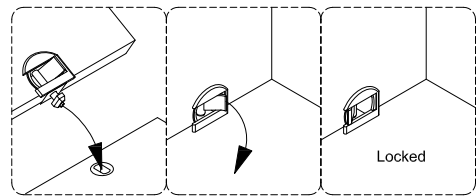
STEP 5

B:		20PCS
E:		1PC






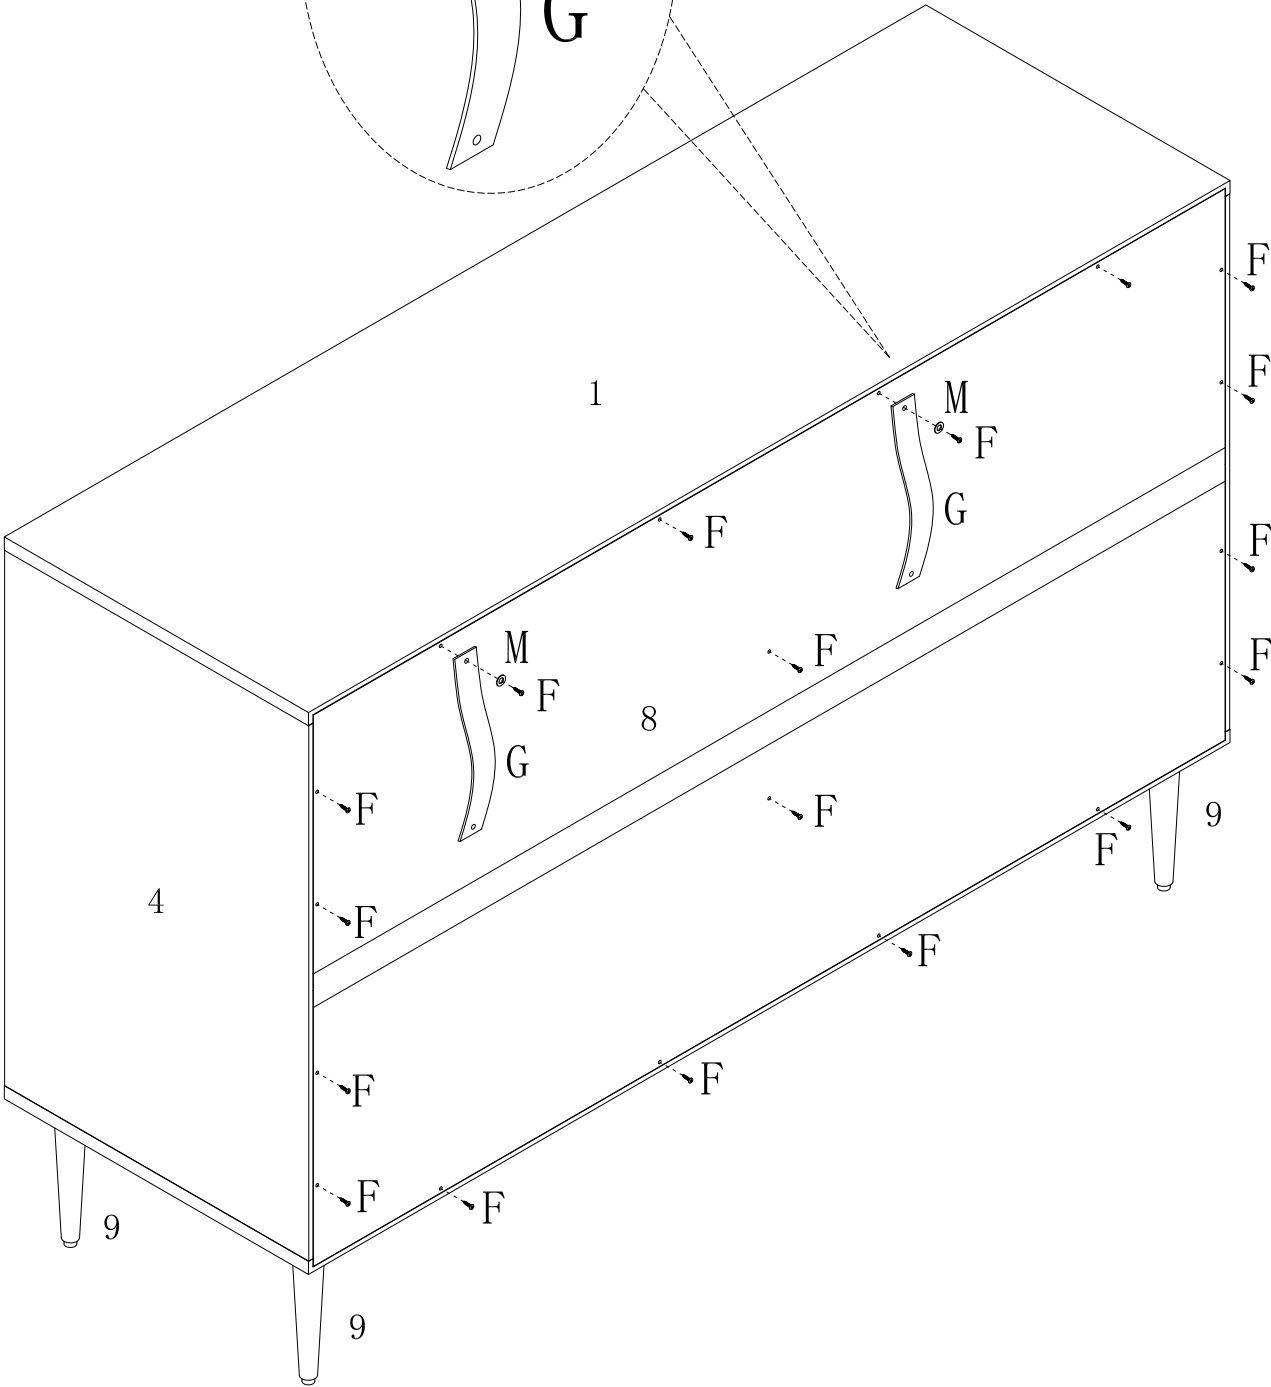
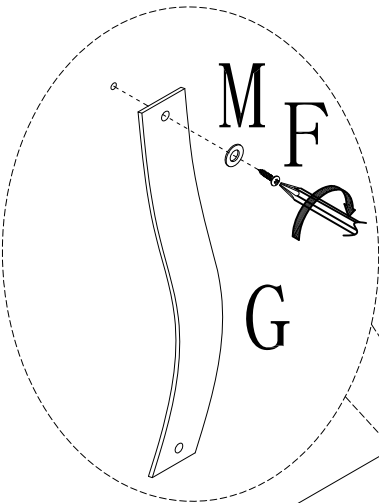
STEP 6

A:  4PCS

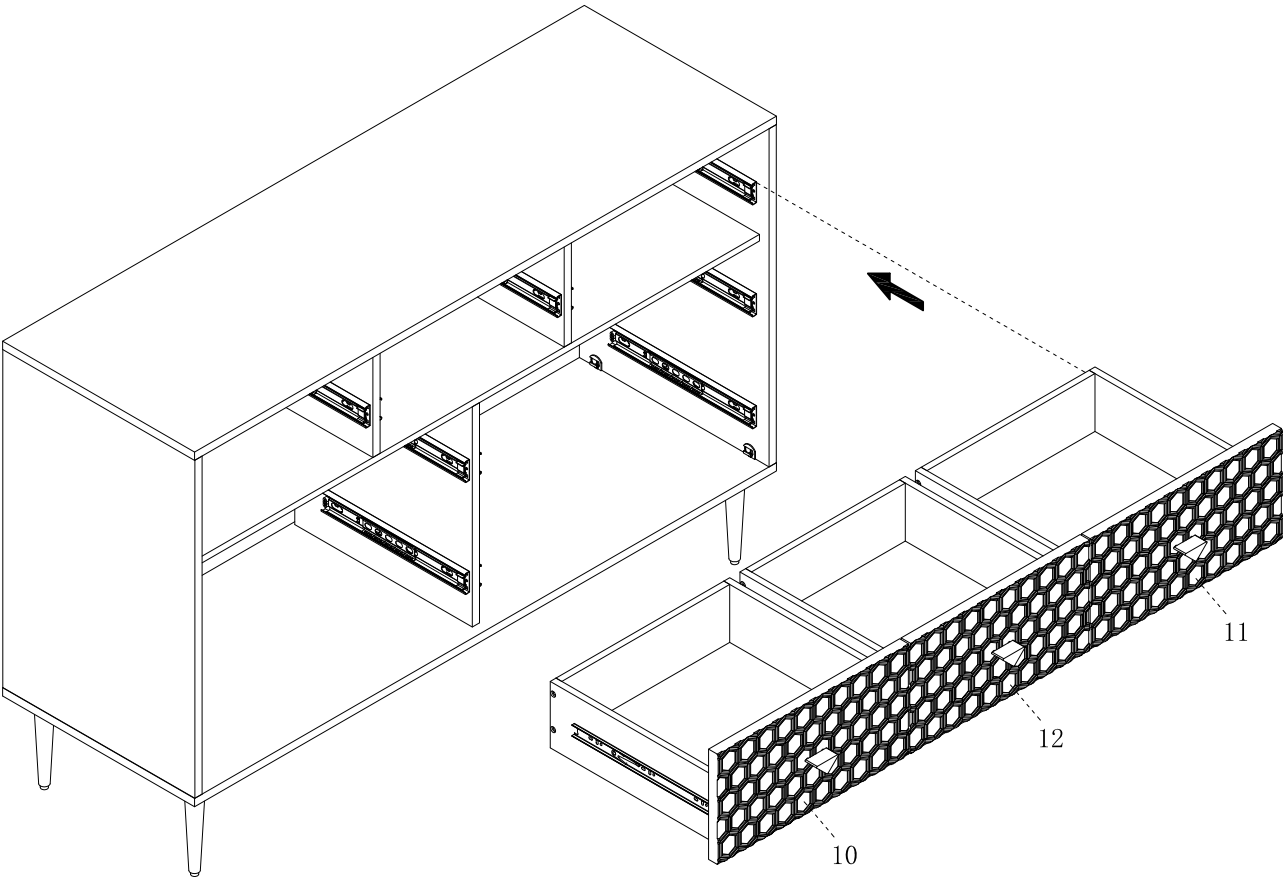
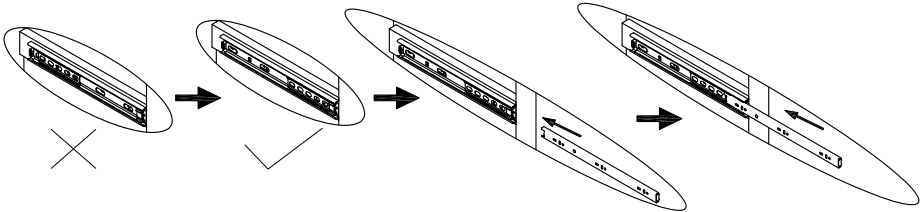


STEP 7

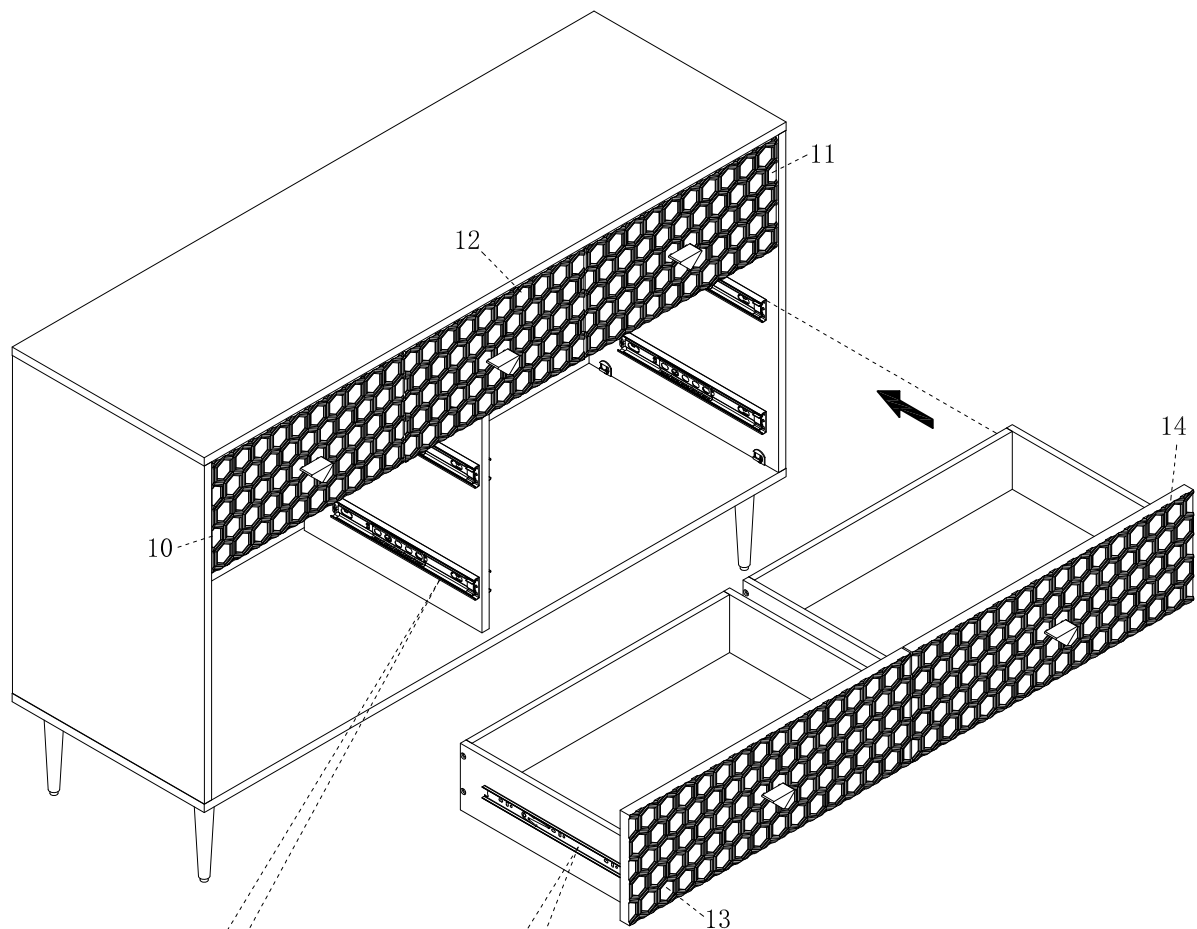
F:		18PCS
G:		2PCS
M:		2PCS



STEP 8



STEP 9

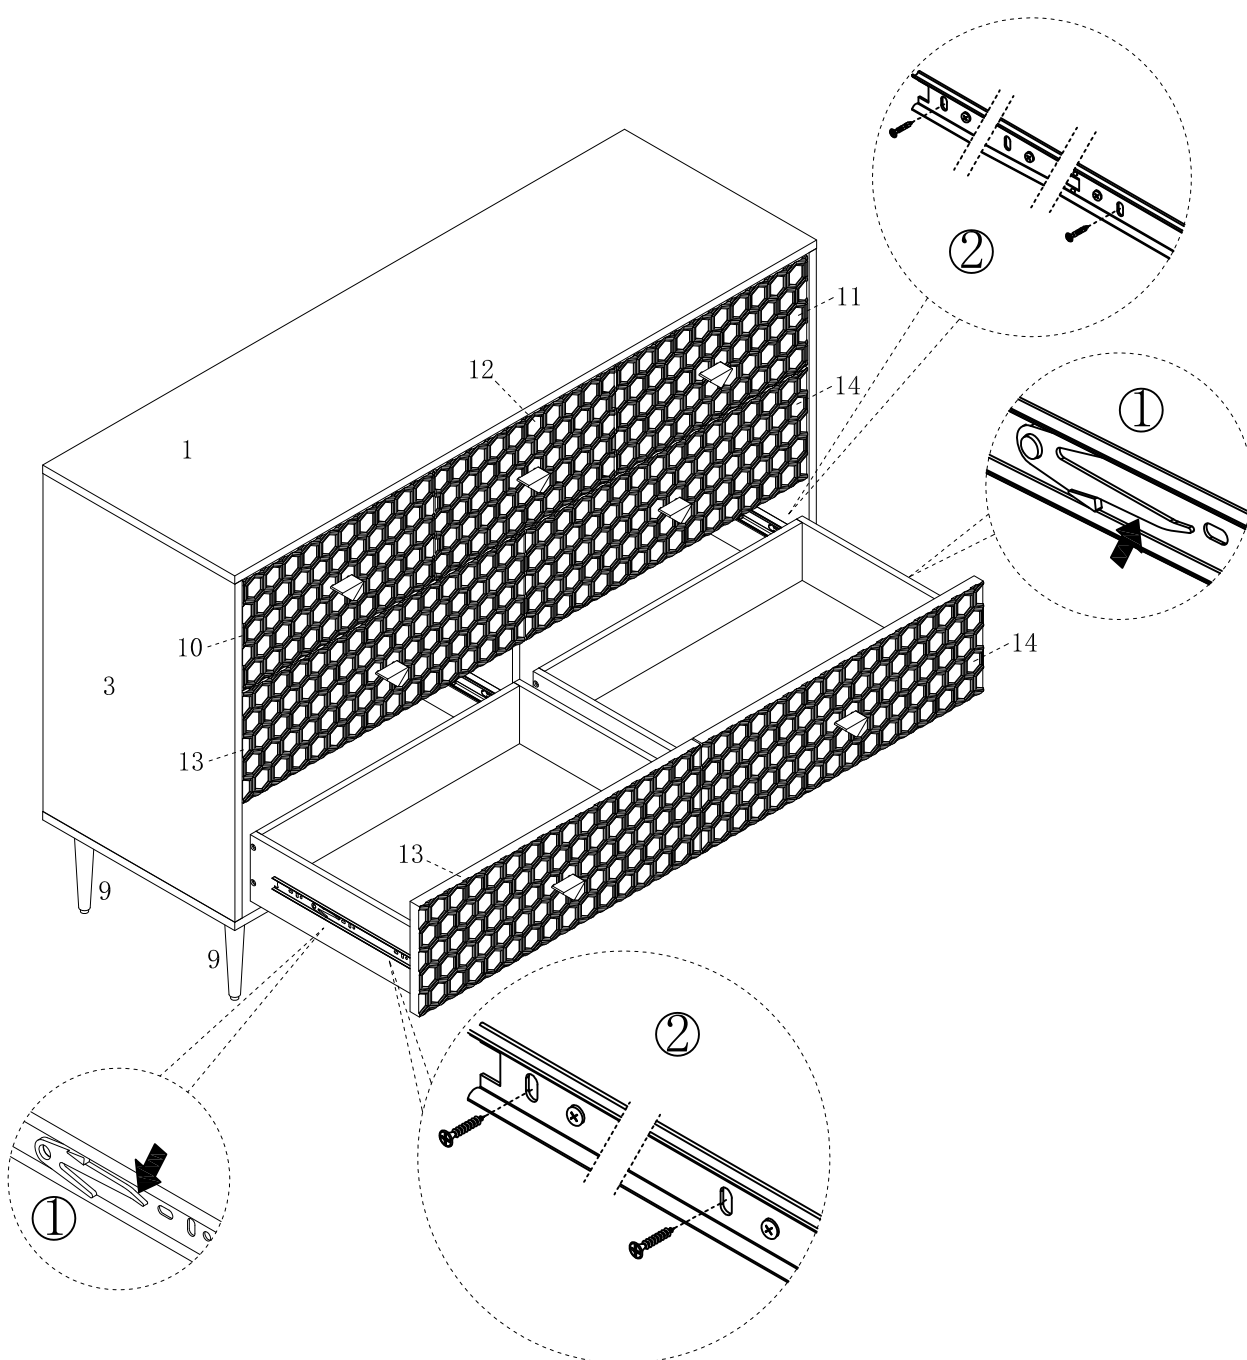


Tip: the front of the drawer, if there is tilt, do not force out, can be adjusted according to these two positions, please refer to the following steps.




ASSEMBLY INSTRUCTION

STEP 10 1. Hold down the PVC buckle on the rails on both sides of the suction drum, and gently pull out the suction drum;

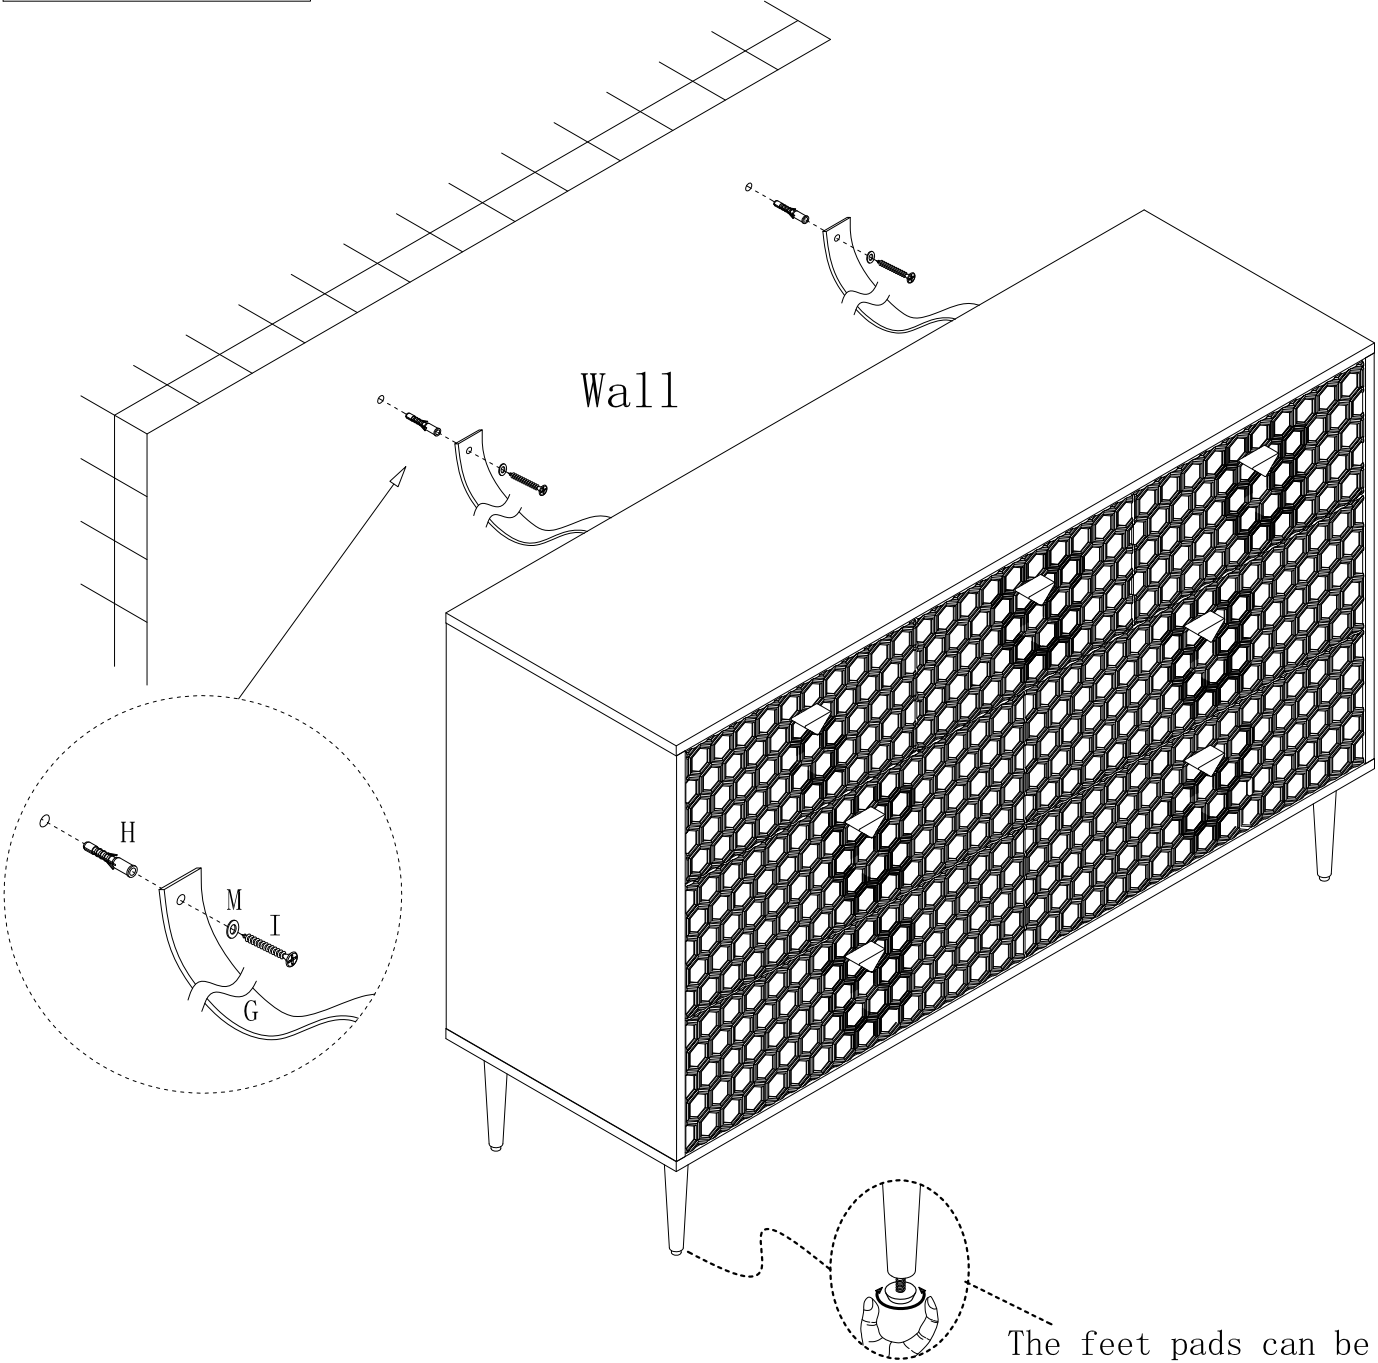
2. Loosen the screw of the original fixed track on the suction drum and the side plate, lock it up and fix it by adjusting the position of the hole next to it up and down, then install it into the suction drum.



STEP 11

H:		2PCS
I:		2PCS
M:		2PCS

For safety reasons,
it is recommended to install
safety wall strap to fix the item.



The feet pads can be
adjusted to help level
the cabinet.