
1. Before installation, please read the Assembly Instruction carefully.

2. Please check whether the Parts and Hardware are consistent with the list.

3. It is normal for the sealed environment to smell, not a product quality problem.

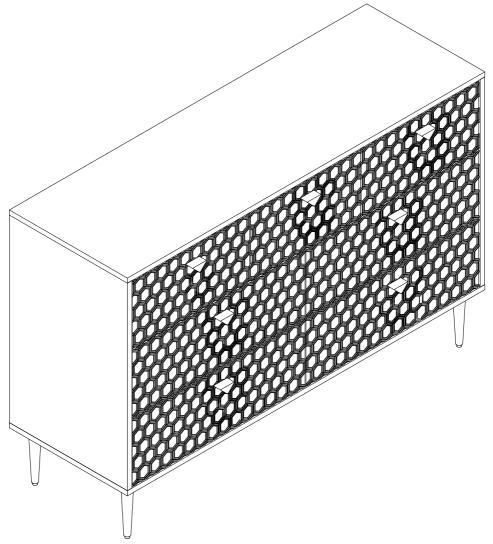

Phone number:

(909) 297 - 5794 / (323) 982 - 8955

service@boyelliving.com

Web: www.boyelliving.com

Part List:


ITEM DESCRIPTION PART QTY Top panel 1 1 2 Bottom panel 1 Left side 3 1 panel

| 5 | Fixed shelf | |
|---|-------------|--|

Right side

panel

| 6 | Upper cross middle rail |
|---|-------------------------|
|---|-------------------------|

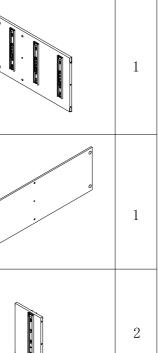

| Part List: | | | |
|------------|------------------------------|------|-----|
| ITEM | DESCRIPTION | PART | QTY |
| 7 | Bottom cross middle rail | | 1 |
| 8 | Back panel | | 1 |
| 9 | Leg | | 5 |
| 10 | Left upper drawer front | | 1 |
| 11 | Right upper drawer front | | 1 |
| 12 | Middle upper drawer front | | 1 |

Part List:

| ITEM | DESCRIPTION | PART | QTY |
|------|------------------------------|------|-----|
| 13 | Left Bottom Drawer front | | 2 |
| 14 | Right Bottom Drawer front | | 2 |
| 15 | Drawer Left Side | | 7 |
| 16 | Drawer Right Side | | 7 |

Part List:

| ITEM | DESCRIPTION | PART | QTY |
|------|--------------------------------|------|-----|
| 17 | Side Upper Drawer bottom | | 3 |
| 18 | Side Upper Drawer back | | 3 |
| 19 | Bottom Drawer bottom | | 4 |
| 20 | Bottom Drawer back | | 4 |

Hardware List:


| ITEM | DESCRIPTION | PART | QTY |
|------|-------------------|------------------------|-----|
| A | Wooden dowel | Ф8*30mm | 12 |
| В | Short bolt | ω Φ1/4"*1/2" | 20 |
| С | Cam Bolt | | 6 |
| D | Cam Lock | | 6 |
| Е | Allen wrench | | 1 |
| F | Round head screw | Ф3*16mm | 20 |
| G | Safety wall strap | | 2 |

Hardware List:

| Haraware Disc. | | | |
|----------------|-----------------|----------------------------|-----|
| ITEM | DESCRIPTION | PART | QTY |
| Н | Plastic anchor | | 2 |
| I | Mounting screw | • Ф4*38mm | 2 |
| J | Flat Head screw | Дълги Ф4*30mm | 56 |
| К | Handle | | 7 |
| L | Bolt | Φ5/32"*1-1/8" | 14 |
| M | Washer | 0 | 2 |
| N | Long bolt | ωωνω (© Φ1/4"*1" | 10 |

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.


Guideline For Assembling of Plastic Lock

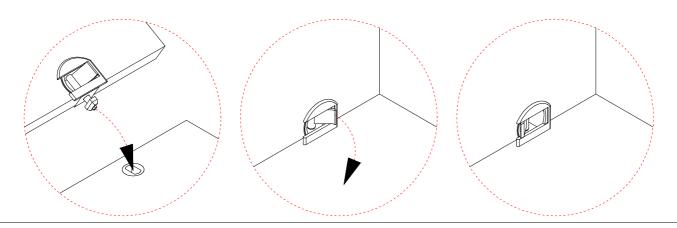



Screw camlock bolt (A) to wood part.


Do not assemble camlock (B) unless instructed.


To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

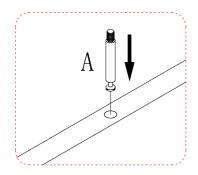


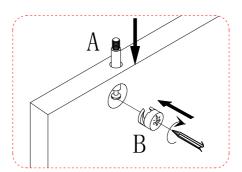

















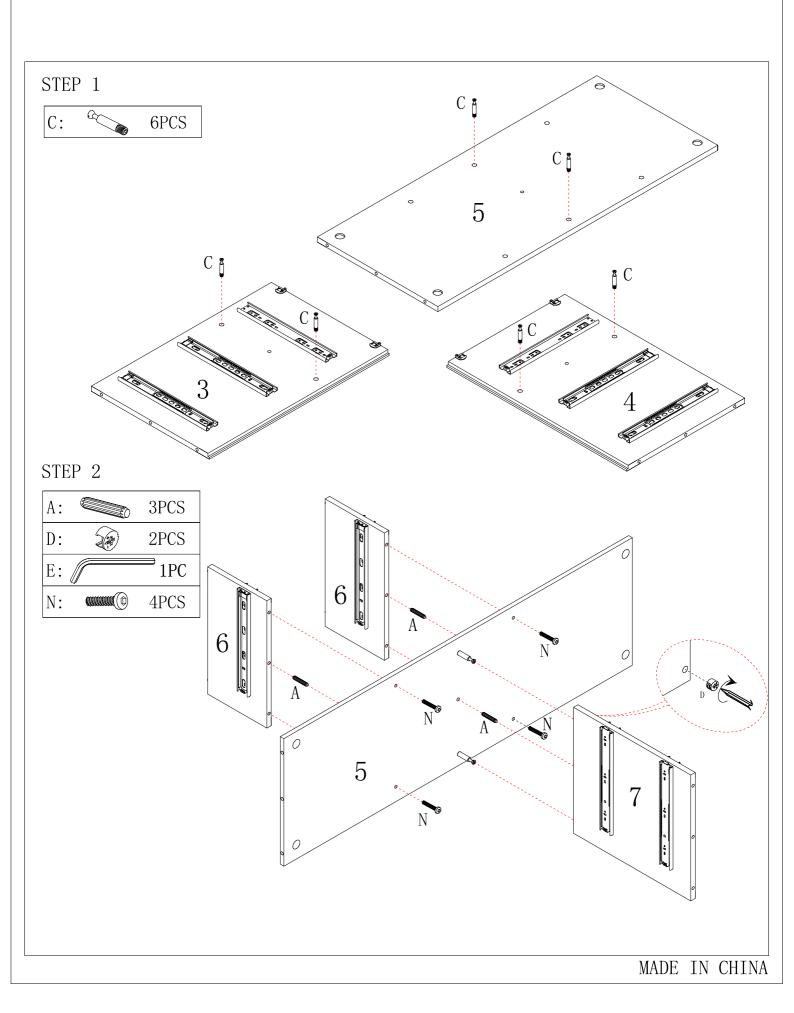


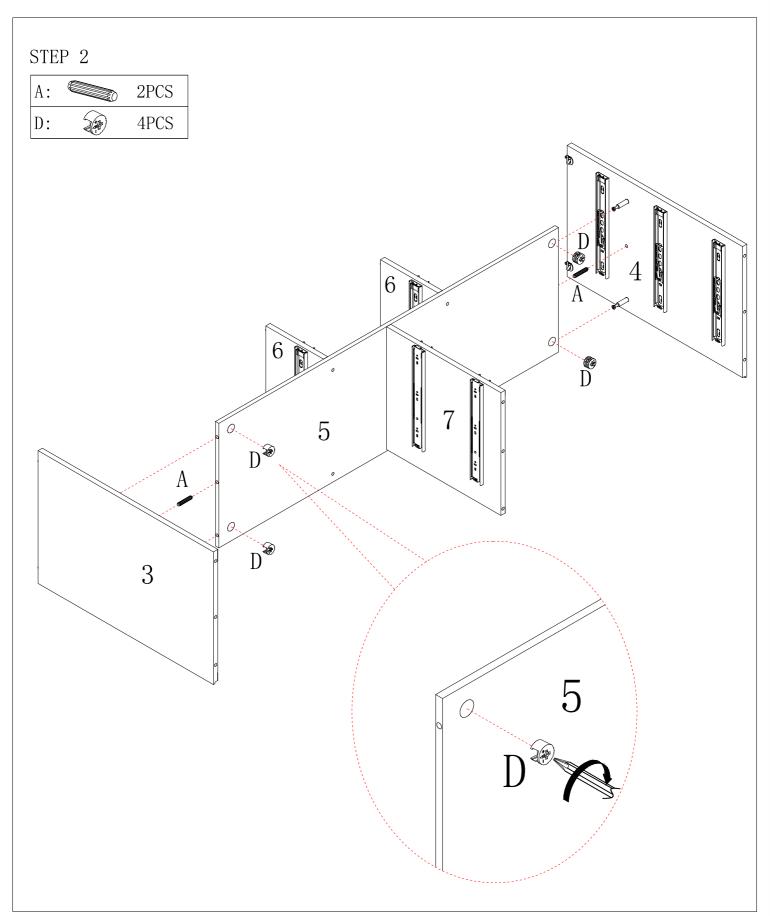


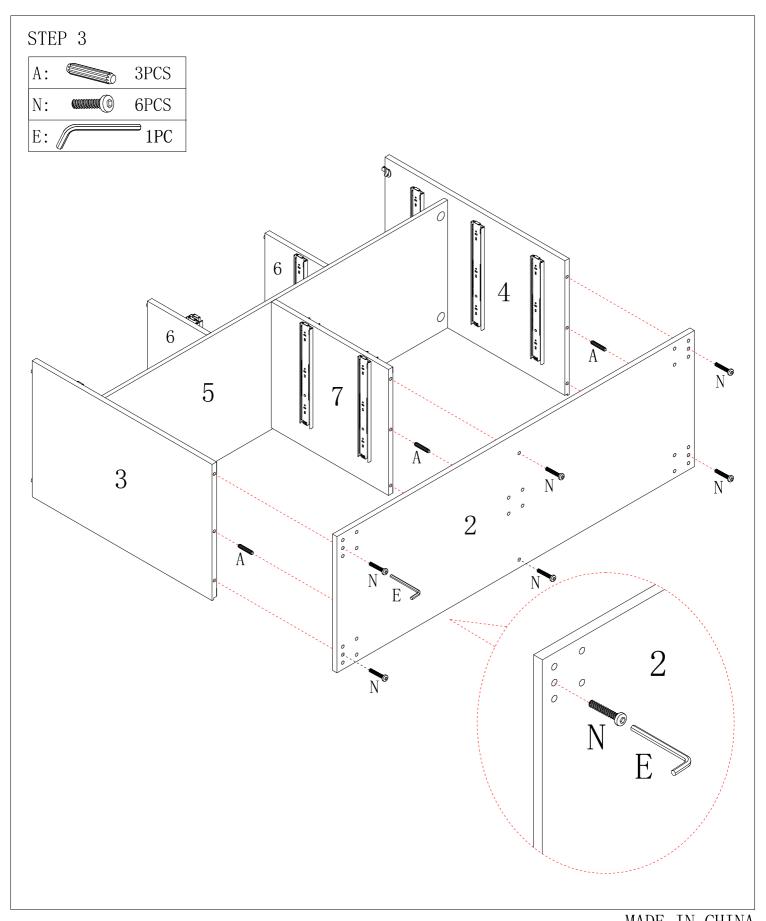


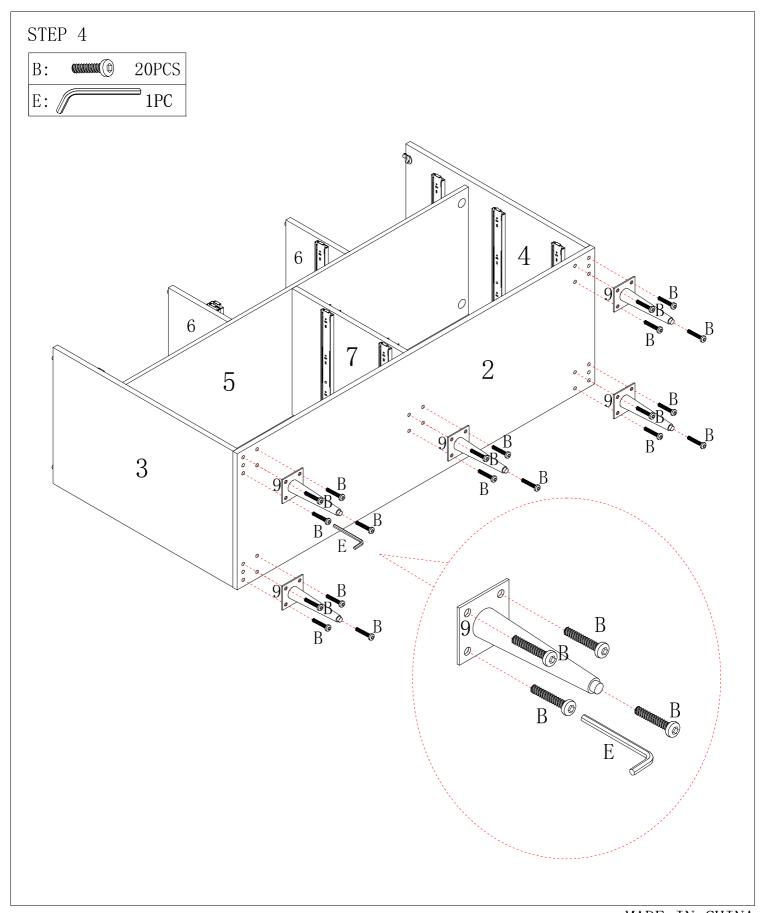


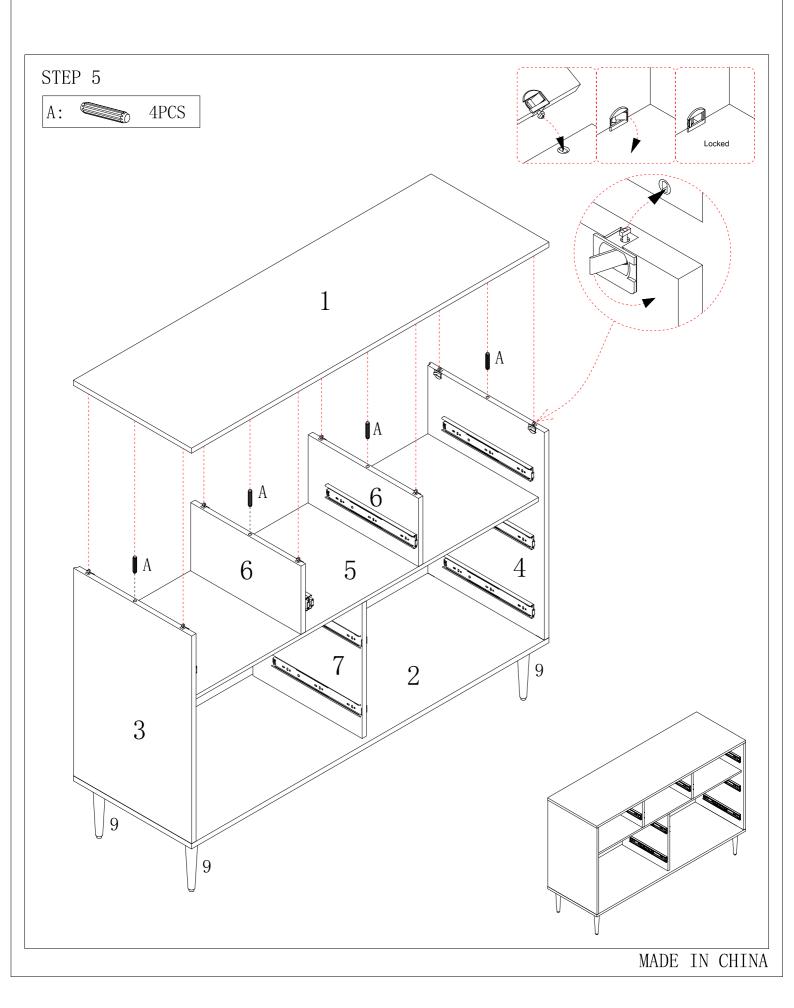

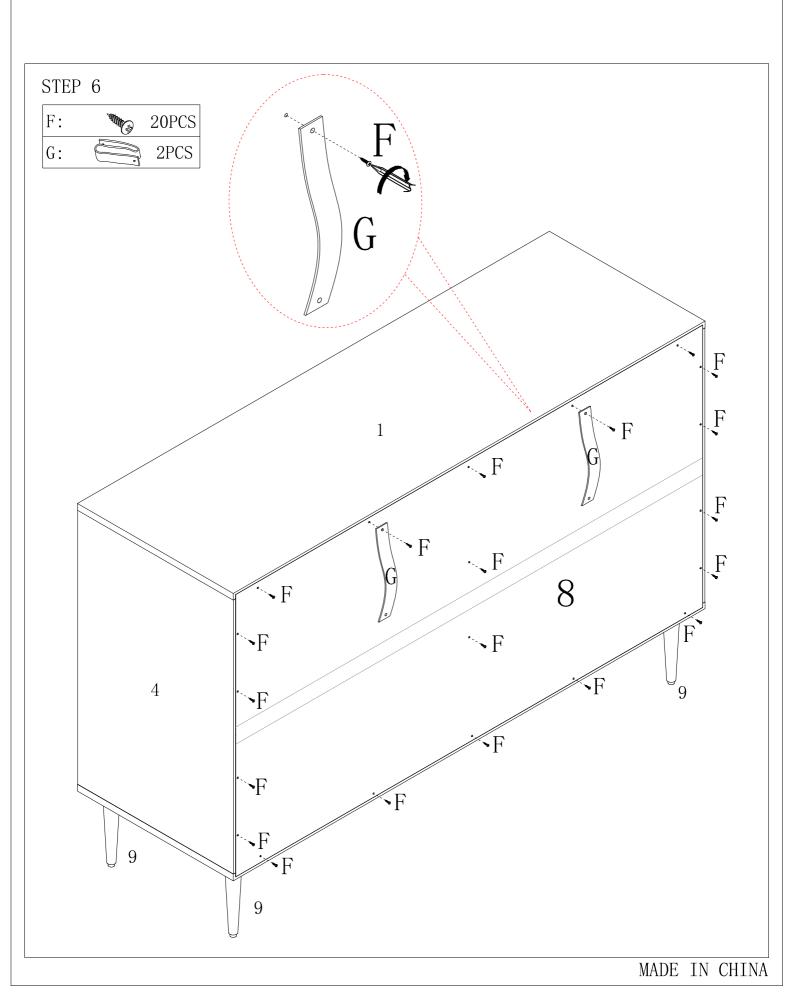


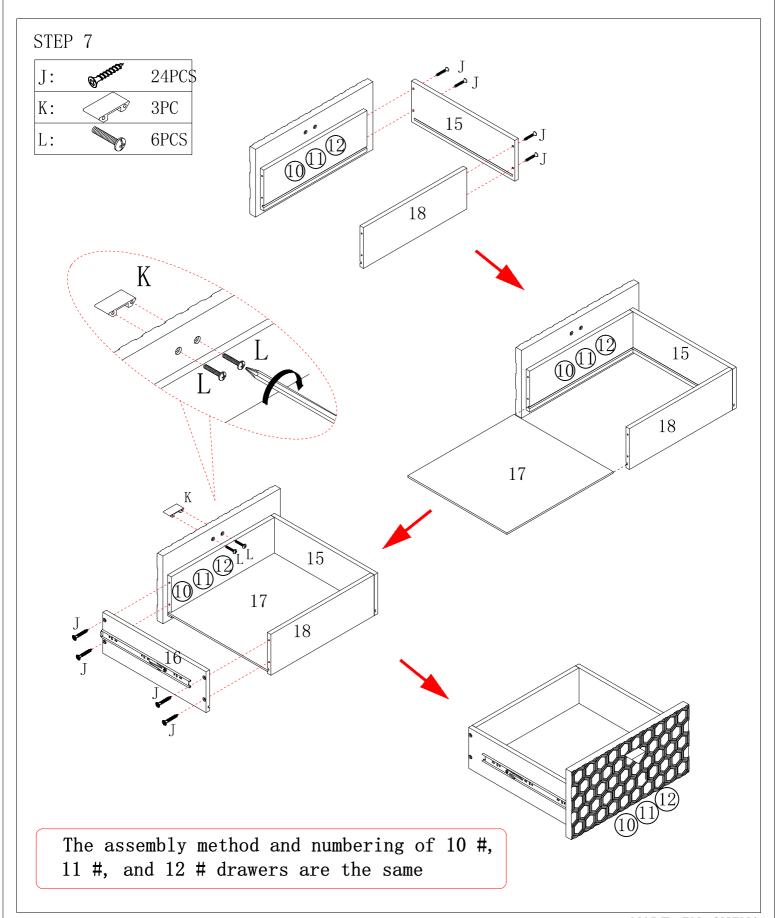

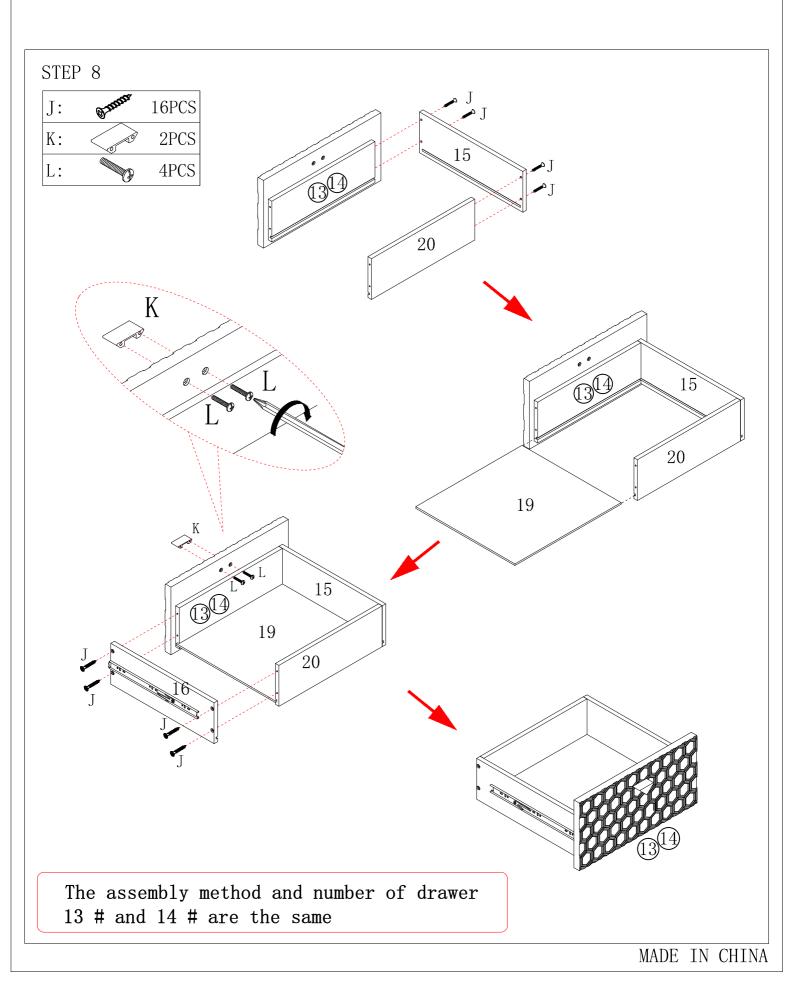

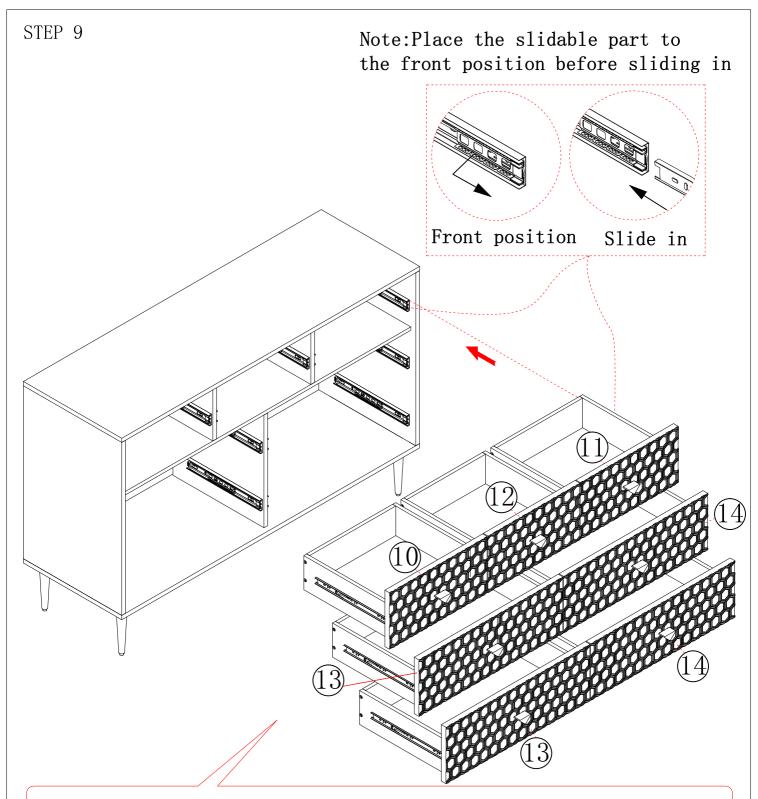

Reminder: If the front and both ends of the drawer are tilted, do not use force. You can refer to the above steps to smoothly insert the slide rail. Please install the drawers in the numbered order shown in the diagram and do not misplace them!

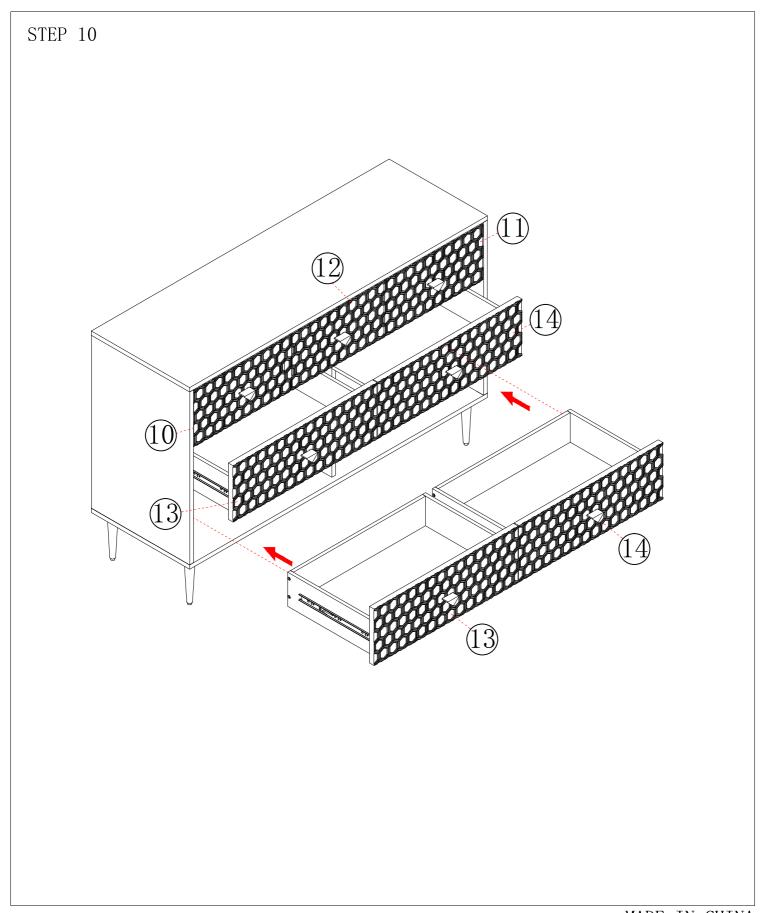

STEP 11 3 13-

To remove the drawer. lift up on the left side buckle and press down on the right side buckle, operatingboth left and right at the same time, and move outward to remove it.

