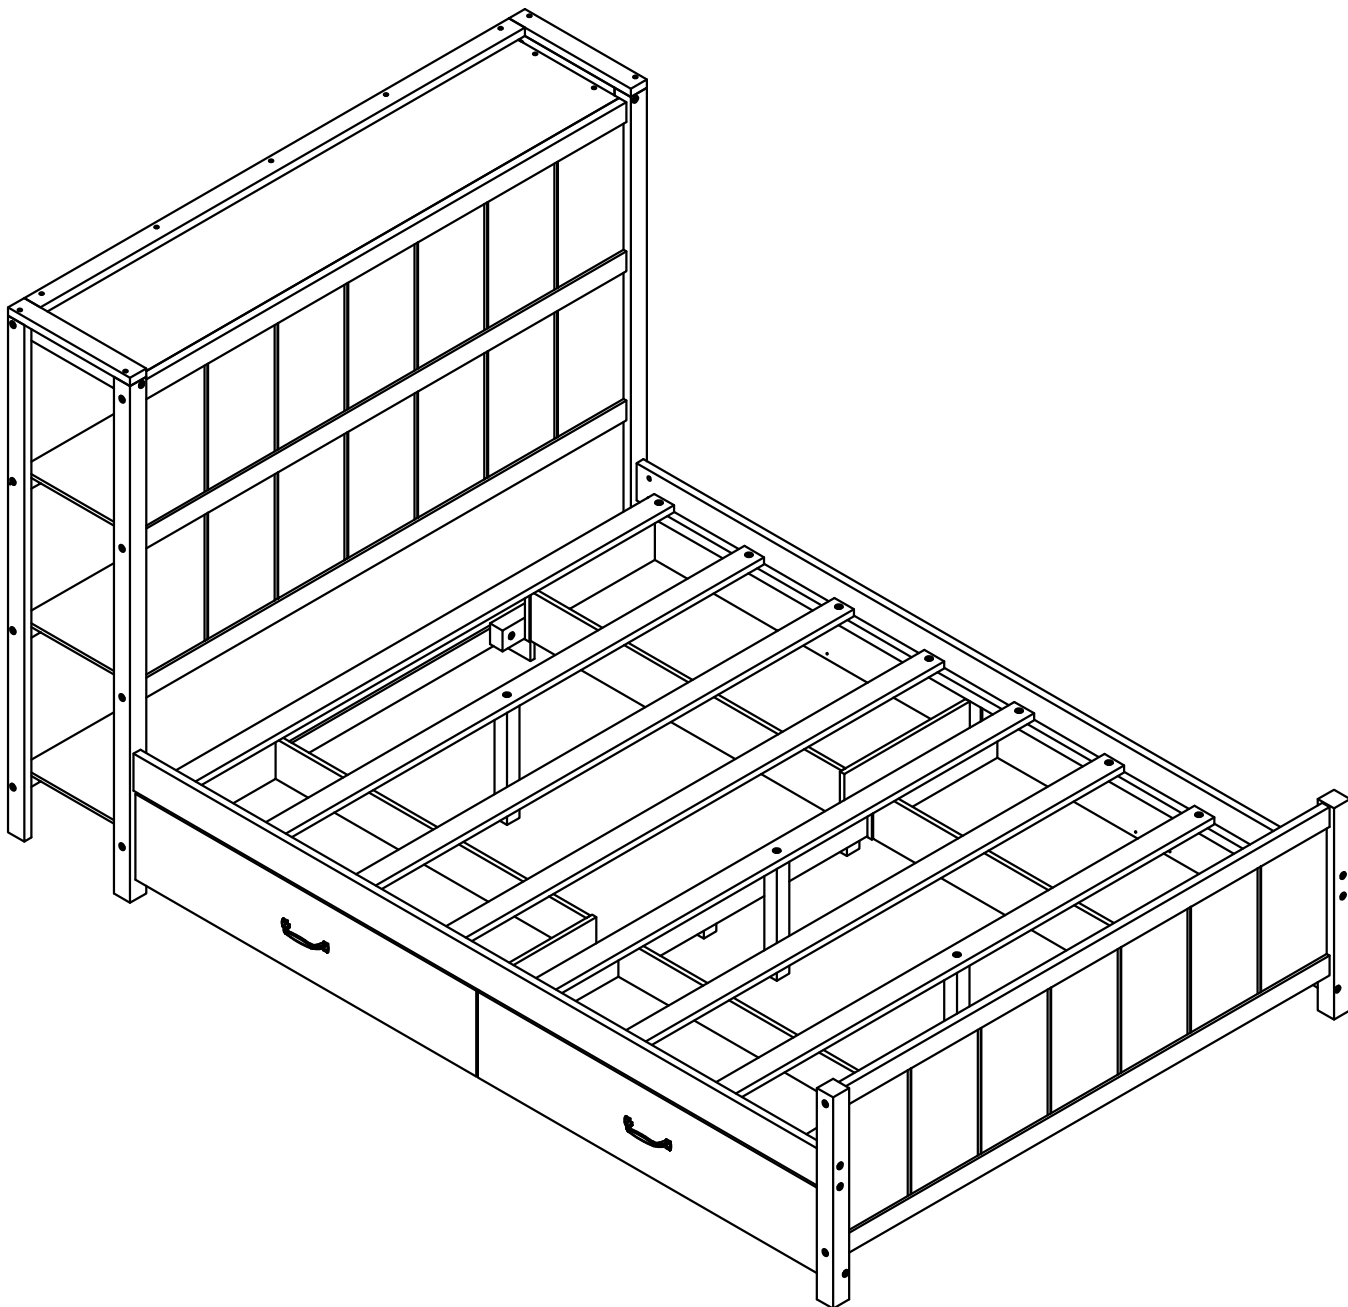



ASSEMBLY INSTRUCTION

SKU CODE: (WF297768-WF297769)










This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team







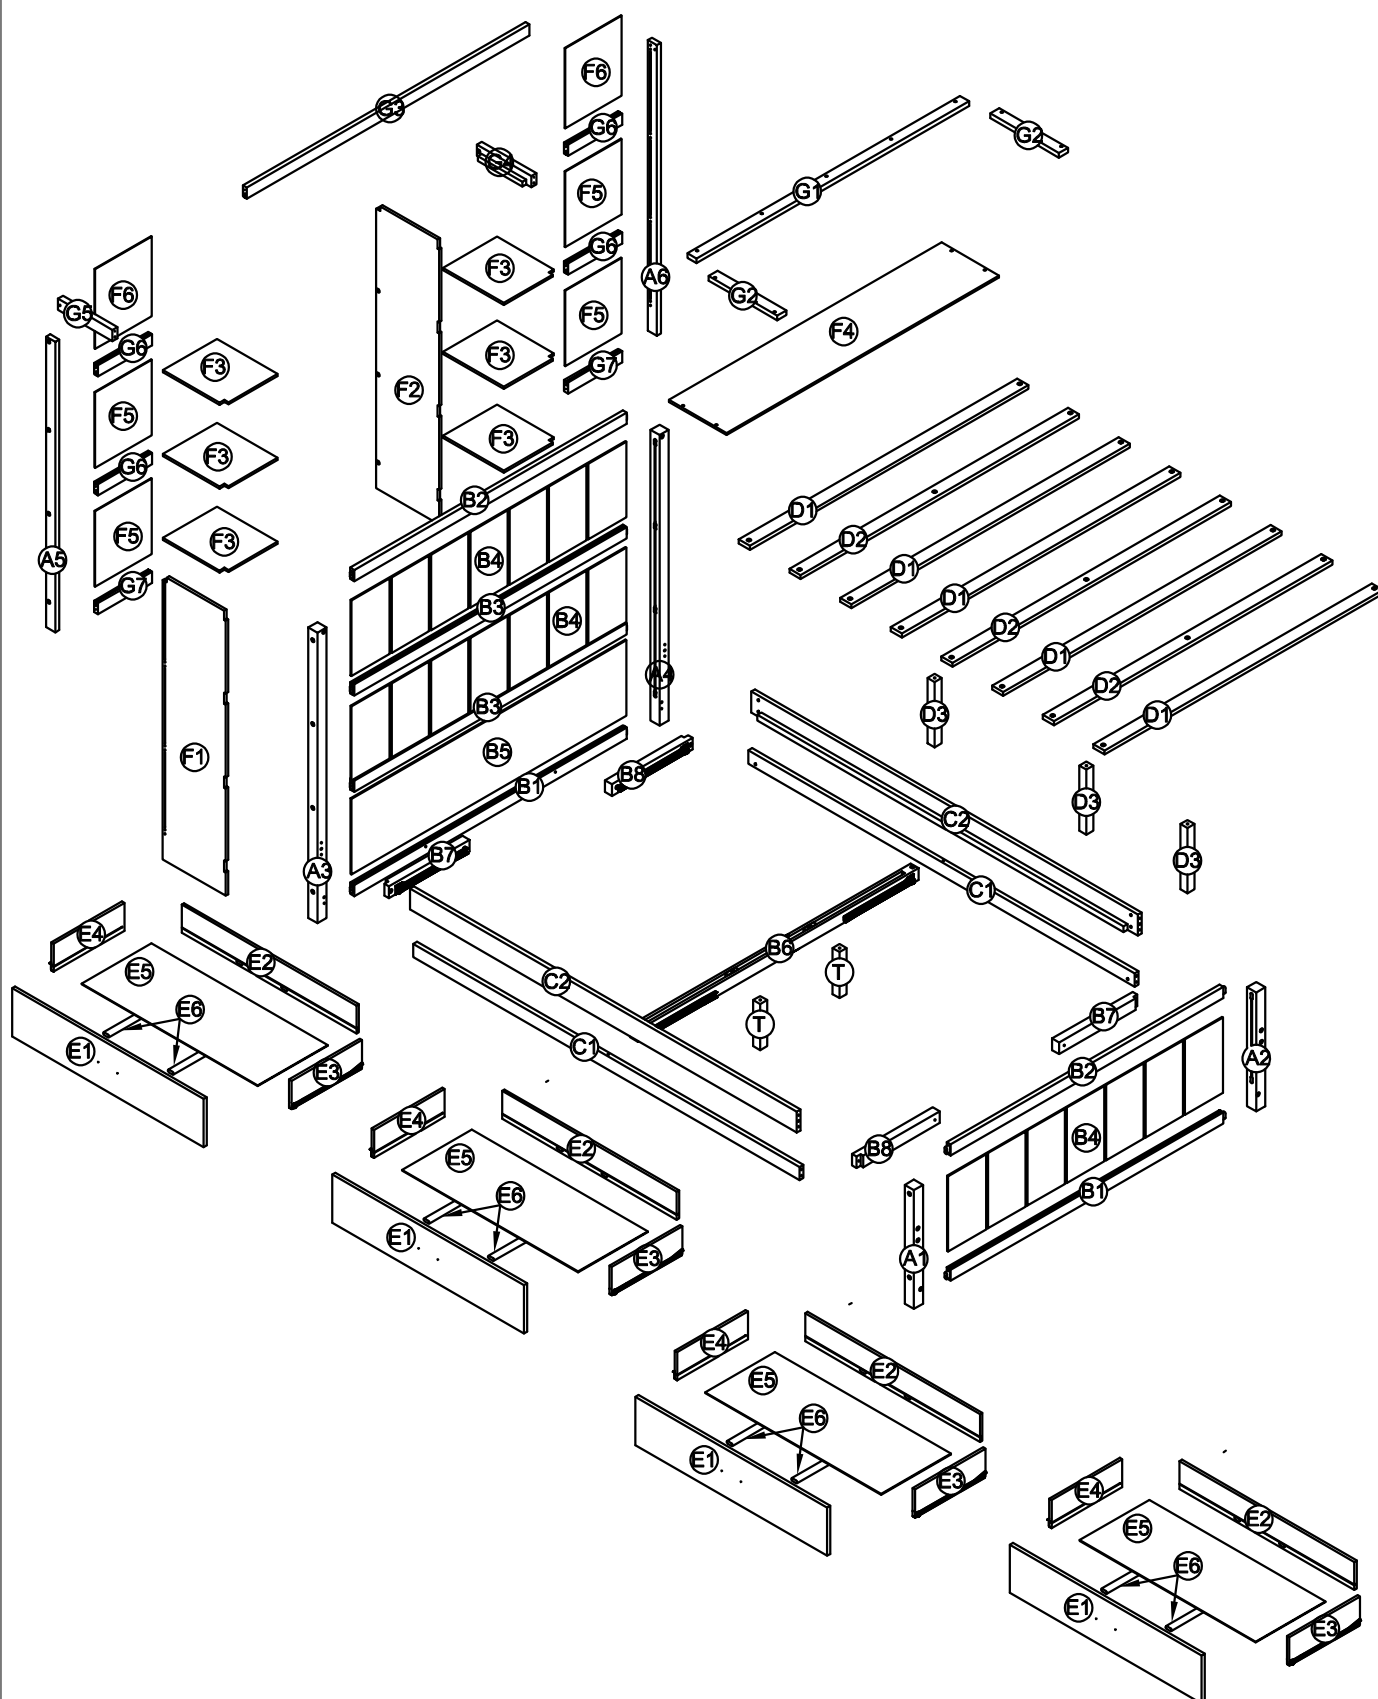
ASSEMBLY INSTRUCTION




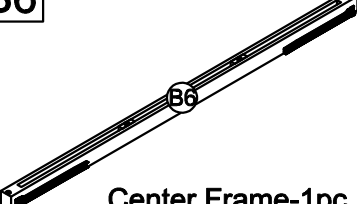
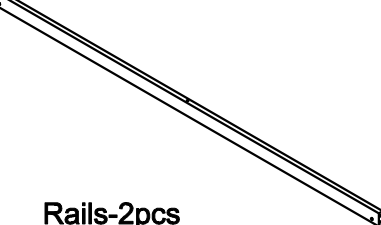
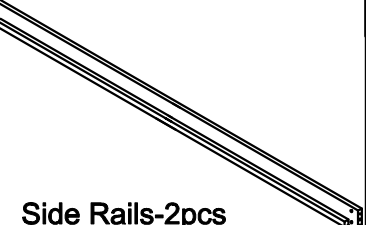
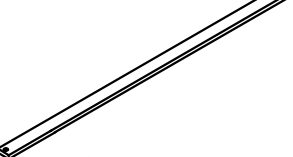
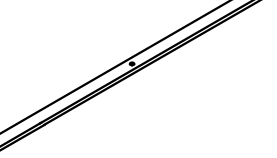
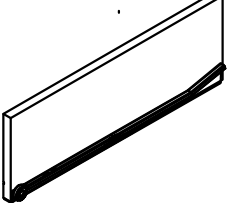
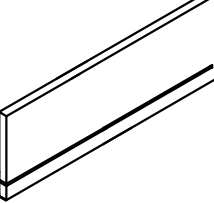
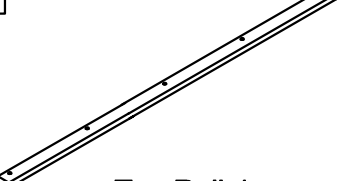

Part List & Hardware List (Box 1-WF297768)

A1  Leg-1pc	A2  Leg-1pc	A3  Leg-1pc
A4  Leg-1pc	A5  Leg-1pc	A6  Leg-1pc
B1  Wood bars-2pcs	B2  Wood bars-2pcs	B3  Wood bars-2pcs
B6  Center Frame-1pc	B7  Wood Bars-2pcs	B8  Wood Bars-2pcs
C1  Rails-2pcs	C2  Side Rails-2pcs	D1  Slats-5pcs
D2  Slats-3pcs	D3  Center Legs-3pcs	E3  Drawer-Side panels-4pcs
E4  Drawer-Side panels-4pcs	G1  Top Rail-1pc	G2  Top Rails-2pcs



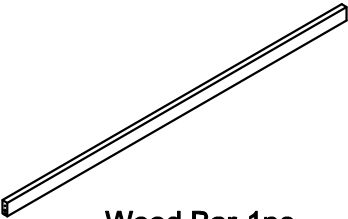
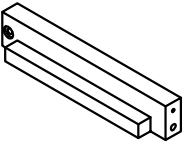
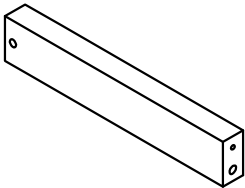
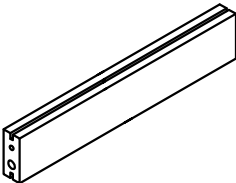
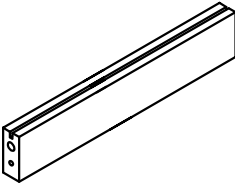
Part List & Hardware List (Box 1-WF297768)


G3  Wood Bar-1pc	G4  Wood Bar-1pc	G5  Wood Bar-1pc
G6  Wood Bars-4pcs	G7  Wood Bars-2pcs	

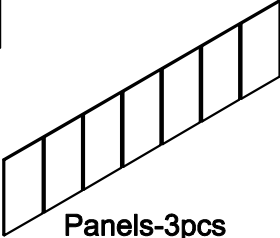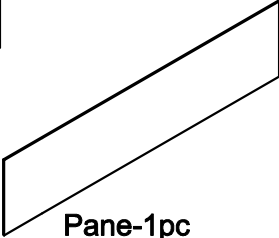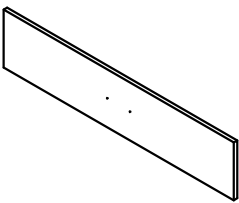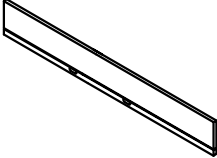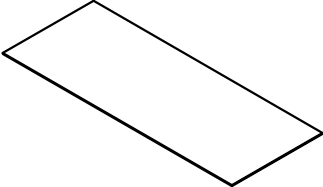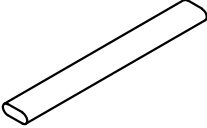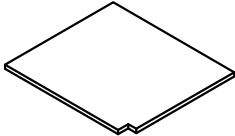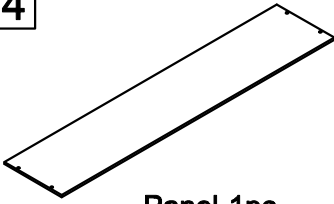Part List (Box 2-WF297769)

B4  Panels-3pcs	B5  Pane-1pc	E1  Drawer-Front panels-4pcs
E2  Drawer-Back panels-4pcs	E5  Drawer-Bottom panels-4pcs	E6  Drawer-Support Bottom panels-8pcs
F1  Panel-1pc	F2  Panel-1pc	F3  Panels-6pcs
F4  Panel-1pc	F5  Panels-4pcs	F6  Panels-2pcs
T  Center Legs-2pcs		

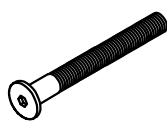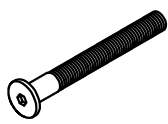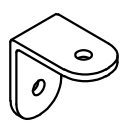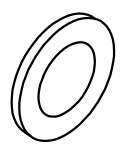Hardware List(Box 1-WF297768)


1	 Screws 1/4" x70 14pcs	2	 Ø1/4" x 40 mm Hex-Head bolts 4pcs	3	 Ø1/4" x 30 mm Hex-Head bolts 9pcs
4	 Ø10 x 40 mm Wood dowel 10pcs	5	 Ø1/4" x 90 mm Hex-Head bolts 12pcs	6	 Ø1/4" x 13 mm Horizontal-Hole bolts 12pcs
7	 Ø1/4" x 60 mm Hex-Head bolts 4pcs	8	 Screws 1/4" x40 14pcs	9	 Ø8 x 30 mm Wood dowel 14pcs
10	 Allen Key 1pc	11	 M3.5 x 10 mm Wood Screws 12pcs	12	 Steel Bracket 6pcs
13	 M4 x 20 mm Wood Screws 4pcs	14	 M4 x 30 mm Wood Screws 65pcs	15	 Ø1/6" x 20 mm Hex-Head bolts 8pcs
16	 Handle Steel 4pcs	17	 Washer Ø10/Ø6x2 8pcs		



Assembly Tools Required (Not Included)

STEP 1-1: Following below illustration:.

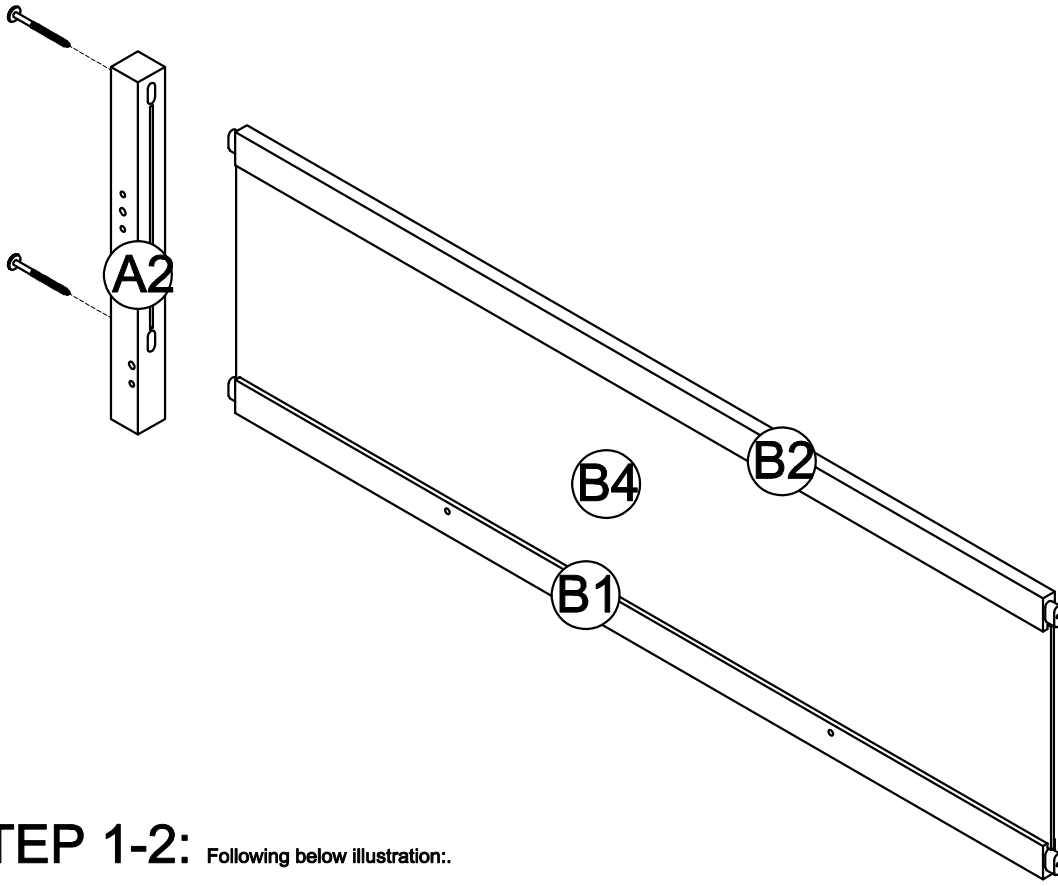-Using hardware #1 connect A1,A2 Legs with B1,B2 Wood Bars and B4 panel




1



4pcs

STEP 1-2: Following below illustration:.

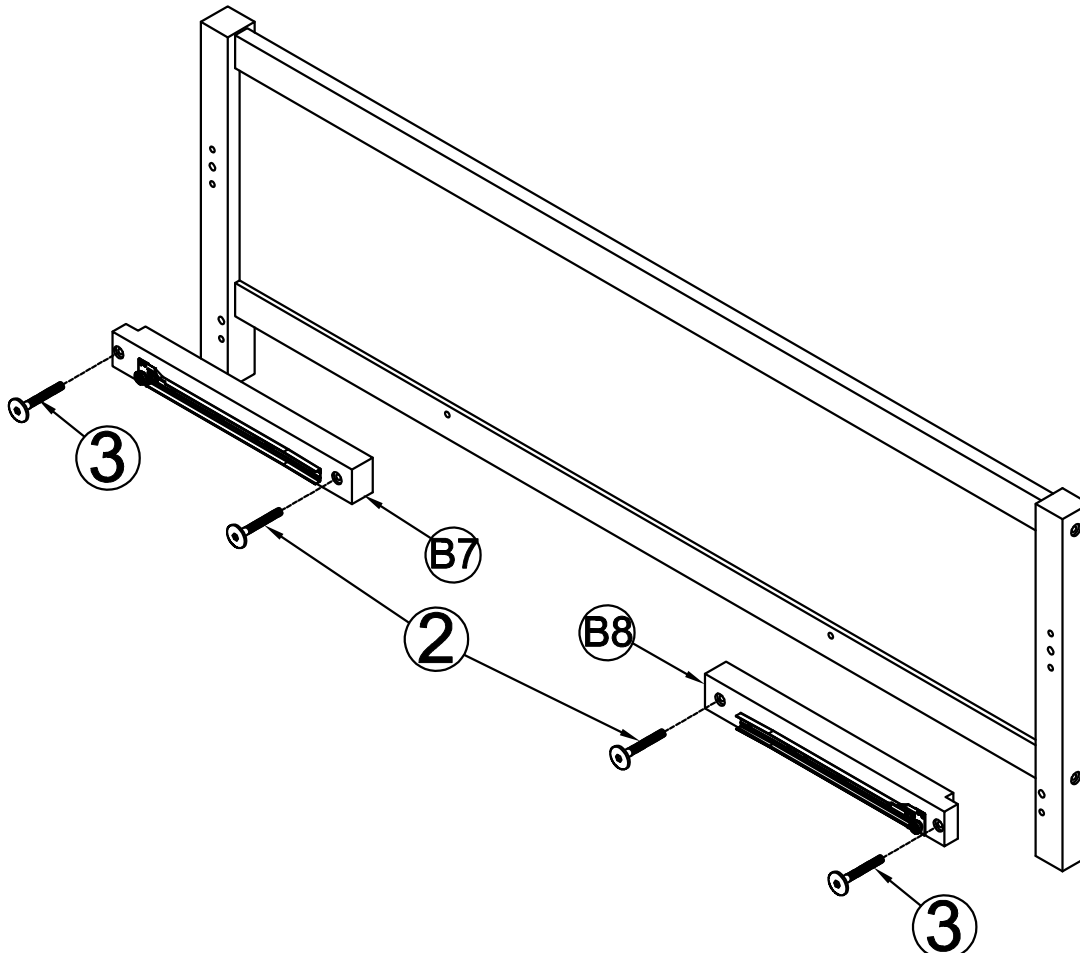-Using hardware #2,#2 connect Frame(Completed on step 1-1) with B7,B8 Wood Bars



2



2pcs

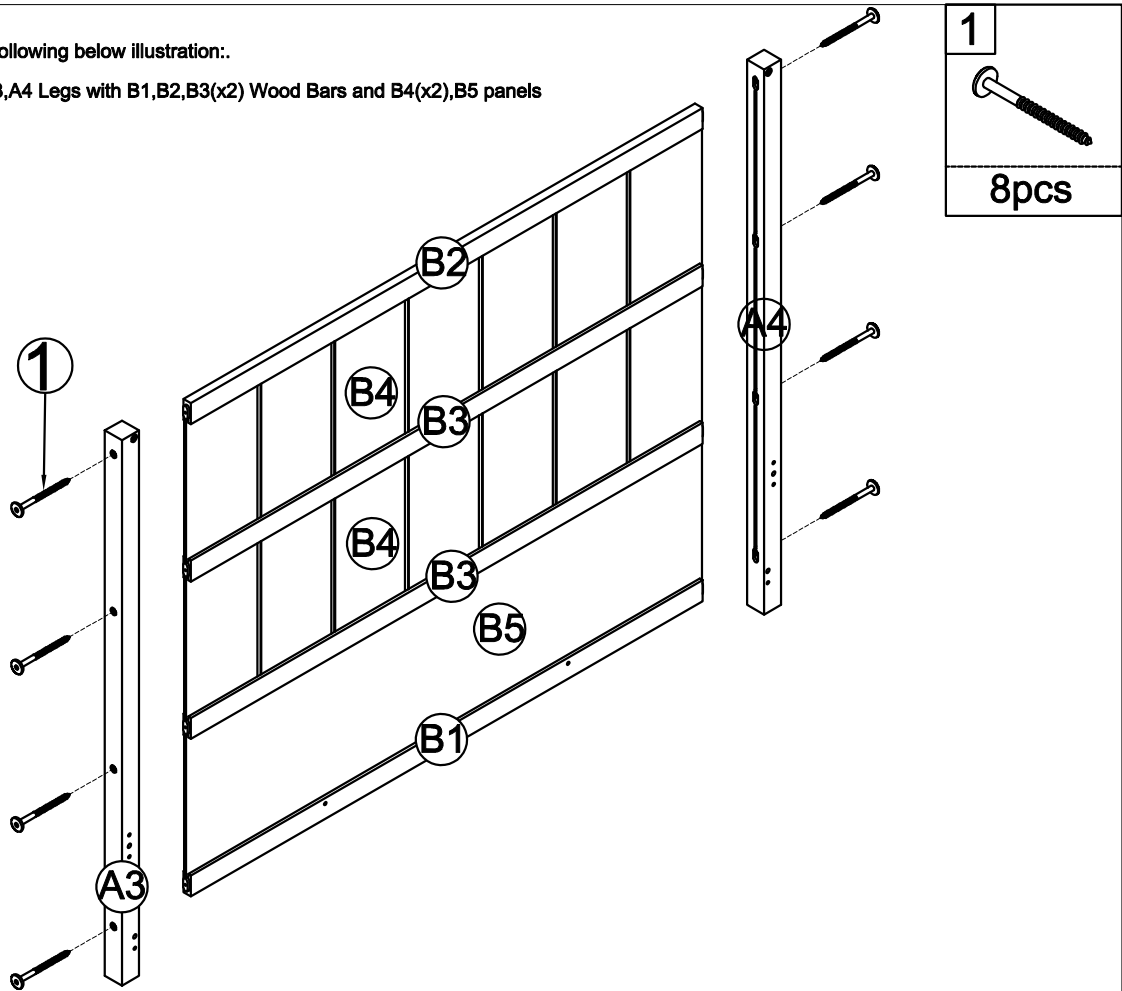
3



2pcs


STEP 2-1: Following below illustration:.

-Using hardware #1 connect A3,A4 Legs with B1,B2,B3(x2),B5 panels




STEP 2-2: Following below illustration:.

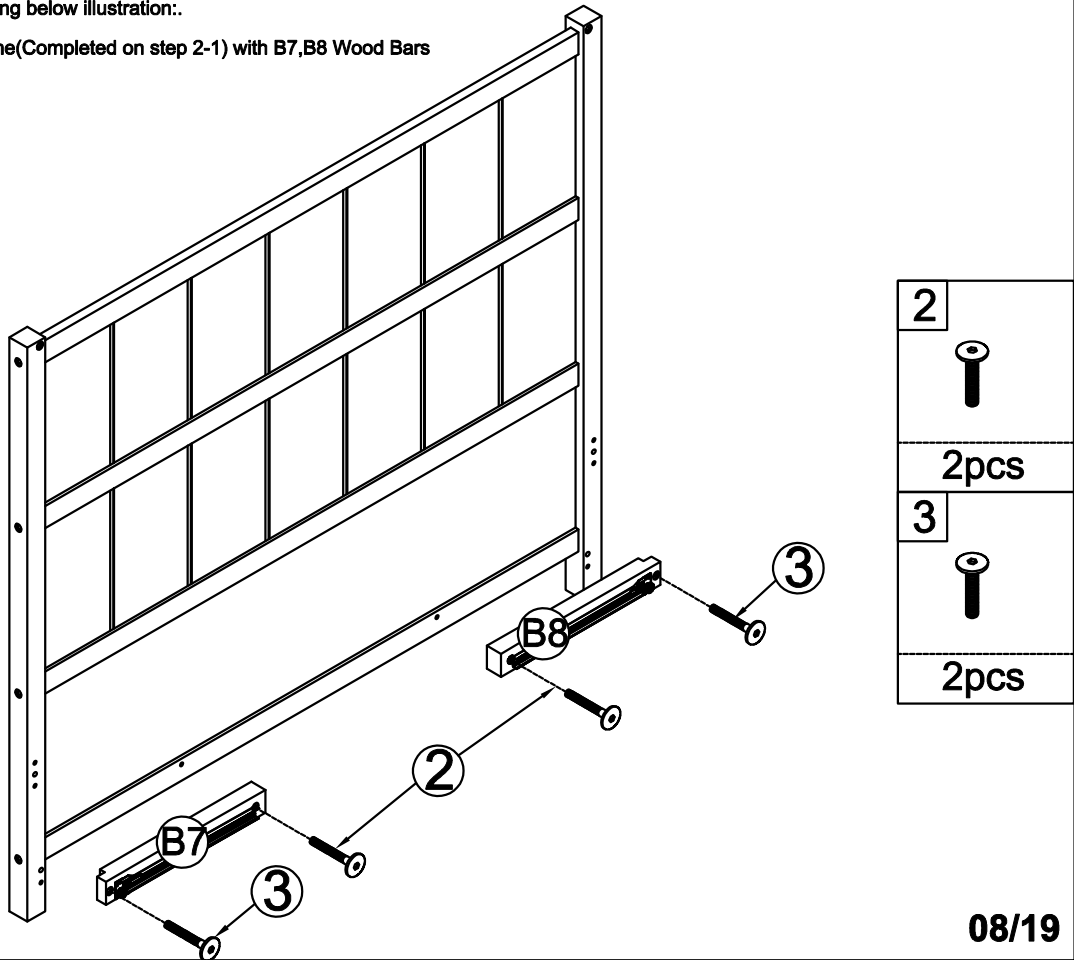
-Using hardware #2,#3 connect Frame(Completed on step 2-1) with B7,B8 Wood Bars



STEP 3: Following below illustration:

-Using hardware #5,#6 and dowel #4 to Assembly Frame (completed on step 1-2,step 2-2) With C2(x2),C1(x2)

5		4	
12pcs		8pcs	
		6	
		12pcs	

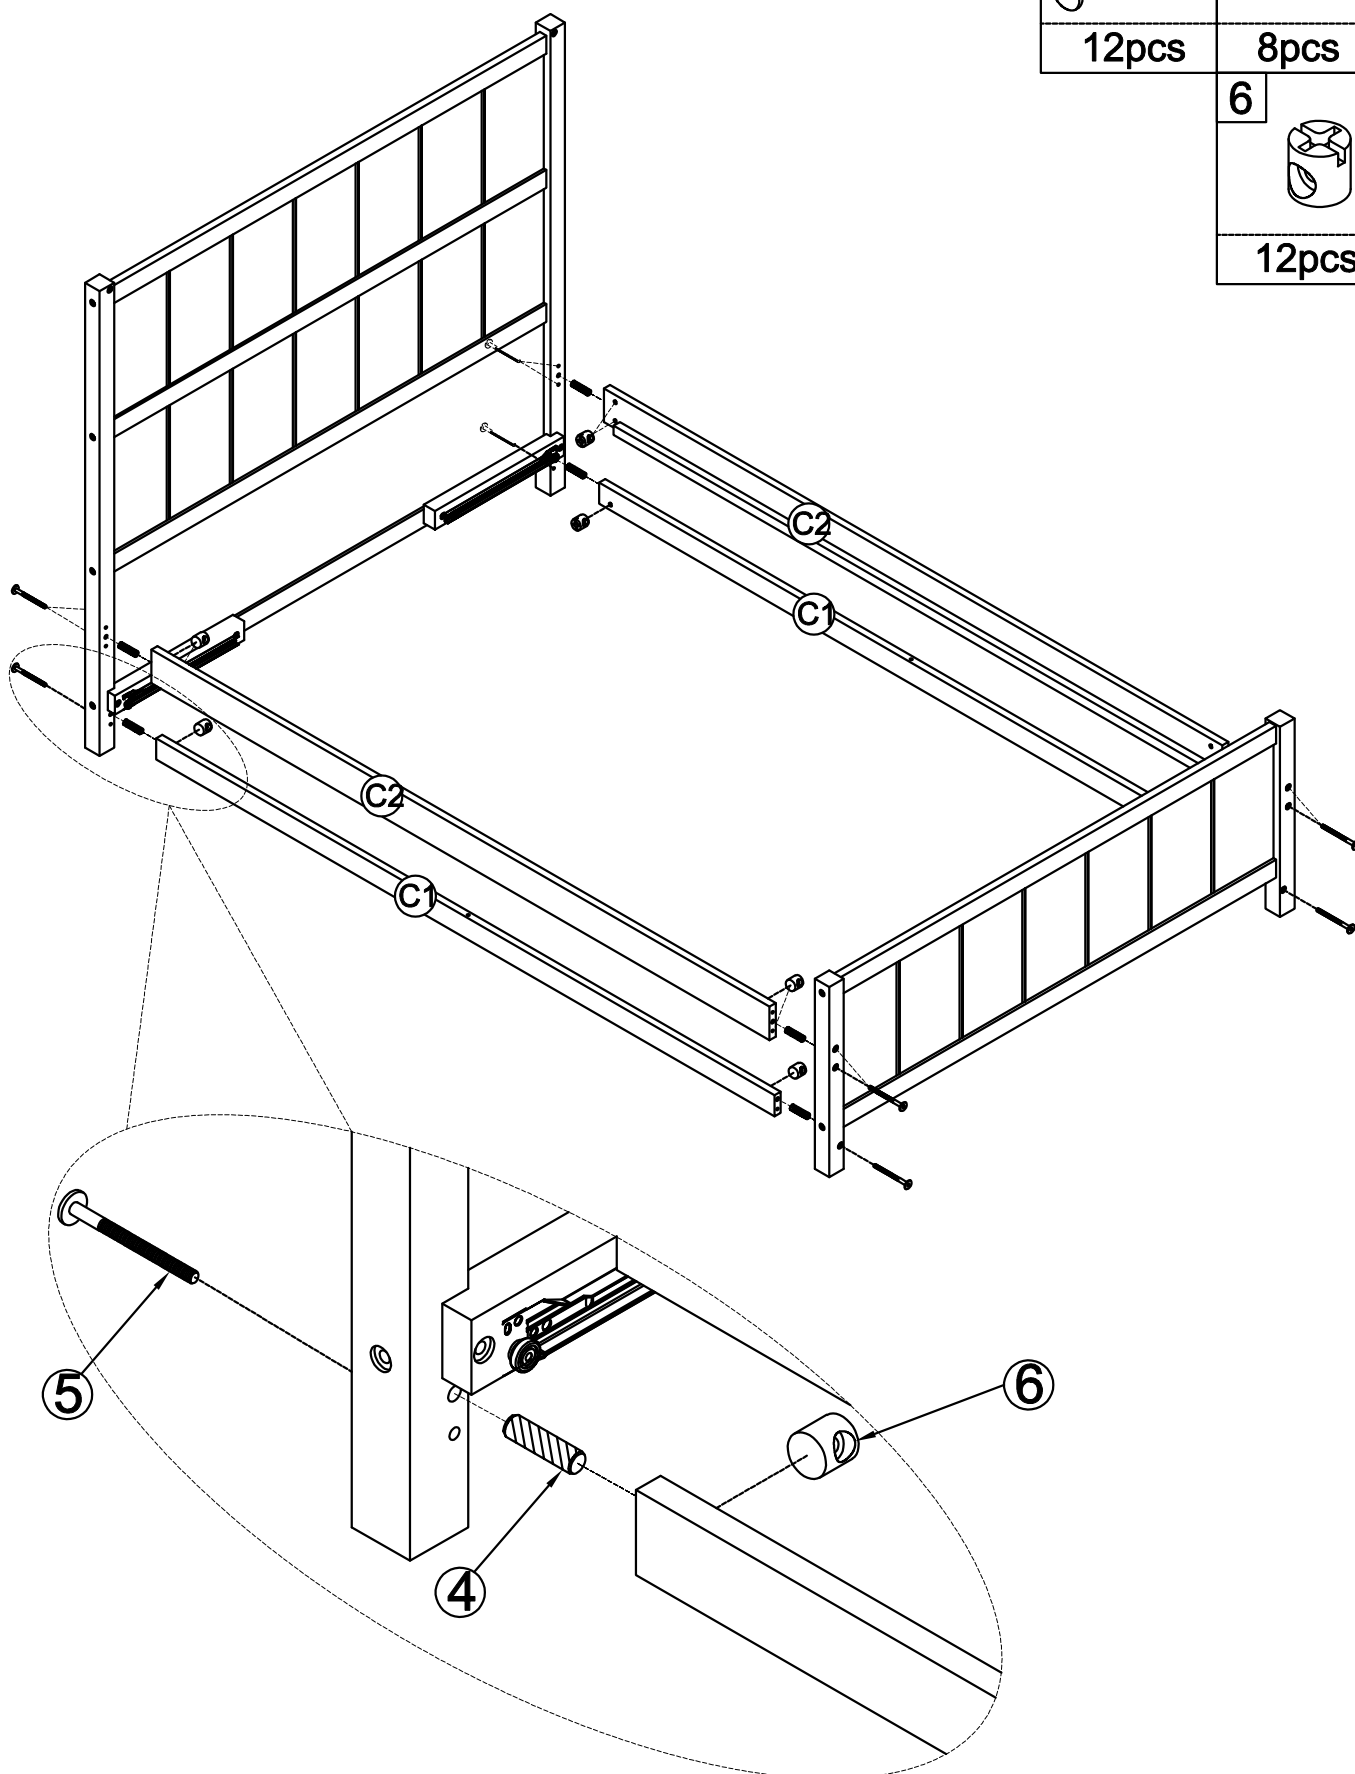


STEP 4:

Following below illustration:


-Using hardware #7 to Assembly B6 Frame With T(x2) Legs

-Using hardware #7 to Assembly Frame (completed on step 3) With B6 Frame

7




4pcs

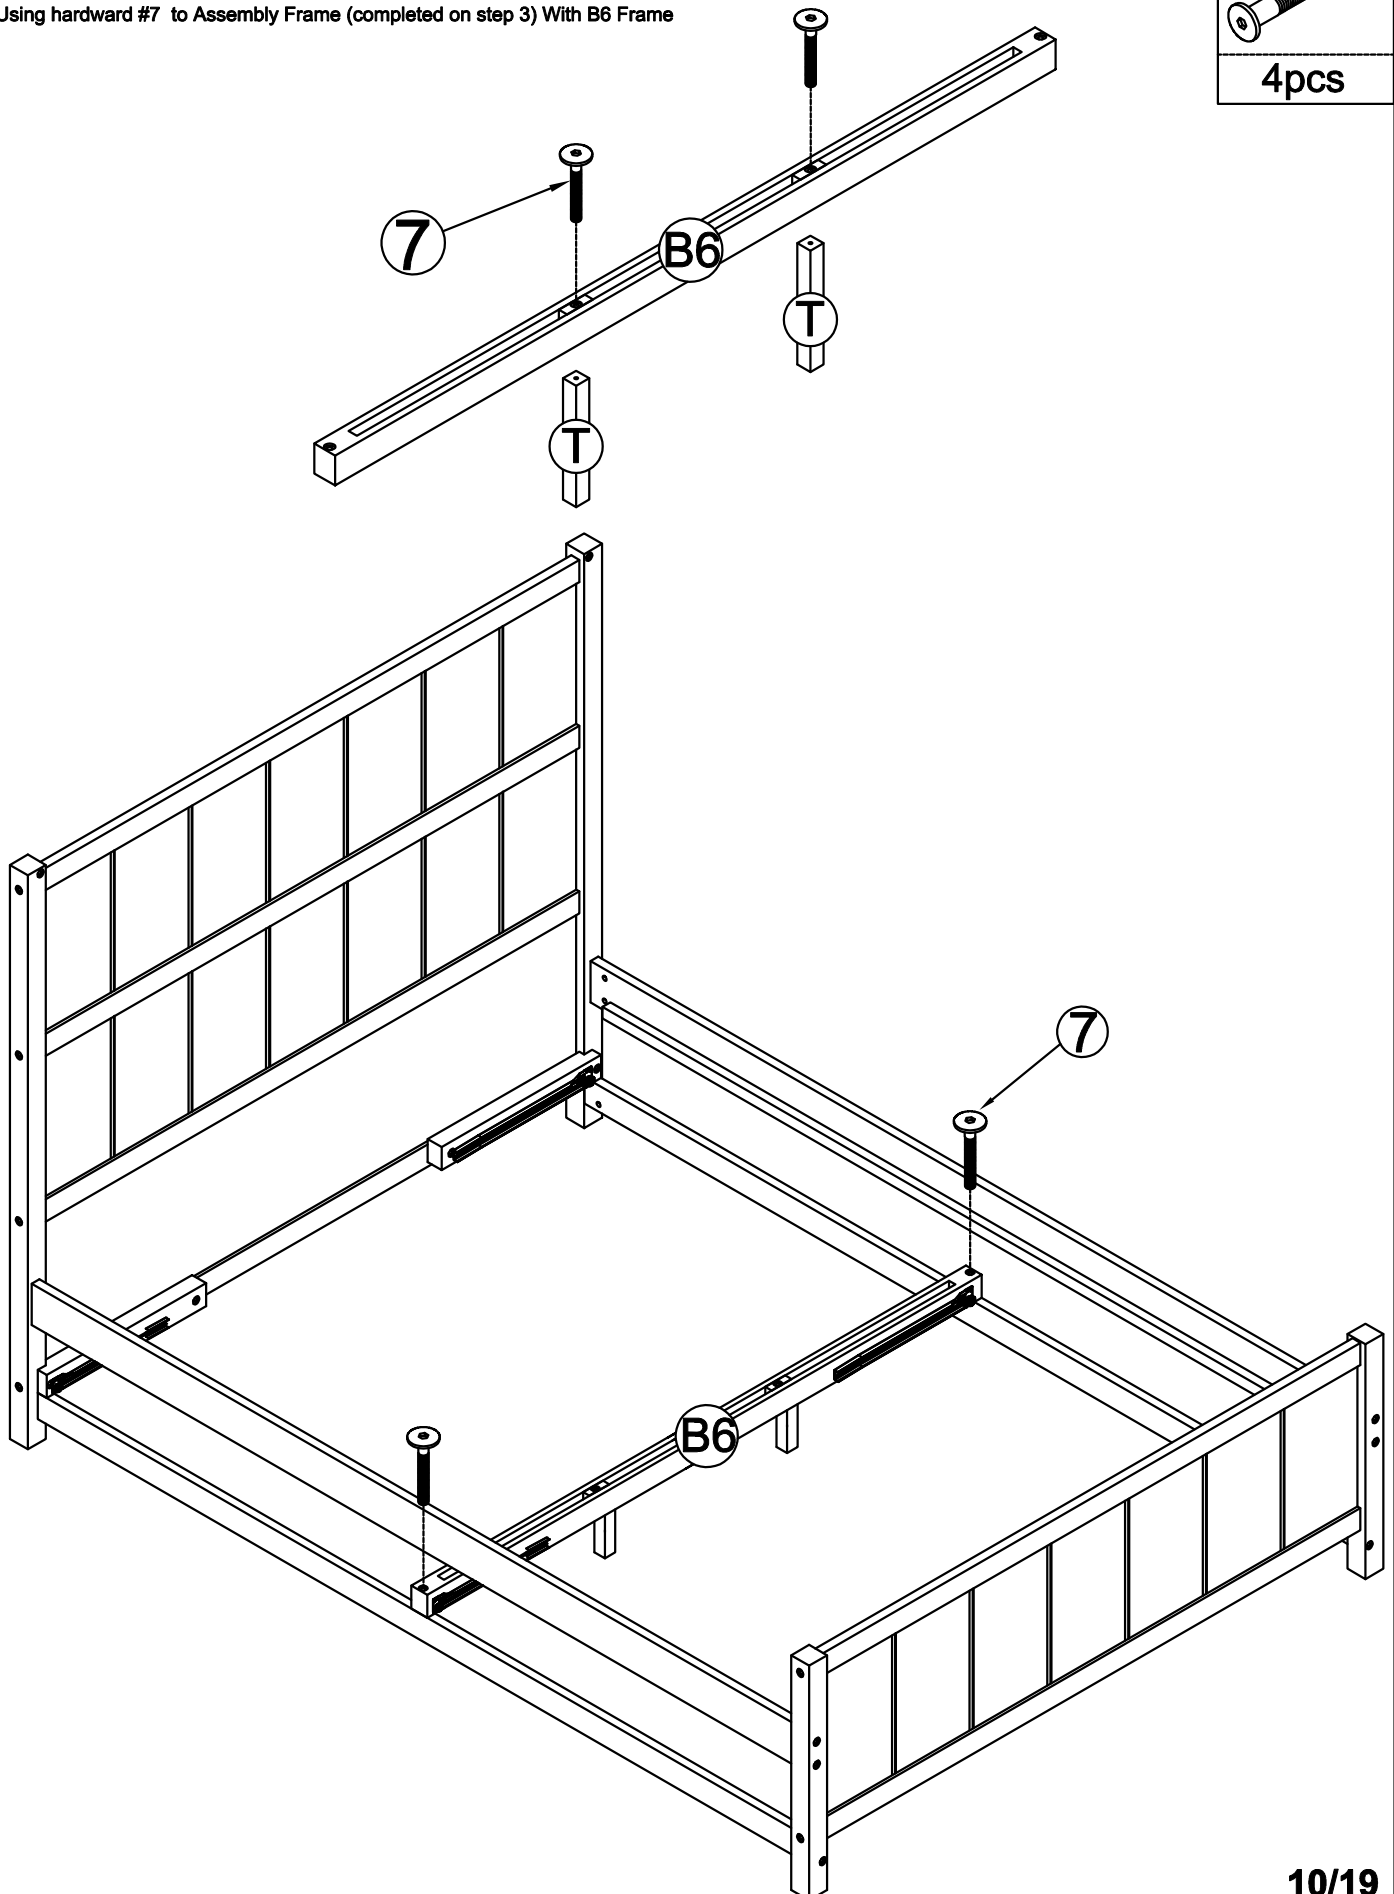

STEP 5: Following below illustration:


8	9
	
14pcs	14pcs

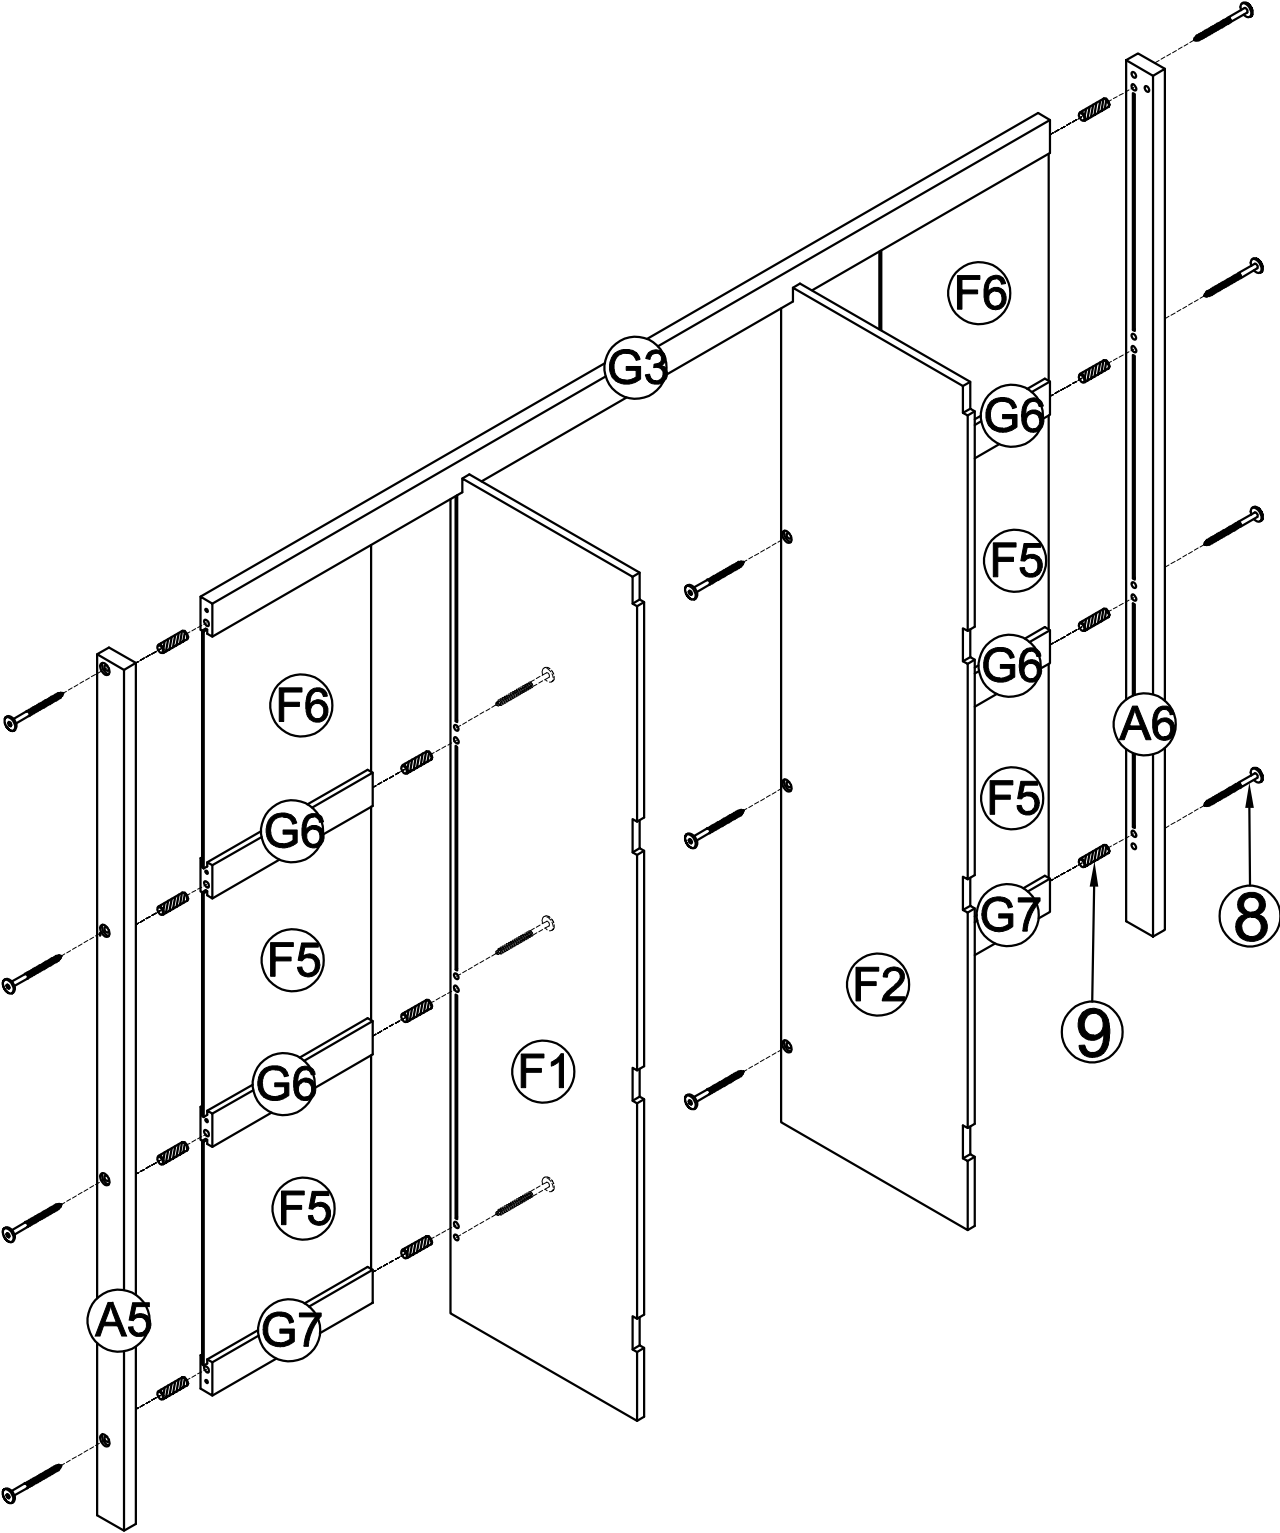


STEP 6: Following below illustration:

-Using hardward #1,#3 And Dowel 4 to Assembly Frame (completed on step 4,step 5) With B6 Frame

1	4
	
2pcs	2pcs
	3
	
	2pcs

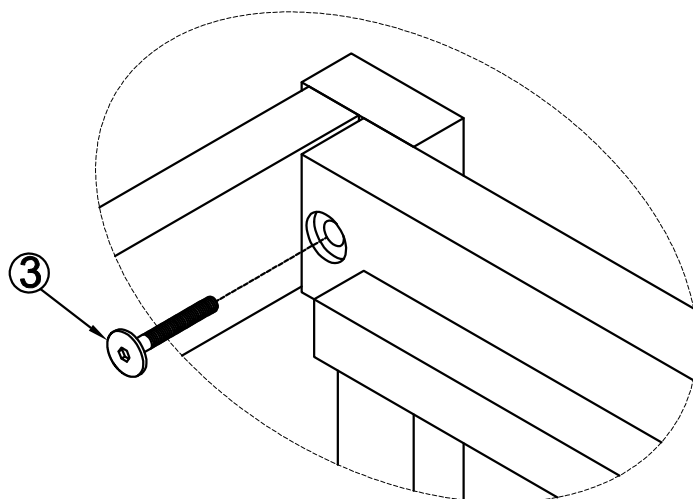

Detail 1
(x2)


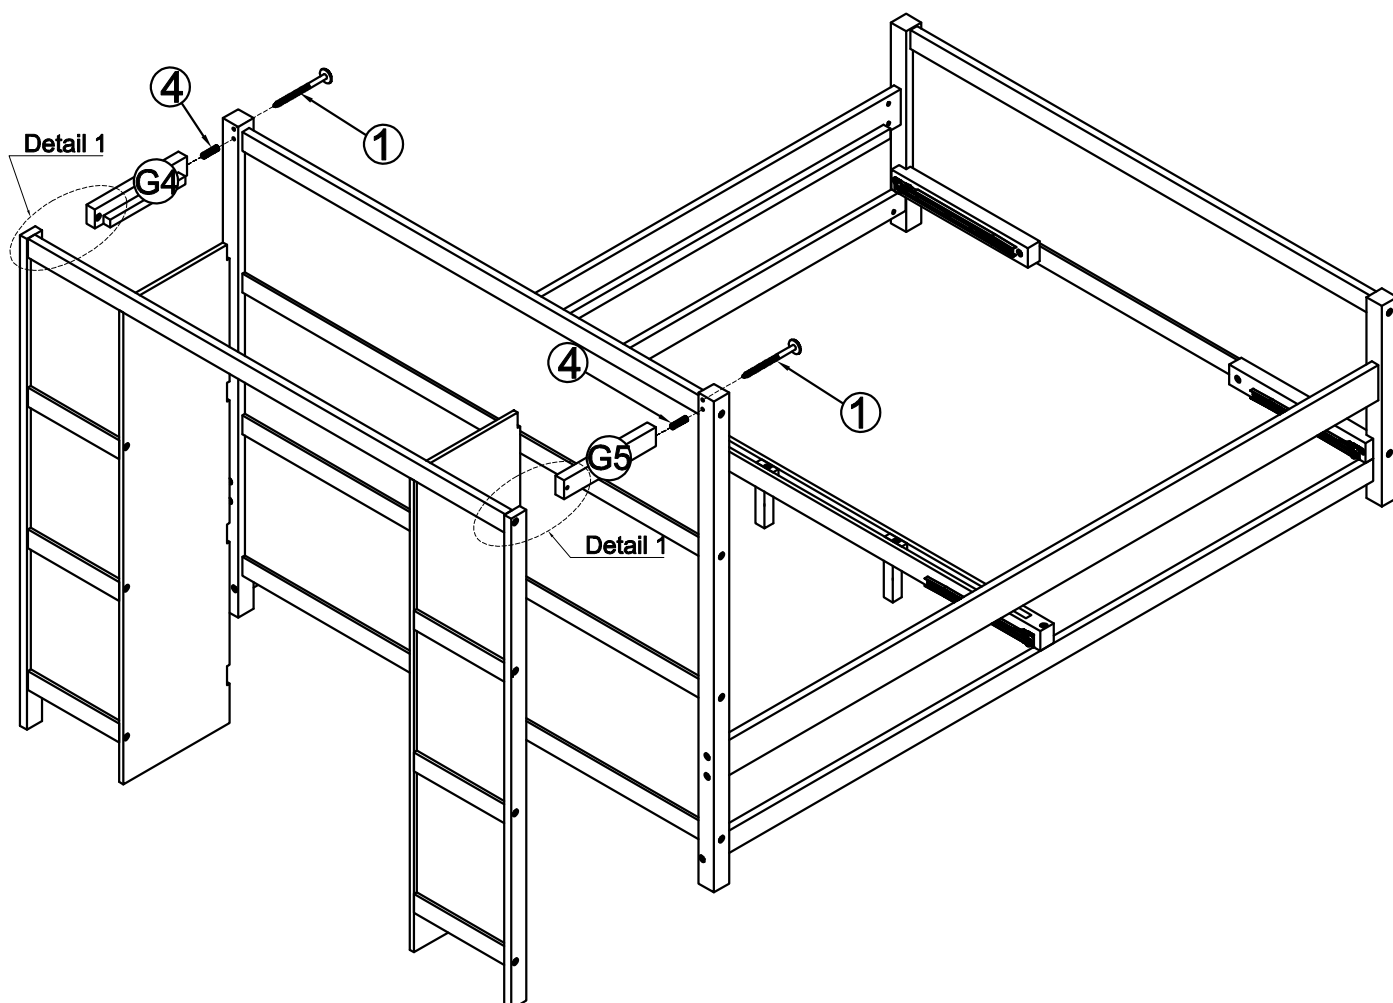


STEP 7: Following below illustration:



-Put 6 F3 Panels on position

-Using hardware #11 connect bracket (#12) with Frame(Completed on step 6) .



12	11
	
6pcs	12pcs

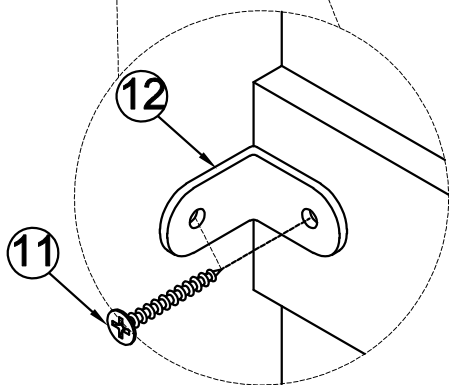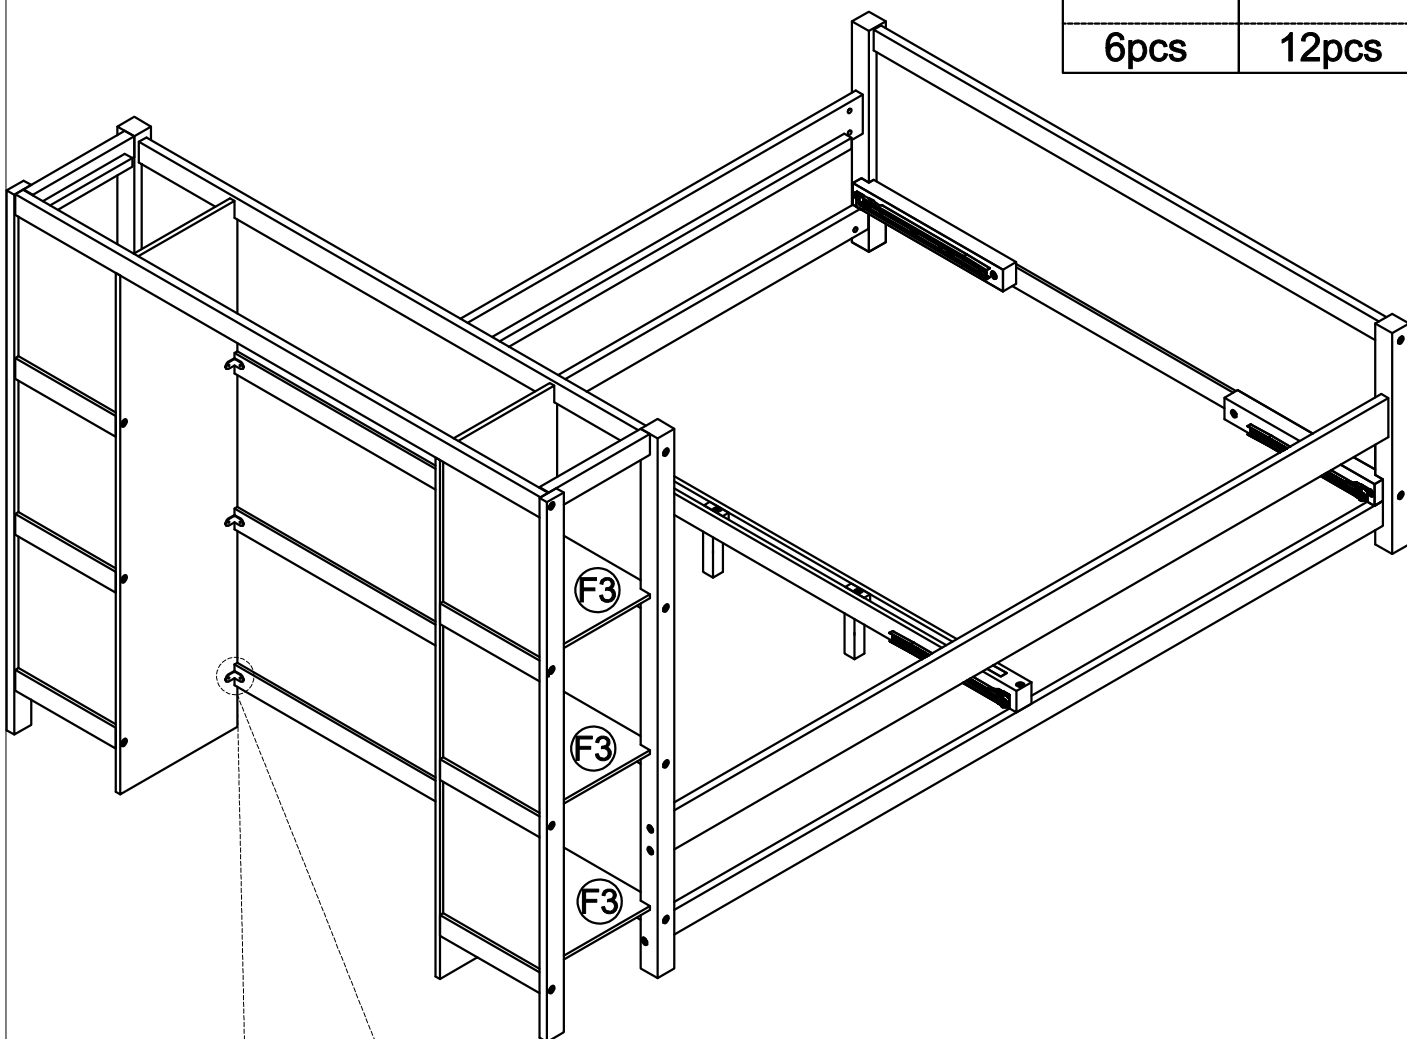

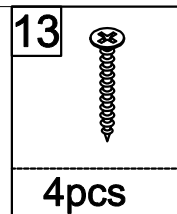
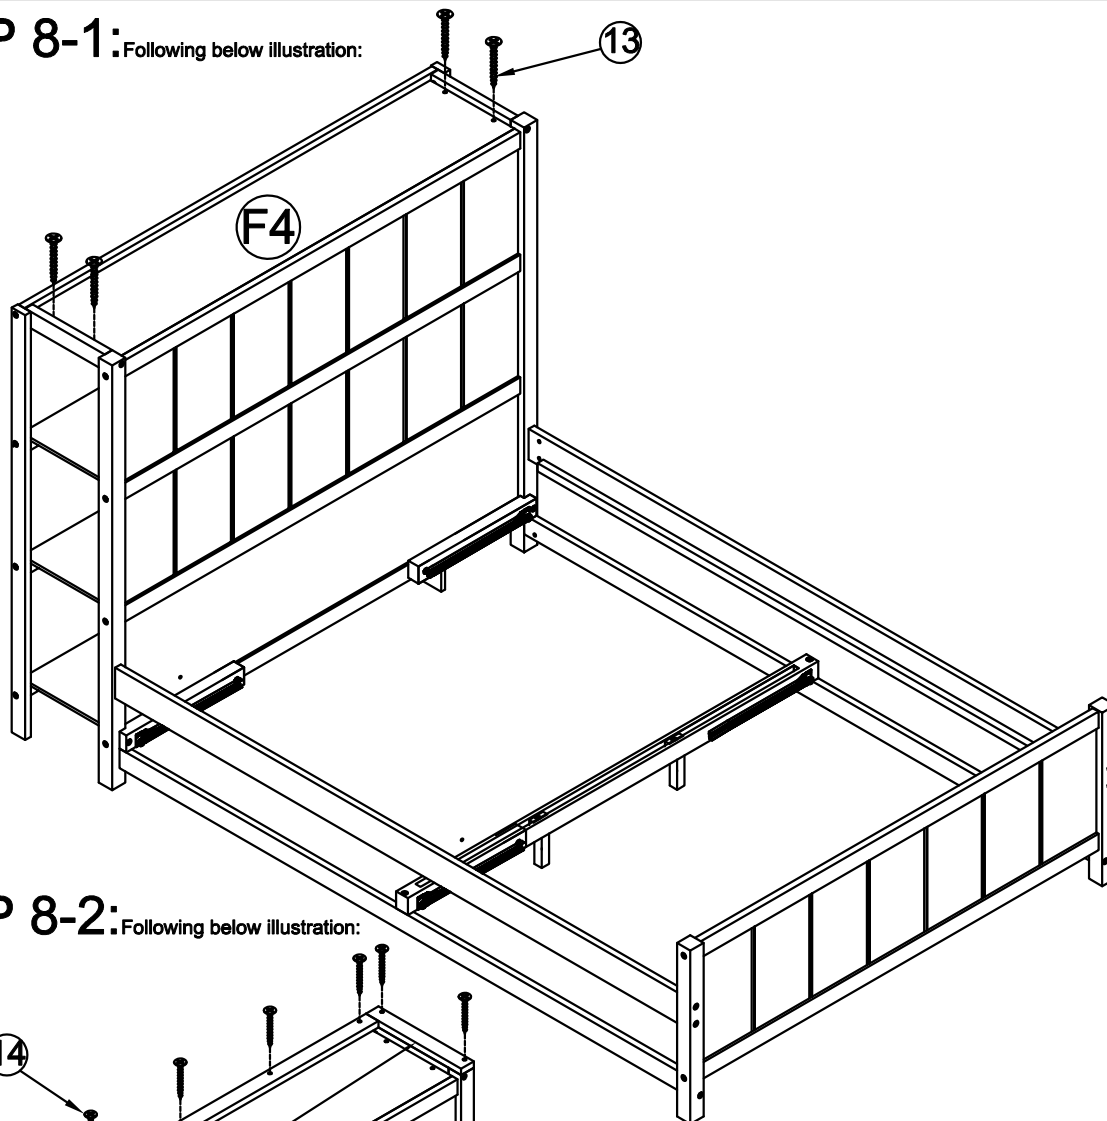
STEP 8-1: Following below illustration:



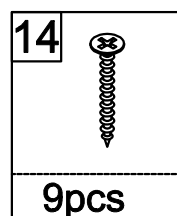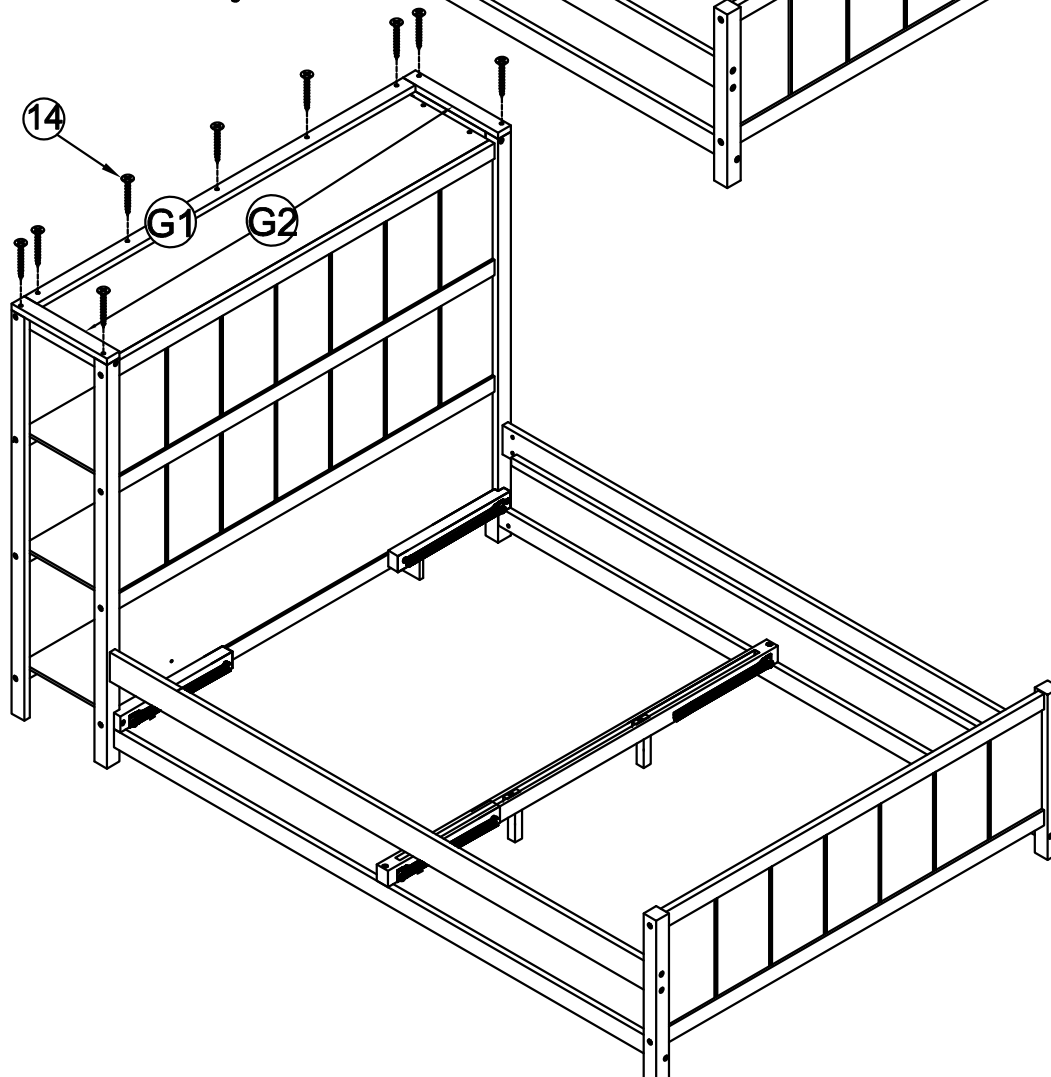STEP 8-2: Following below illustration:





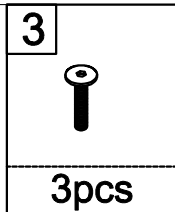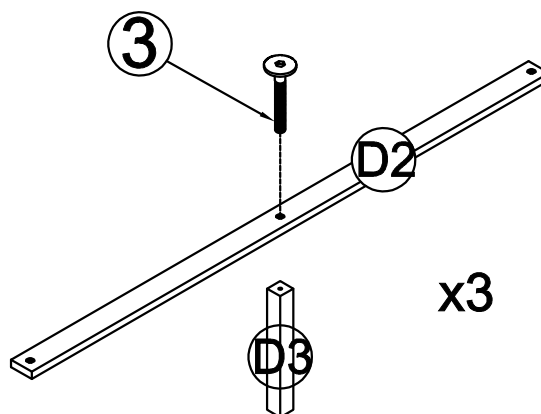STEP 9-1: Following below illustration:




STEP 9-2: Following below illustration:

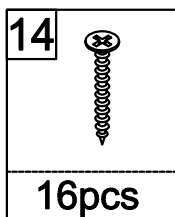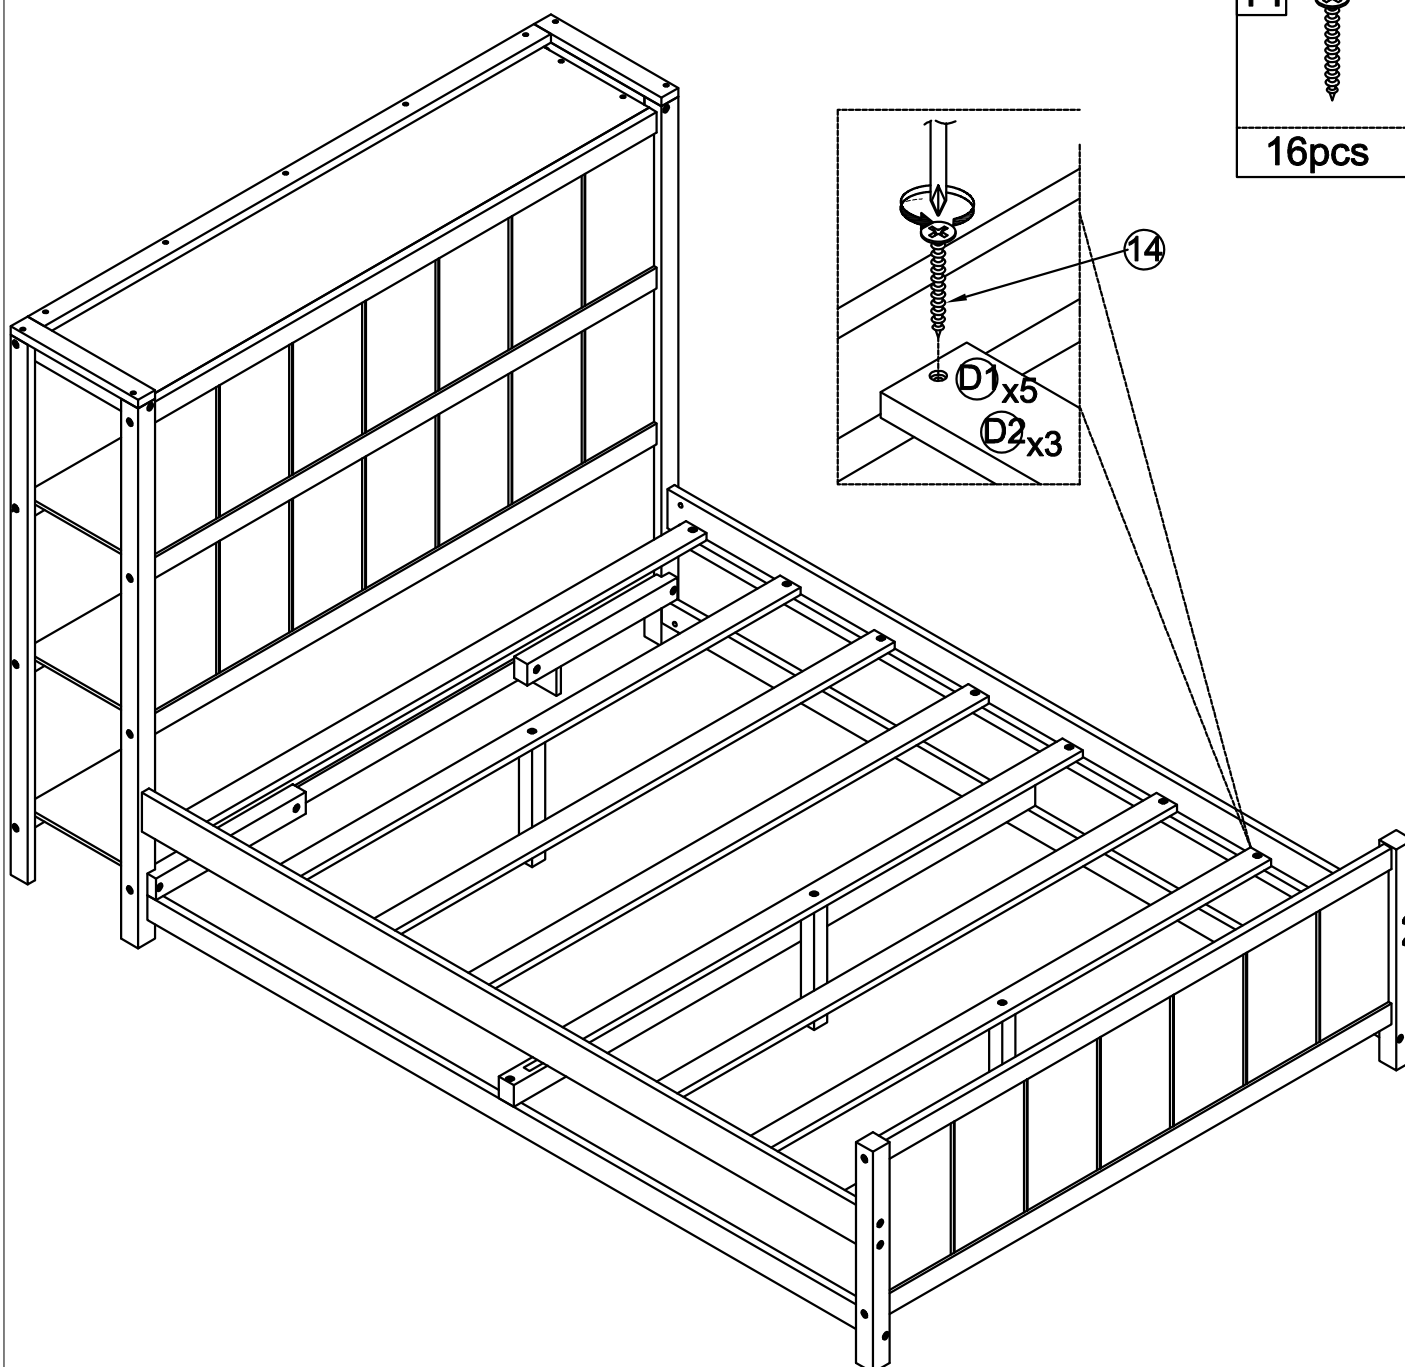
-Assembly 5 slats (D1) and 3 slats (D2) using hardware #14.



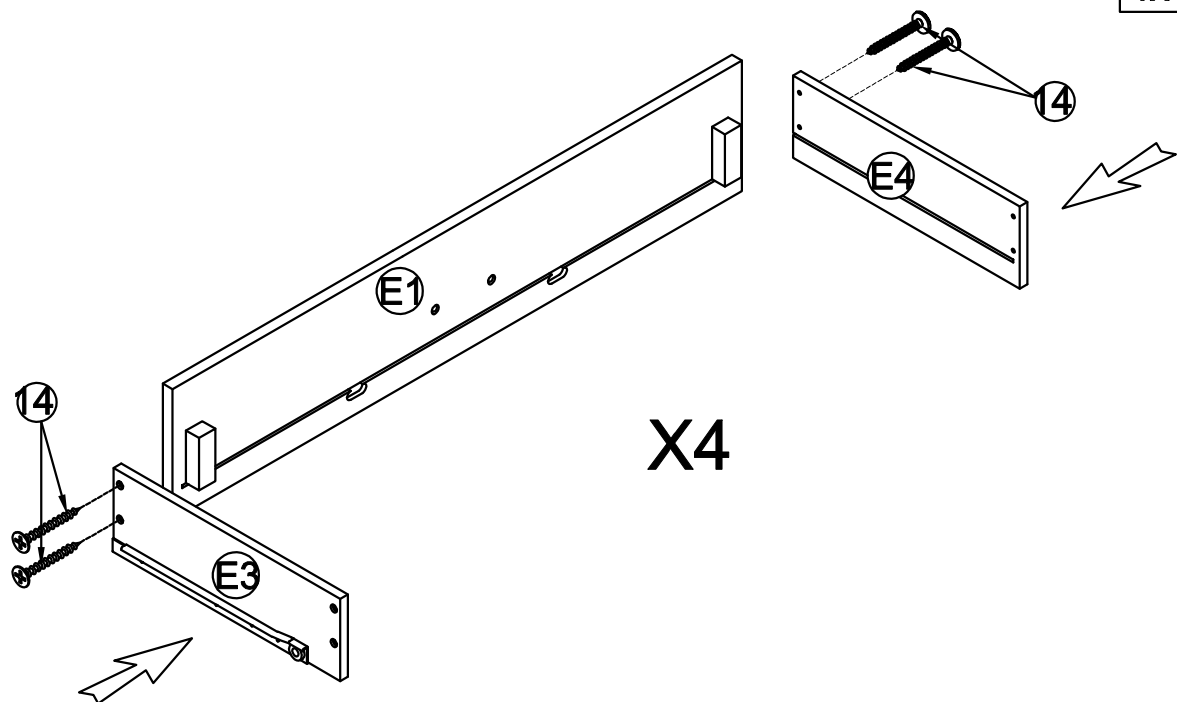
STEP 10-1: ASSEMBLY DRAWERS



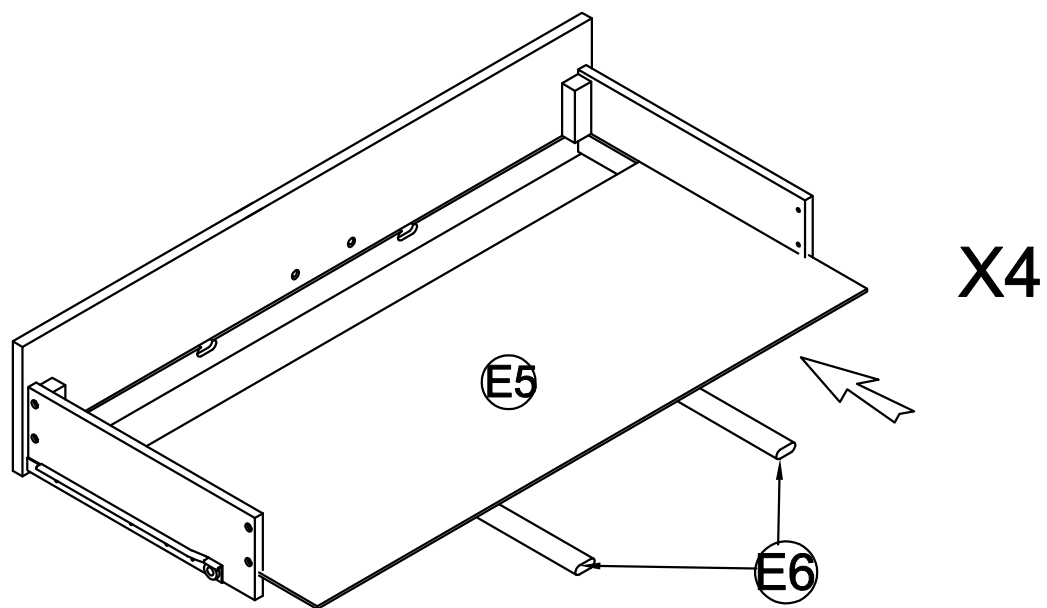
STEP 10-2: ASSEMBLY DRAWERS



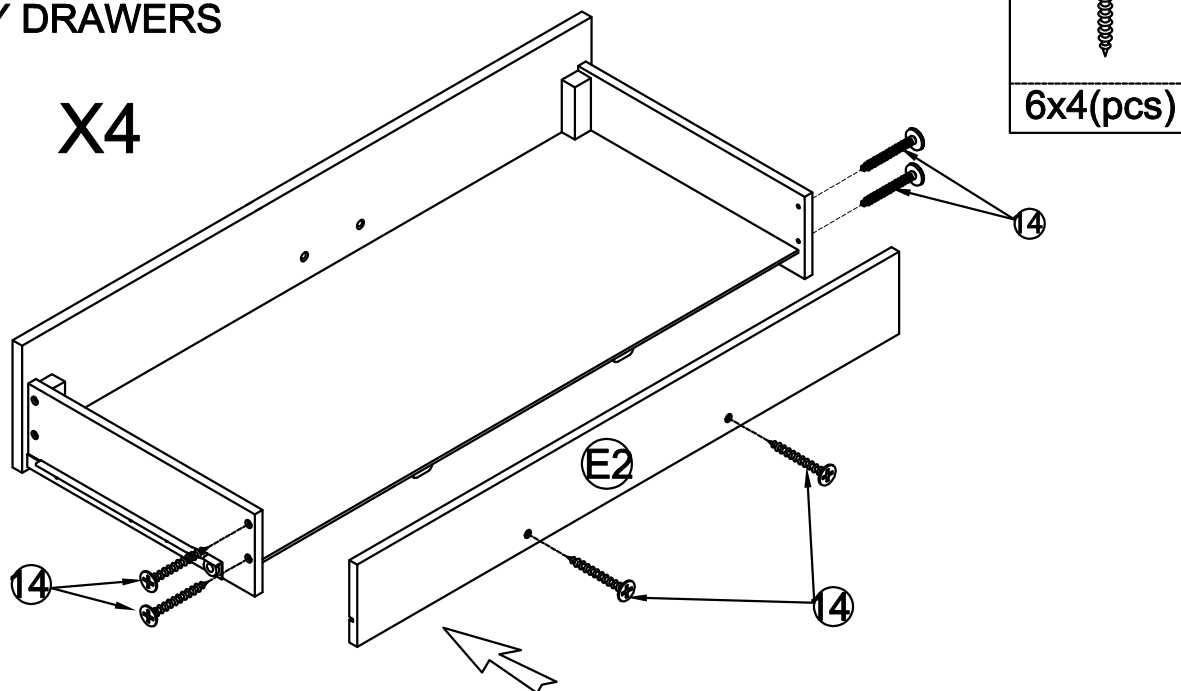STEP 10-3: ASSEMBLY DRAWERS




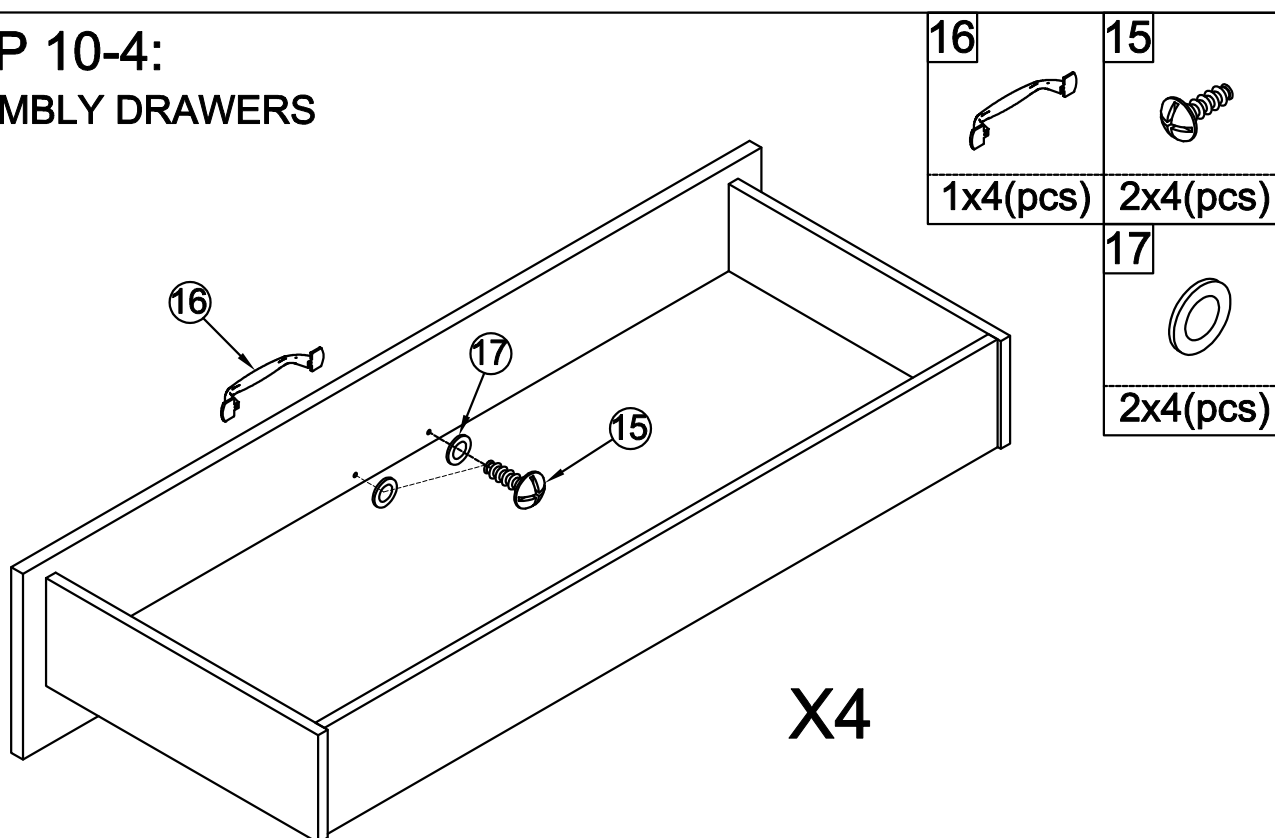STEP 10-4: ASSEMBLY DRAWERS



STEP 11:

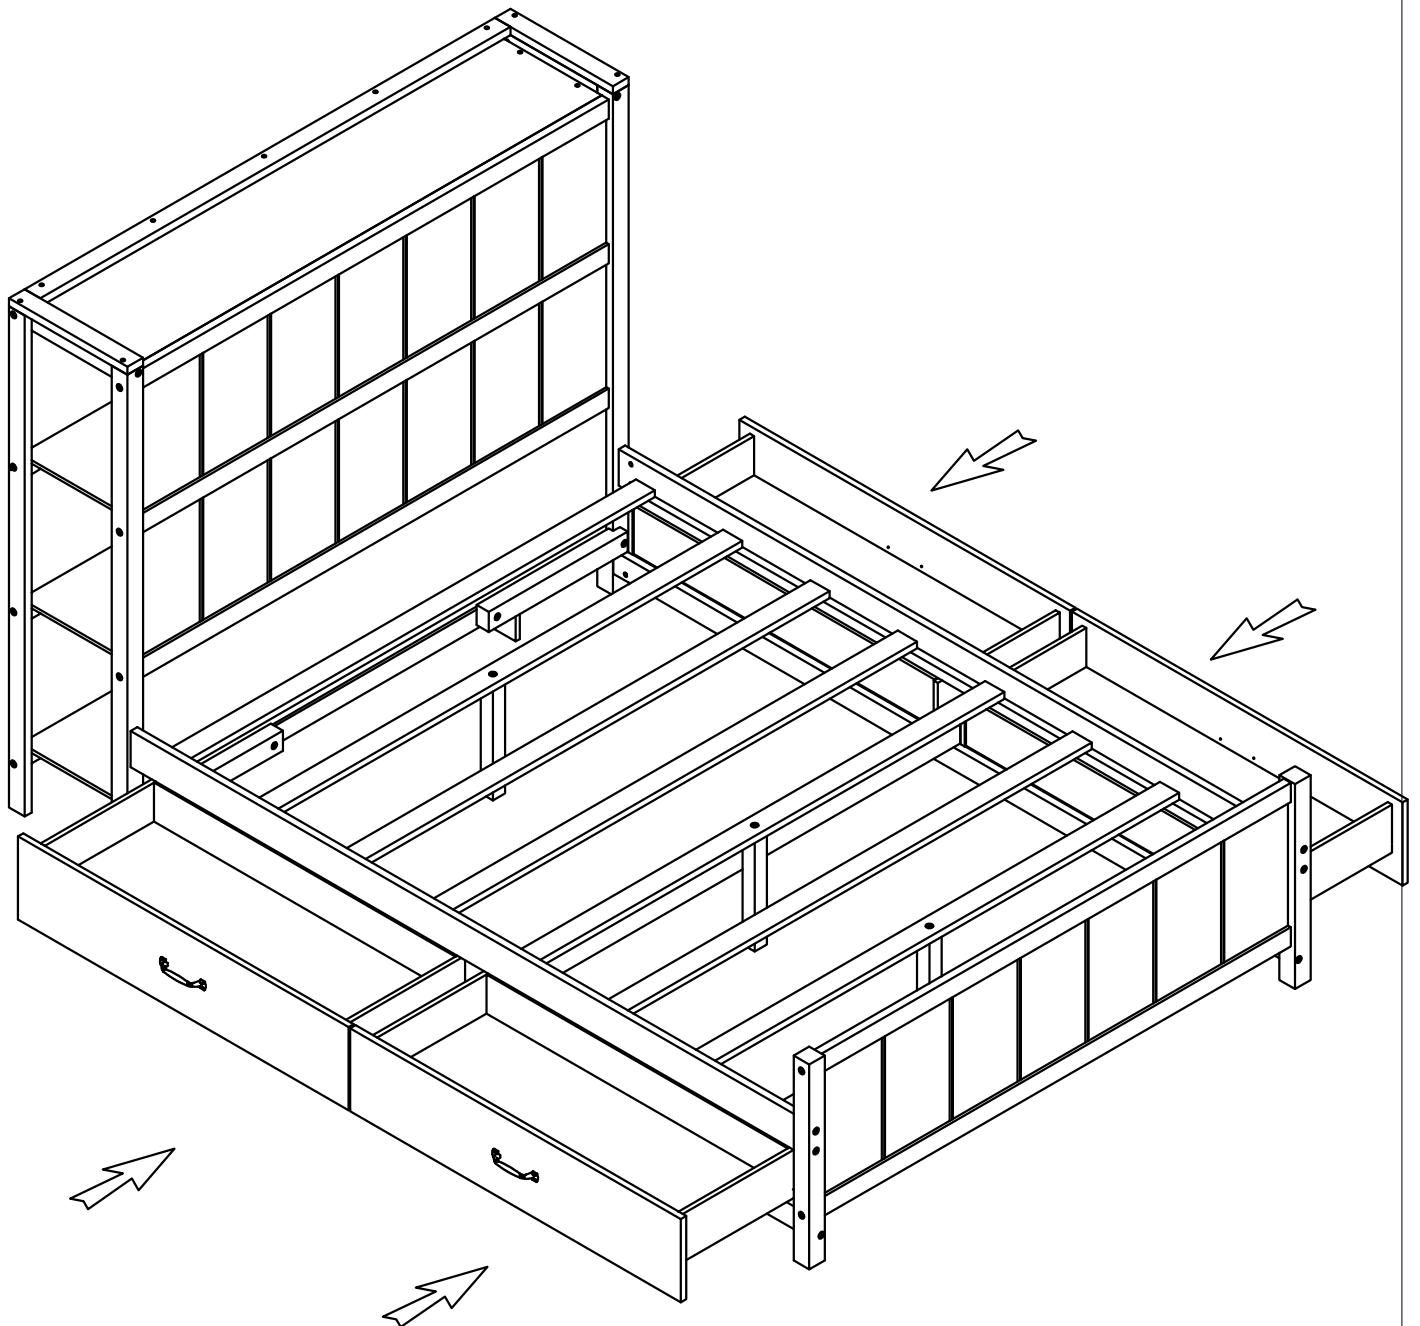- Push 4 drawer into it position



CONGRARULATION. YOU HAVE COMPLETED THE BED.

