
**Assembly Instructions** 

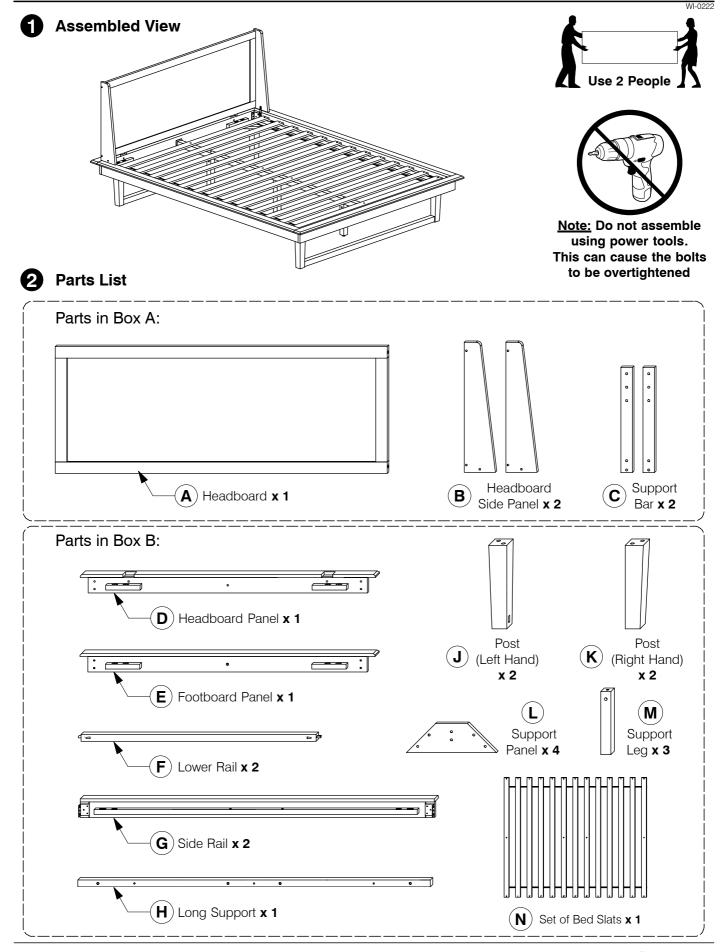


**Assembly Instructions** WI-0222 **3** Hardware List M4 Allen Key M5 Allen Key (3) Center Rail **4**) Adjustable (5) Bracket (2003) x 1 x 1 Bracket x 2 Foot **x 3** x 2 (6) Barrel Nut (9) Flat Washer Wood Screw Spring M8 x 50mm JCB 10 x 34 х 3 (M4 x 32mm) **x 22** Washer x 34 x 8 M6 JCN Nut M6 x 15mm M6 x 20mm M6 x 35mm M6 x 40mm 11) JCB x 8 JCB x 8 JCB **x 10** JCB **x 16** x 2 **17**) M6 x 90mm M6 x 50mm JCB **x 16** JCB x 3 17 4 Assembled the Support Leg (M) Note: Extra holes to the Long Support (H). on top 17 6 17 6 M) 4 M (K)4 **5** Fit the Lower Rail (F) to the Post (J & K). 7  $(\mathsf{F})$ 


7

**Assembly Instructions** 


WI-0222






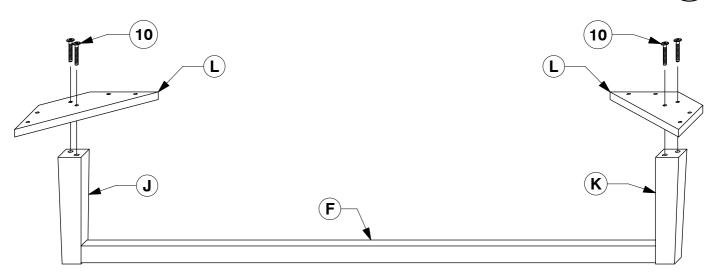


Fit the Center Rail Bracket to the Headboard Panel (D).

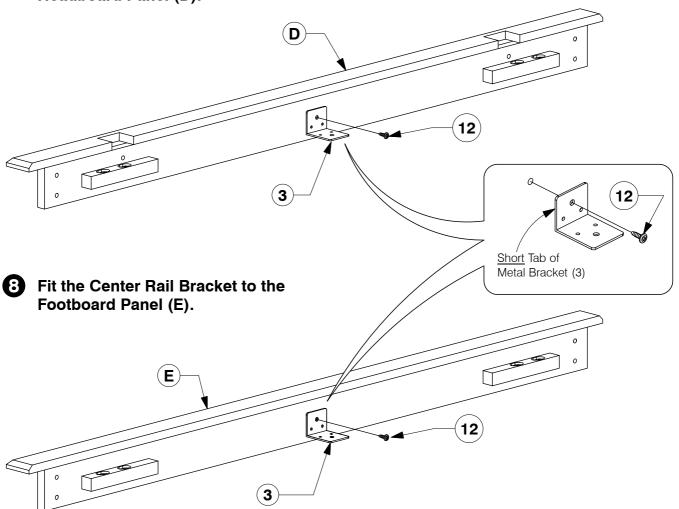

**Assembly Instructions** 

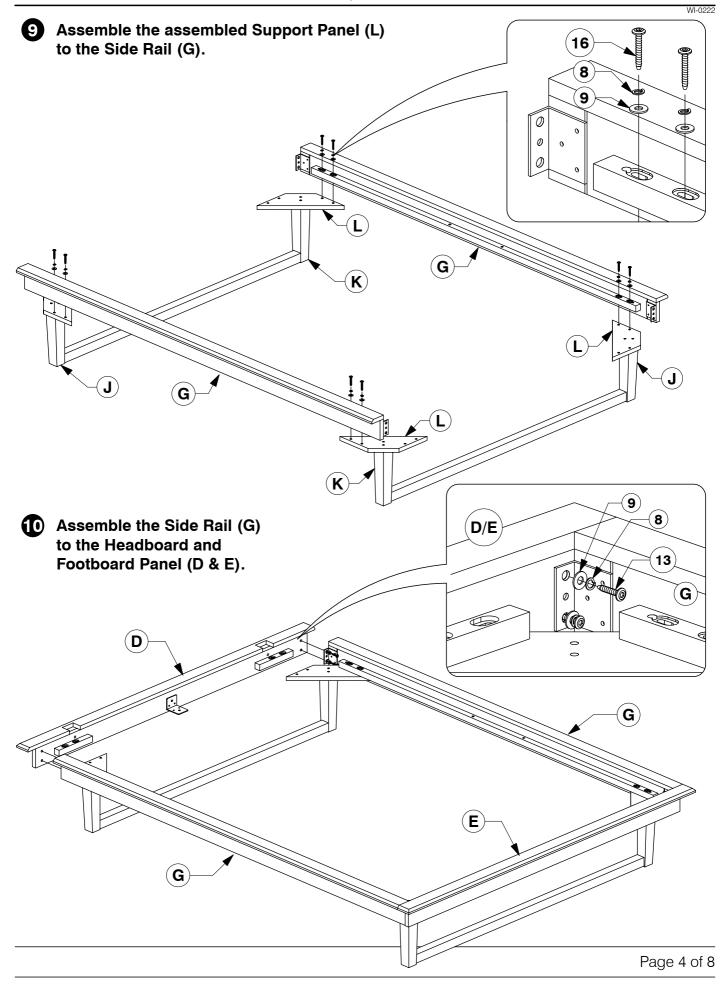


**Assembly Instructions** 

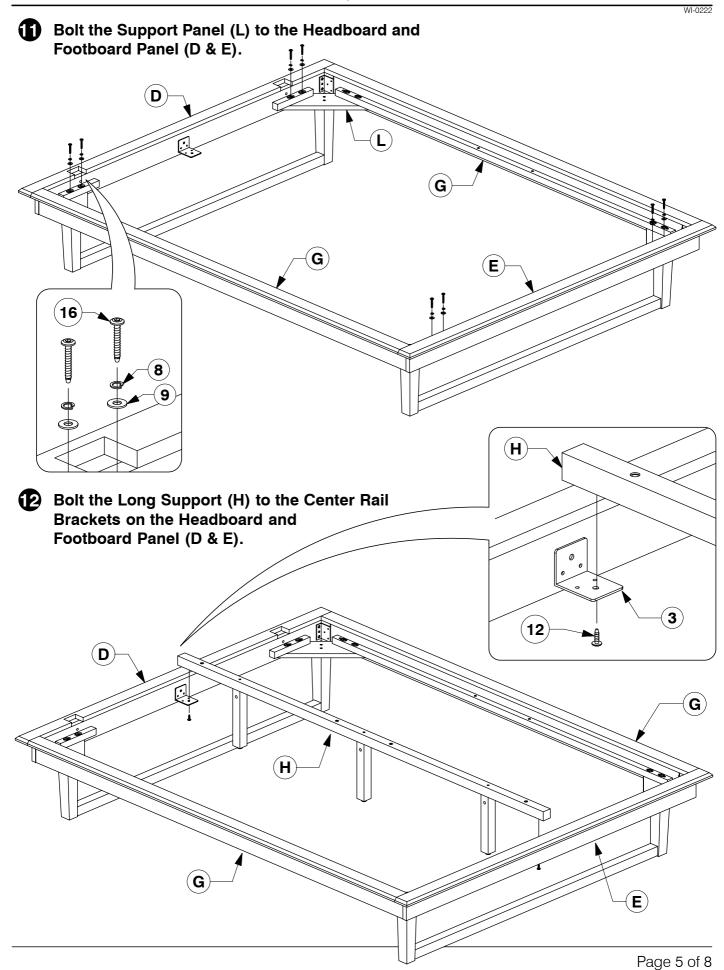


Assembly Instructions

WI-0222

#### Bolt the Bed Slats (N) to the Side Rail (G).

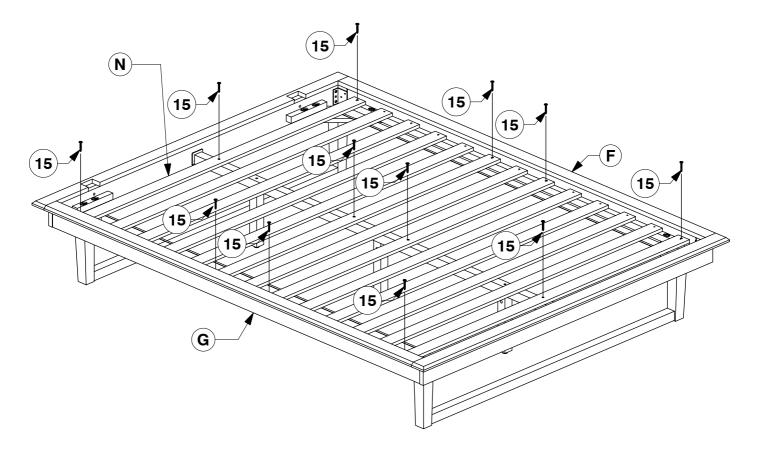


#### Screw the Bed Slats (N) to the Side Rail (G).

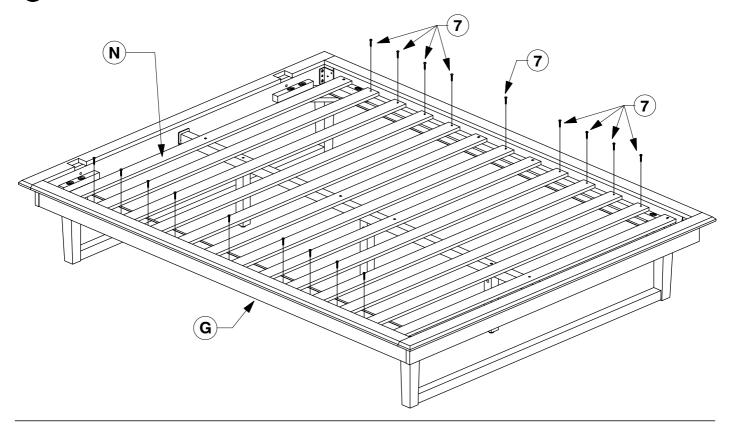

**Assembly Instructions** 

Page 7 of 8



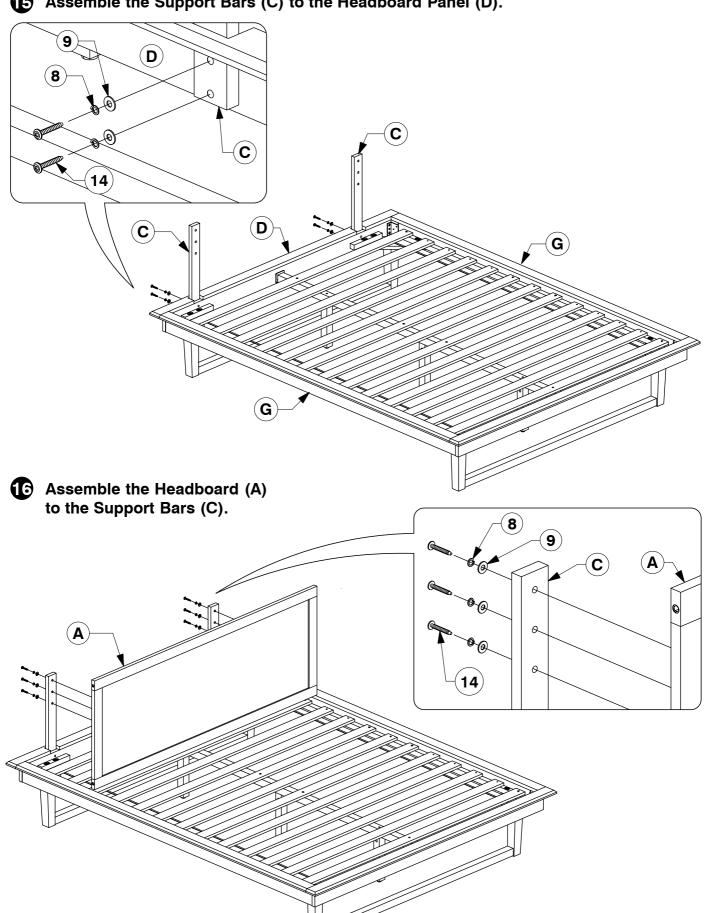

Assembly Instructions

WI-0222

#### Fit the Headboard Side Panel (B) to the Headboard (A) & Side Rail (G).

