



# ASSEMBLY INSTRUCTIONS

## TWIN BED WITH TRUNDLE AND 2 DRAWERS








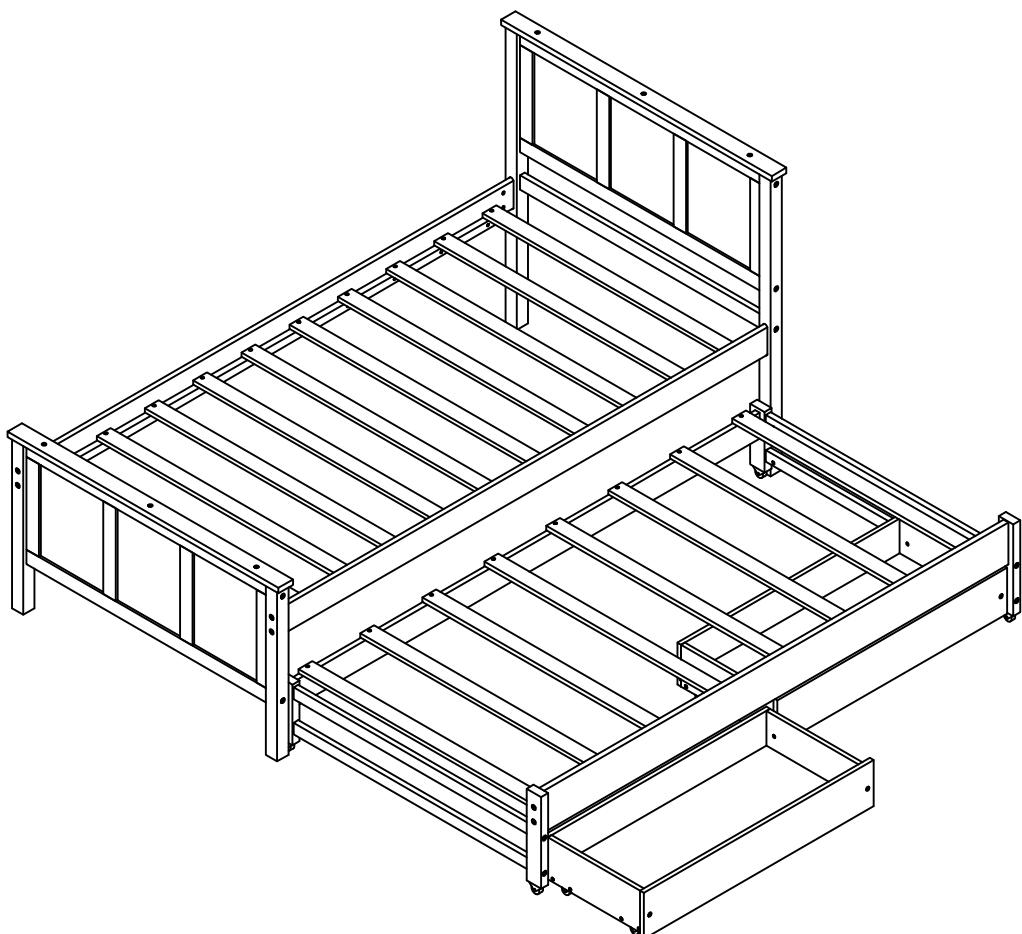


WF298815





## Detail View

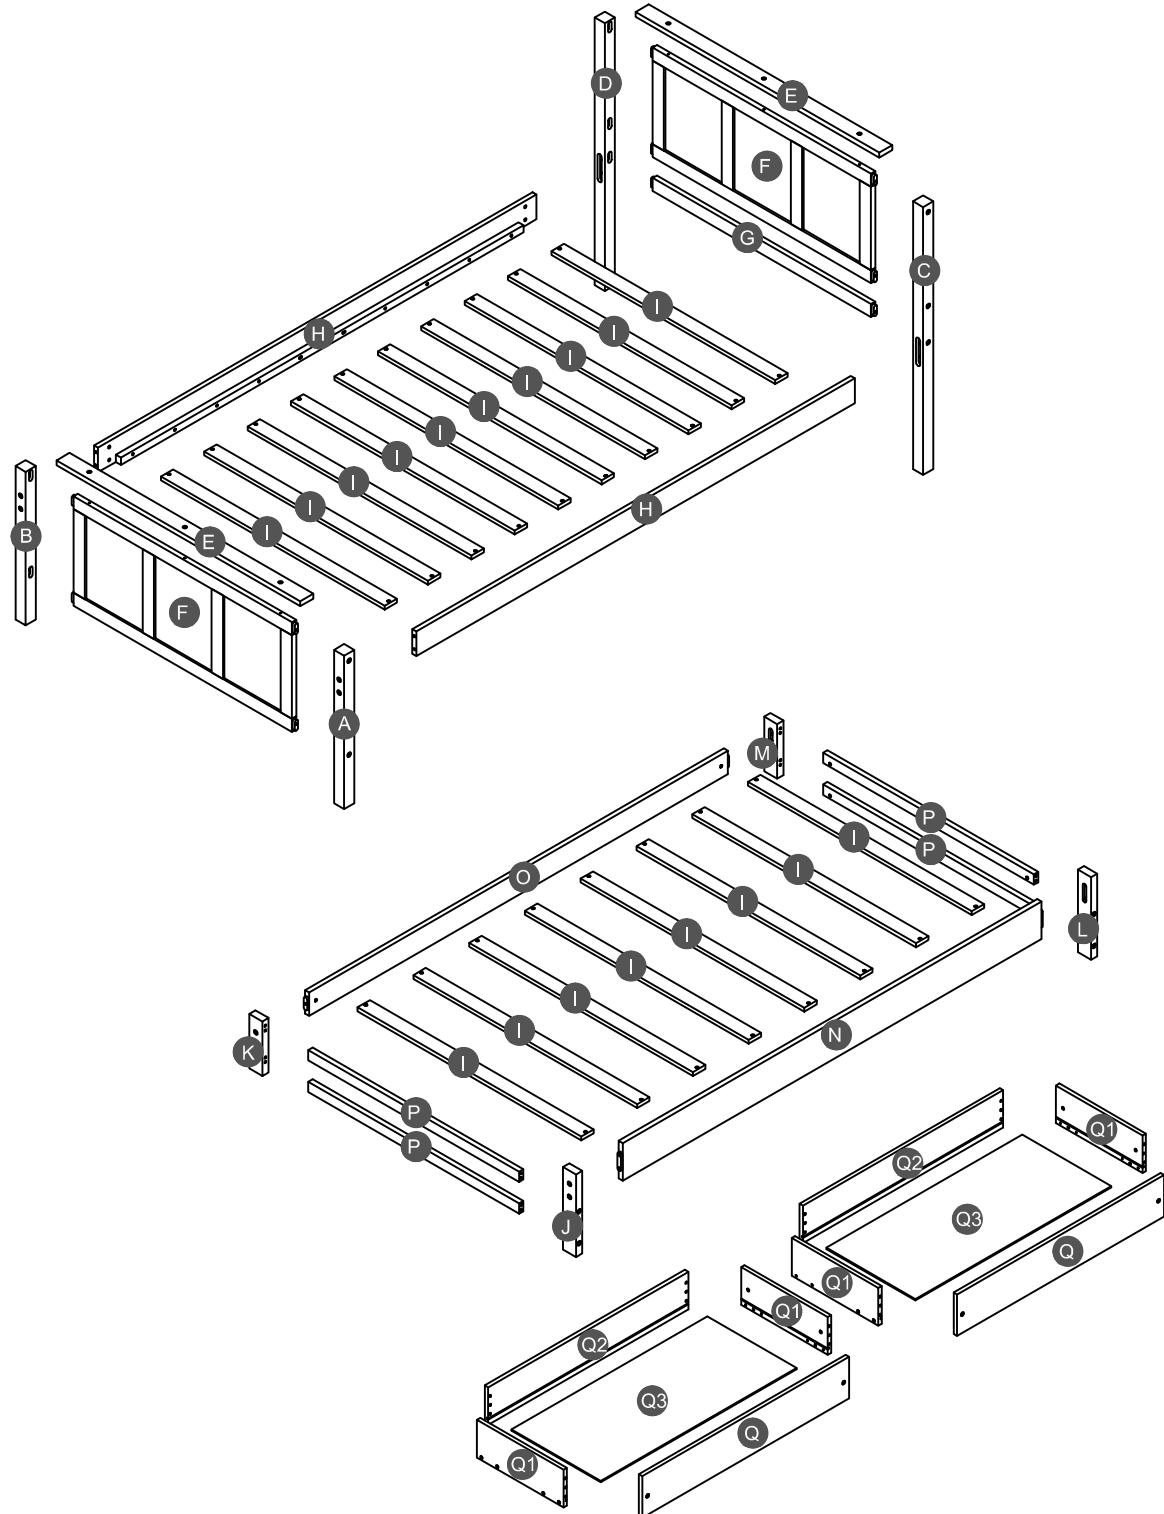


# Part List

<b>A</b>  Leg FB (Left-front) - 1pc	<b>B</b>  Leg FB (Left-back) - 1pc	<b>C</b>  Leg HB (Right-front) - 1pc
<b>D</b>  Leg HB (Right-back) - 1pc	<b>E</b>  Cap for HB & FB - 2pcs	<b>F</b>  Frame HB & FB - 2pcs
<b>G</b>  Horizontal bar HB - 1pc	<b>H</b>  Upper side rail - 2pcs	<b>I</b>  Slat - 18pcs
<b>J</b>  Leg (Left-front) - 1pc	<b>K</b>  Leg (Left-back) - 1pc	<b>L</b>  Leg (Right-front) - 1pc
<b>M</b>  Leg (Right-back) - 1pc	<b>N</b>  Lower side rail (Front) - 1pc	<b>O</b>  Lower side rail (Back) - 1pc
<b>P</b>  Lower horizontal bar - 4pcs	<b>Q</b>  Drawer front - 2pcs	<b>Q1</b>  Drawer (Left / Right) - 4pcs
<b>Q2</b>  Drawer back - 2pcs	<b>Q3</b>  Drawer bottom - 2pcs	

# Hardware List


<b>1</b>  $\varnothing 8*30\text{mm}$ Wood dowel (24pcs)	<b>2</b>  $(\varnothing 15)1/4''*100\text{mm}$ Hex-Head bolts (16pcs)	<b>3</b>  $(\varnothing 15)1/4''*80\text{mm}$ Hex-Head bolts (16pcs)
<b>4</b>  $(\varnothing 12)1/4''*60\text{mm}$ Hex-Head bolts (8pcs)	<b>5</b>  $(\varnothing 12)1/4''*40\text{mm}$ Wood screws (6pcs)	<b>6</b>  $45*20*35\text{ mm}$ Wheels (4pcs)
<b>7</b>  $(1/4'')4.5*58\text{mm}$ Allen key (1pc)	<b>8</b>  $1/4''*15\text{ (9.5mm)}$ Horizontal-Hole bolts(40pcs)	<b>9</b>  $\varnothing 4*30\text{mm}$ Wood screws (58pcs)
<b>10</b>  $100*54*20\text{ mm}$ Wheels (8pcs)	<b>11</b>  $\varnothing 3.5*19\text{mm}$ Wood screws (8pcs)	<b>12</b>  $70*19*19\text{ mm}$ Drawer stopper (3pcs)
<b>13</b>  $\varnothing 10*20\text{mm}$ Wood dowel (8pcs)		

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


## STEP 1:

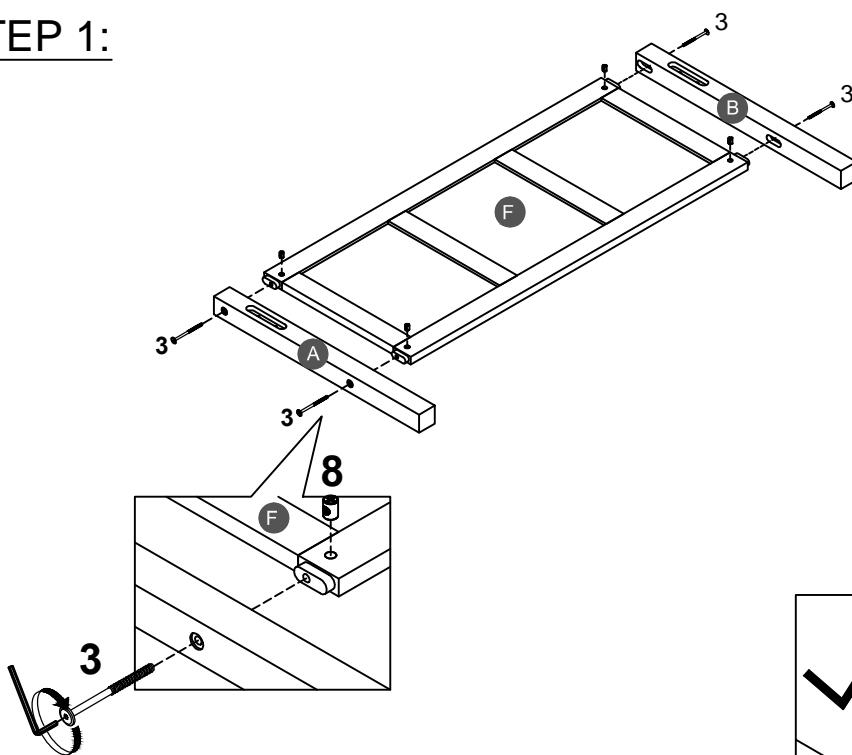

3		8	
4PCS		4PCS	


Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

## STEP 2:

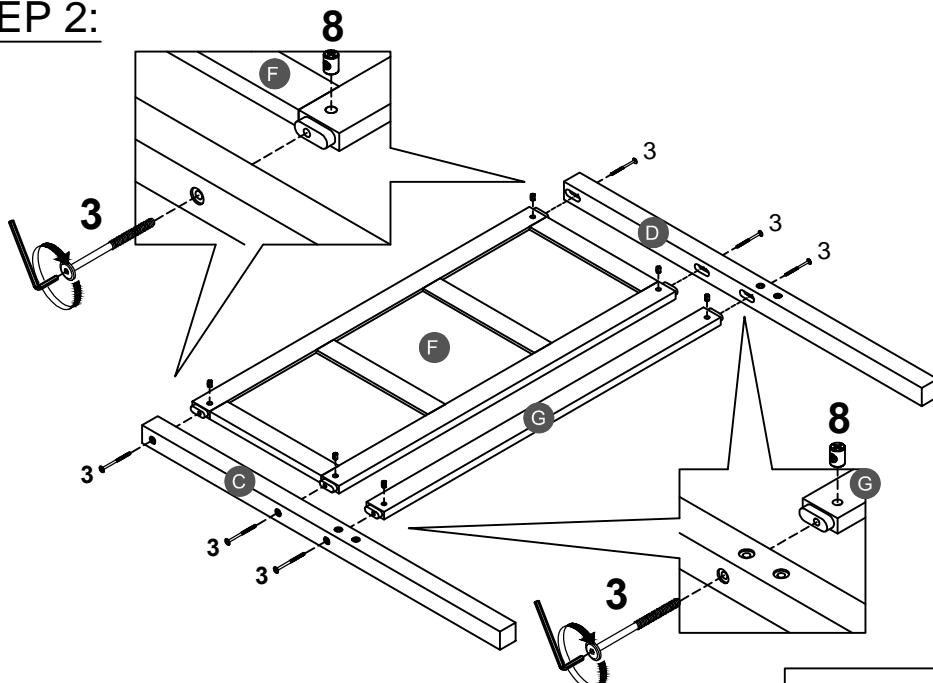


3		8	
6PCS		6PCS	


Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

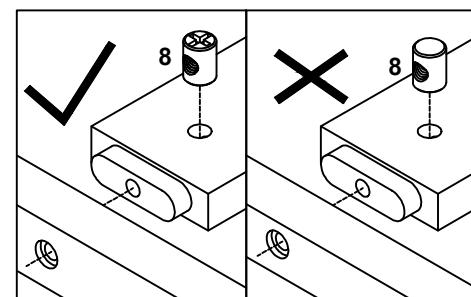


STEP 3:

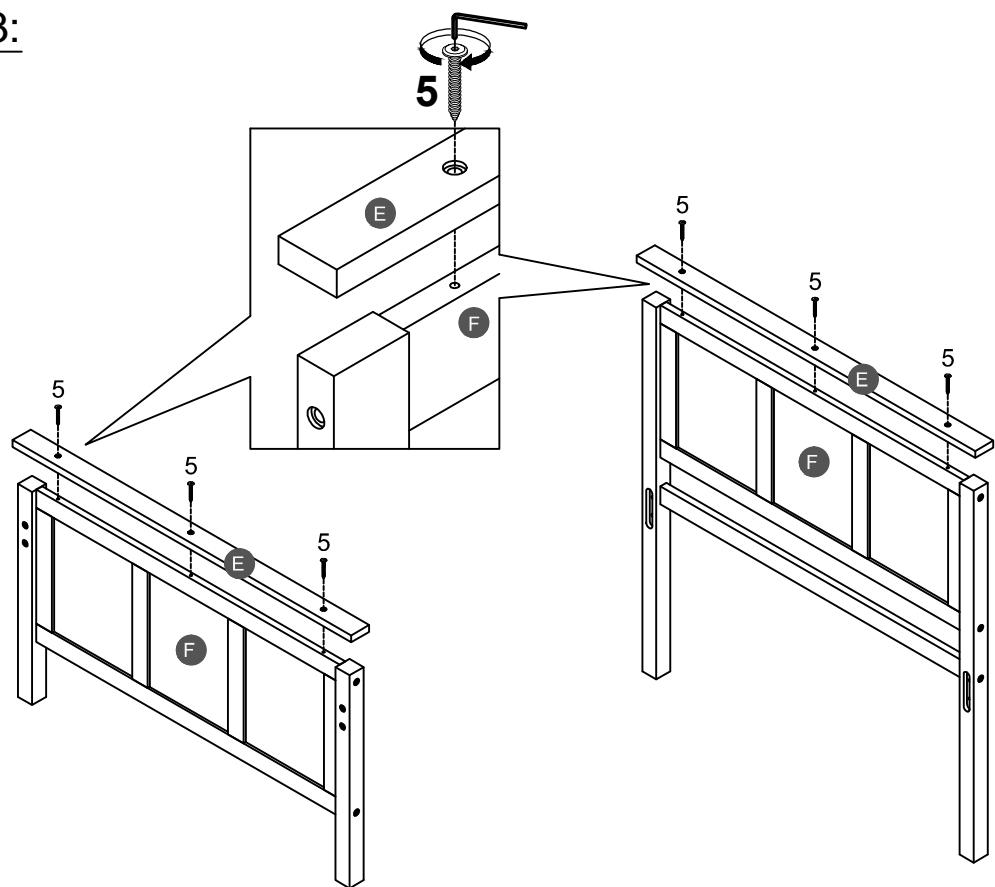

STEP 4:

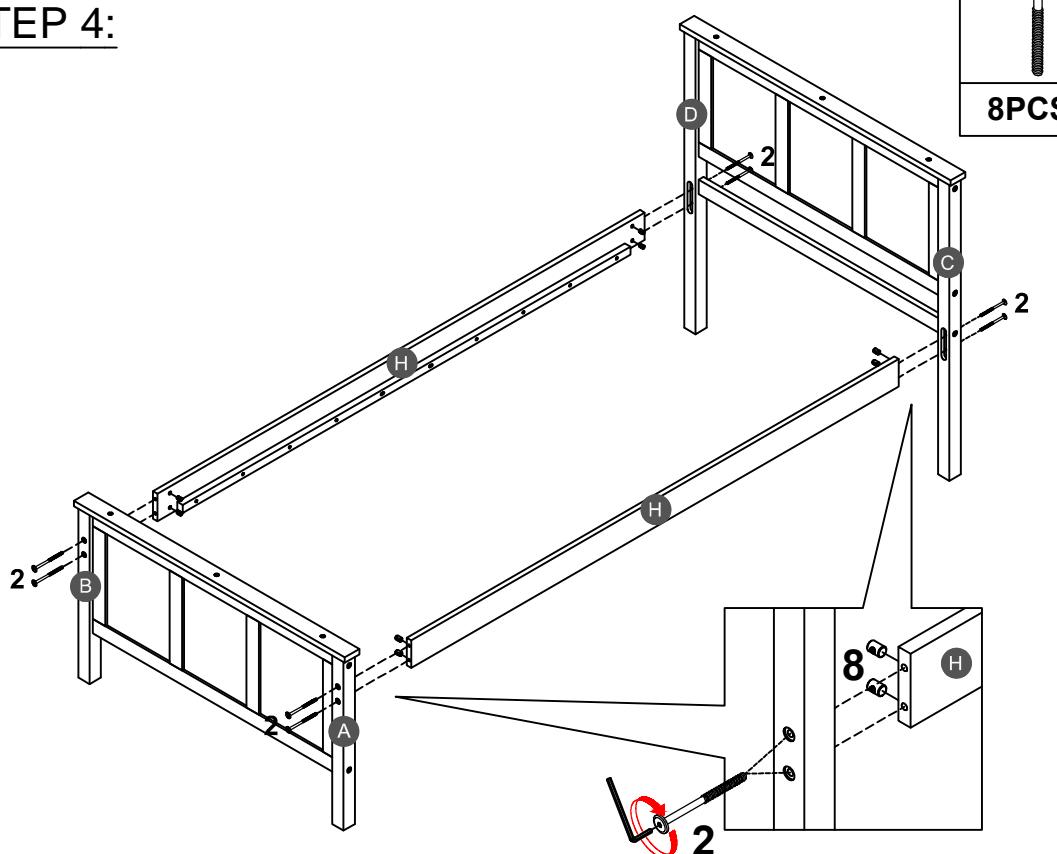


## STEP 5:

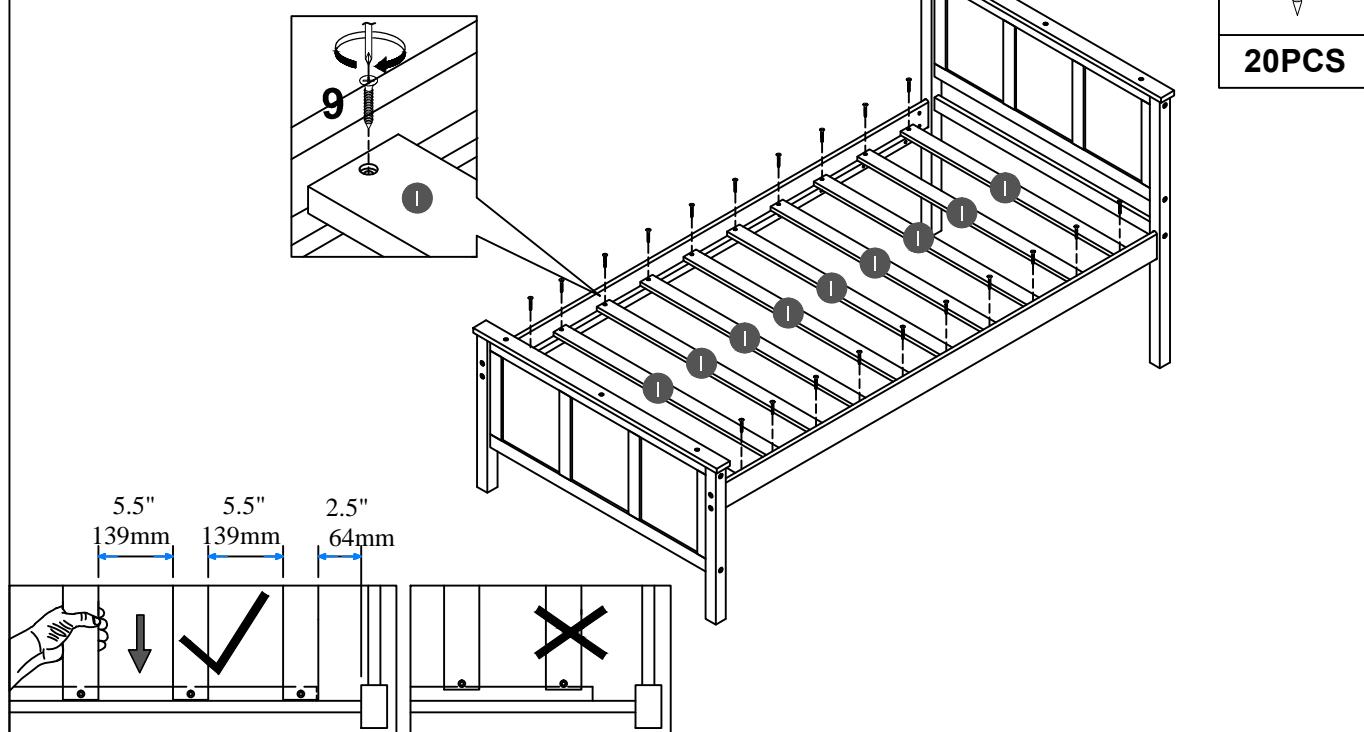



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


## STEP 6:

6		11
4PCS		8PCS

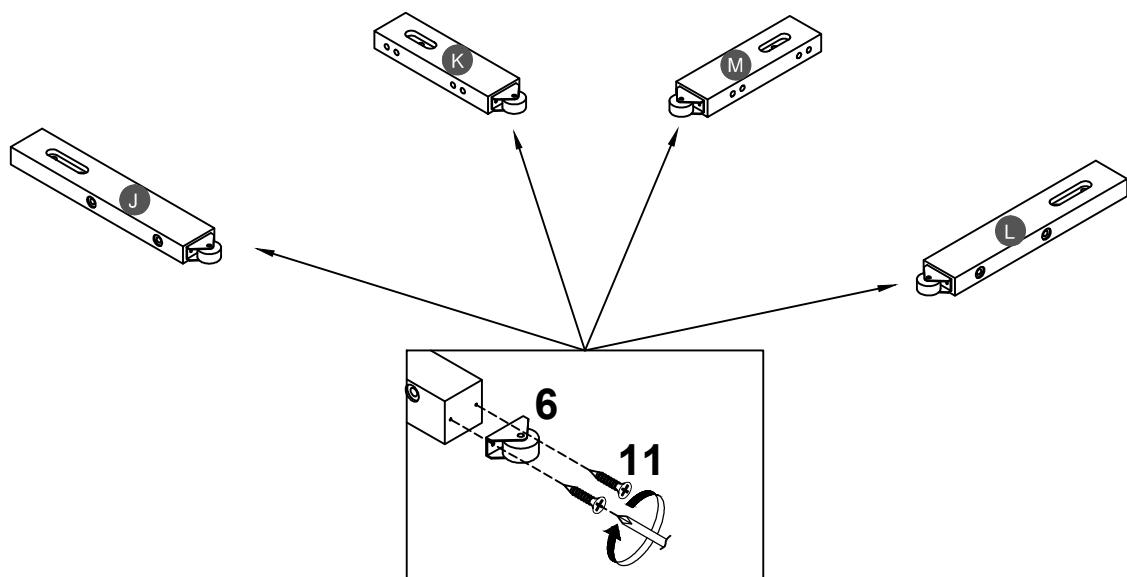



## STEP 7:

<b>1</b> 	<b>2</b> 	<b>8</b> 
<b>8PCS</b>	<b>8PCS</b>	<b>8PCS</b>

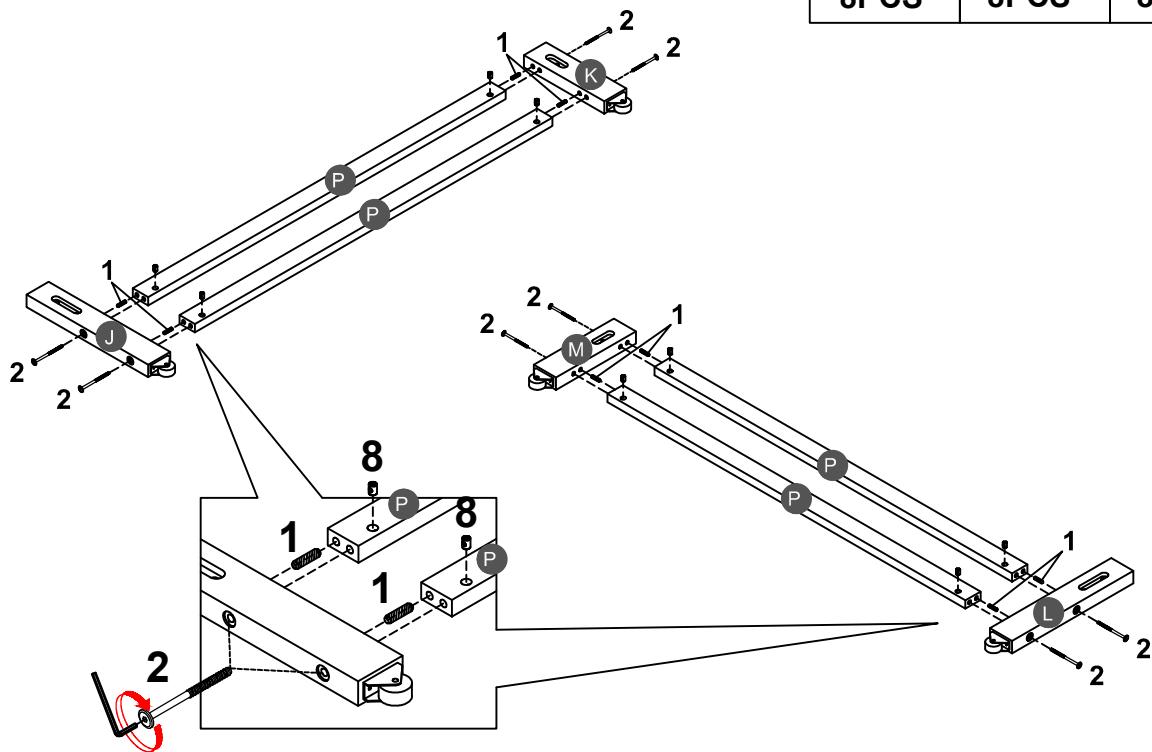

## STEP 8:


<b>9</b> 	<b>12</b> 
<b>6PCS</b>	<b>3PCS</b>

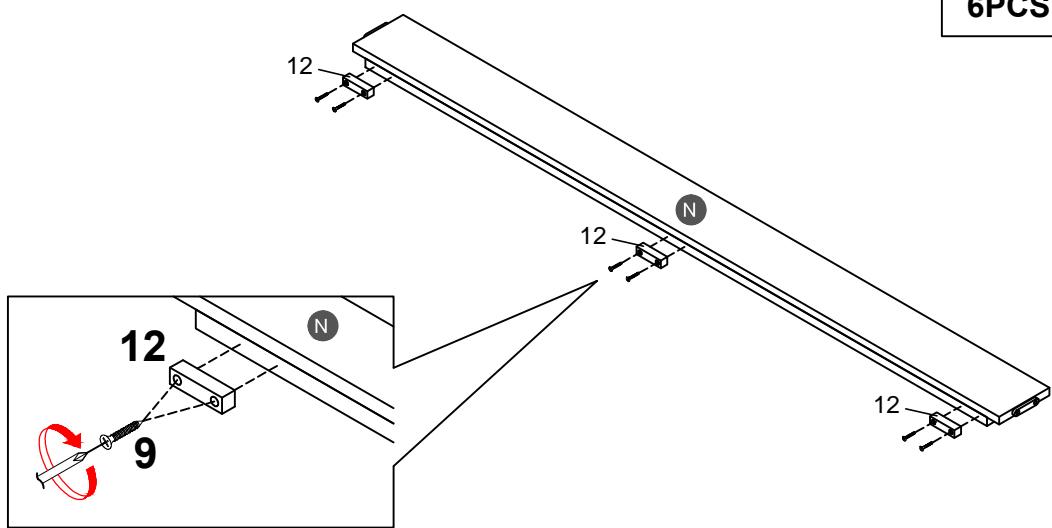

Drawer stopper (12) with lower side rail front (N) by using screw (9).


## STEP 9:

3	8
6PCS	6PCS

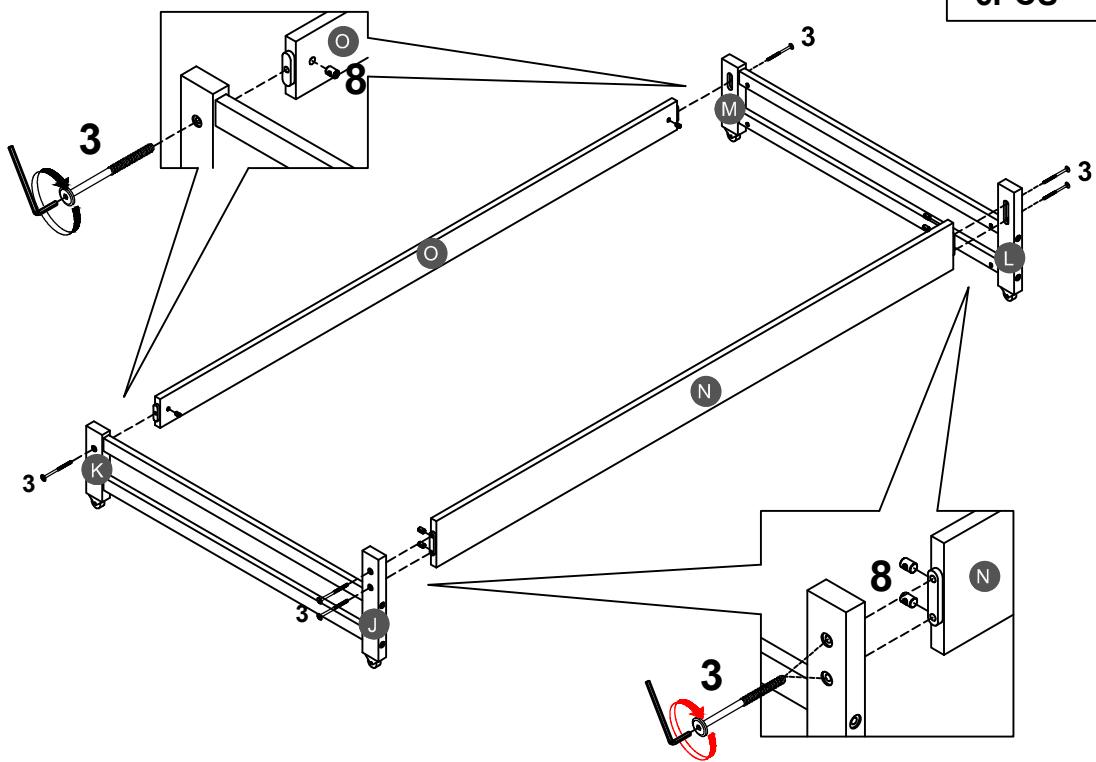


## STEP 10:

9
16PCS

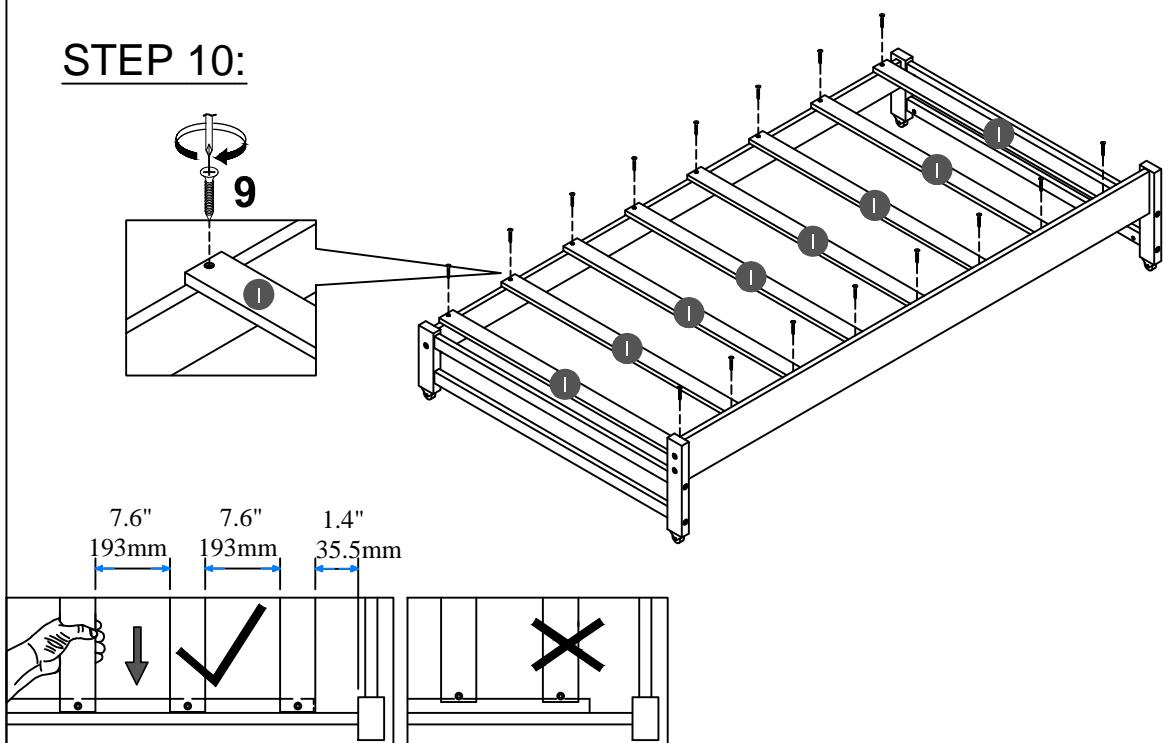


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.  
 Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 11:

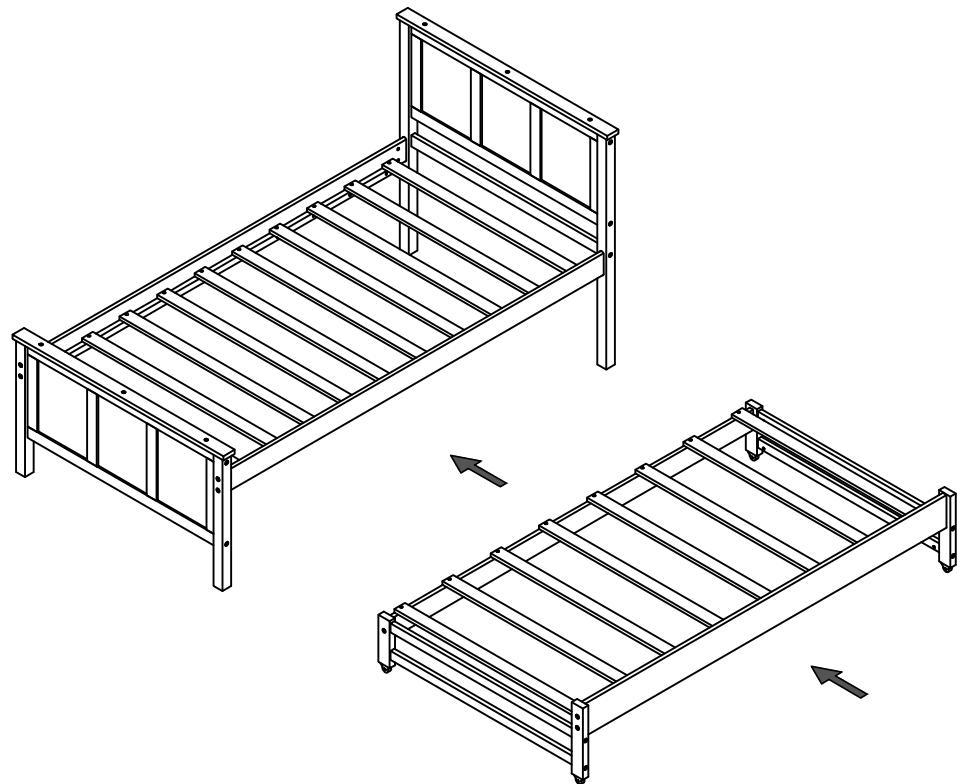

STEP 12:


1	4	8
8PCS	4PCS	4PCS

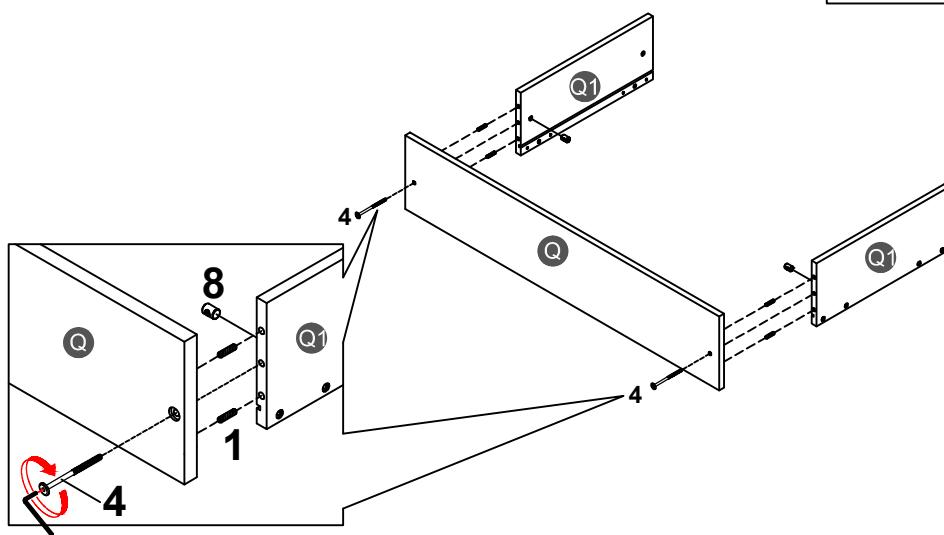

x 2


STEP 13:

1	4	8
8PCS	4PCS	4PCS

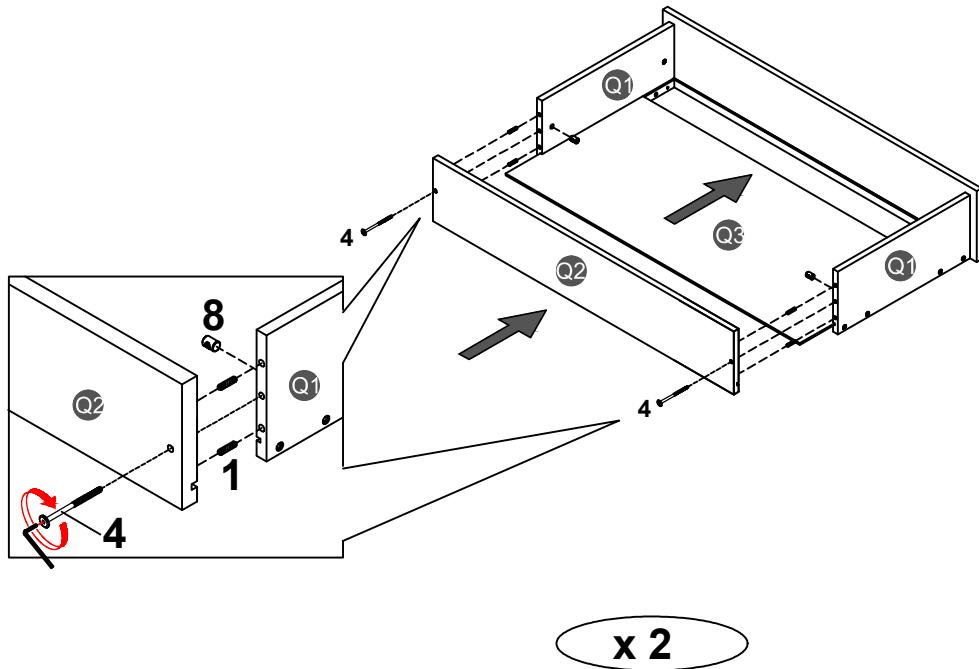


STEP 14:

13	9	10
8PCS	16PCS	8PCS

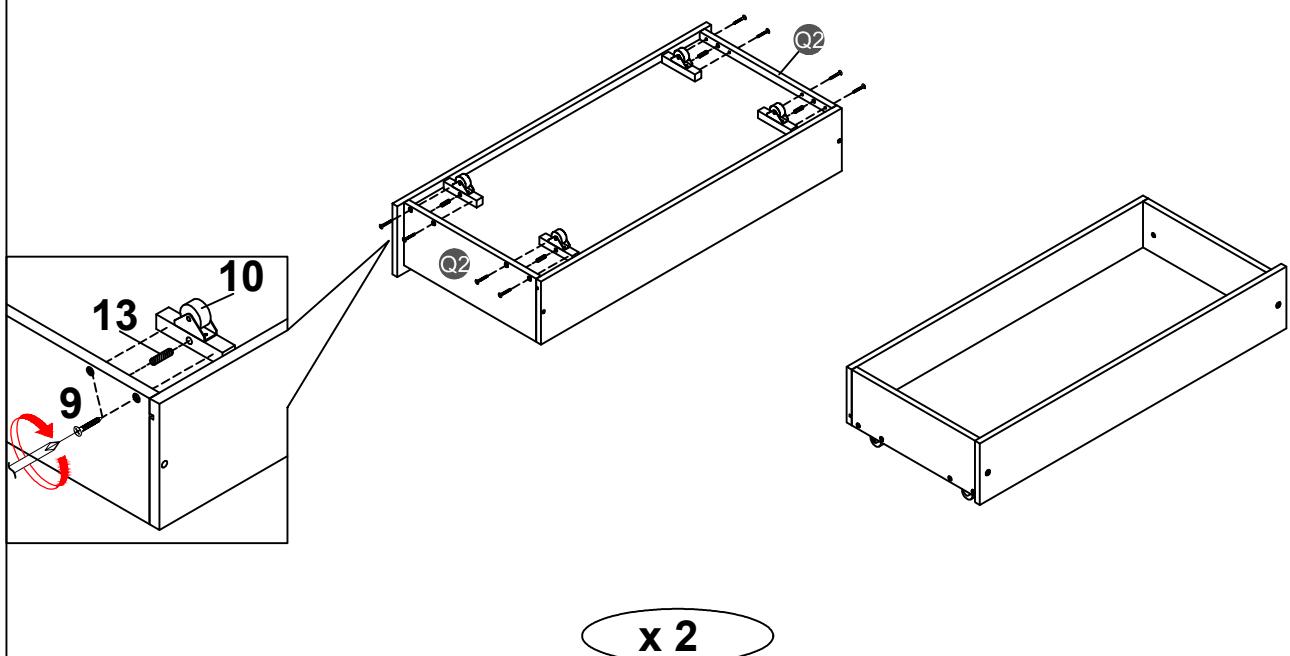

## STEP 15:

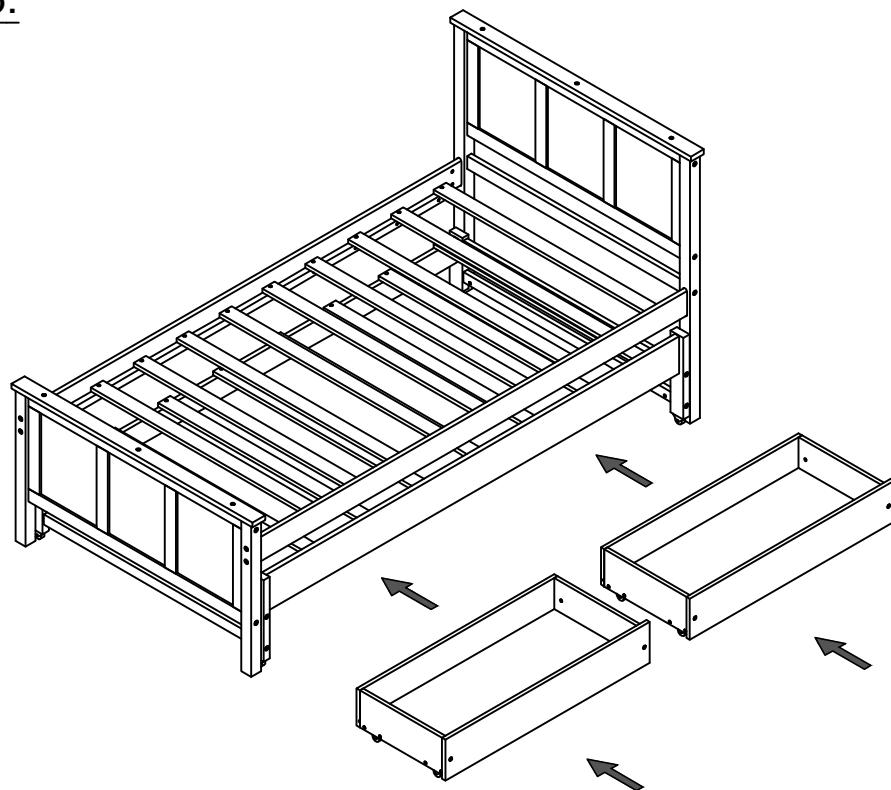

Push Drawer under the bottom of Twin Bed.

