
ASSEMBLY INSTRUCTIONS

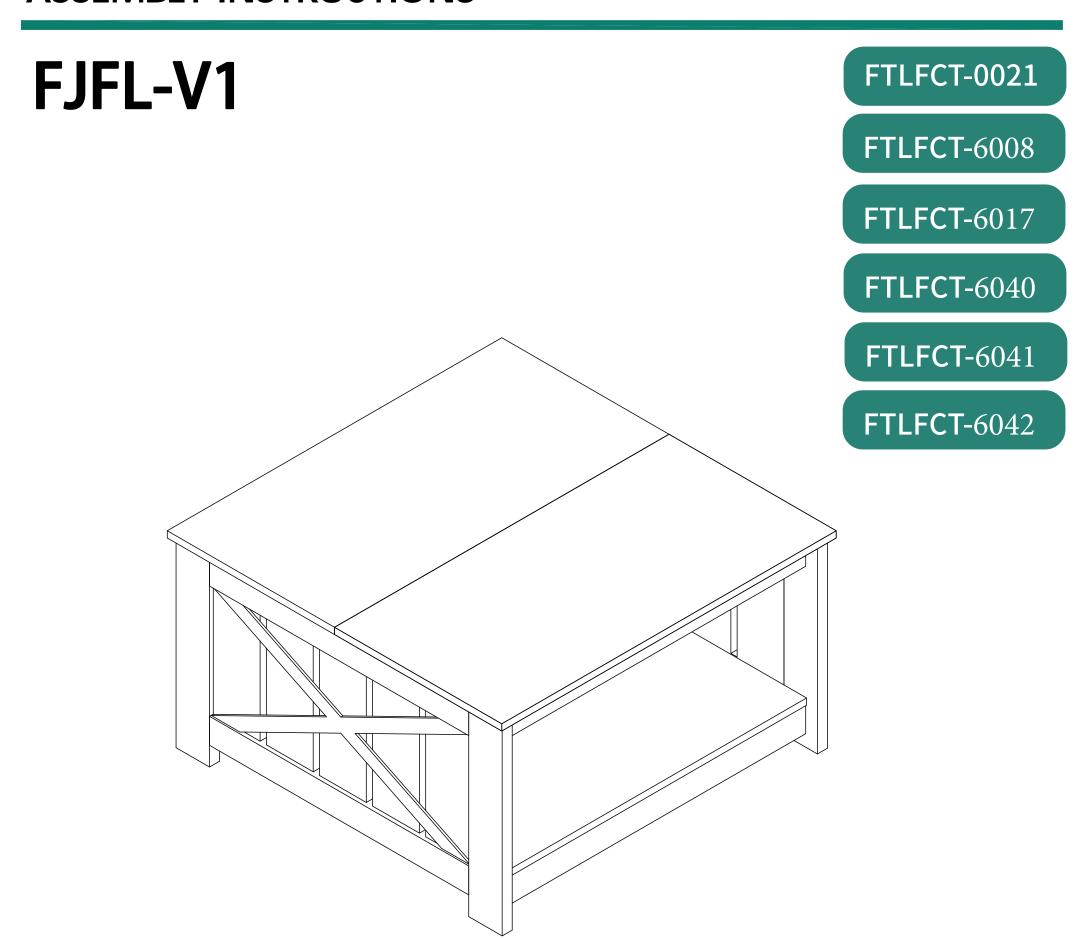

Notice:

- 1. Please unbox the item from the side with an open label and put a carpet on the floor to avoid scratching it.
- 2. Follow the installation instructions carefully. Before installation, please ensure that all accessories are present. For large items, we advise you to install them with 2 or more people for faster and safe installatin.
- 3. Do not fully tighten the screws during initial assembly. Fully tighten the screws only once all pieces are correctly assembled. Do not assemble with high-powered power tools.
- 4. Do not stand, climb, or swing on the product.
- 5. If you encounter any problems during installation, please contact our customer service.


ASSEMBLY INSTRUCTIONS


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A	M6×40	X46	E		X2
B		X46	F		X2
C		X 8			
	M4×14				
D	Ø8×40	X2			X1

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.			
1		X2	3		X2			
			4		X4			
2		X2	5	88	X1			
Explosion Diagram								
	4		1					
		2 2		4	}			


3

ASSEMBLY INSTRUCTIONS








Tighten (A) clockwise until all of their threads are engaged.

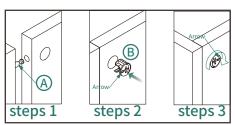



The two boards fit vertically, place (B) and match their holes with (A) then tighten (B) clockwise.

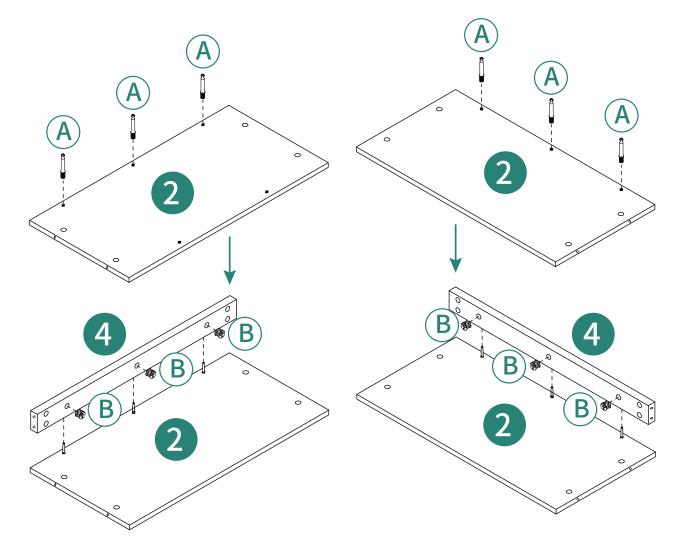


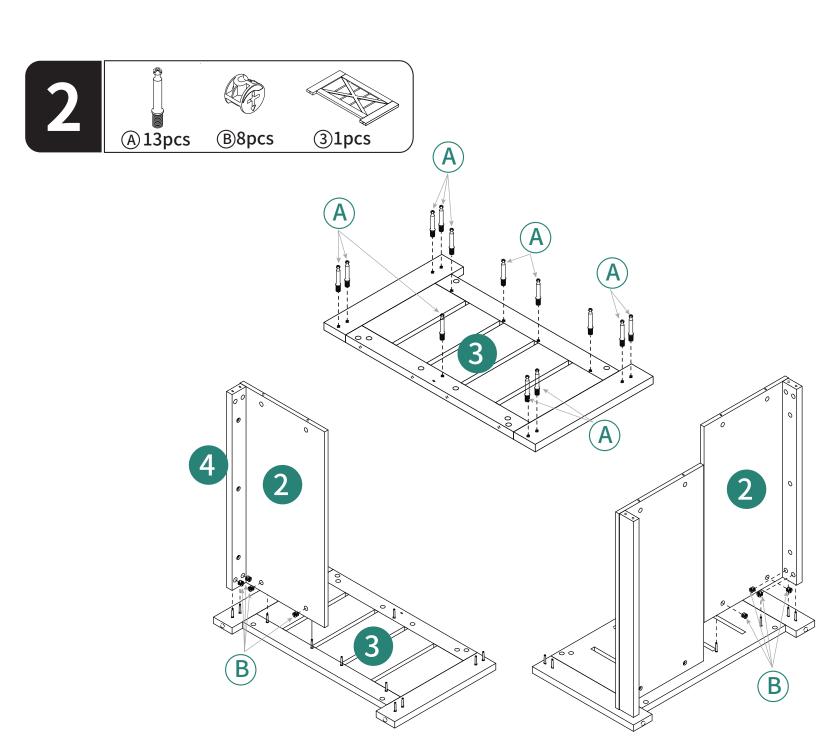


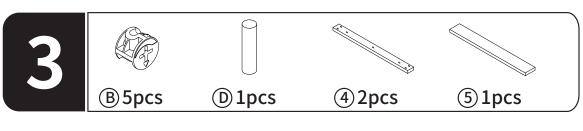


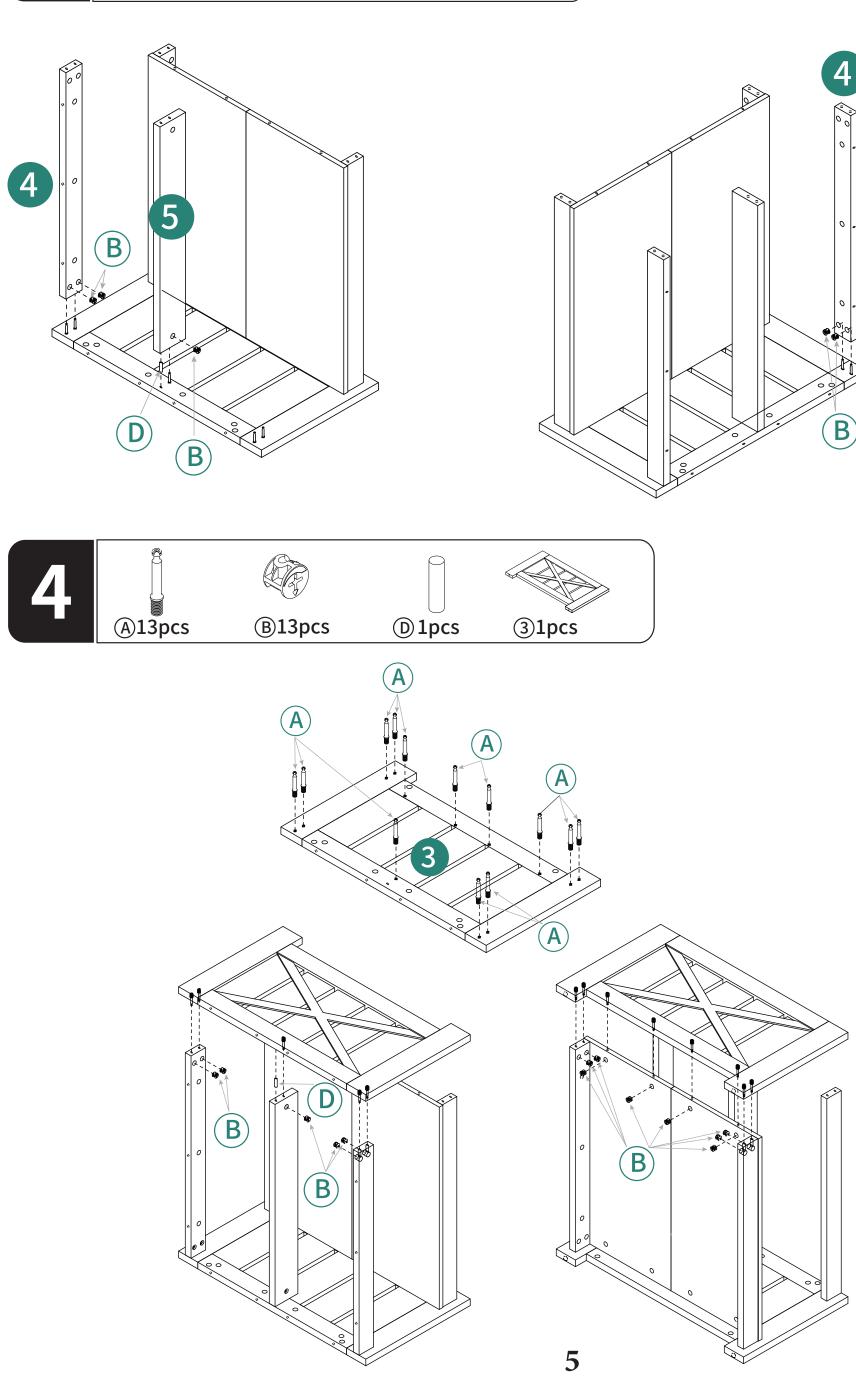





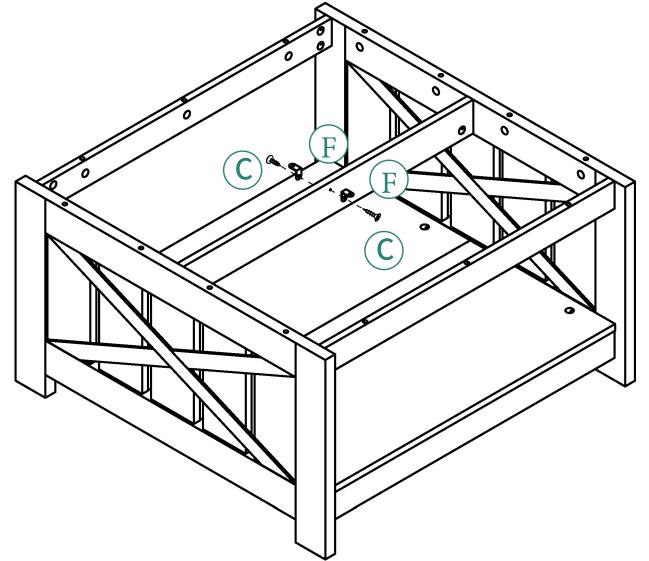


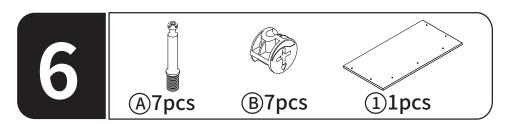


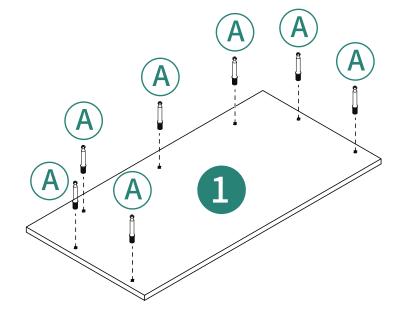


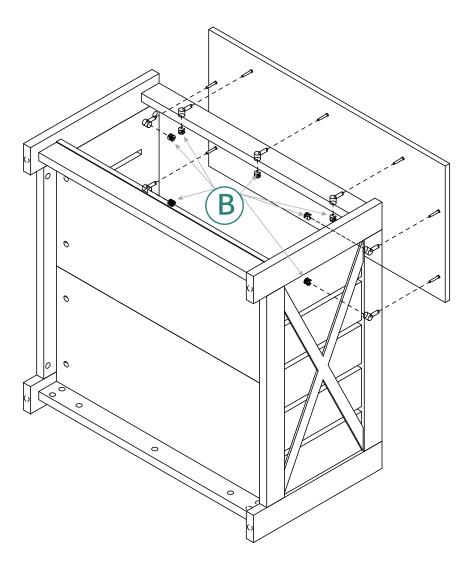


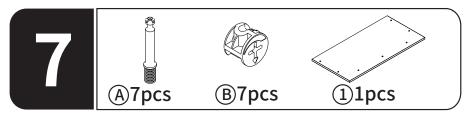

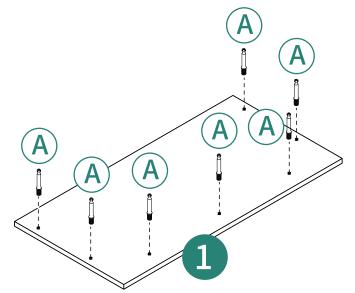


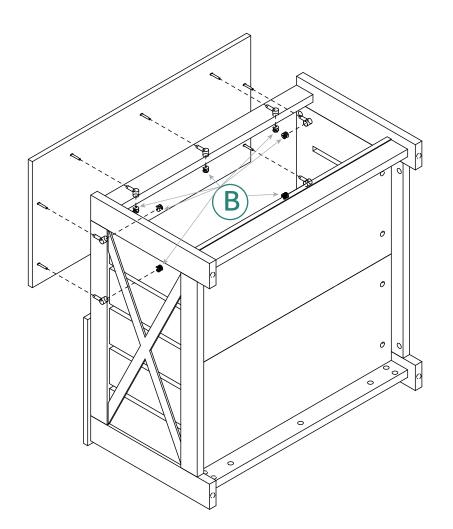


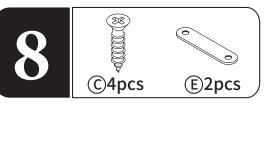

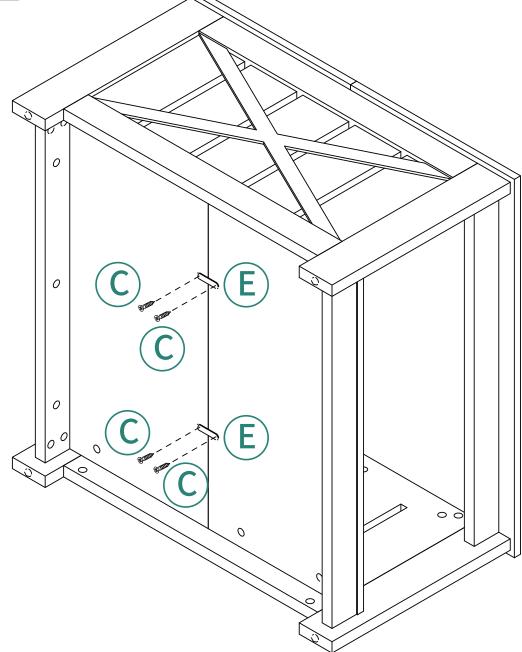


9



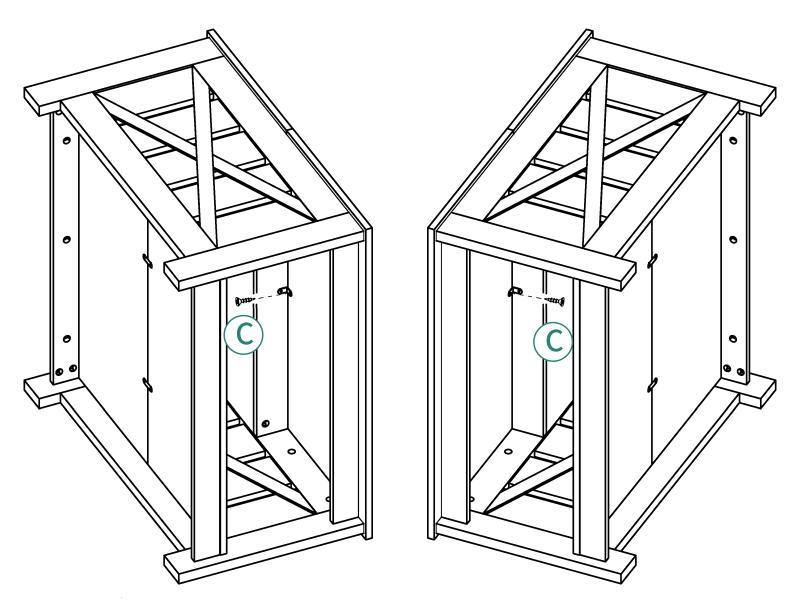

10

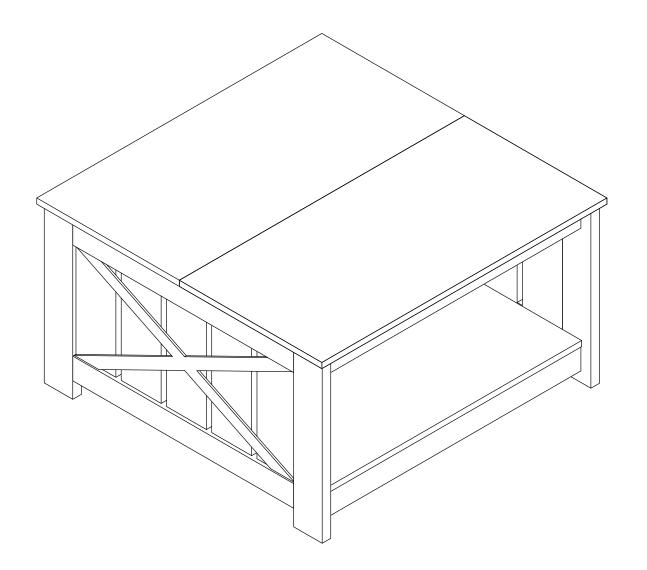

Installation Completed