







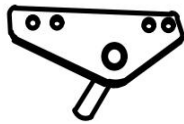



CROSLEY

FURNITURE

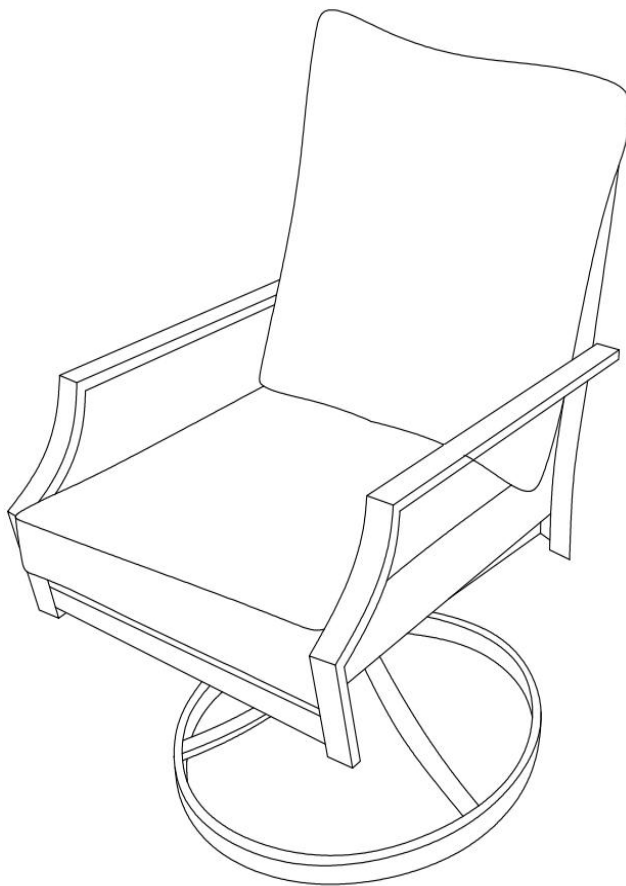

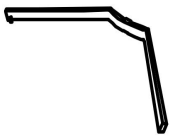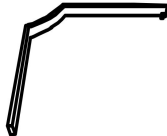






Outdoor Metal Dining Swivel Chair CO6290



PART LIST


A		B		C		D		E		
Right Arm 2 PCS		Left Arm 2 PCS		Back Panel 2 PCS		Seat Panel 2 PCS		Chair Base 2 PCS		
F		G		H		I				
T Rocker 2 PCS		Steel Plate 4 PCS		Back Cushion 2 PCS		Seat Cushion 2 PCS				

HARDWARE LIST

#1		#2		#3		#4		#5	
M6*20mm		M6*40mm		M6mm		M8*45mm		M8mm	
Bolt 16 PCS (Extra 1)		Long Bolt 4 PCS (Extra 1)		Flat Washer 20 PCS (Extra 1)		Hex Head Bolt 8 PCS (Extra 1)		Large Flat Washer 8 PCS (Extra 1)	
#6		#7		#8		#9			
M8mm		M8mm		M6mm		M8mm			
Spring Washer 8 PCS (Extra 1)		Nut 8 PCS (Extra 1)		Allen Wrench 1 PC		Wrench 2 PCS			


Step 1. Lay right arm (part A) down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part D) to right arm (part A) using bolts (part #1), flat washers (part #3) and allen wrench (part #8).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

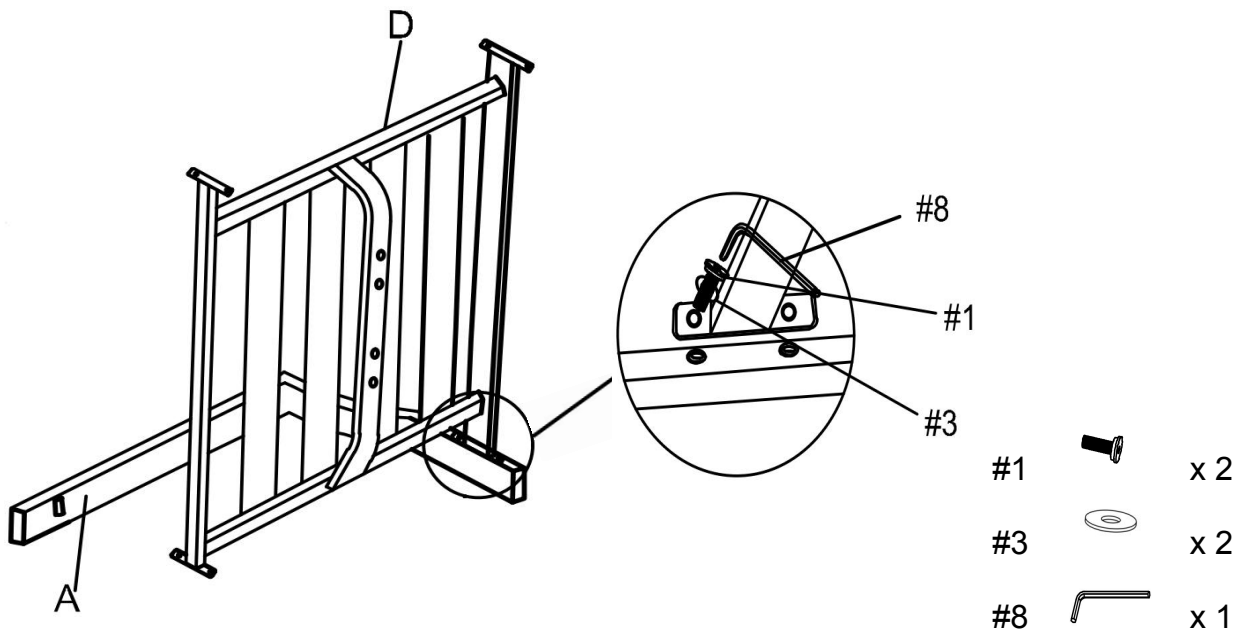


Step 2. Attach left arm (part B) to seat panel (part D) using bolts (part #1), flat washers (part #3) and allen wrench (part #8).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

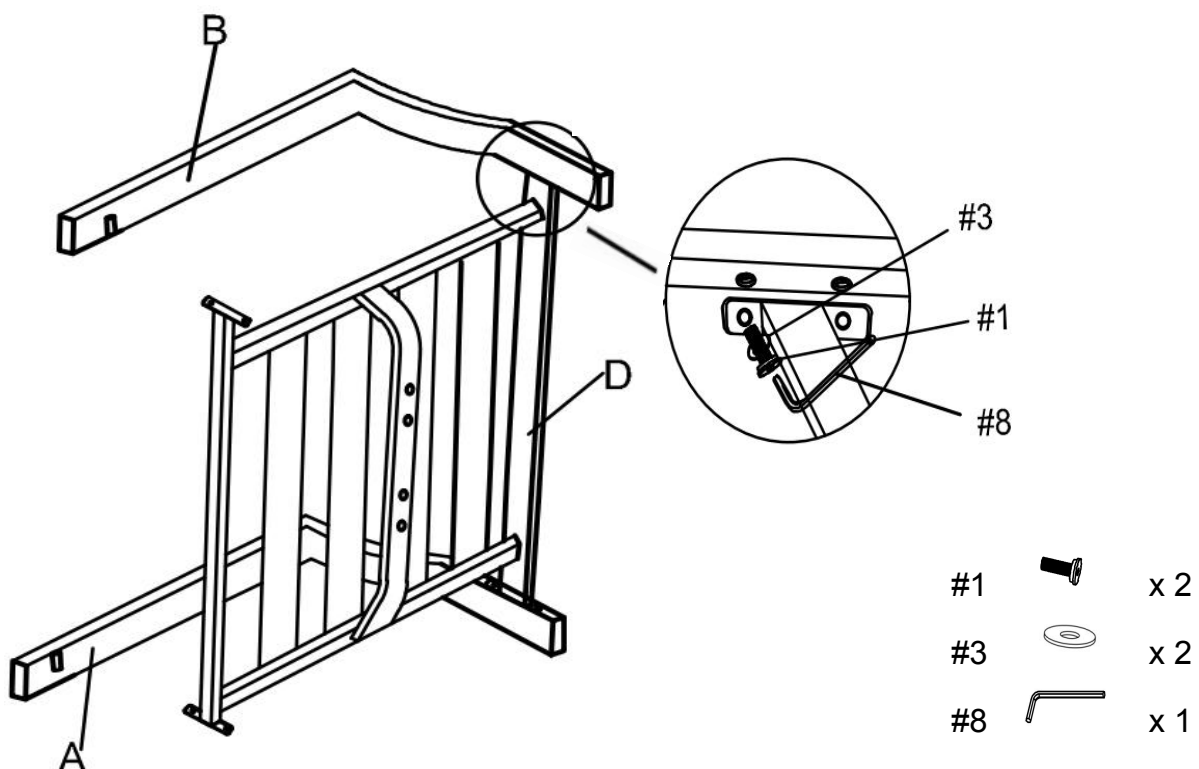


Step 3. Attach back panel (part C) to assembled unit (parts A, B & D) using bolts (part #1), long bolts (part #2), flat washers (part #3) and allen wrench (part #8).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

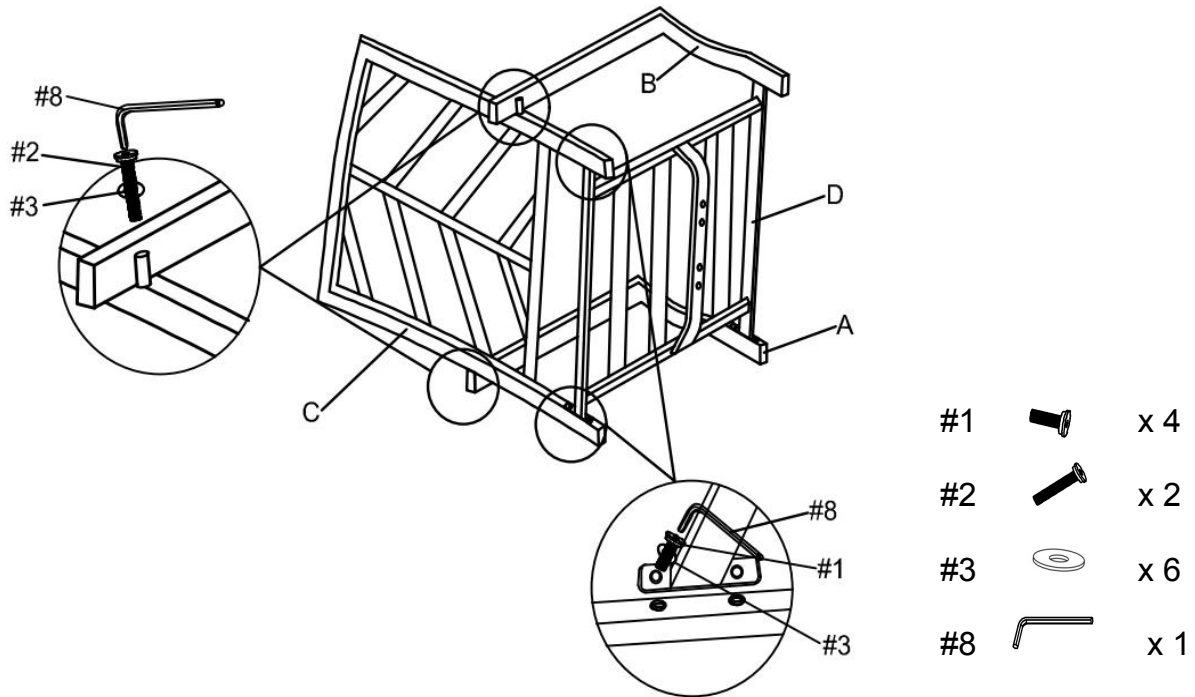


Step 4. Attach T rocker (part F) and steel plates (part G) to seat panel (part D) using hex head bolts (part #4), large flat washers (part #5), spring washers (part #6), nuts (part #7) and wrenches (part #9).

NOTE: Please fully tighten all bolts at this time.

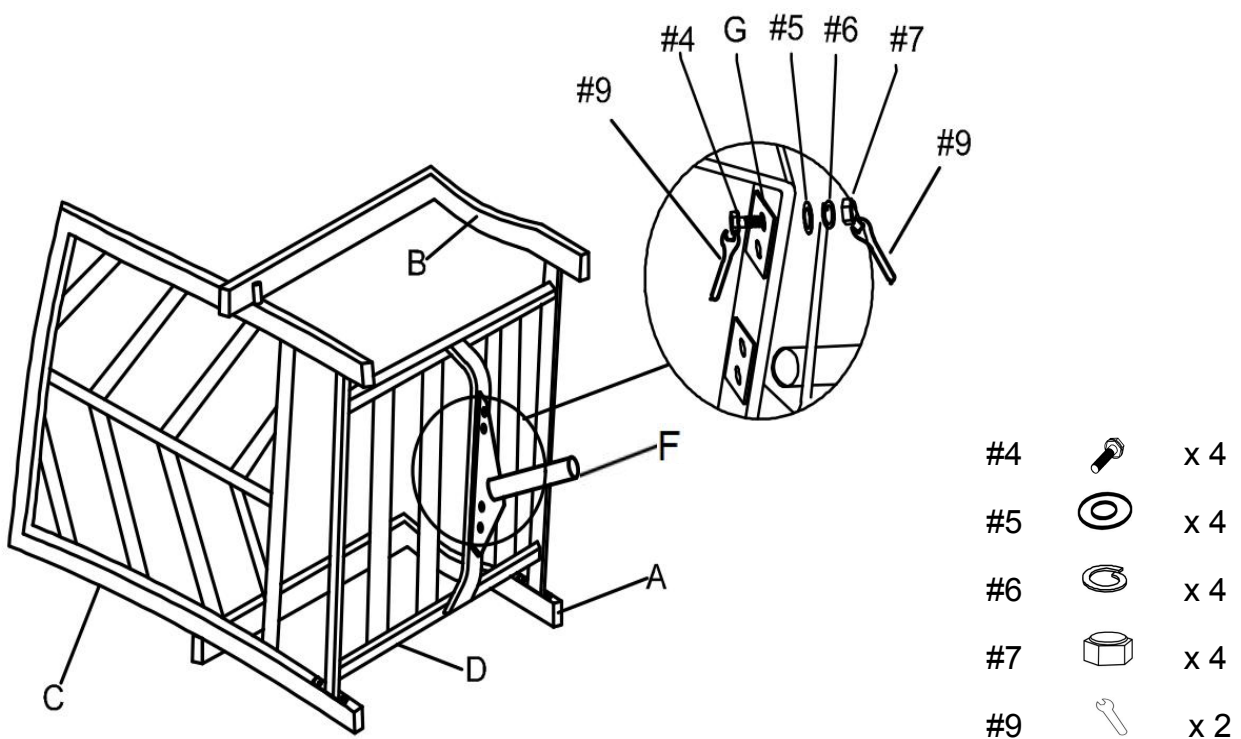

Step 5. Attach T rocker (part F) to chair base (part E) as shown below.

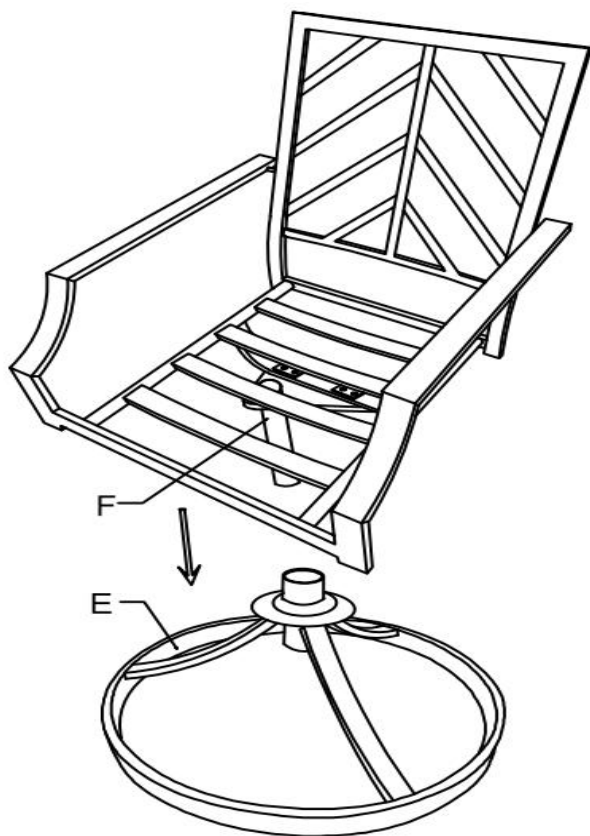

Step 6. Place seat cushion (part I) and back cushion (part H) as shown below.
Repeat steps 1-6 to assemble remaining chair.

