
## MYMGS-V1

## FTLFTS-8020

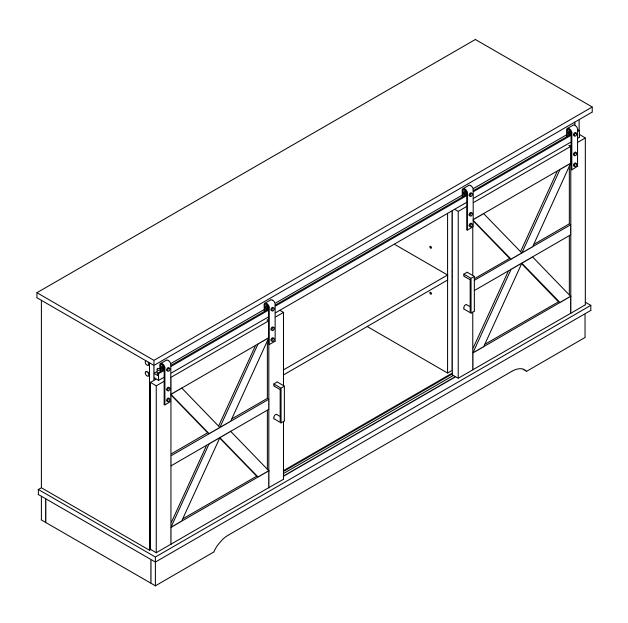

#### Notice:

- 1. Follow the installation instructions. Please confirm all accessories are present before installation.
- 2. Do not fully tighten the screws during initial assembly. Full tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, you have two solutions: Follow the installation video tutorial on the Amazon product page or contact our customer service.

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		x34	D	M7x48	x12
B		x34	E	(g)))))))) M3.5x14	x32
C	Ø6x30	x24	F		x4


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
G		x6	M		x4
H	✓ (((())) M3x14	x8	N	M4x20	x4
	M6x25	x4	0		x2
J	M6x12	x8	P		x4
K		x10	Q	<b>M</b> 3x20	x10
L		x4	-		-

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1	Top Panel  1502x400x15mm	×1	5	Bottom Rail Front  1475x80x15mm	×1
2	Bottom Panel  1497x400x15mm	×1	6	Bottom Rail Rear  1475x80x15mm	×1
3	Back Panel  0 1452.5x288.5x2.5mm	×2	7	Aluminium Strip 1440mm	×1
4	Top Rail Front  1445x70x15mm	×1	8	Shelf Big  600x320x15mm	×1


Item no.	Reference Image	Qty.	Item no.	Refer
9	Bottom Rail Side	×2	13	Center F
	355x80x15mm			Center F
	Bottom Rail Center		14	8
10		×2		570
	<b>*</b>			Right Pa
	355x80x15mm		15	
	Shelf Small			
	0			5
•		×2		Door Le
	406x320x15mm		16	
	Left Panel			50
13		<b>~</b> 1		Door R
12	•	×1	1	
	570x370x15mm			50

Item no.	Reference Image	Qty.
13	Center Panel Left  570x337x15mm	×1
14	Center Panel Right  570x337x15mm	×1
15	Right Panel 570x370x15mm	×1
16	Door Left  500x437x15mm	×1
	Door Right  500x437x15mm	×1


## **Exploded Diagram**

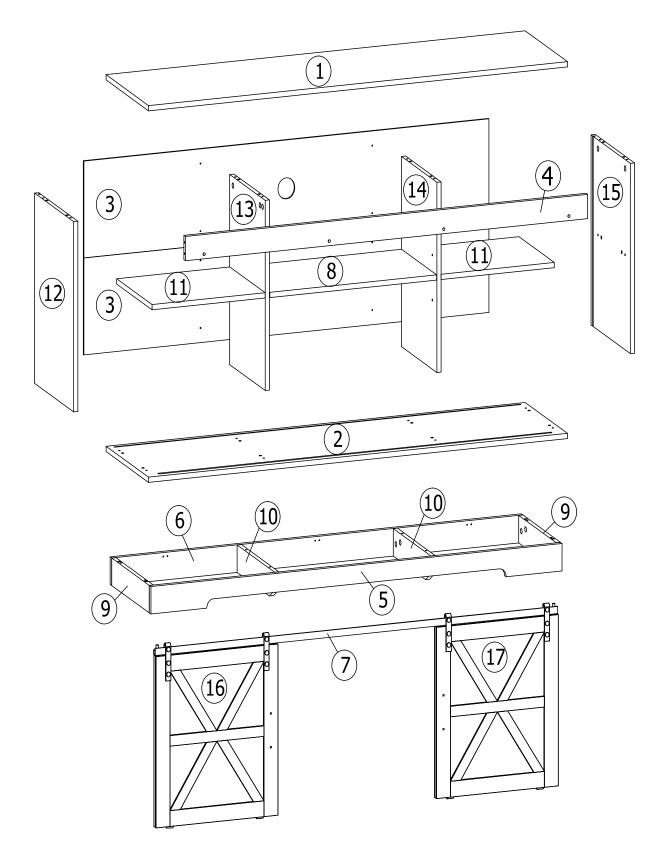


### How to use the camlock system

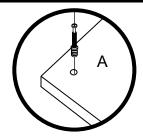


1. Screw cam bolt into panel

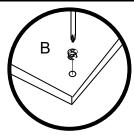


2. Push cam into panel - arrow feature on cam top pints to panel edge

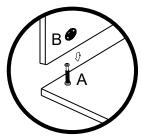

 Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

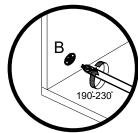


4. Rotate cam(s) clockwise 190-230 to lock panels together

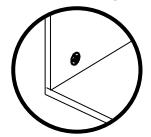


Panels should be tight against each other and connection should be rigid


Insert the wood dowel (C) at least hal way by tapping lightly with a rubber mallet, IF NECESSARY.

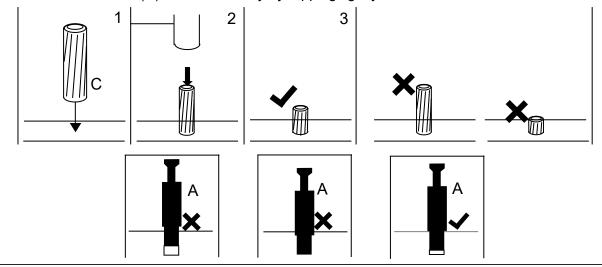



#### **A** WARNING


- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

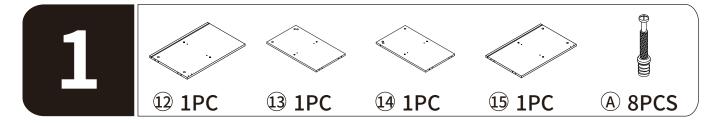


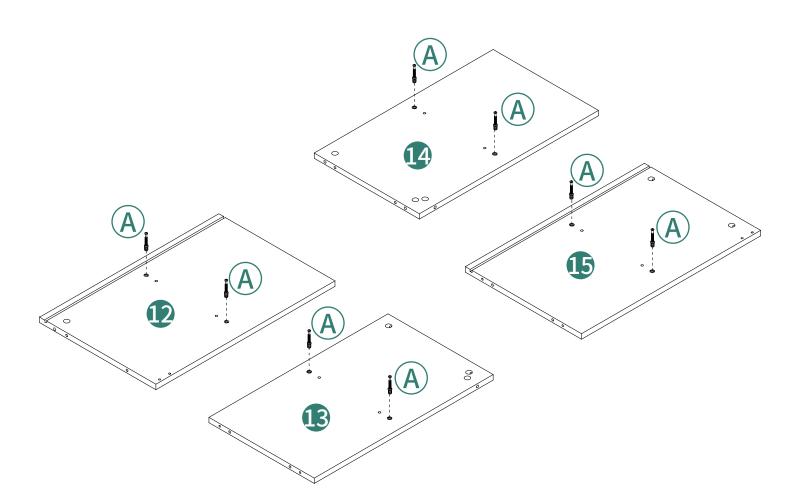


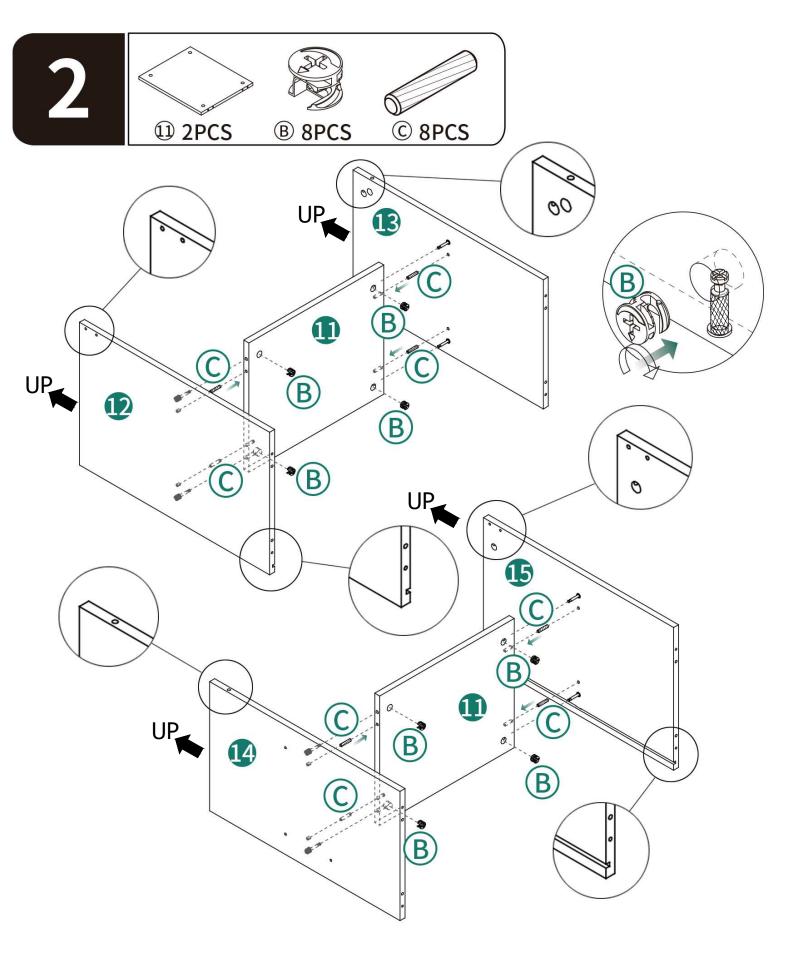


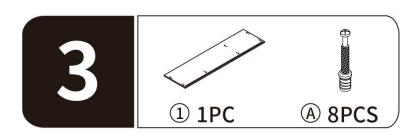


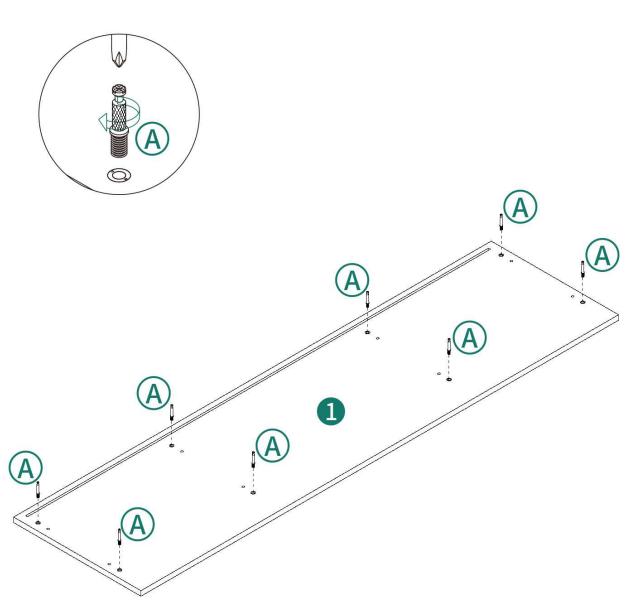


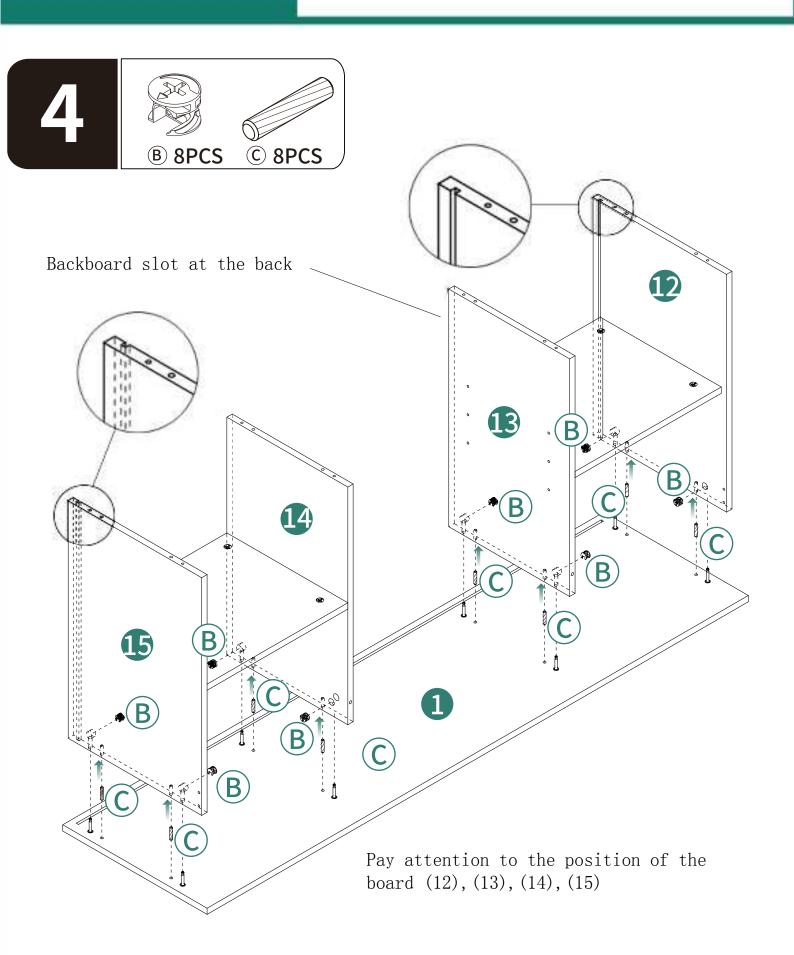


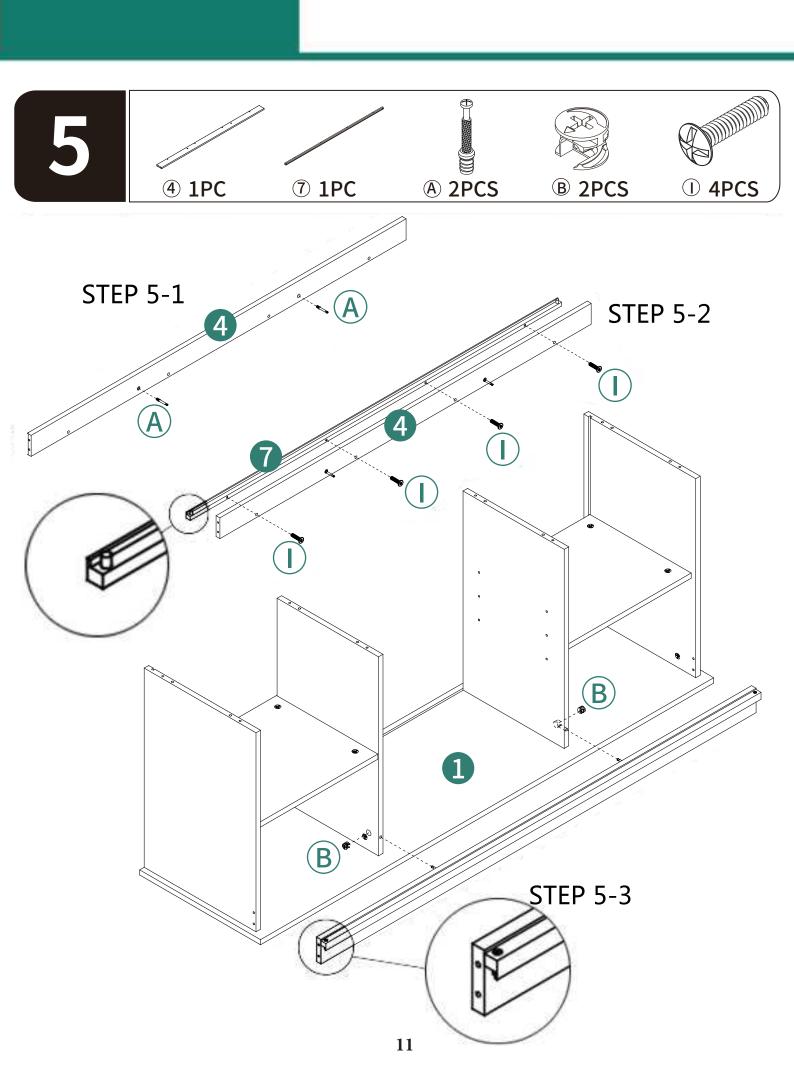


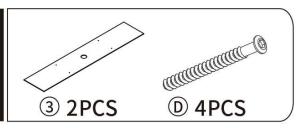


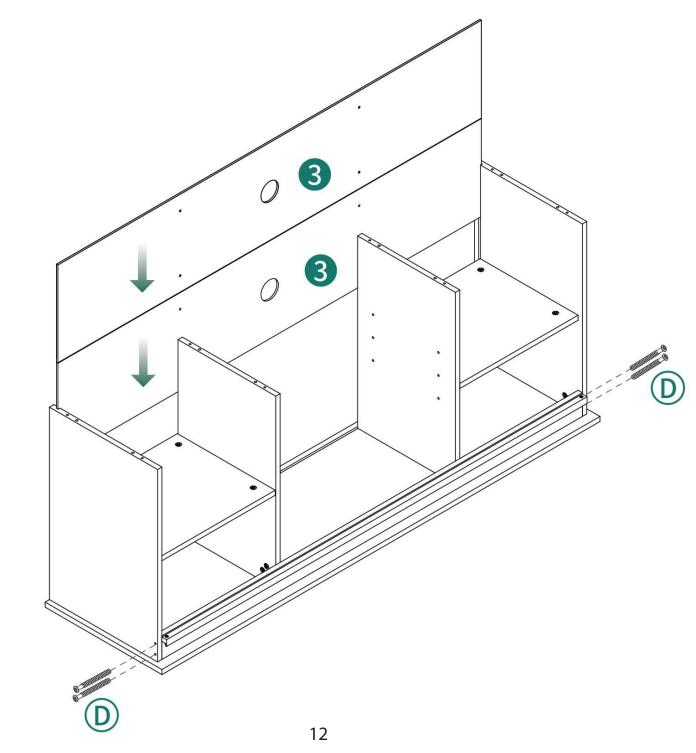


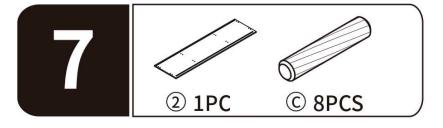


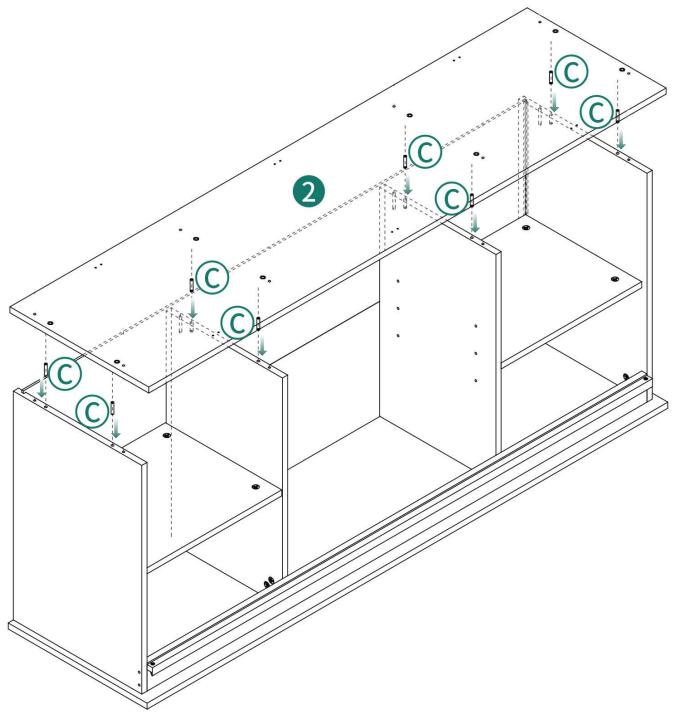


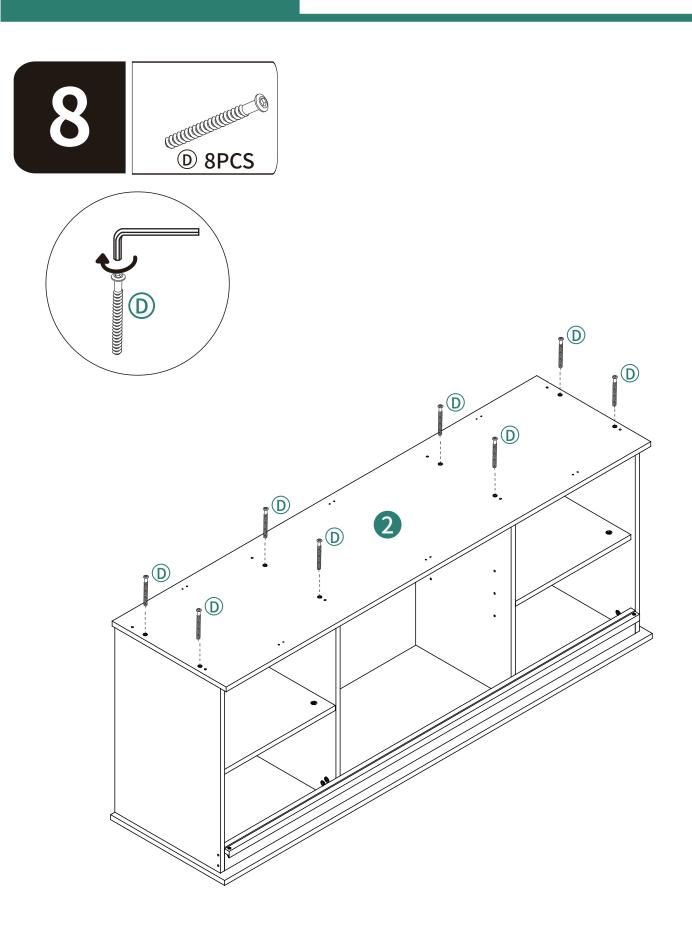


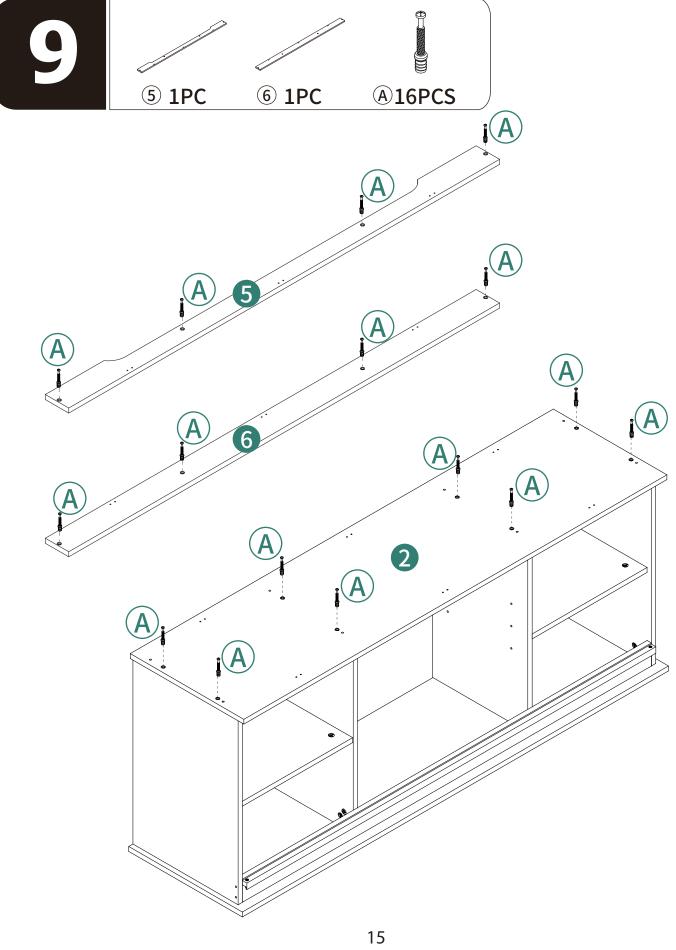


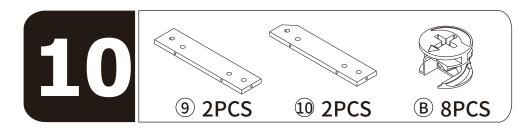

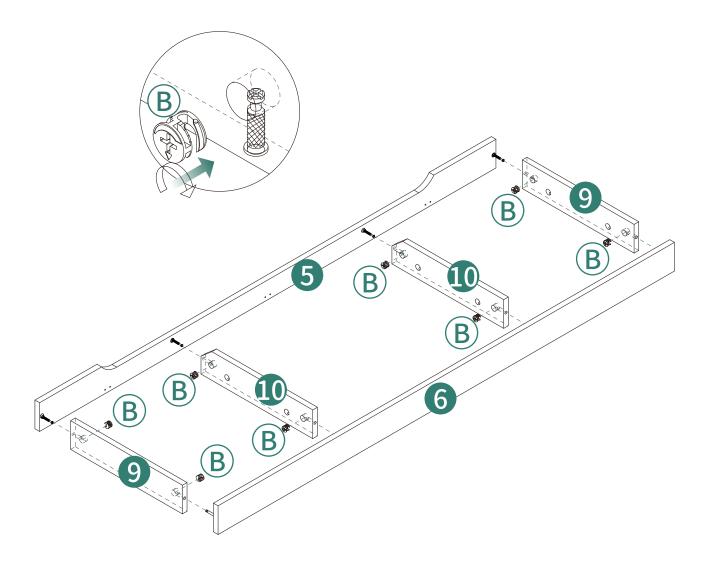


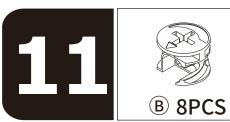


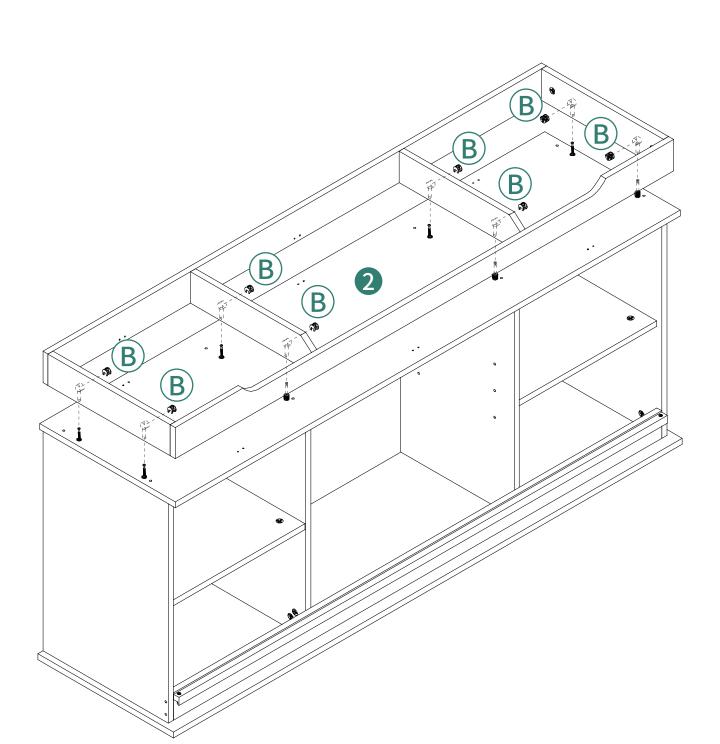

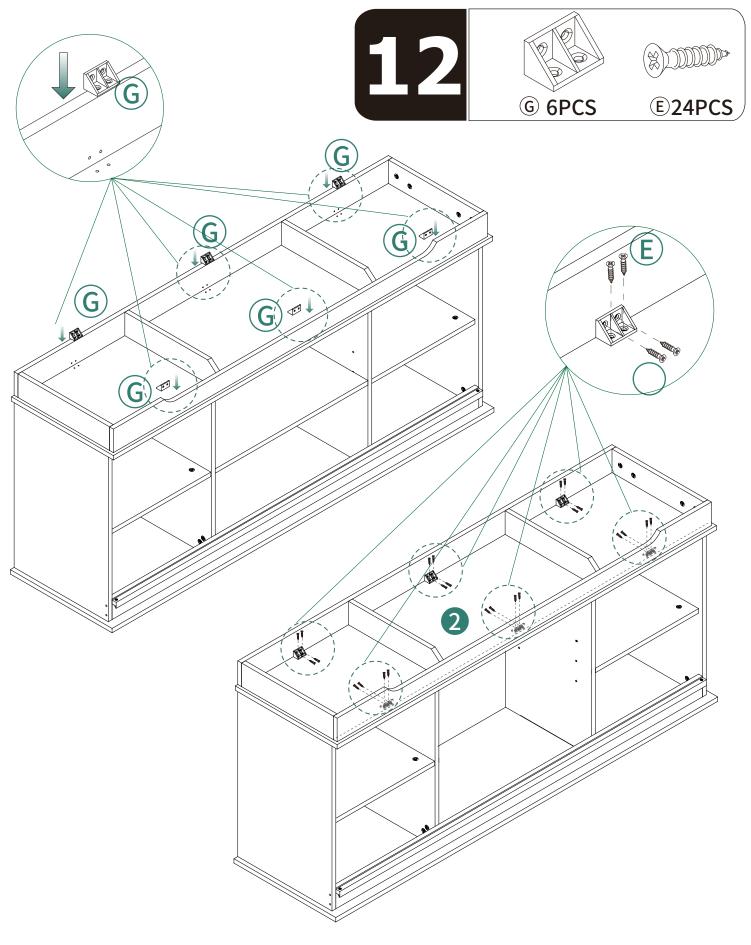





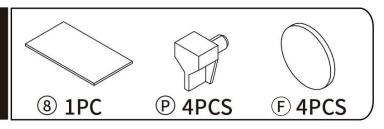


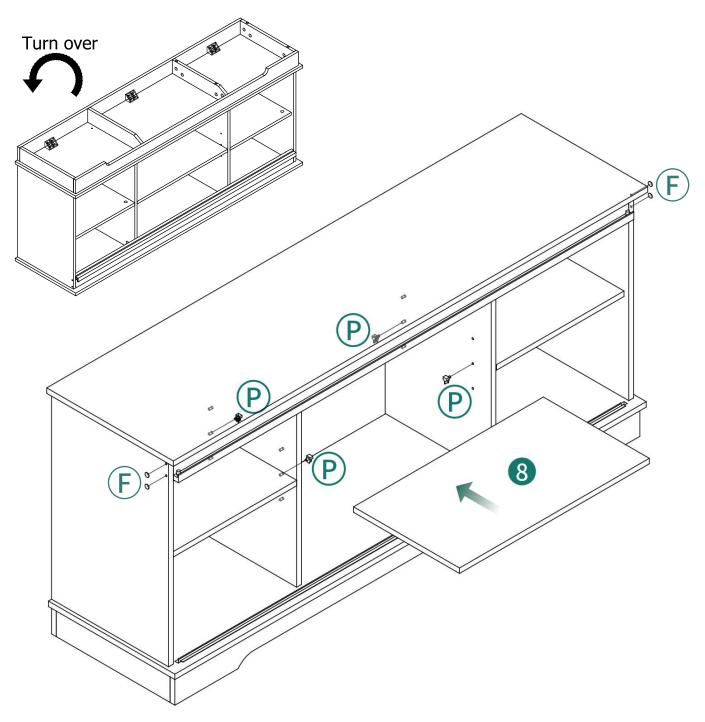




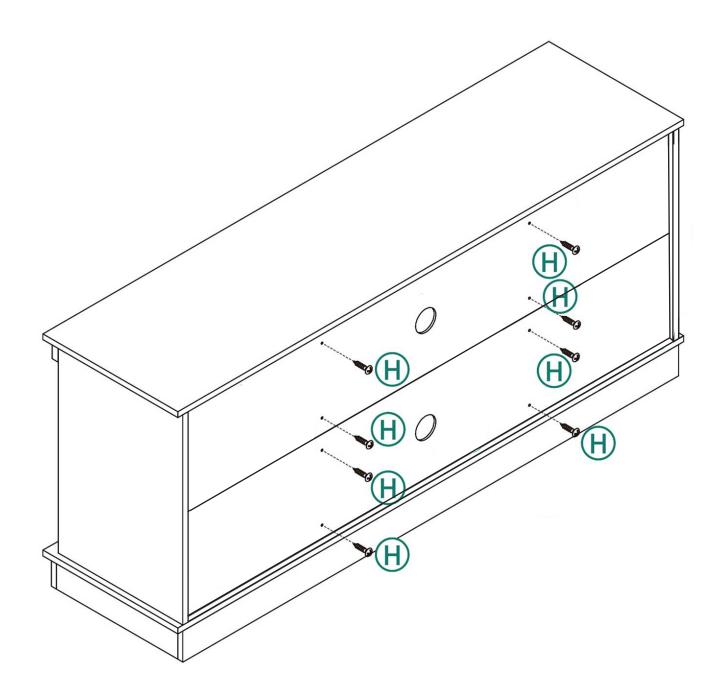


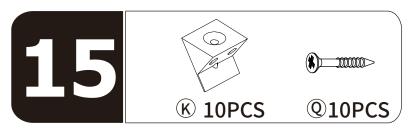

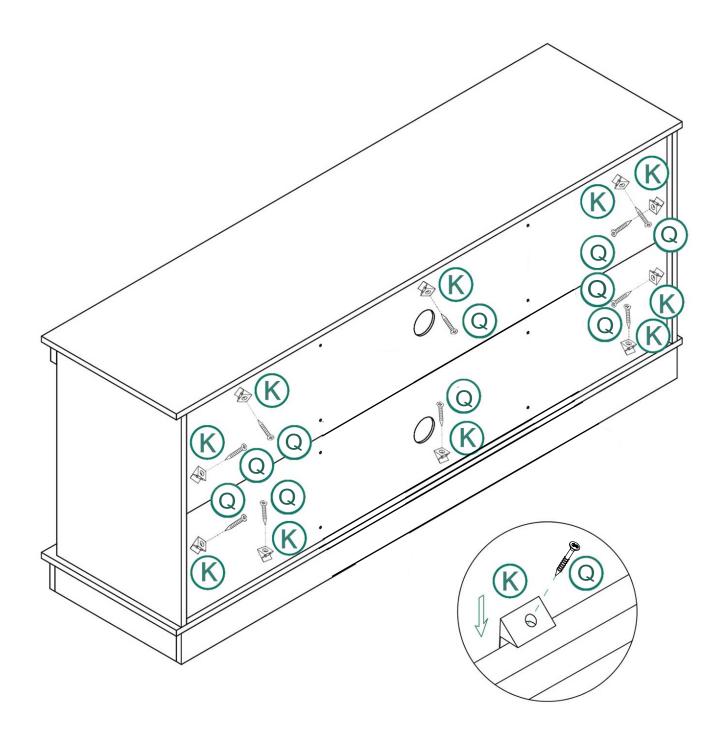



# 

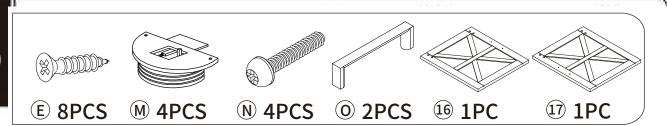


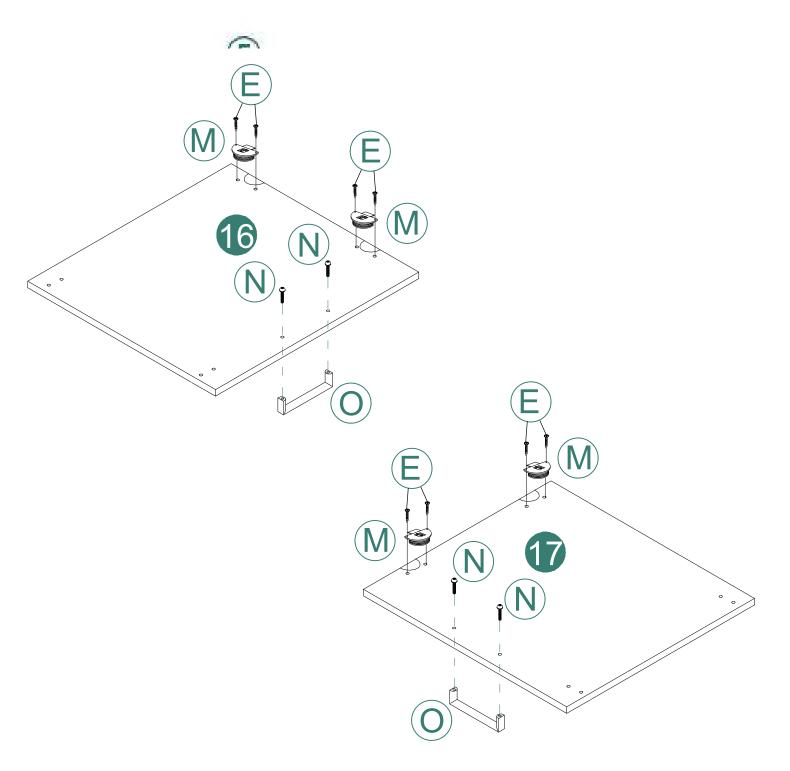




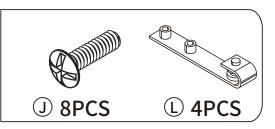

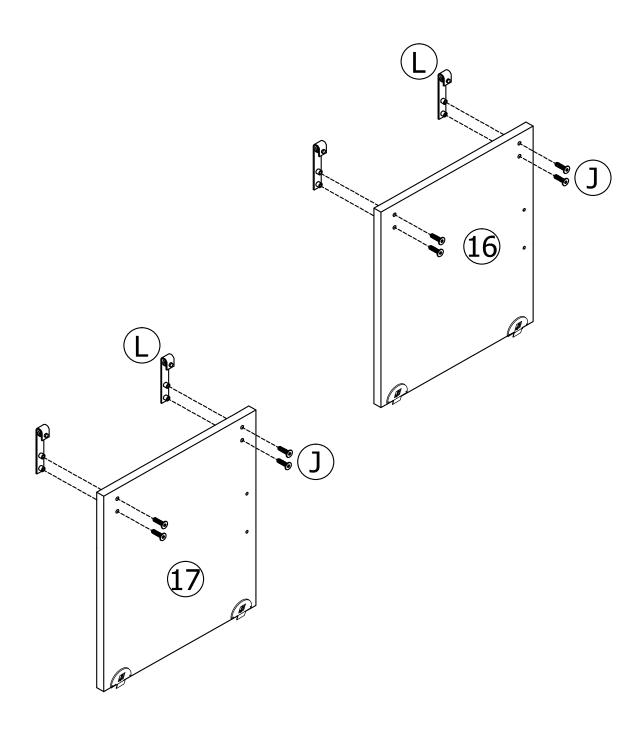

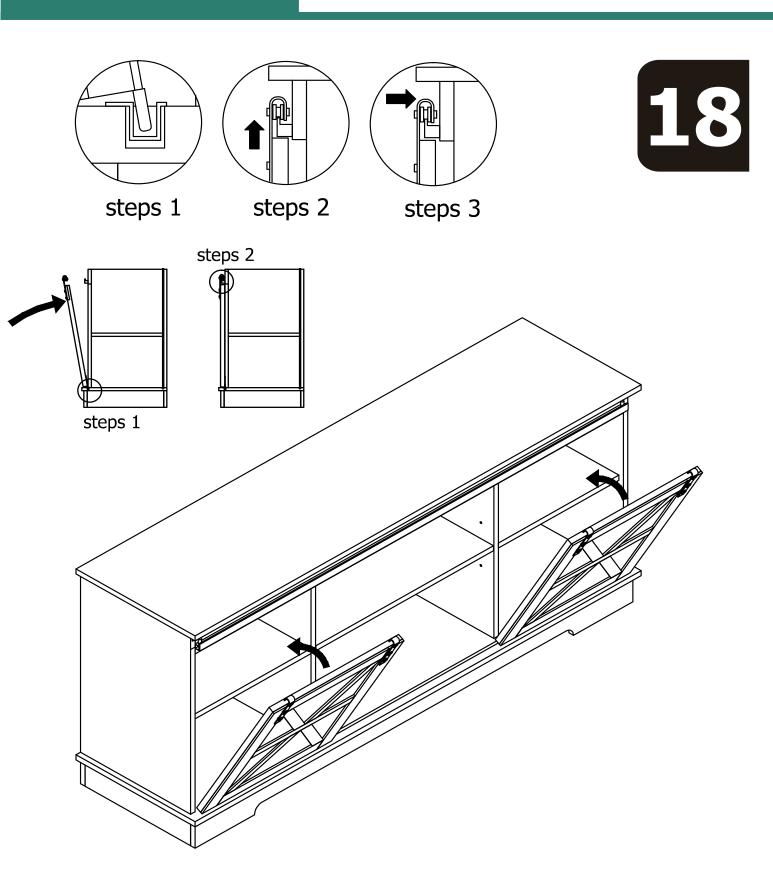

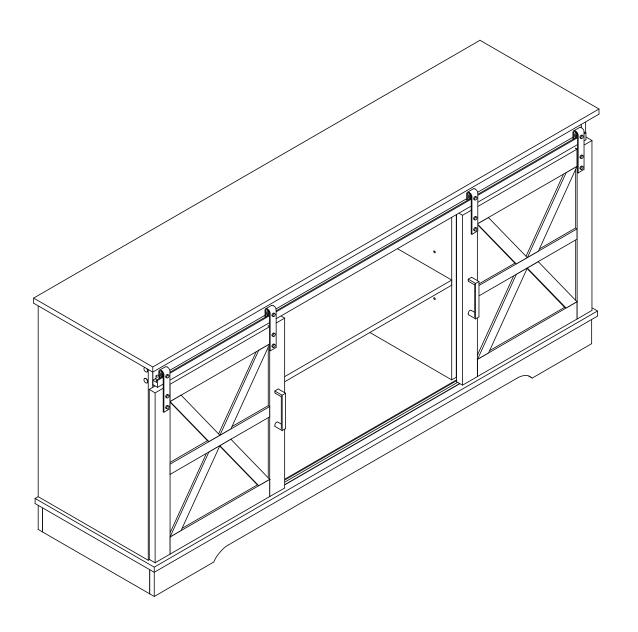

**Installation Completed**