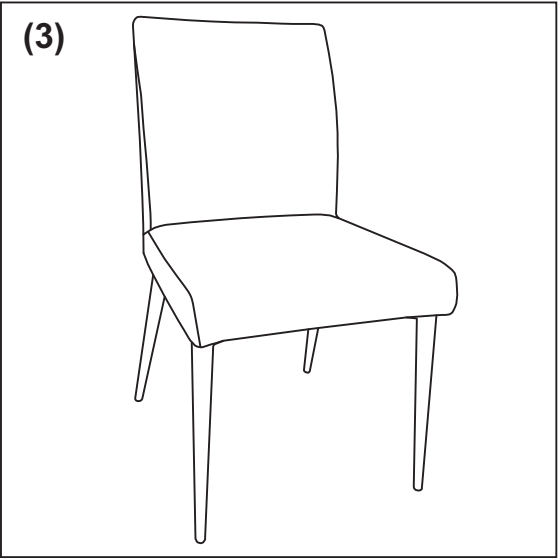
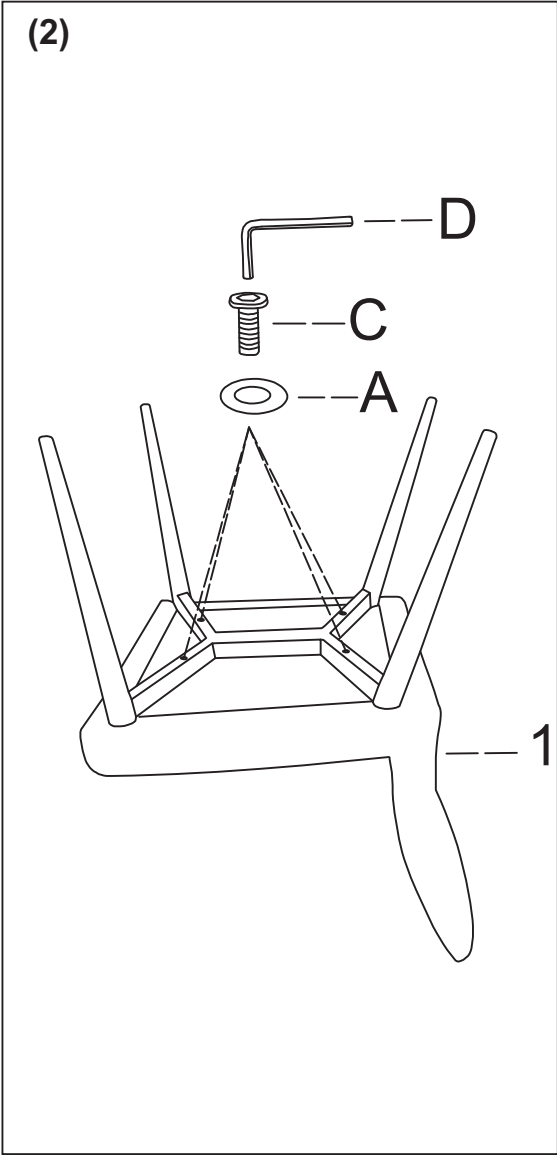
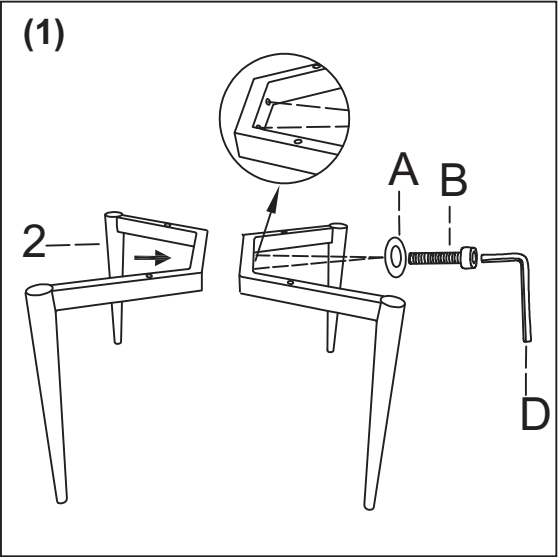




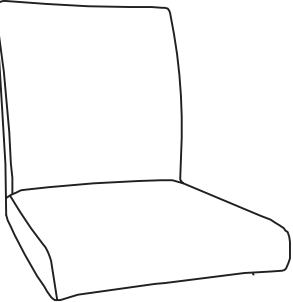


9300128	DINING SIDE CHAIR
ASSEMBLY INSTRUCTIONS	

The more vertical and higher legs are front legs and more slanted legs are rear legs. Make sure to screw the straight part of seat to front legs and the curved part of seat to the rear legs.



HARDWARE			
Ax6  M6	Bx2  M8X35MM	Cx4  M6X45MM	Dx1  M6
PARTS			
1x1 	2x1 