


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

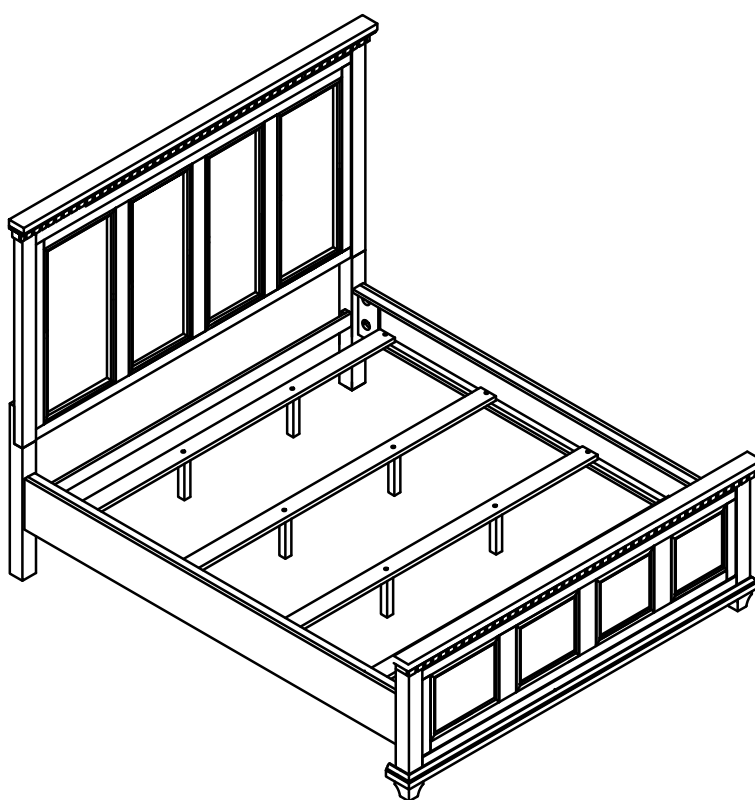

Fine Furniture for every stage of life

222711KW (B1-B3) **California King Bed**

ITEM: 222711KW (B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD
PANEL

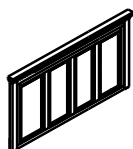


1PC

C RIGHT
HEADBOARD LEG



1PC

B HEADBOARD BOTTOM
RAIL

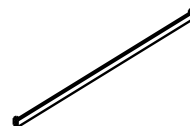

1PC


D LEFT
HEADBOARD LEG



1PC

B2 (BOX 2)


E FOOTBOARD

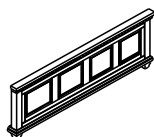

1PC

B3 (BOX 3)

F BED RAIL

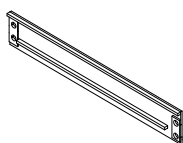


2PCS

H BED SLAT



4PCS

HB 222711KW (B1)
FROM BOX 1
HEADBOARD
COMPLETE

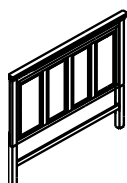


1PC

G BED SLAT SUPPORT
WITH LEVELER



8PCS

E 222711KW (B2)
FROM BOX 2
FOOTBOARD

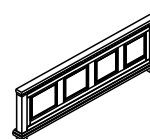

1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 222711KW(B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!








1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222711KW (B1)

1	BOLT (Ø5/16" x 50MM - RBW)		12PCS	2	LOCK WASHER (Ø5/6" - RBW)		12PCS
3	FLAT WASHER (Ø5/16" - RBW)		12PCS	4	ALLEN WRENCH (4MM - RBW)		1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 222711KW (B3)

5	THREADED BOLT (Ø5/16" x 3-1/2" - RBW)		8PCS	6	HEX NUT (Ø5/16" x 14mm - RBW)		8PCS
7	WRENCH (14MM - RBW)		1PC	8	HALF ROUND NUT (Ø5/16" - RBW)		8PCS
9	FLAT HEAD SCREW (Ø4 x 30mm - RBW)		8PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **222711KW (B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 1

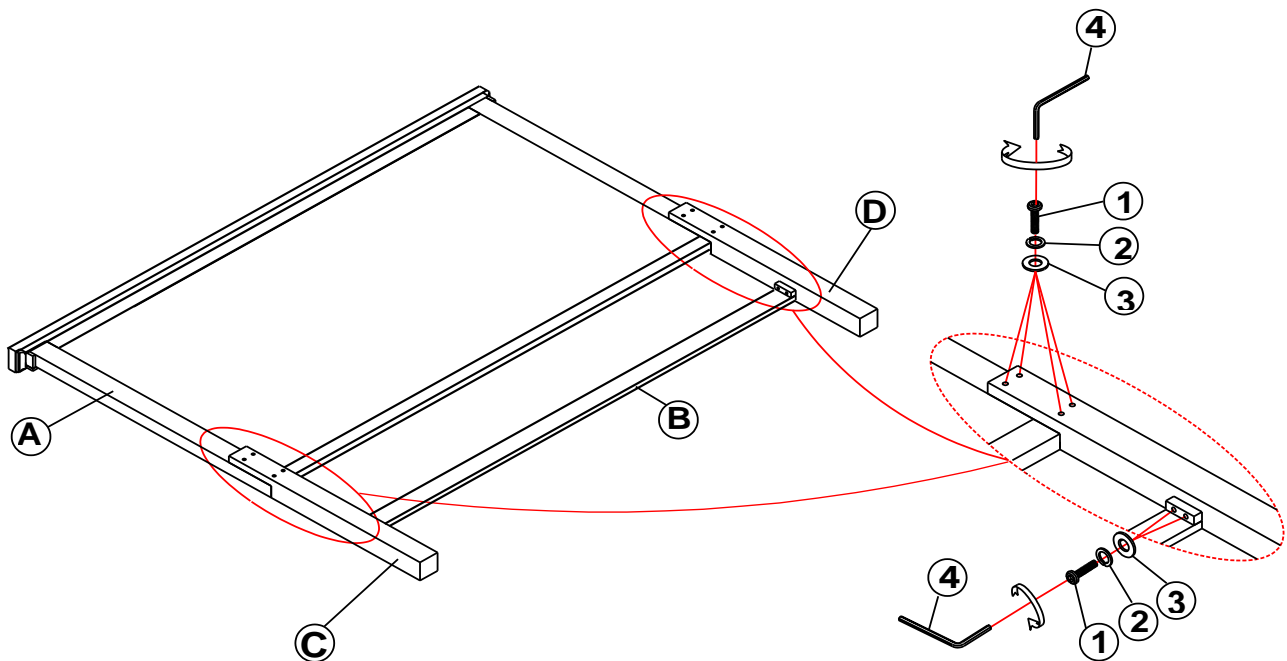


STEP 2

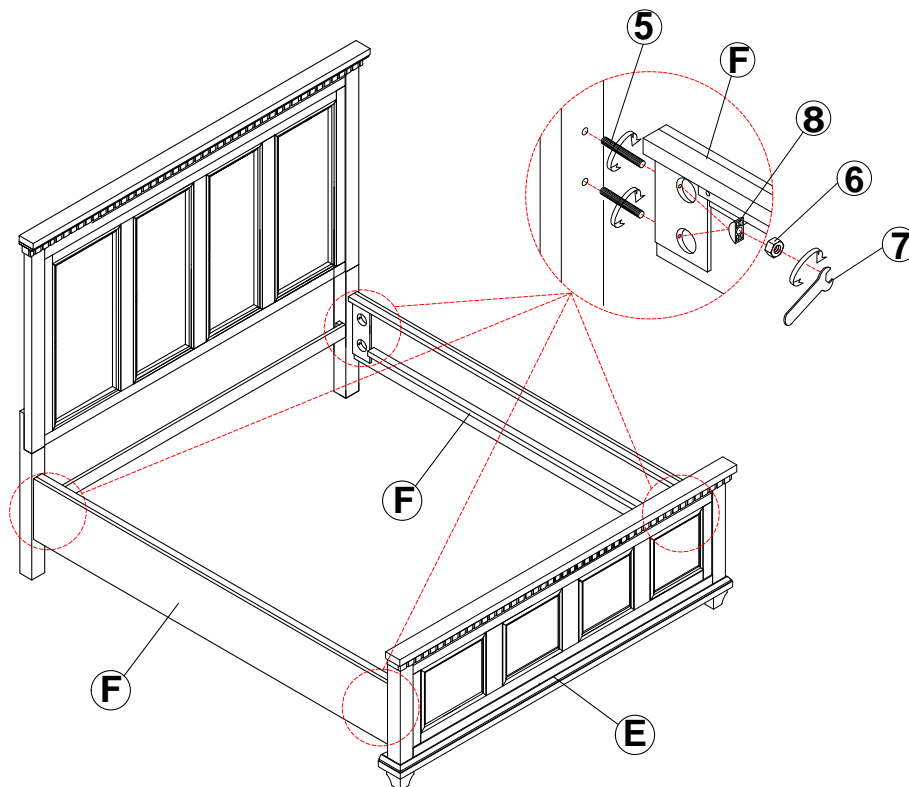



ITEM: **222711KW (B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

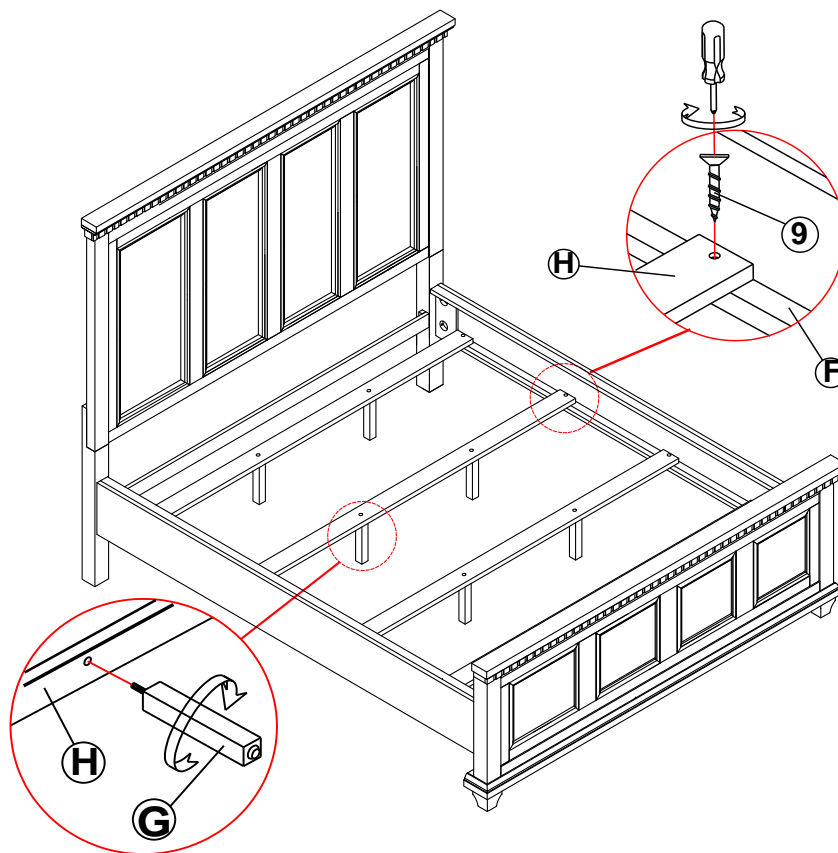


STEP 4 COMPLETE

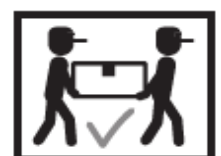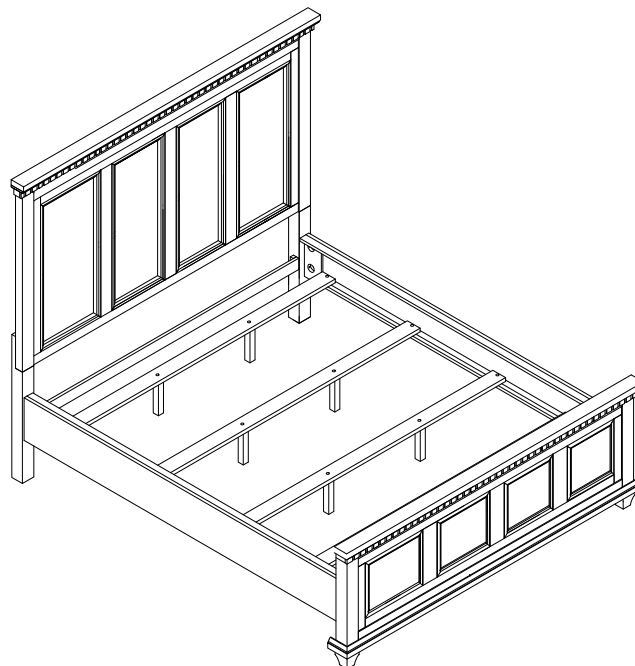

ITEM: **222711KW (B1-B3)**



Inner Size: 77.50"W X 86.00"D

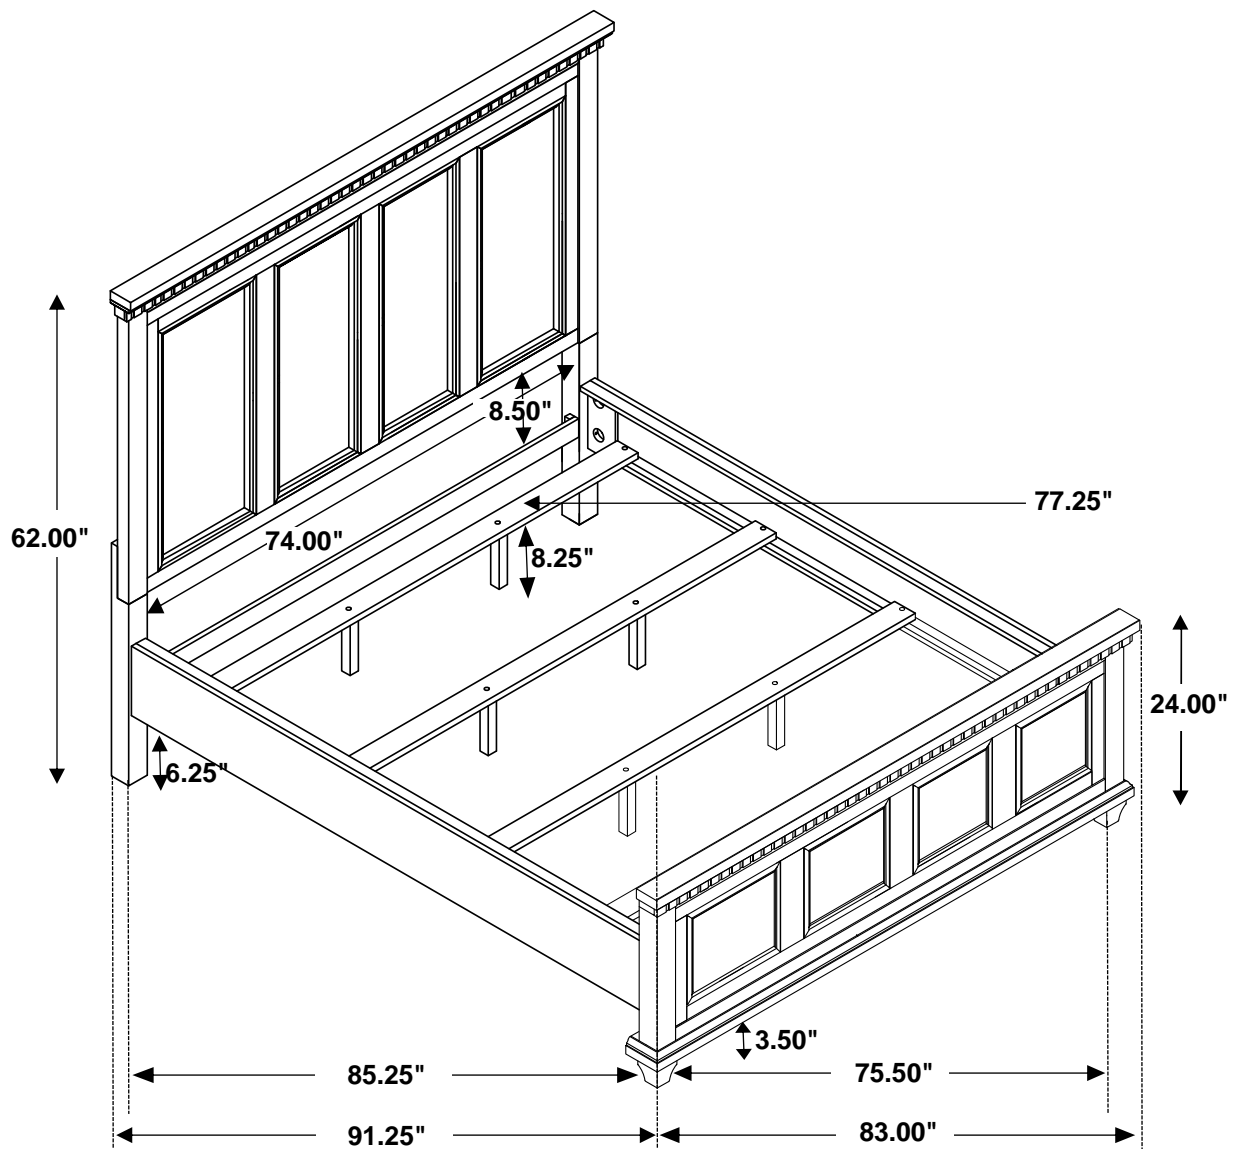

Note: Dimension tolerance $\pm 5\%$