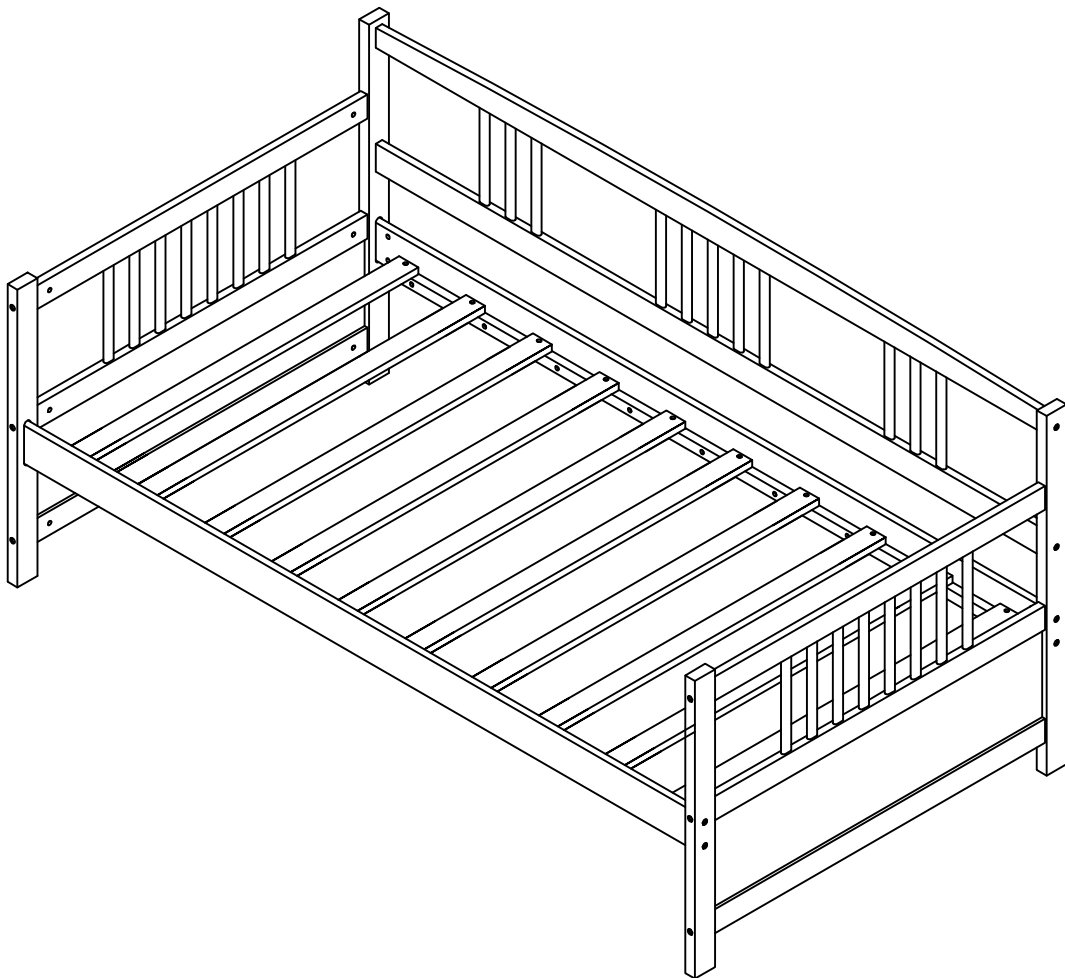



ASSEMBLY INSTRUCTIONS

TWIN DAYBED













WF295710






Detail View

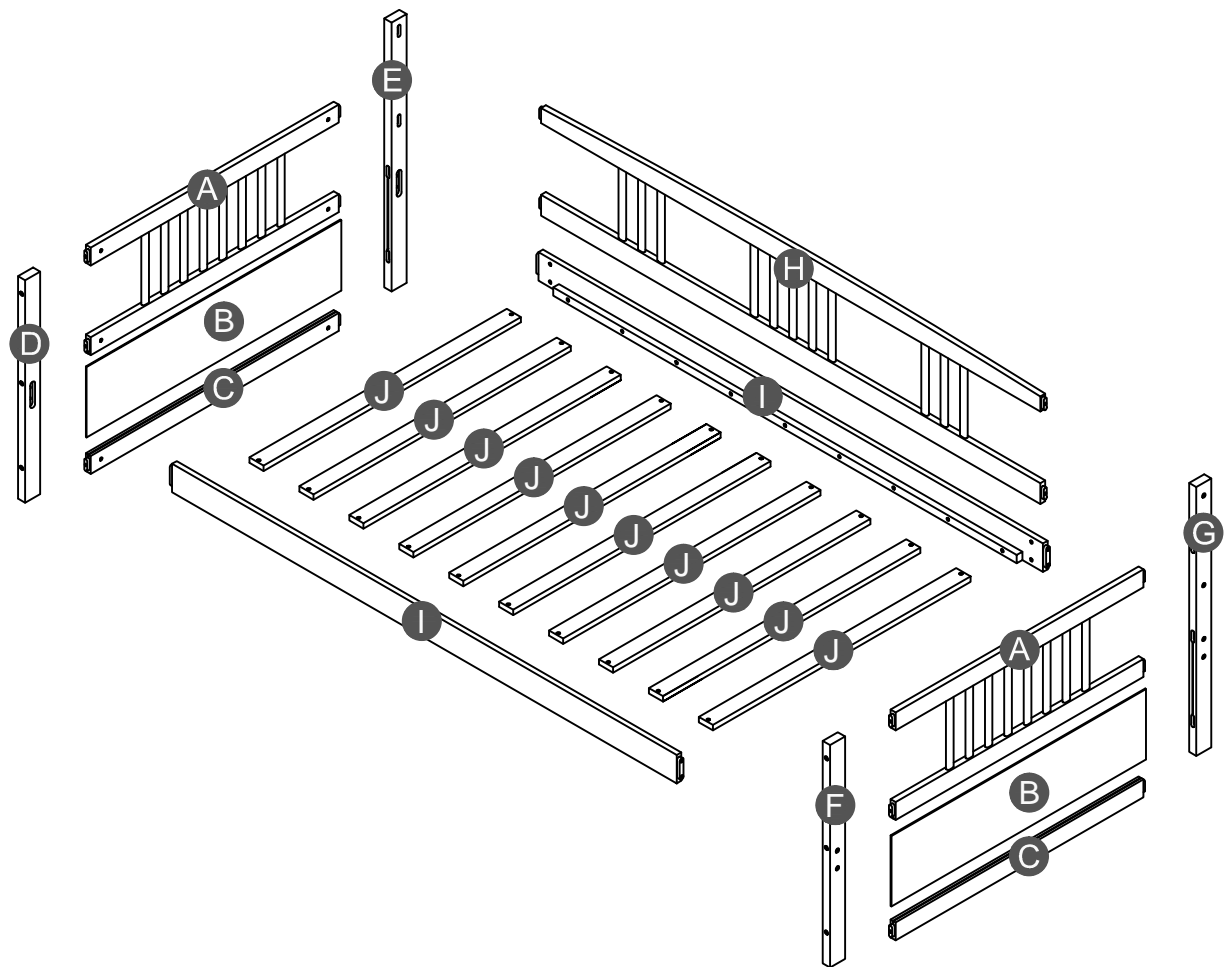


Part List

A  <p>Frame HB/FB - 2pcs</p>	B  <p>Side panel - 2pcs</p>	C  <p>Horizontal bar - 2pcs</p>
D  <p>Leg left (Front) - 1pc</p>	E  <p>Leg left (Back) - 1pc</p>	F  <p>Leg right (Front) - 1pc</p>
G  <p>Leg right (Back) - 1pc</p>	H  <p>Long guard rail - 1pc</p>	I  <p>Side rail - 2pcs</p>
J  <p>Slats - 10pcs</p>		

Hardware List


1  (Ø15)1/4"*100mm	2  (Ø15)1/4"*80mm	3  1/4"*15 (9.5mm)
Hex-Head bolts (12pcs)	Hex-Head bolts (12pcs)	Horizontal-Hole bolts(24pcs)
4  Ø4*30mm	5  (1/4")4.5*58mm	
Wood screws (20pcs)	Allen key (1pc)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

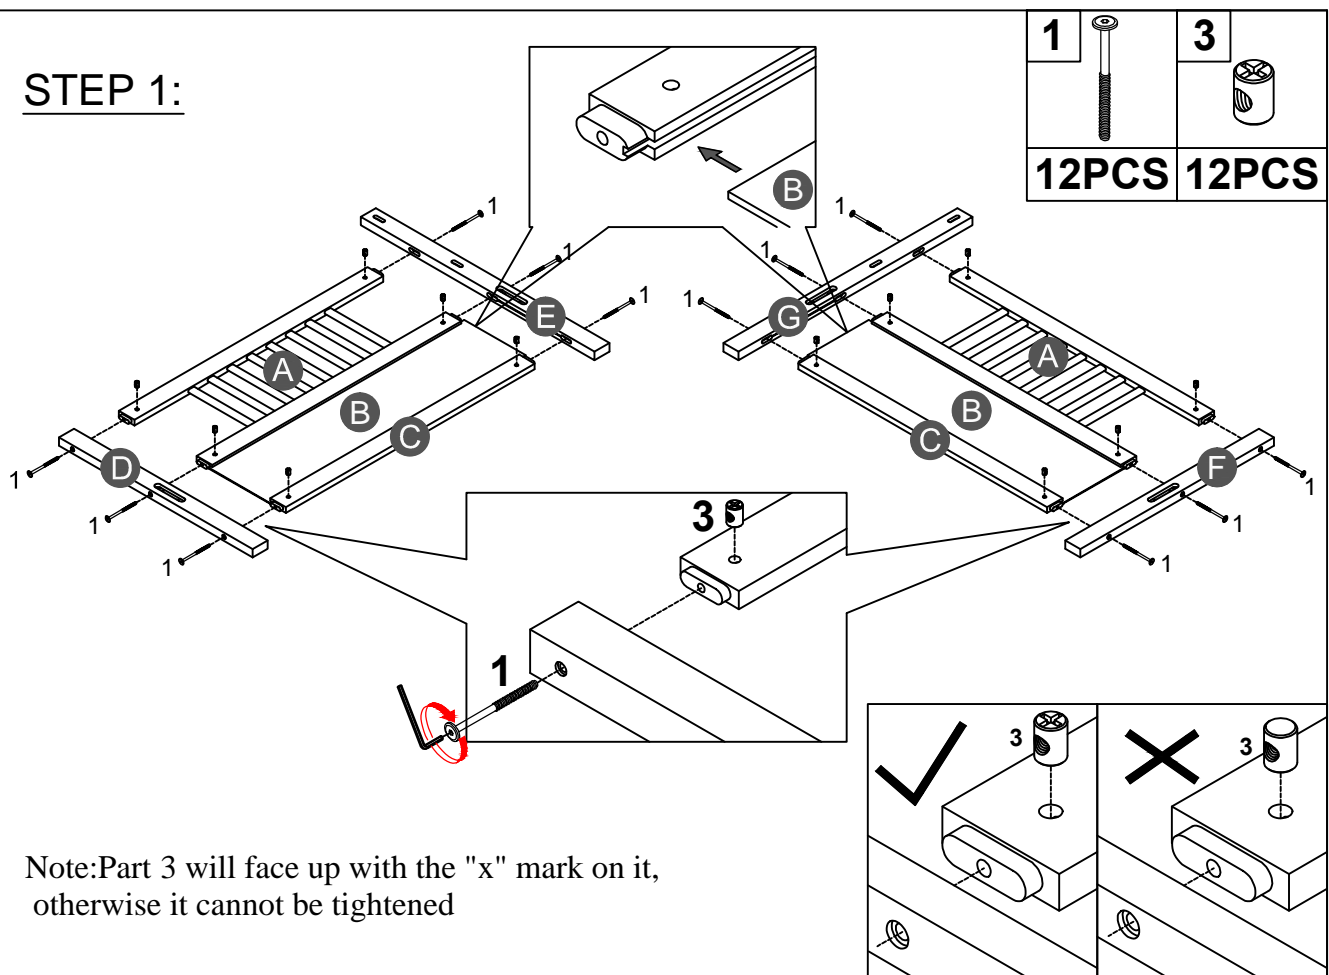

STEP 2:


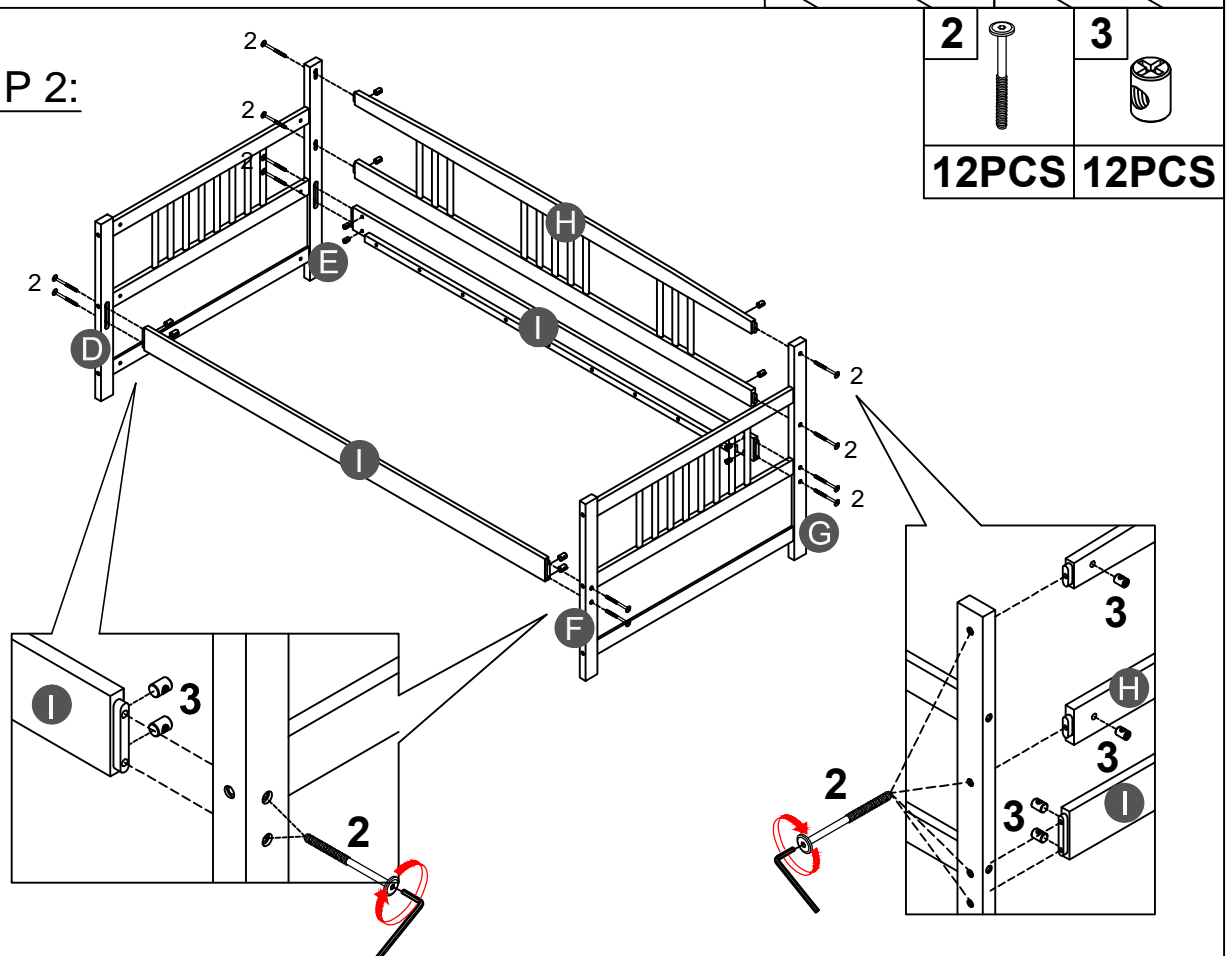


STEP 3:



4



20PCS

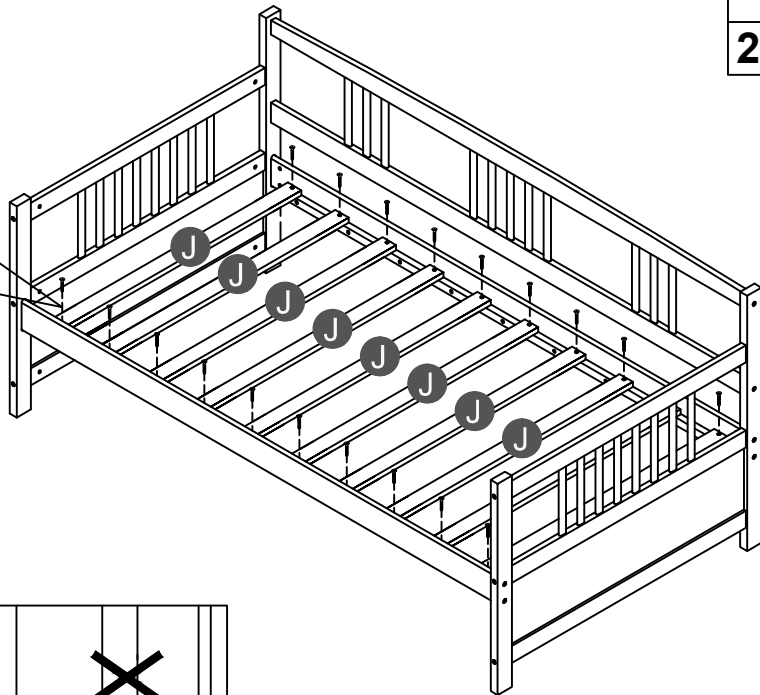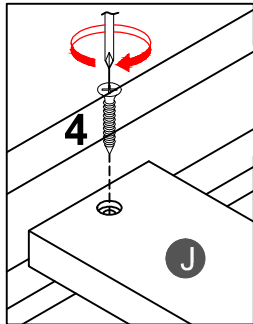

5.4" 5.4" 2.7"
138mm 138mm 69mm

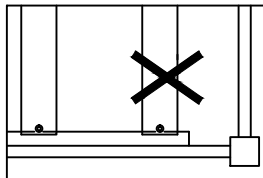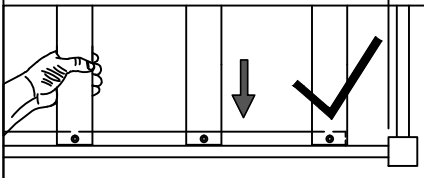

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

