


1. Place the hardware foot on the seat bottom, align the holes between the hardware foot and the seat bottom, put in the hexagonal wire and spacer, and tighten with a wrench.

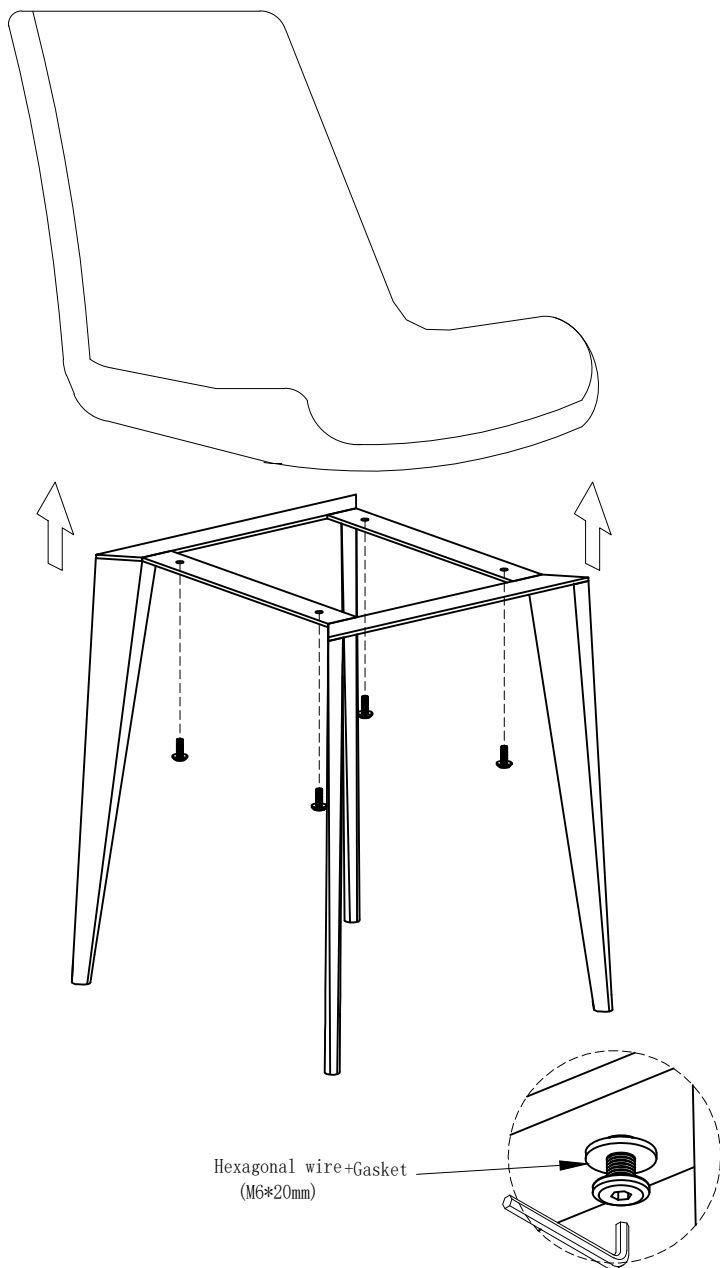

2. Installation complete.



Installation instruction





CR041AH Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation

Parts list

Serial number	Shape	Name	Quantity
A		Hexagonal wire (M6*20mm)	4
B		Gasket	4