




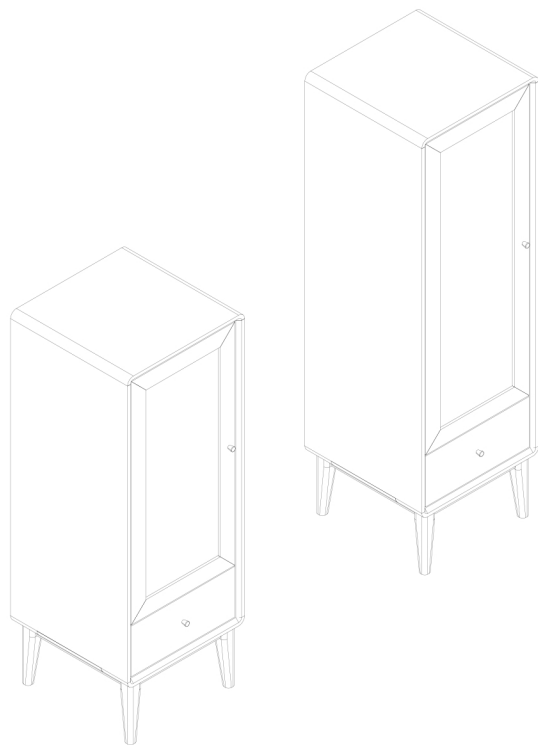


# Assembly Instructions

## Y110M02

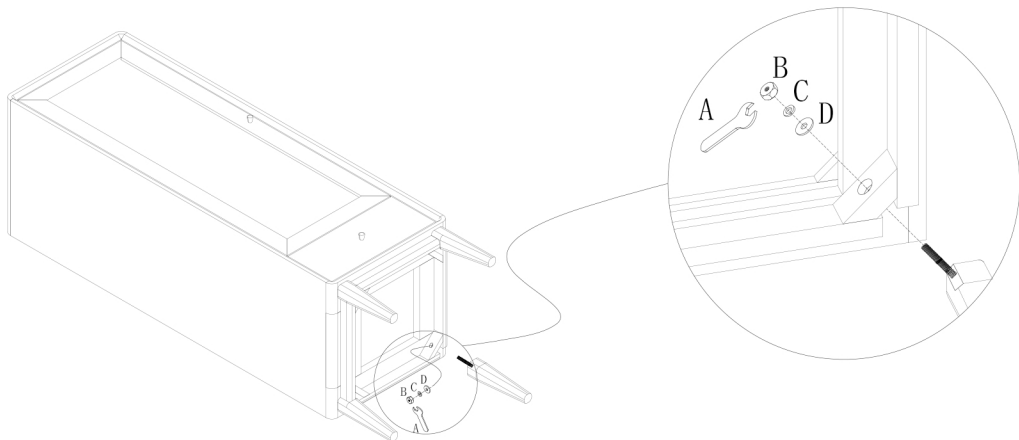

- Step:
- 1. Invert the product cabinet,
  - 2. Assemble the legs in sequence according to the corresponding hole position and hardware parts



			
A、Spanner M8=1	B: Nut M8=4	C、Spring washer ø8=4	D、Flat pad ø8=4