


ASSEMBLY INSTRUCTIONS


MYMGS-V1

FTLFTS-8021

FTLFTS-8022

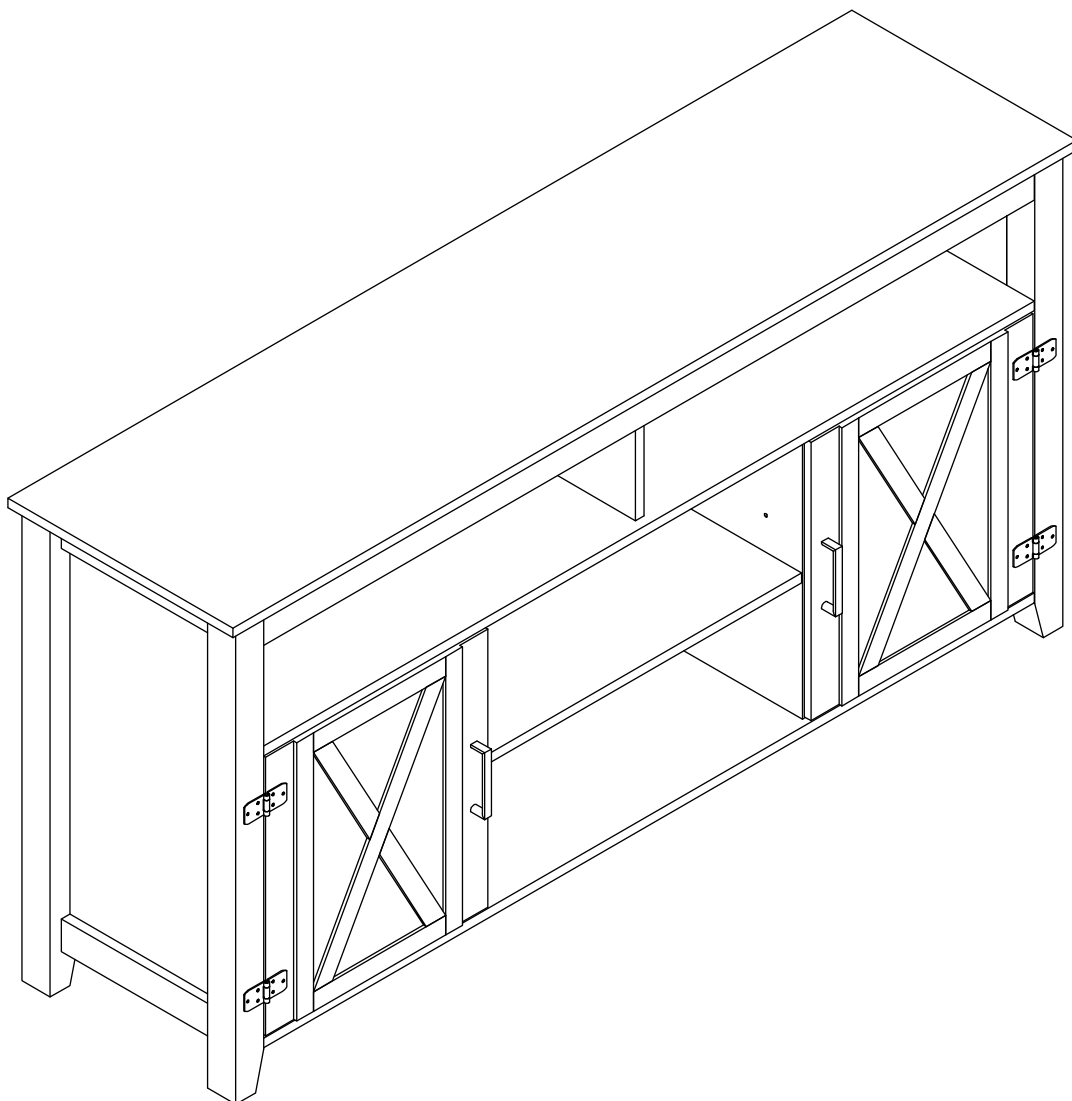














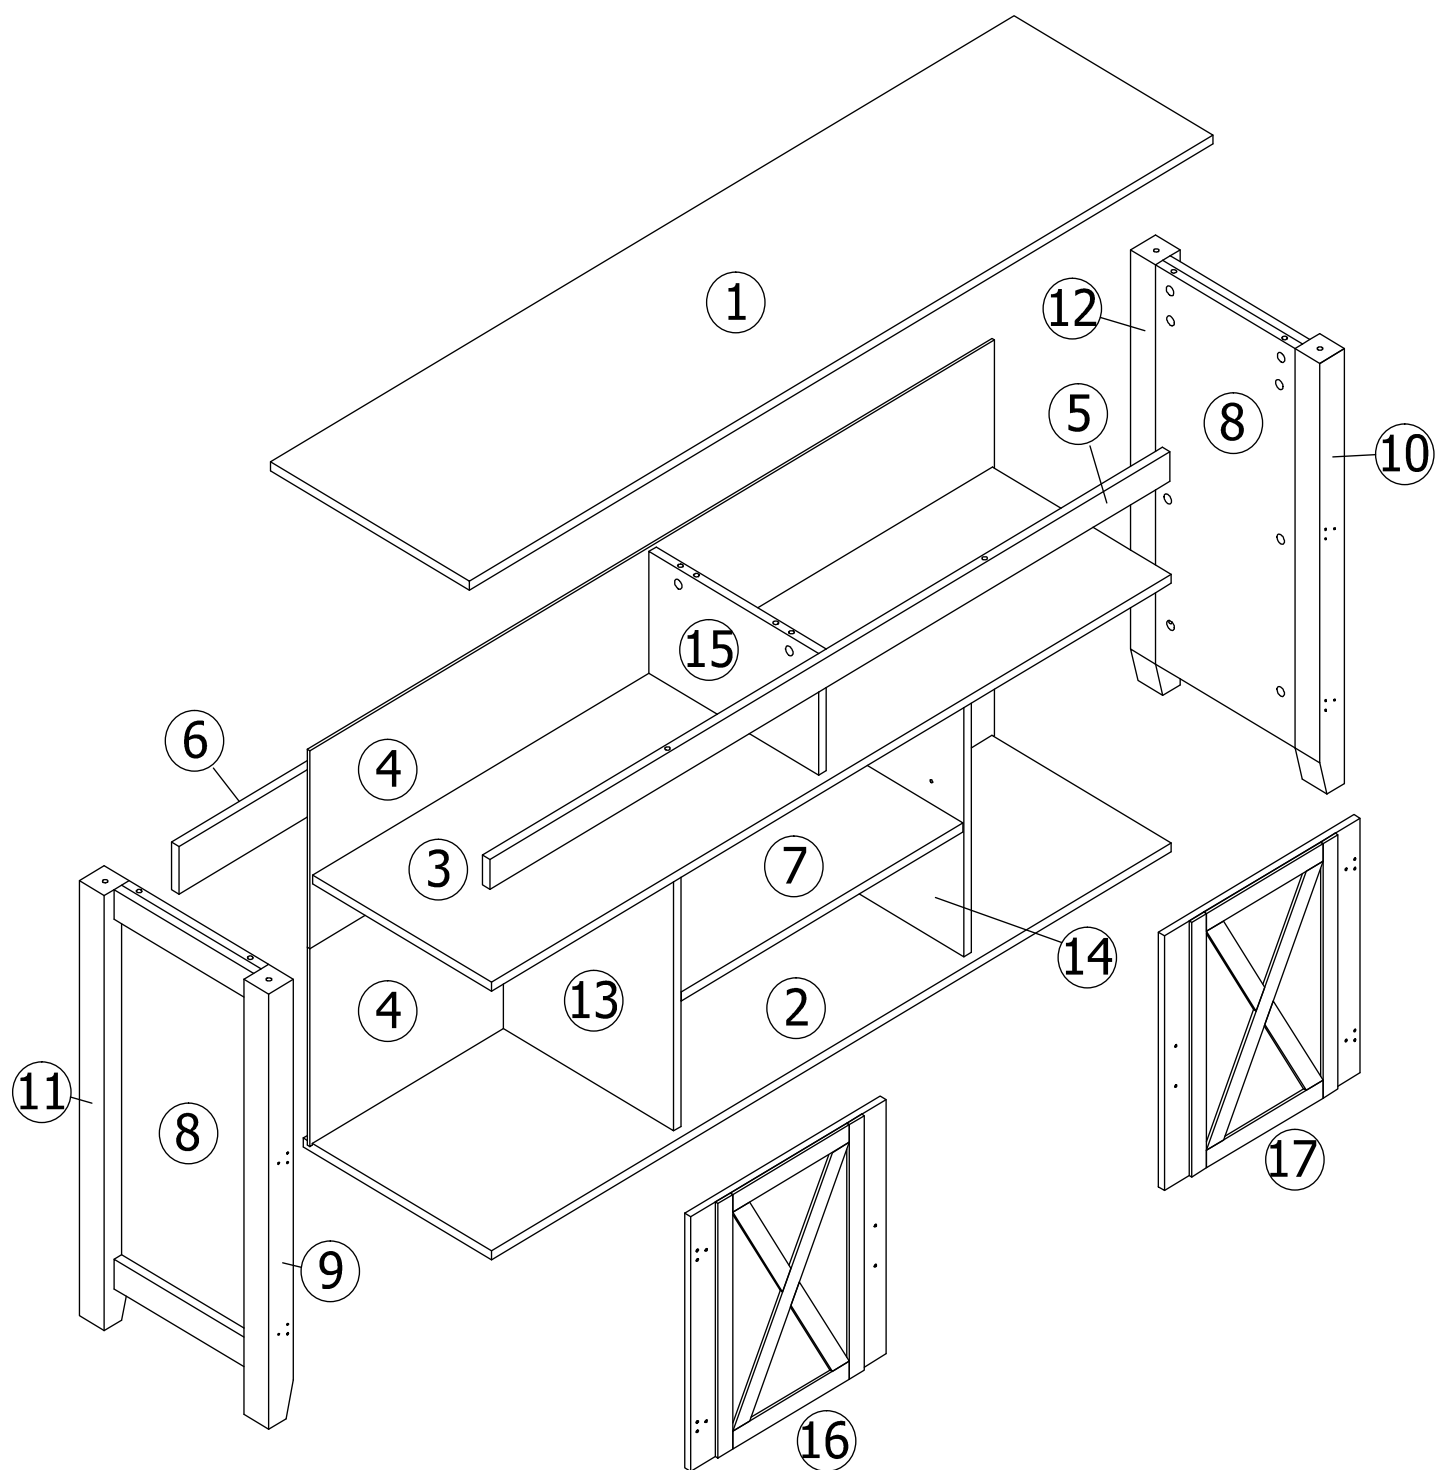







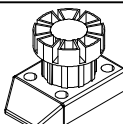
ASSEMBLY INSTRUCTIONS




















ASSEMBLY INSTRUCTIONS

Notice:

1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, you have two solutions: Follow the installation video tutorial on the Amazon product page or contact our customer service.

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
(A)		x36	(L)	 M4x16	x8
(B)		x36	(M)		x4
(C)	 Ø8x30	x26	(N)	 M3.5x12	x8
(D)	 Ø8x38	x6	(O)		x2
(E)		x1	(P)	 M4x20	x4
(F)	 M3.5x16	x2	(Q)	    Q1 X 2 Q3 Q4	x1 SET
(G)		x2 SETS			
(H)		x4	(R)	 M8x11	x24
(I)		x12	(-)		-
(J)	 M3x20	x12			
(K)		x2			

ASSEMBLY INSTRUCTIONS

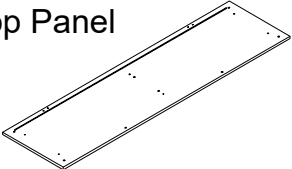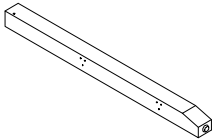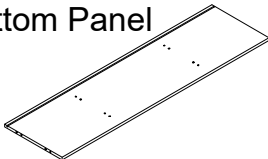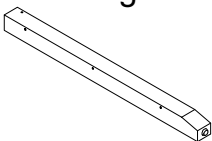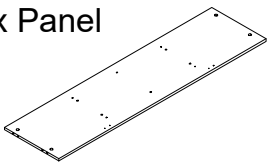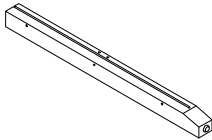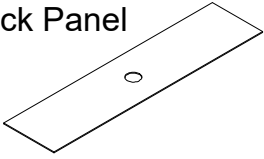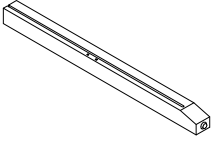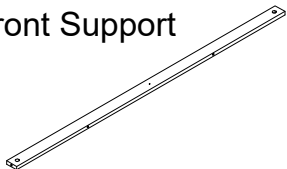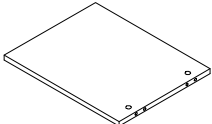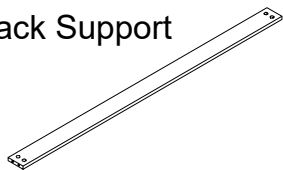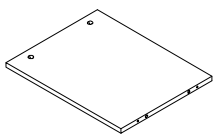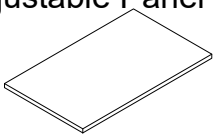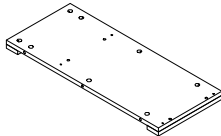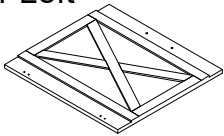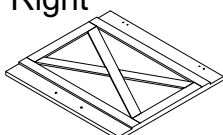
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1	Top Panel 	x1	9	Leg Front Left 	x1
2	Bottom Panel 	x1	10	Leg Front Right 	x1
3	Fix Panel 	x1	11	Leg Back Left 	x1
4	Back Panel 	x2	12	Leg Back Right 	x1
5	Front Support 	x1	13	Center Panel Bottom Left 	x1
6	Back Support 	x1	14	Center Panel Bottom Right 	x1
7	Adjustable Panel 	x1	15	Center Panel Top 	x1
8	Side Panel 	x2	16	Door Left 	x1
			17	Door Right 	x1

ASSEMBLY INSTRUCTIONS


1




Ⓑ 12PCS

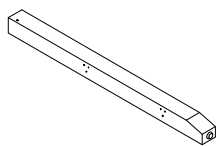


⑨ 1PC

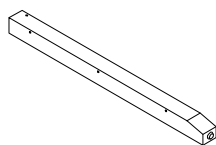






⑩ 1PC

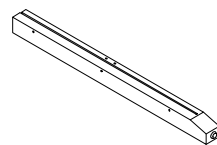

⑪ 1PC

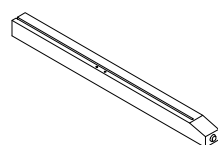


⑫ 1PC

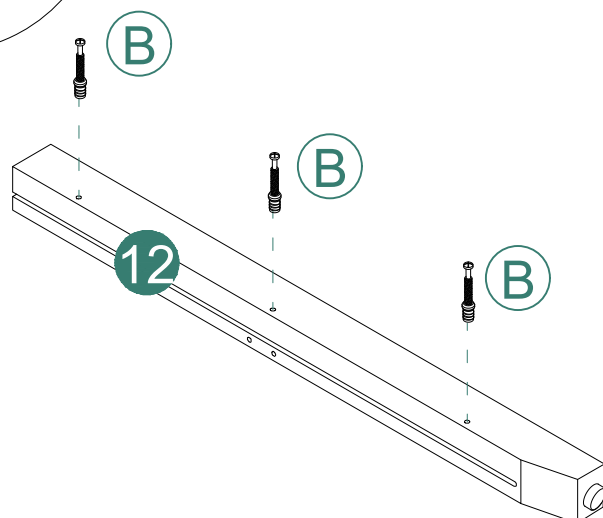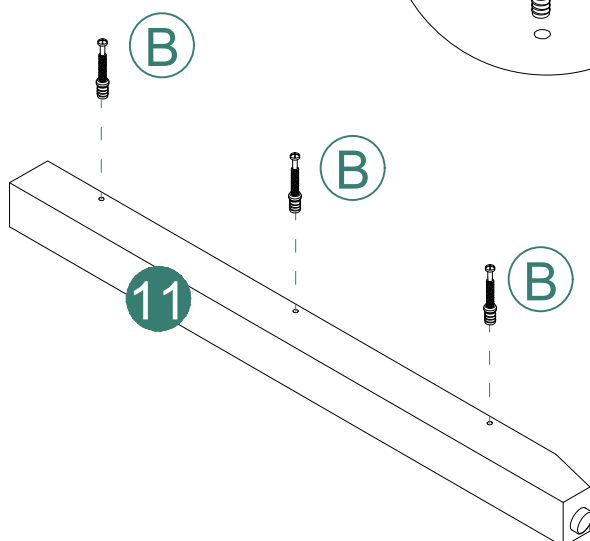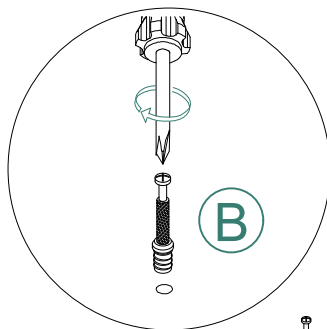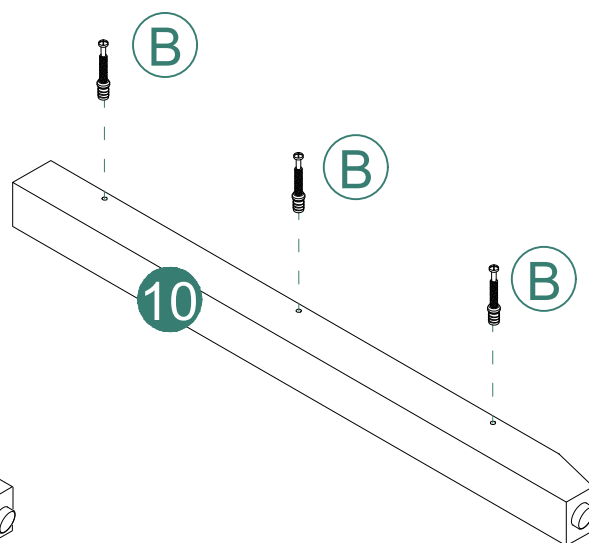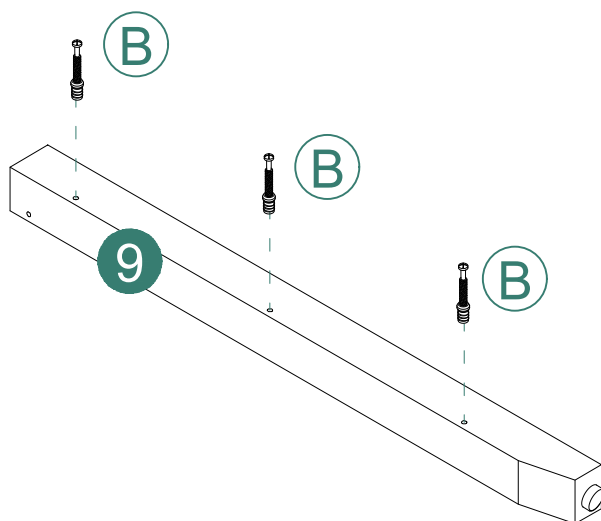


ASSEMBLY INSTRUCTIONS




2



Ⓐ 12PCS

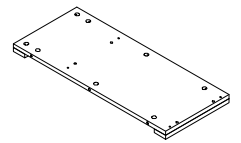

⑧ 2PCS

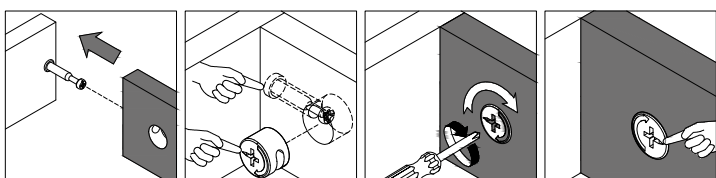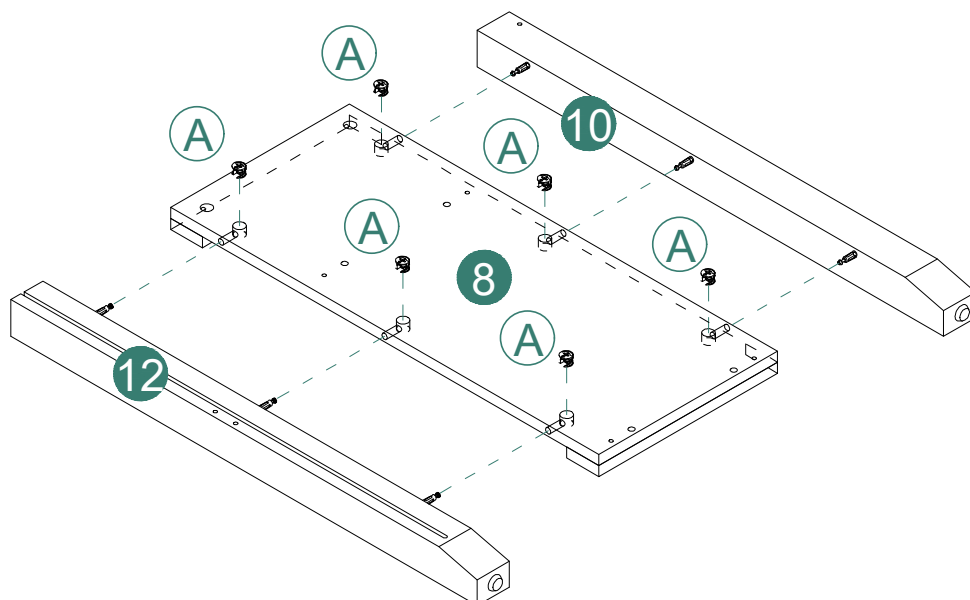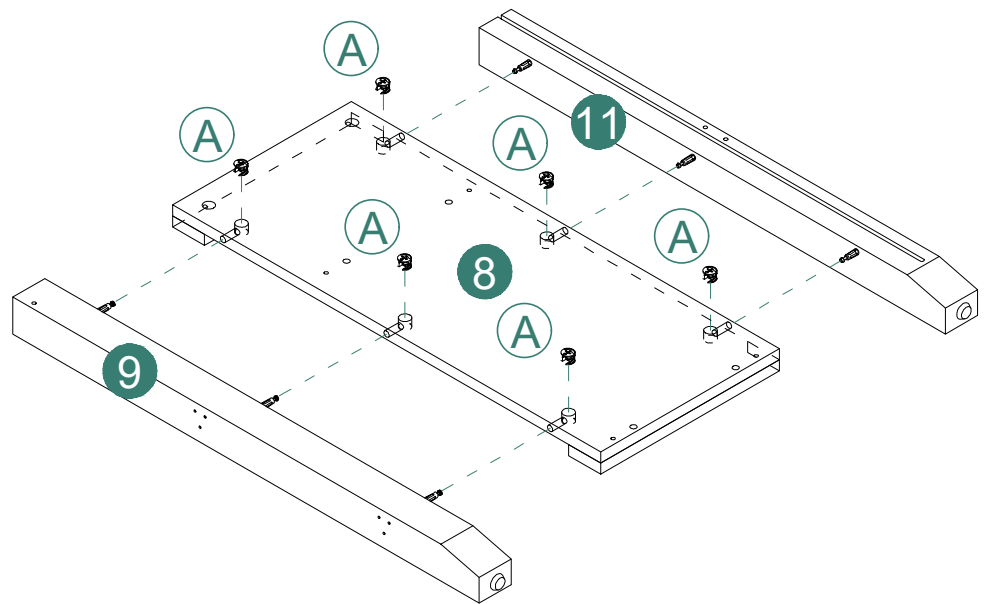


ASSEMBLY INSTRUCTIONS

3






Ⓑ 14PCS

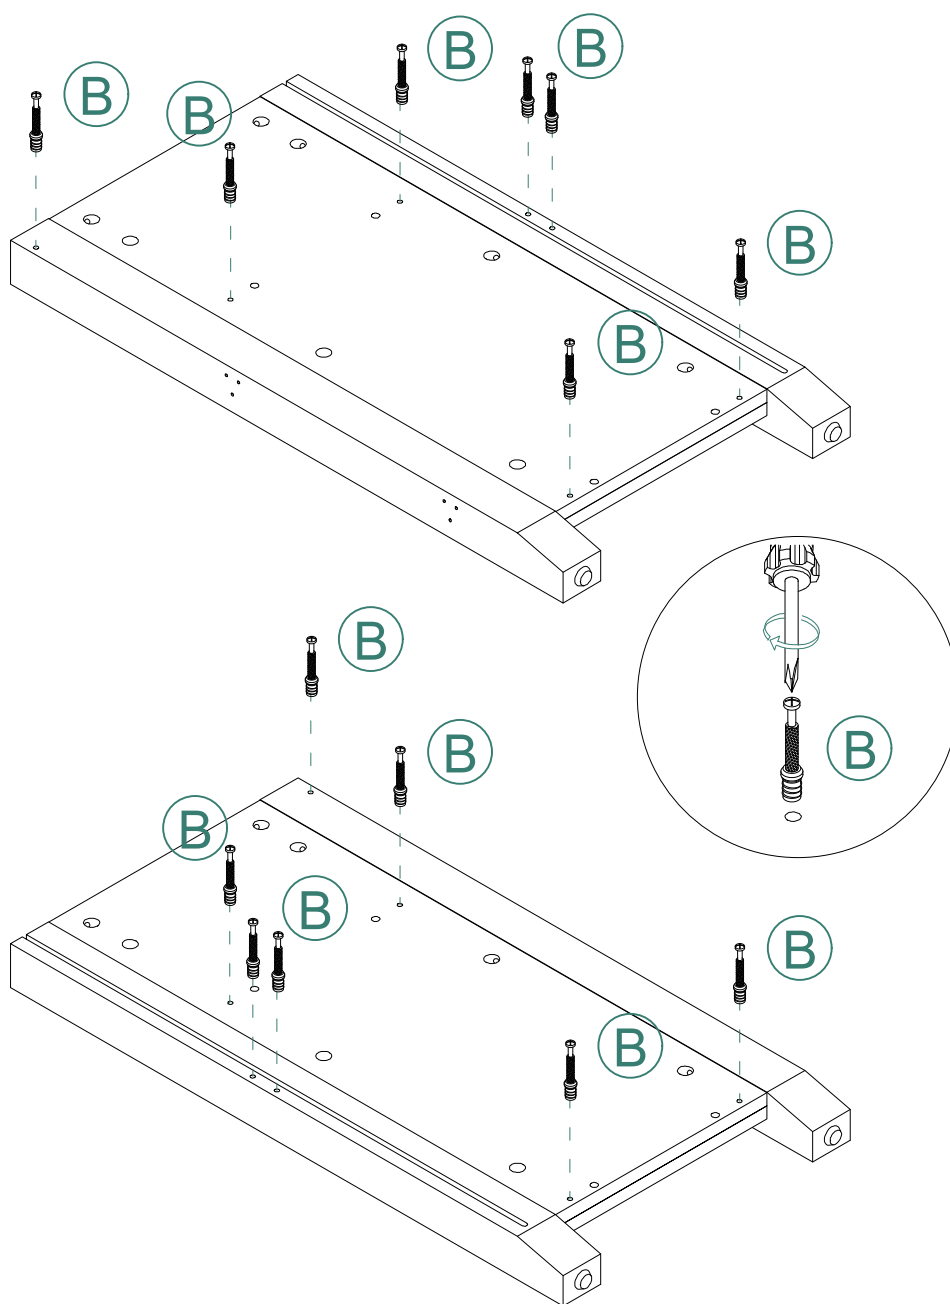

ASSEMBLY INSTRUCTIONS


4

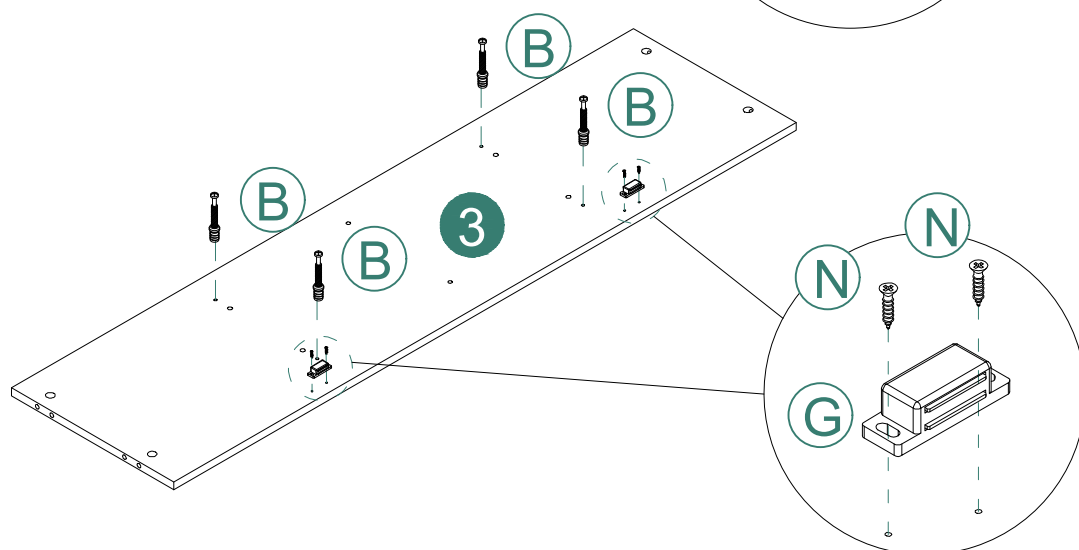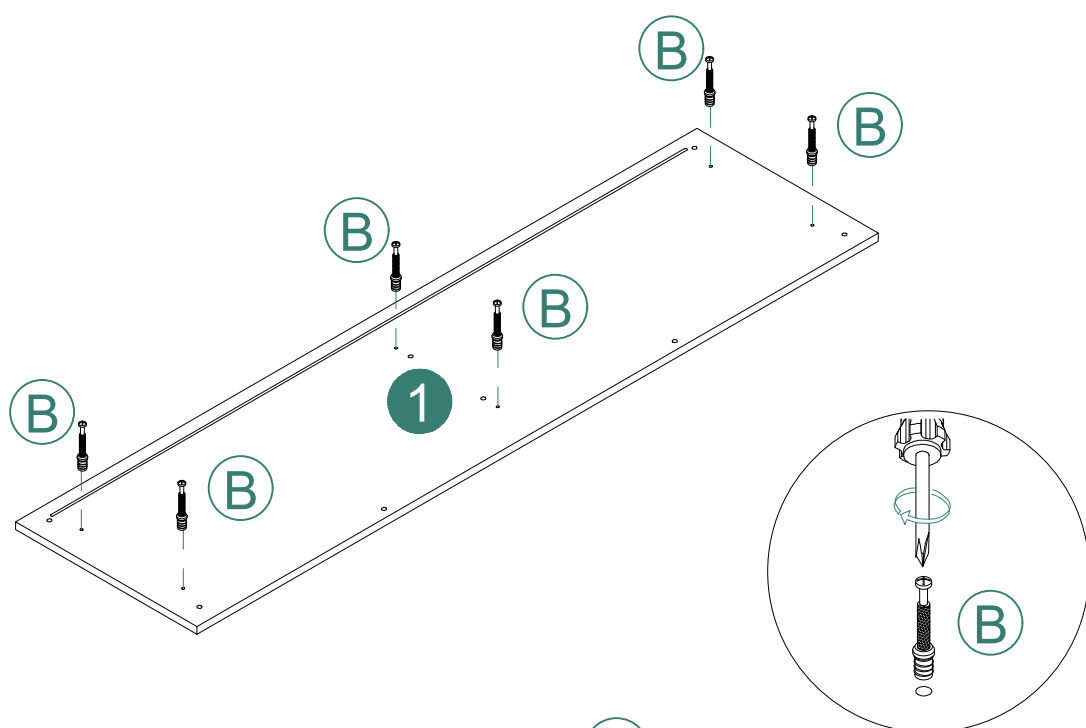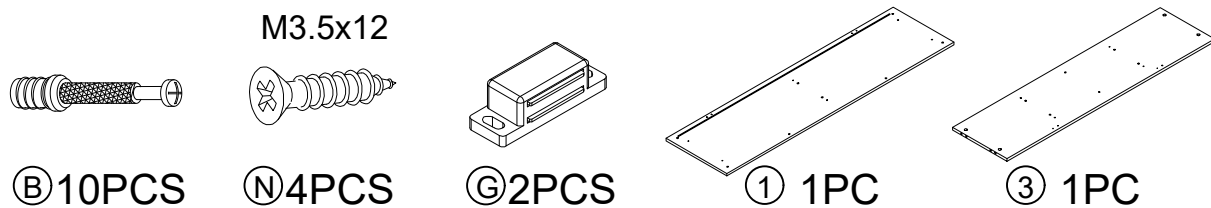

ASSEMBLY INSTRUCTIONS

5

Ø8x30




⑥6PCS


Ø8x38




①6PCS

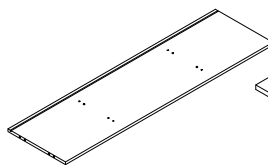


② 1PC

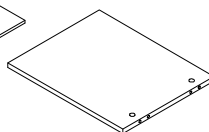


⑬ 1PC

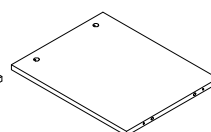

⑭ 1PC




⑮ 1PC

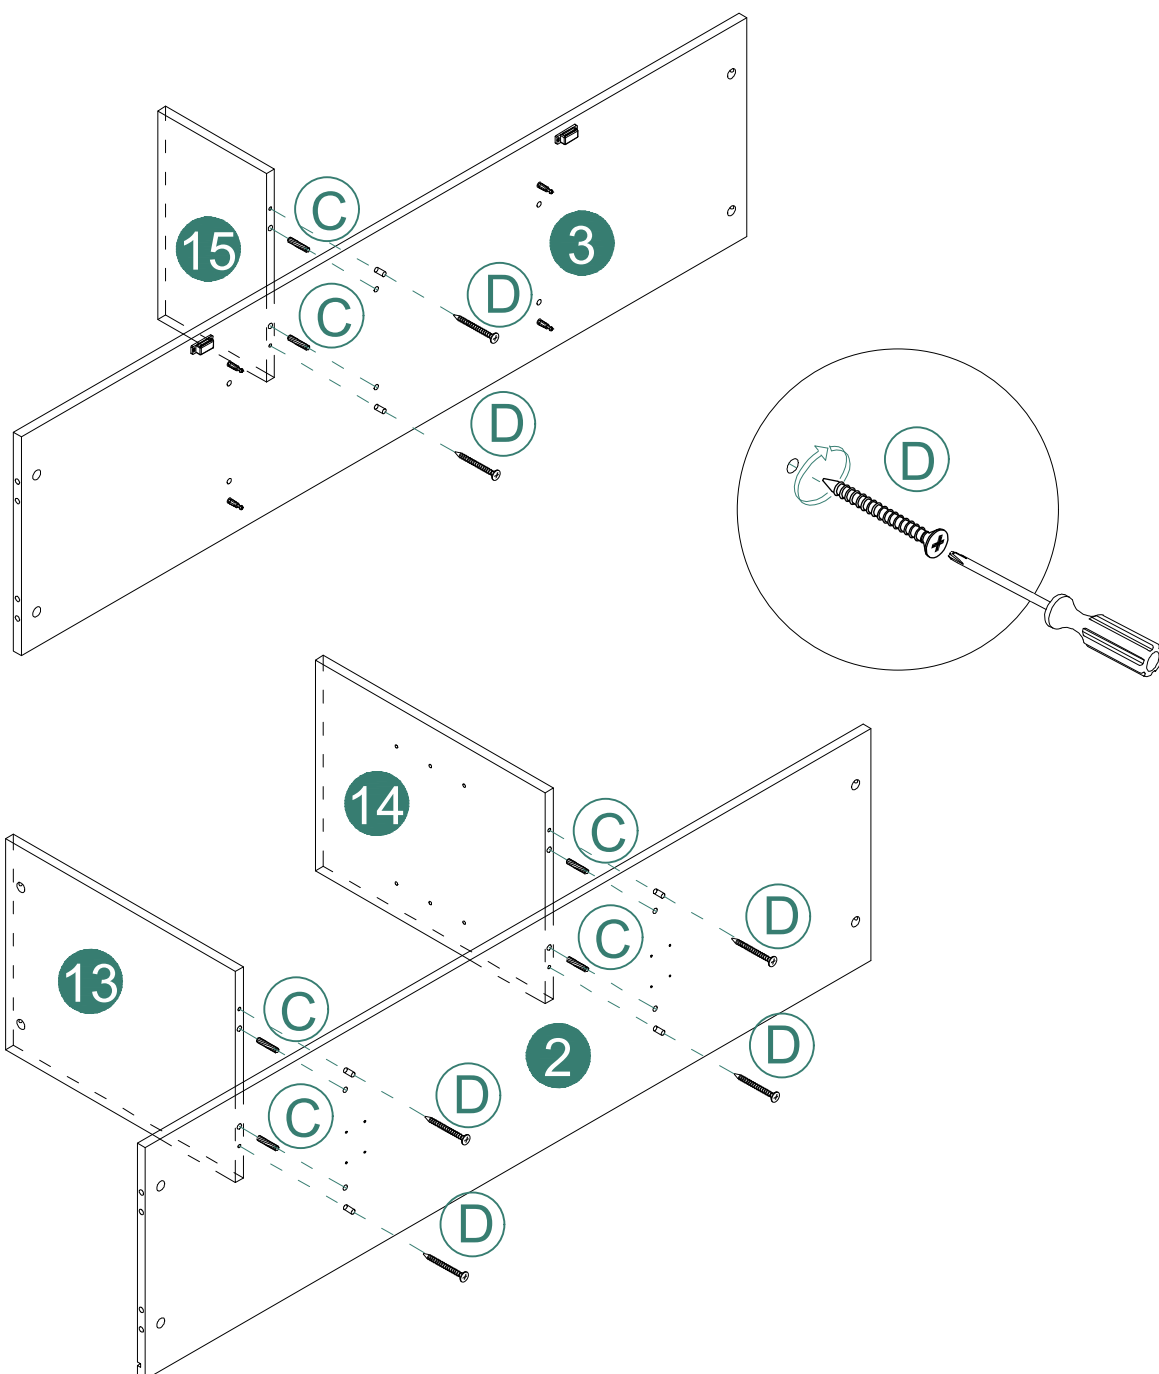


ASSEMBLY INSTRUCTIONS

6





Ⓐ 4PCS

Ø8x30




Ⓒ 4PCS

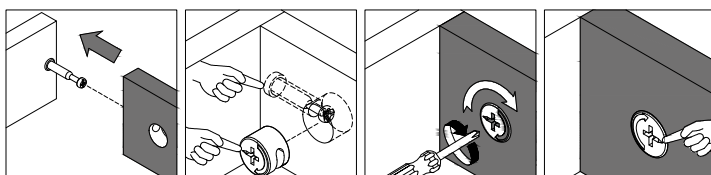
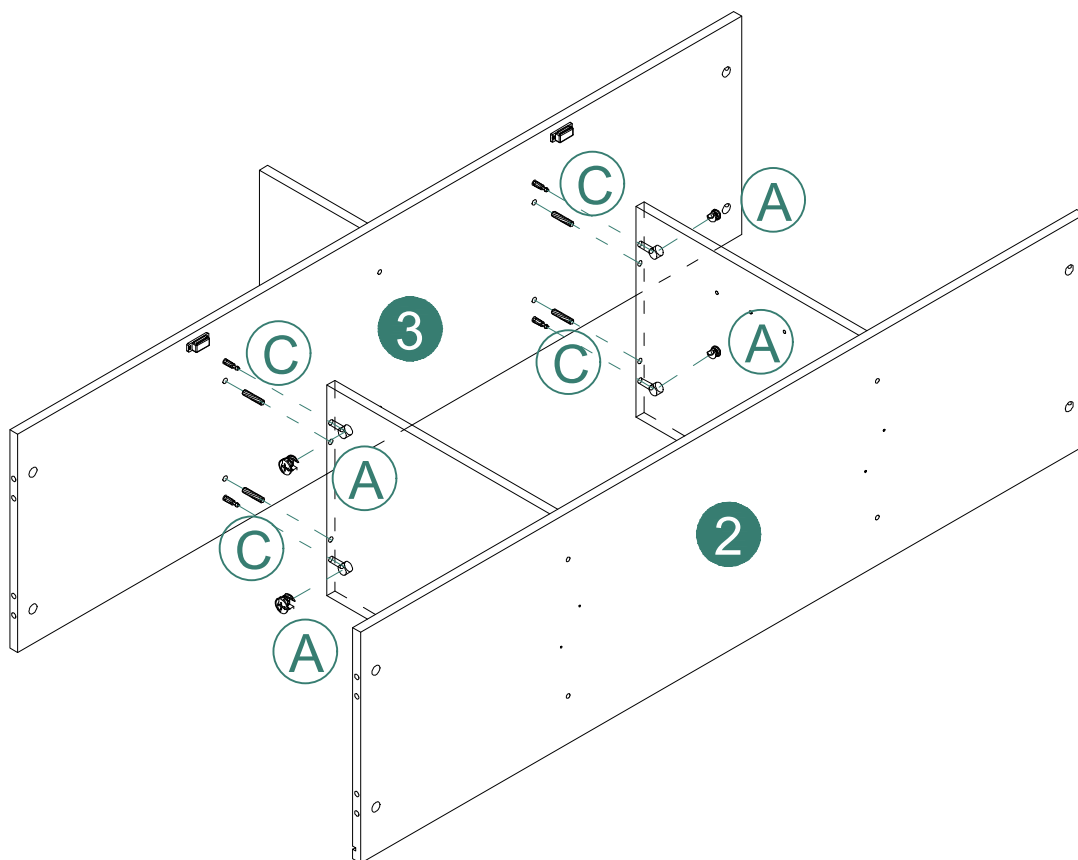


ASSEMBLY INSTRUCTIONS

7

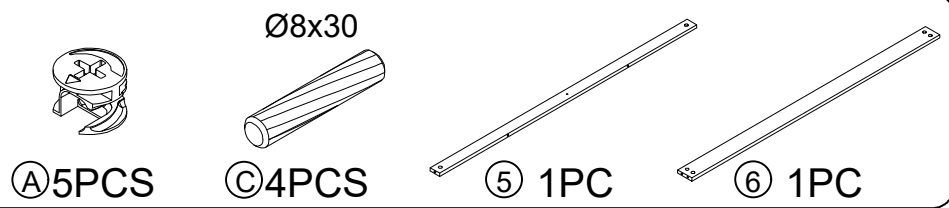

Please refrain from inserting these two holes into ① for now.

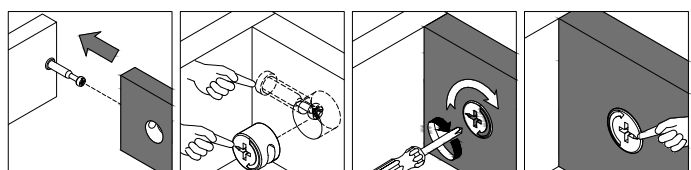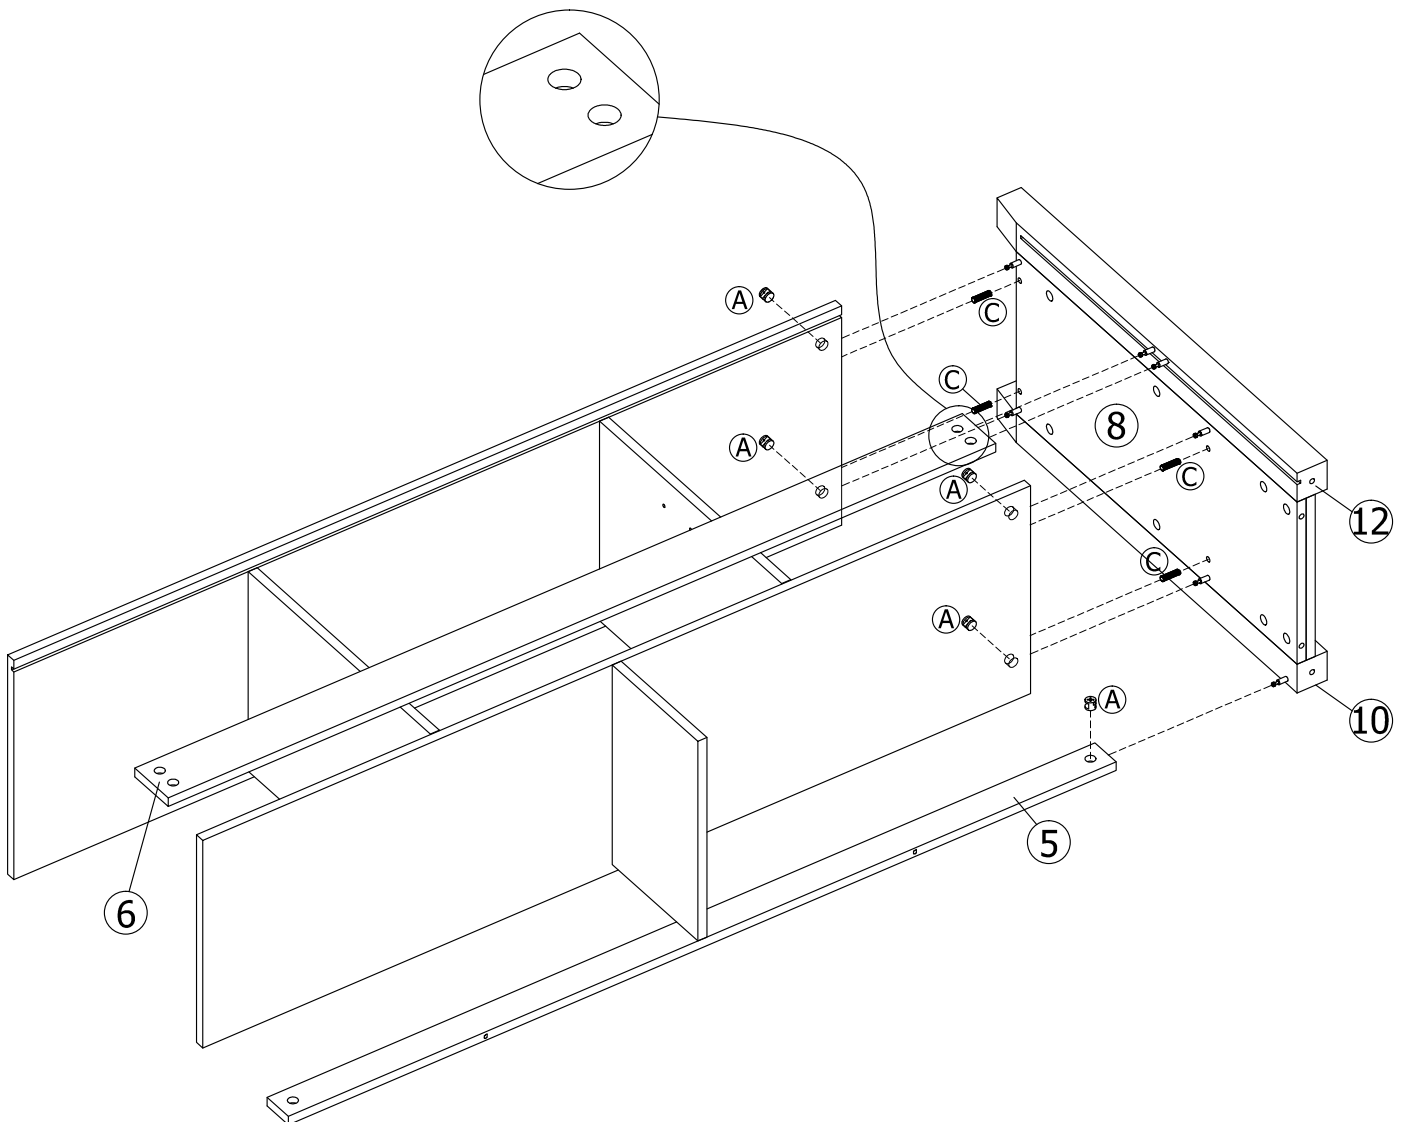


ASSEMBLY INSTRUCTIONS

8





Ⓐ 5PCS

Ø8x30




Ⓒ 4PCS

Please refrain from inserting these two holes into Ⓐ for now.

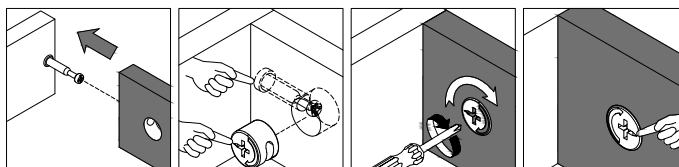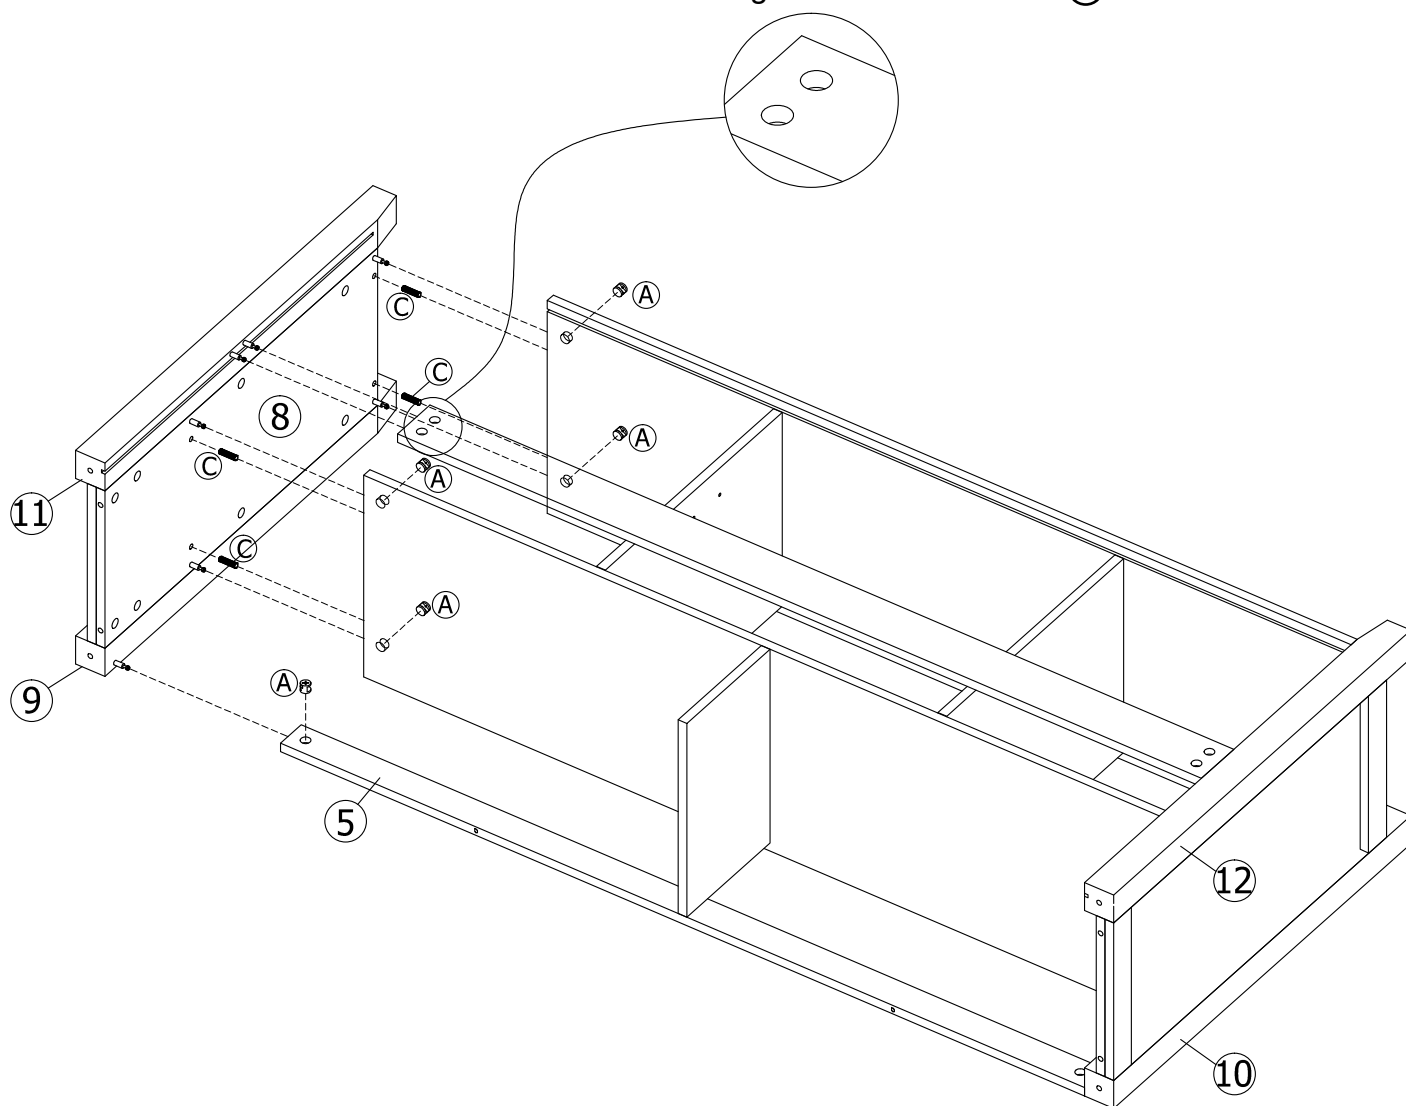


ASSEMBLY INSTRUCTIONS

9

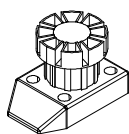


Ⓚ2PCS

M4x16




Ⓛ8PCS

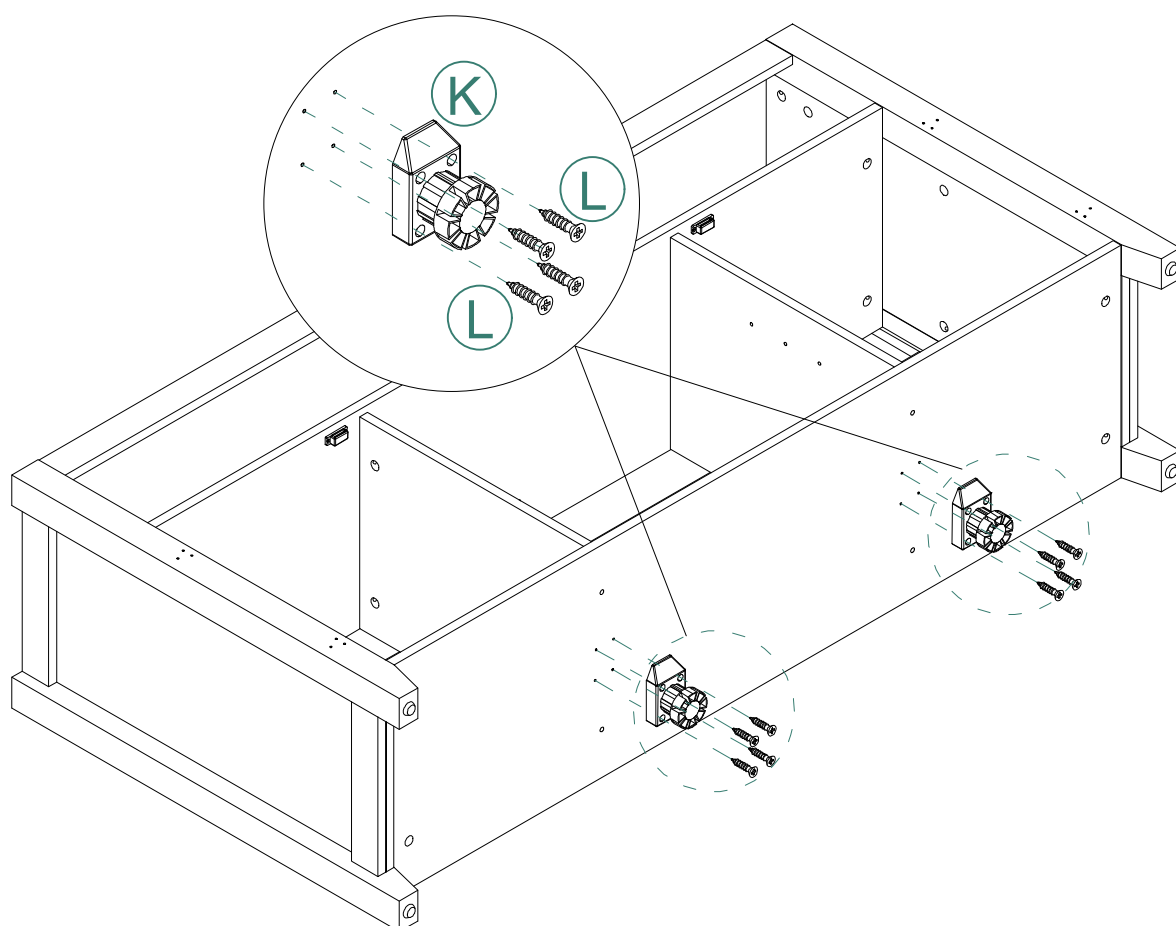


ASSEMBLY INSTRUCTIONS

10




Ⓔ 1PC

M3.5x16




Ⓕ 2PCS

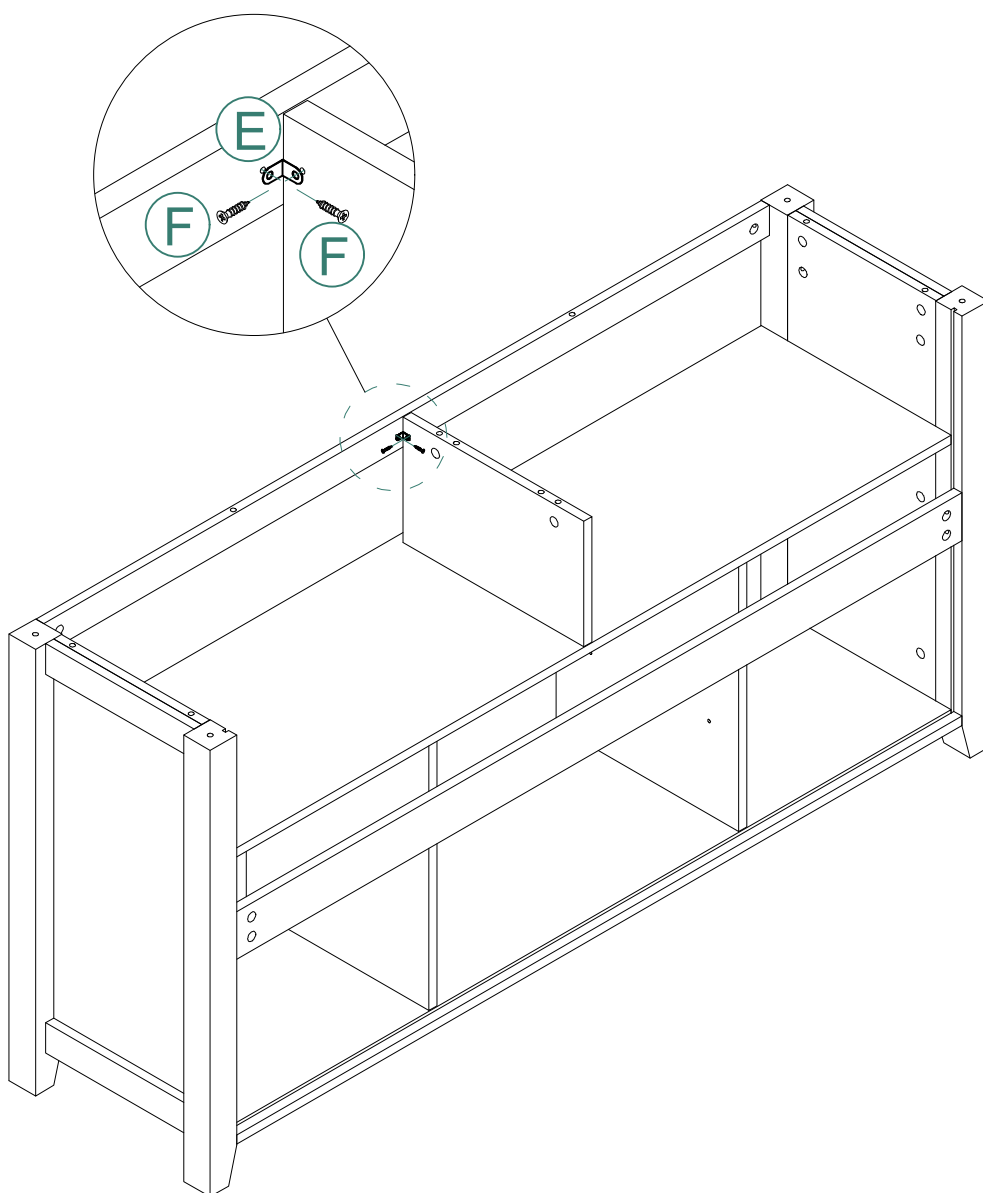


ASSEMBLY INSTRUCTIONS

11


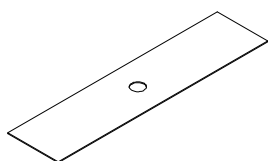


④ 2PCS




Ⓐ 4PCS

First put in board ④, then install Ⓐ

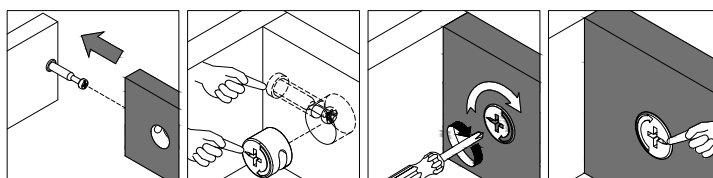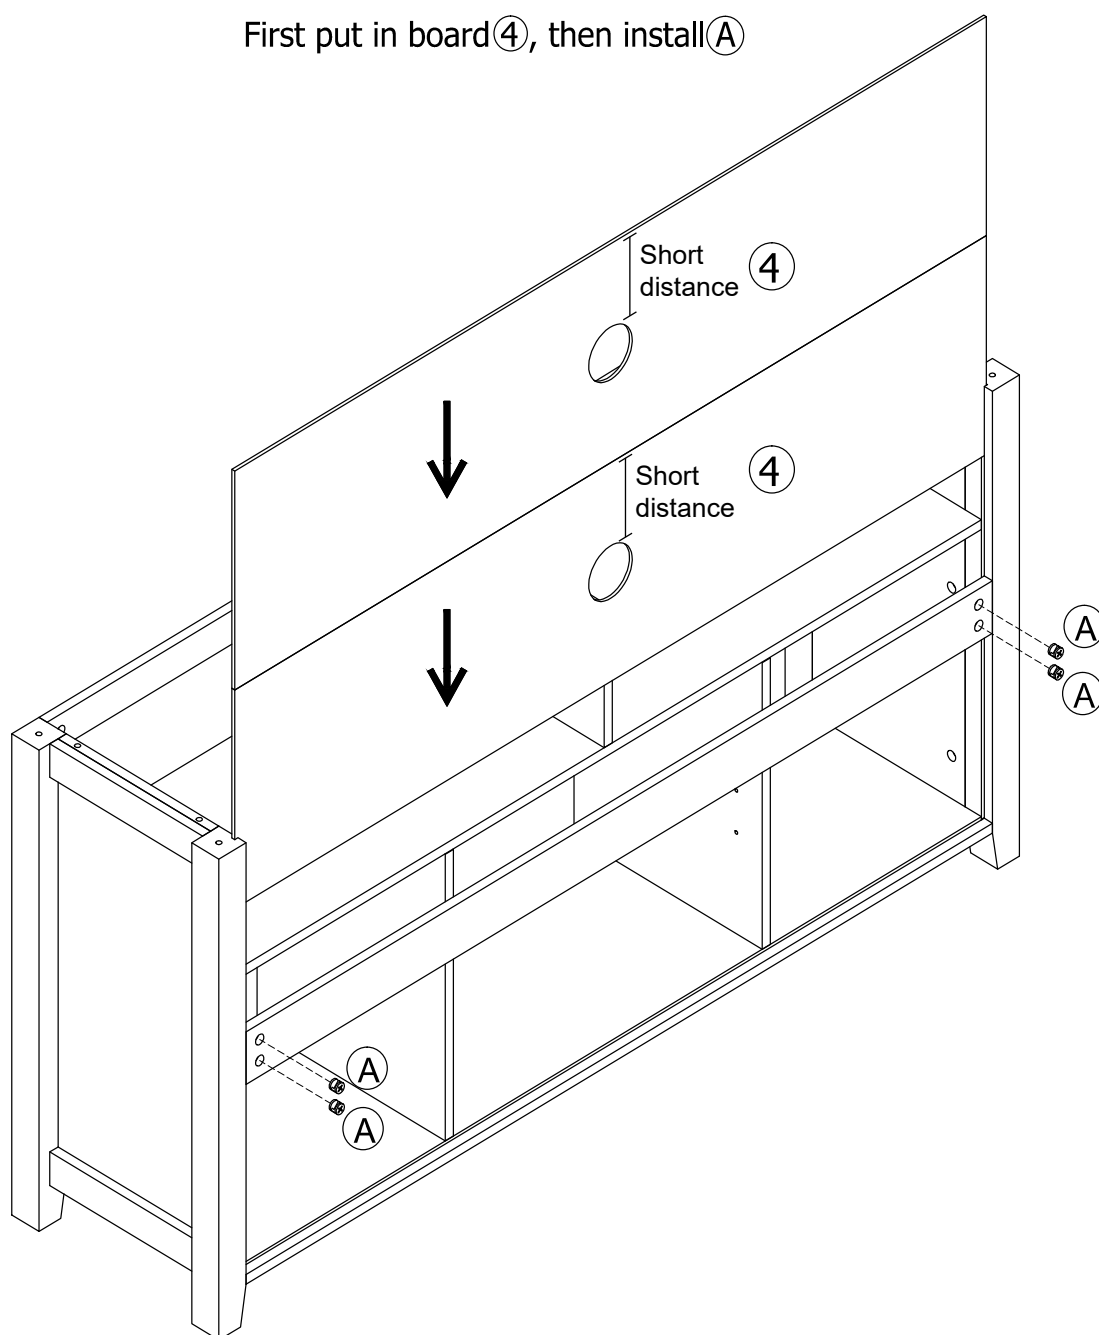


ASSEMBLY INSTRUCTIONS

12




Ⓐ 6PCS



Ø8x30




Ⓒ 8PCS

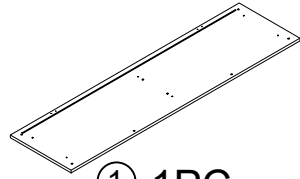

① 1PC

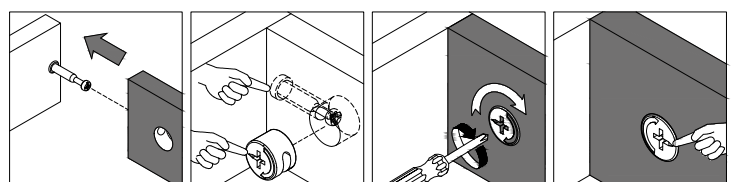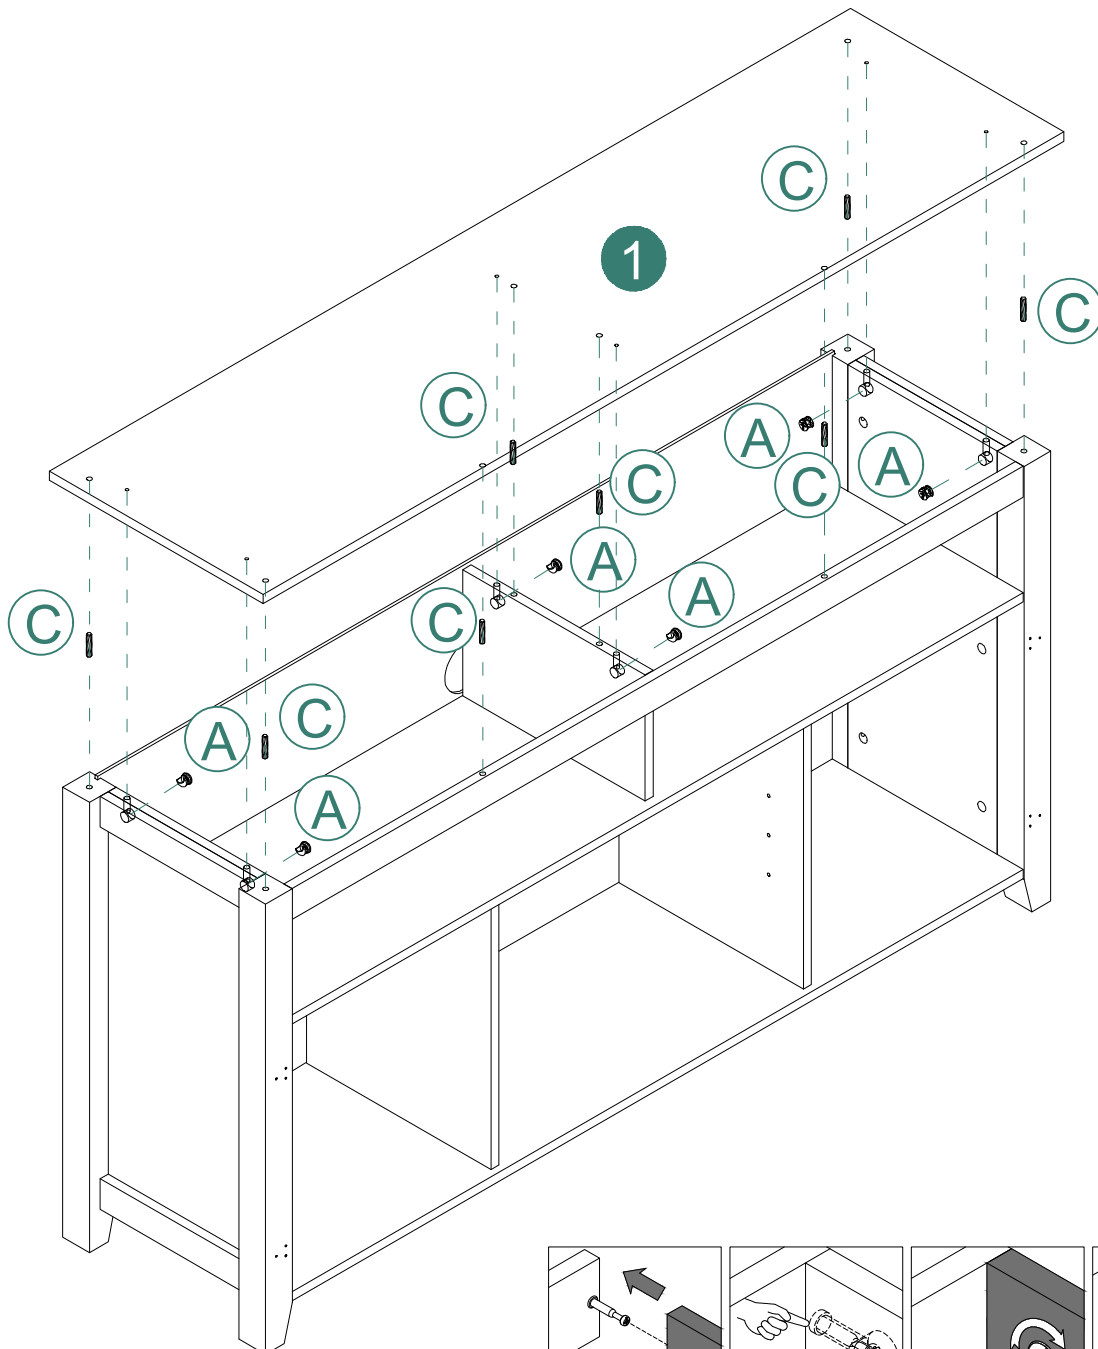


13




① 12PCS

M3x20




② 12PCS

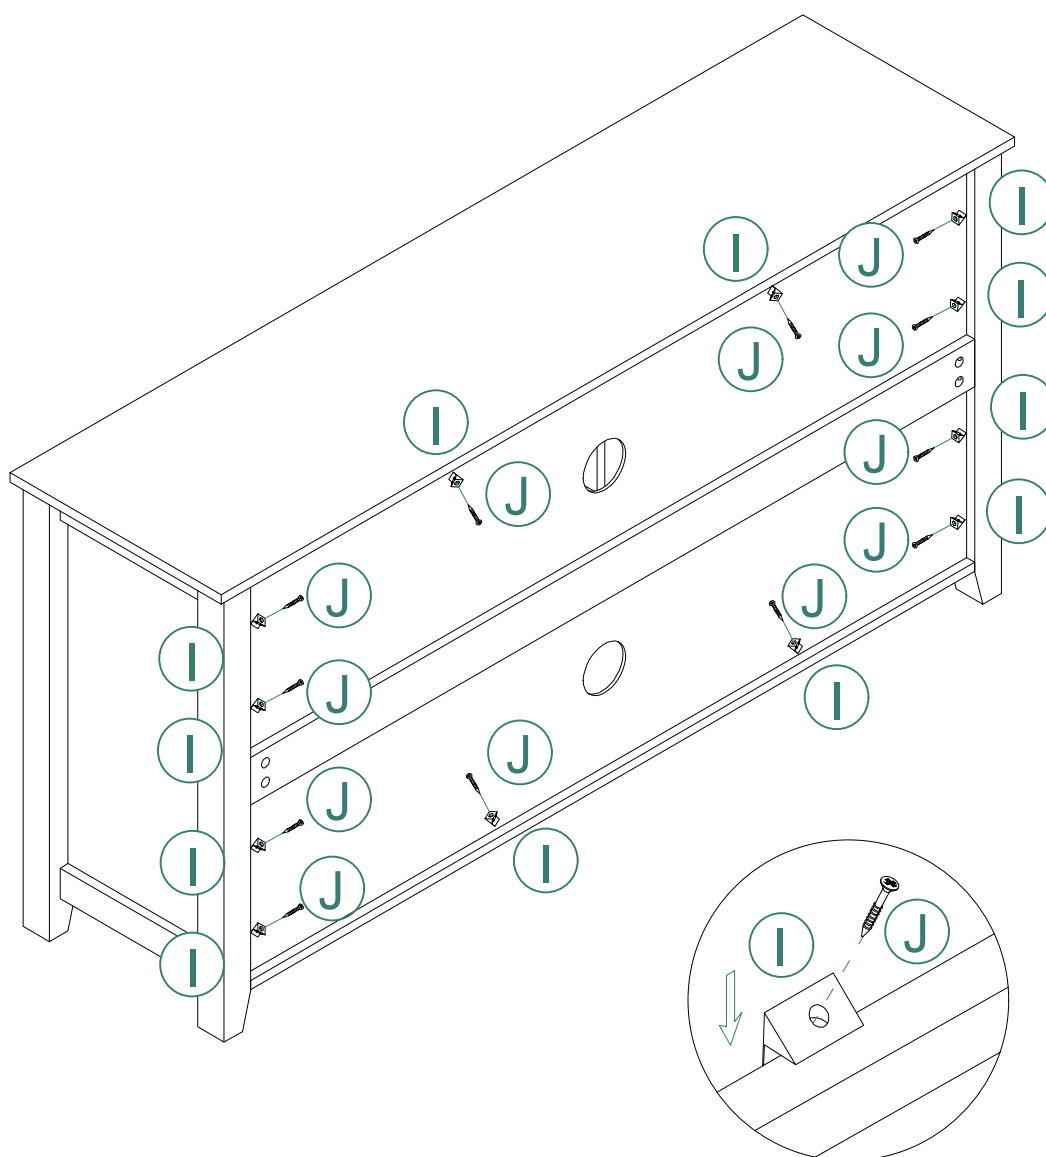

ASSEMBLY INSTRUCTIONS

14



Q1 2PC





Q2 1PC



Q3 1PC




Q4 1PC

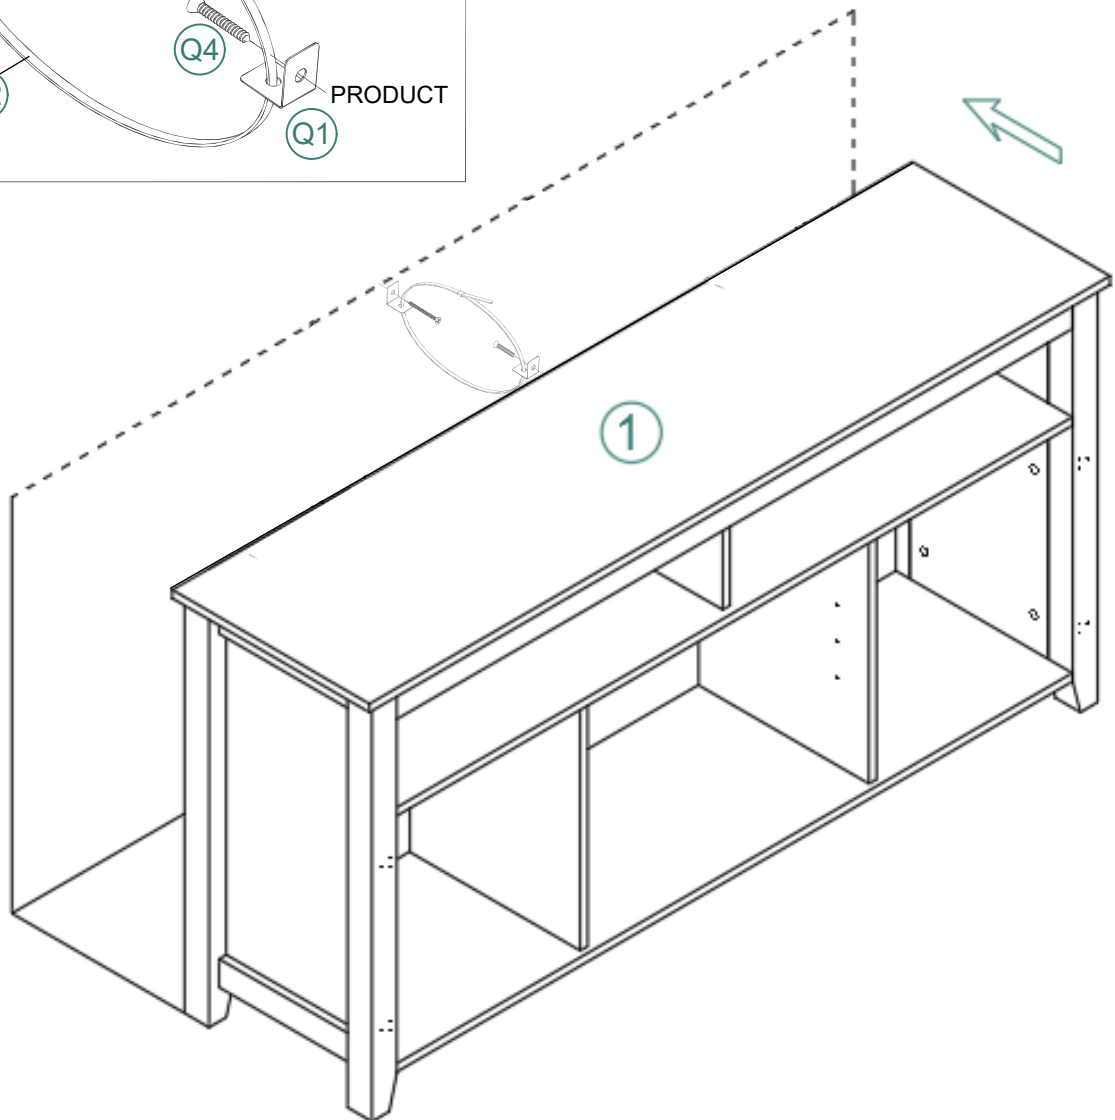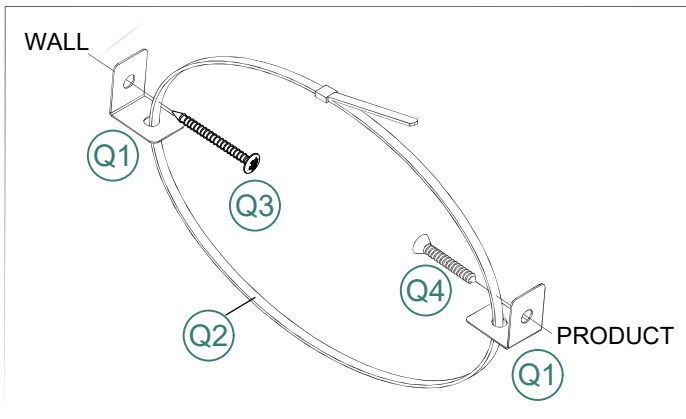


ASSEMBLY INSTRUCTIONS


15



Ⓜ4PCS

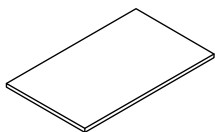


⑦ 1PC

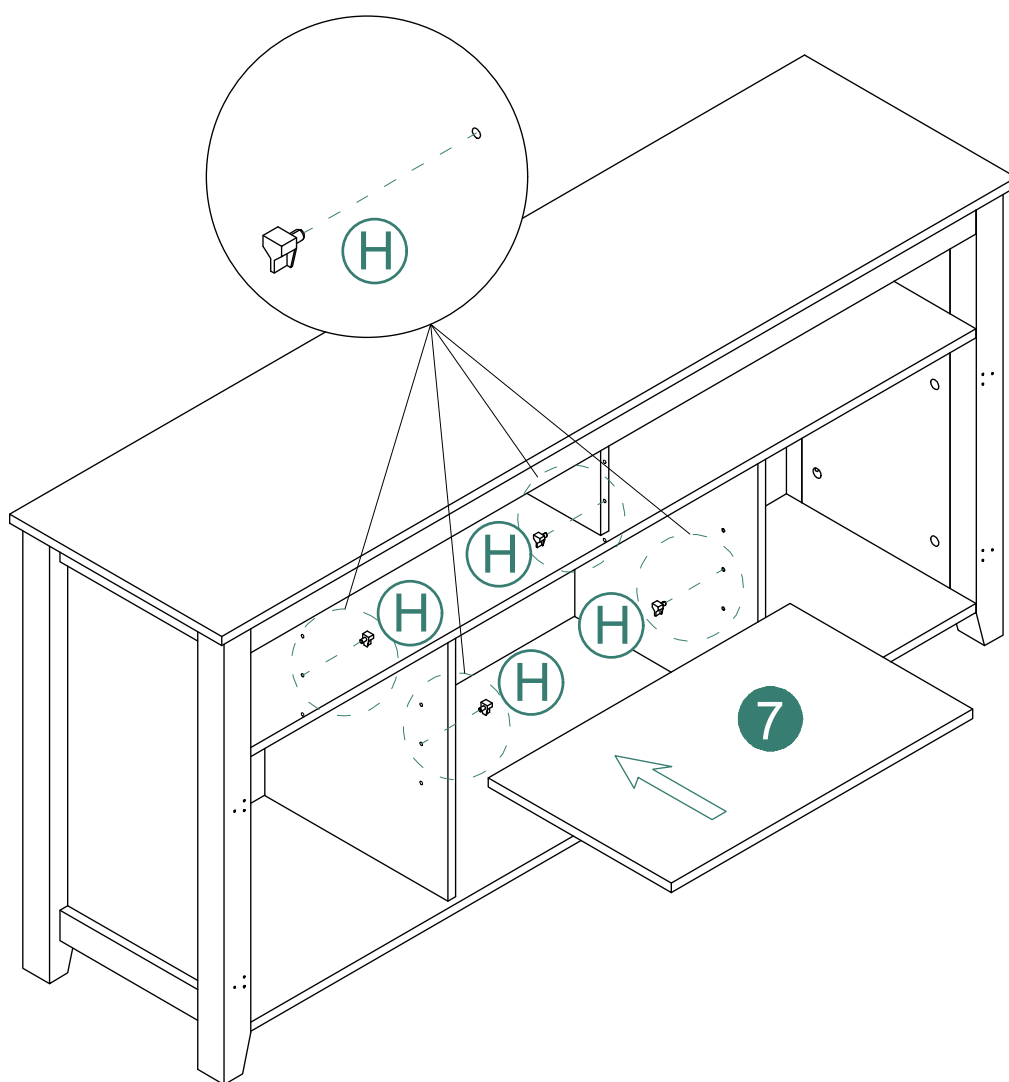


ASSEMBLY INSTRUCTIONS

16


M3.5x12



Ⓐ4PCS




Ⓒ2PCS

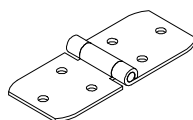


Ⓜ4PCS


M8x11




Ⓡ12PCS

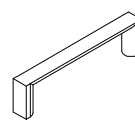


⓪2PCS





Ⓟ4PCS

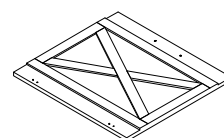

Ⓟ1PC

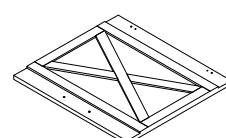


Ⓟ1PC

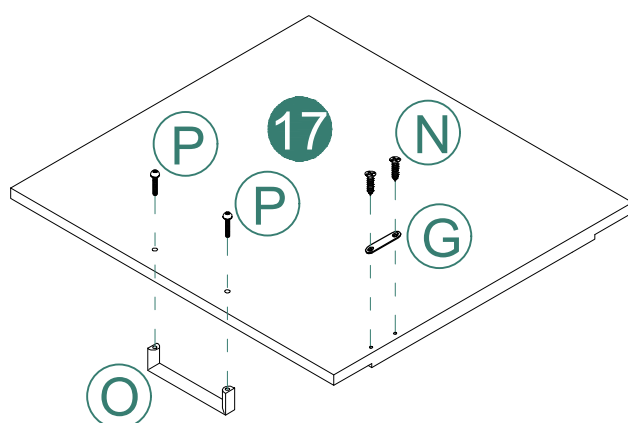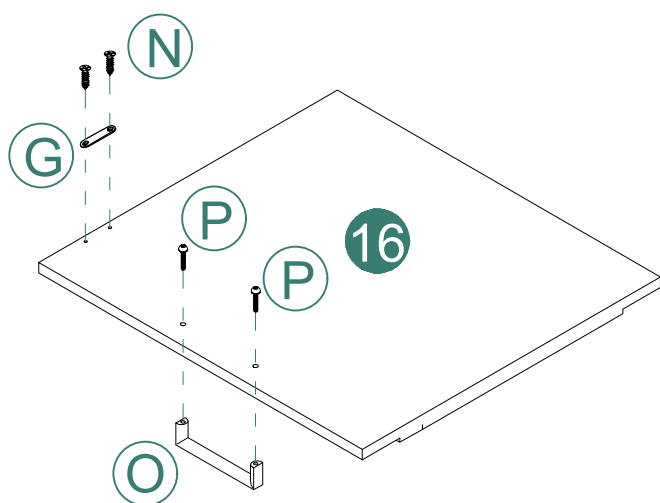

Turn over 180 °


Turn over 180 °

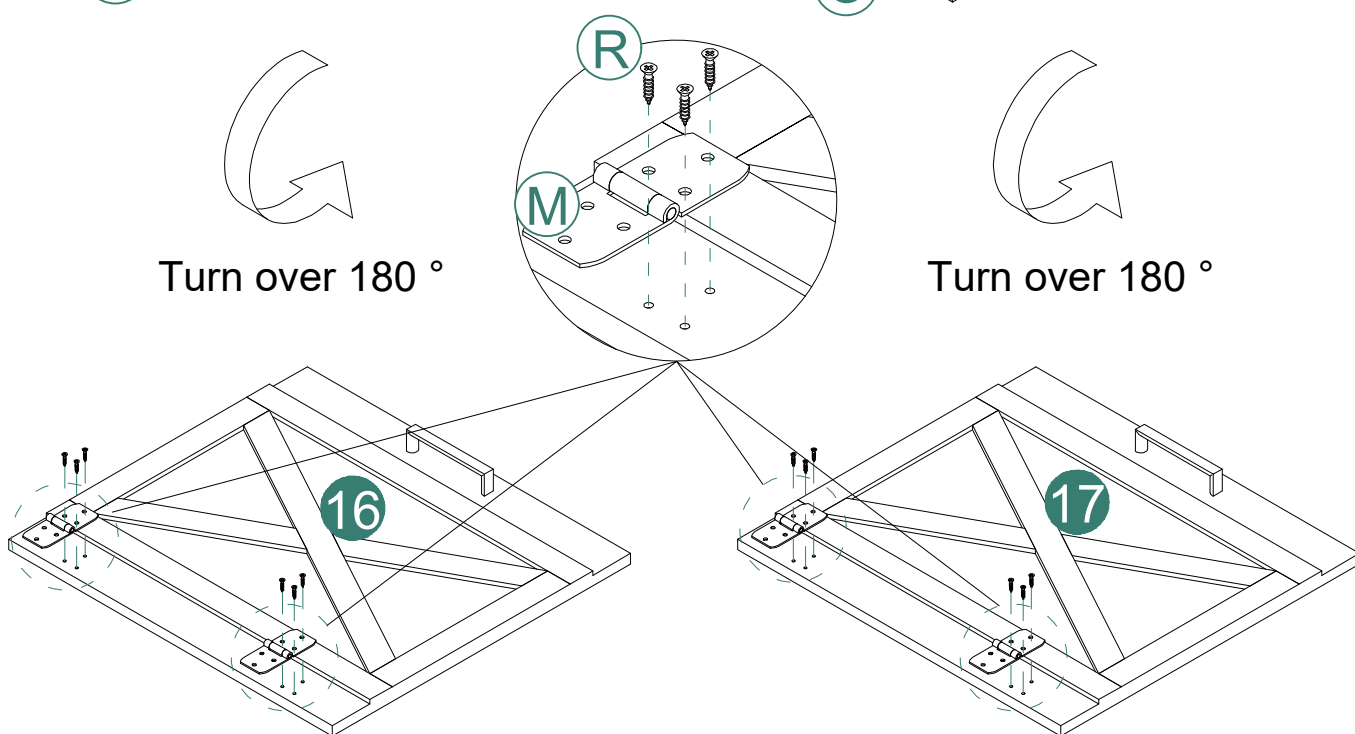


ASSEMBLY INSTRUCTIONS


17

M8x11



® 12PCS

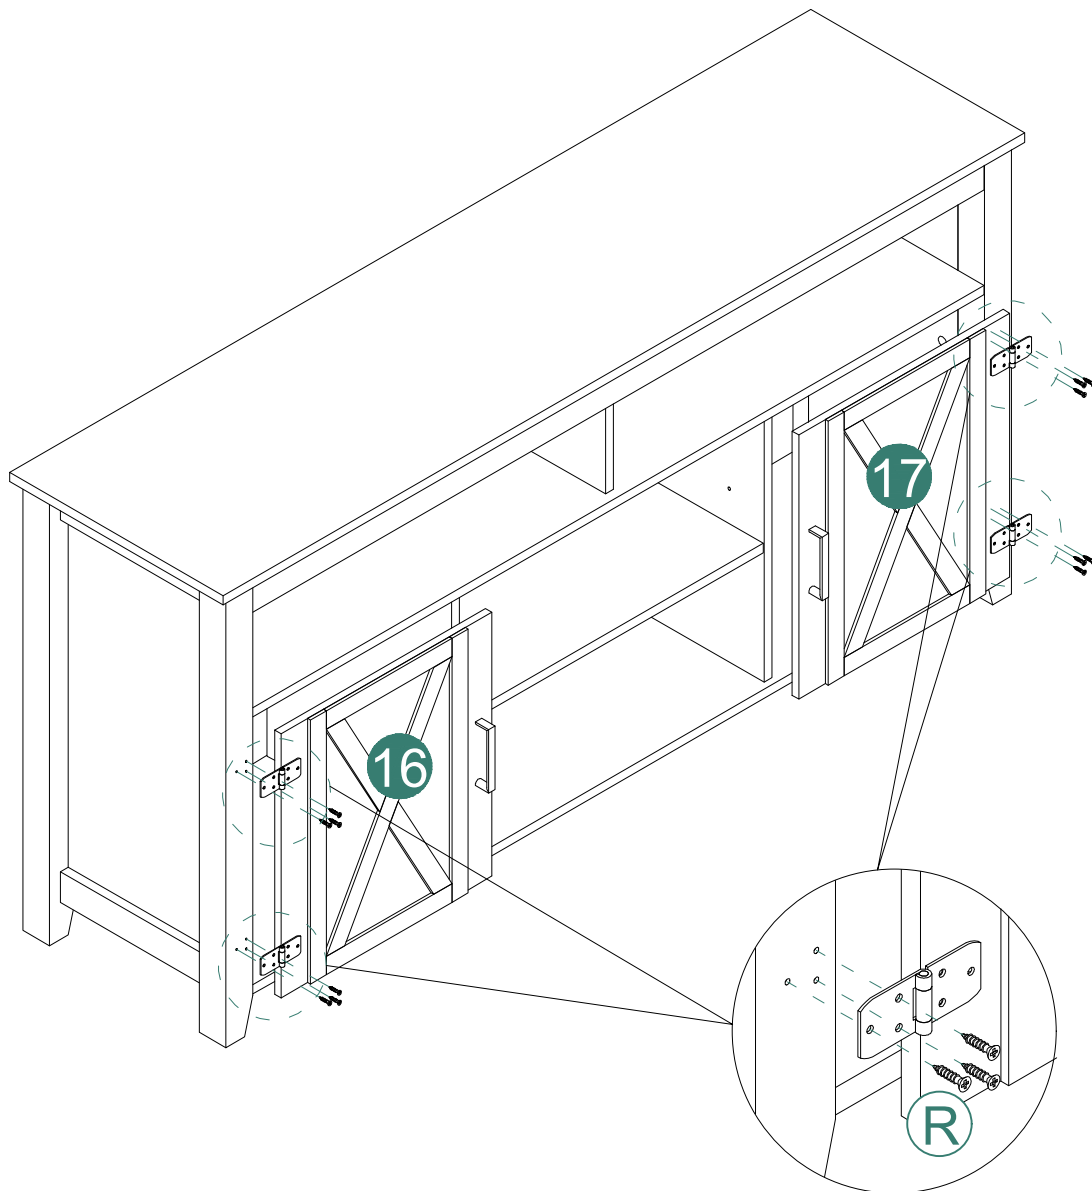

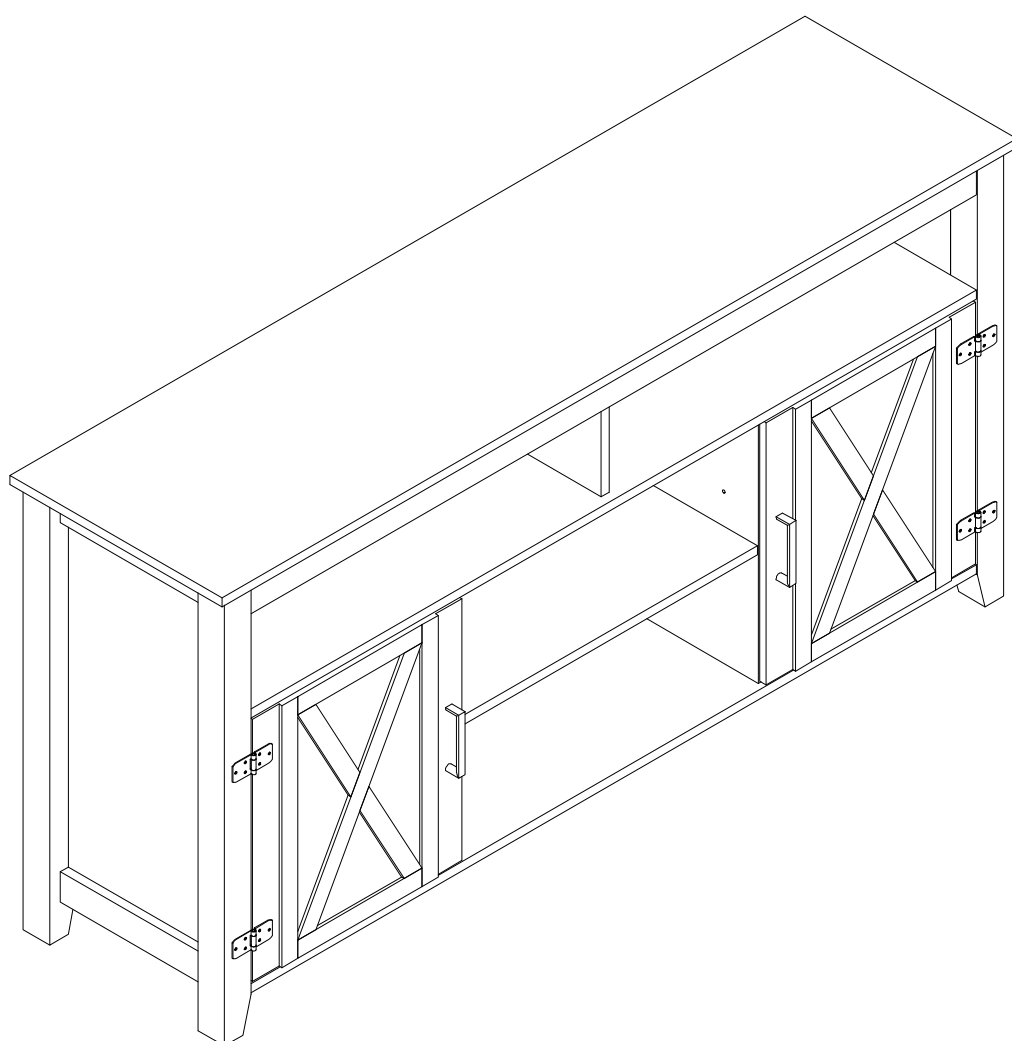

Installation Completed