

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- * Do not tighten bolts until completely.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly (included): Allen Key & Wrench


CARE AND MAINTENANCE

UPHOLSTERY CARE: To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.

SAFAVIEH FURNITURE



Model# HBD6402-Q

Product Dimensions: 65"W x 4"D x 57"H

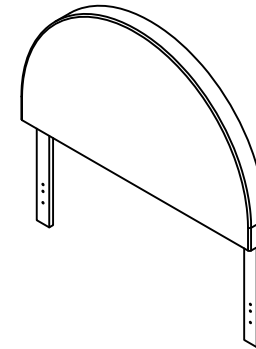

Weight capacity : 550lbs
WARNING : DO NOT STAND ON THE BED



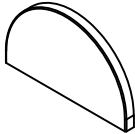



Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	Headboard		1x
B	Post		2x

The hardware that is needed to connect the headboard to the bed frame is included. Please note that our headboard legs are compatible to most standard bedframes. Our headboards **DO NOT** include a mounting bracket.

Example of Mounting
Bracket'




PIECE	DESCRIPTION	PICTURE	QTY
HW1	Hex Socket Bolt	 5/16"-18x1-3/4"	10x
HW2	Hex Socket Bolt	 5/16"-18x2"	4x
HW3	Flat Washer	 5/16"x3/4"	4x
HW4	Nut	 5/16"	4x
HW5	Wrench	 M12	1x
HW6	Allen Key	 M4	1x

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly (included): Allen Key & Wrench
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


1

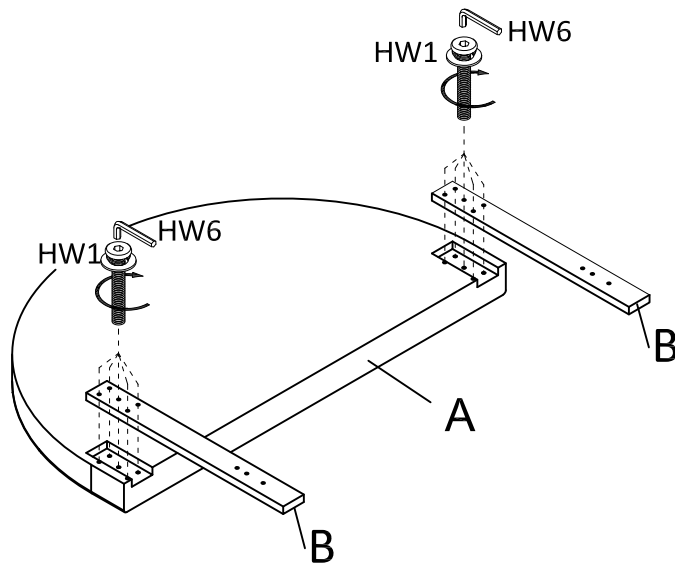

Step 1

Attach 2*Post (B) to the Headboard (A), Use Allen Key (HW6) to lock 10*Hex Socket Bolt (HW1). Reference image above.

2

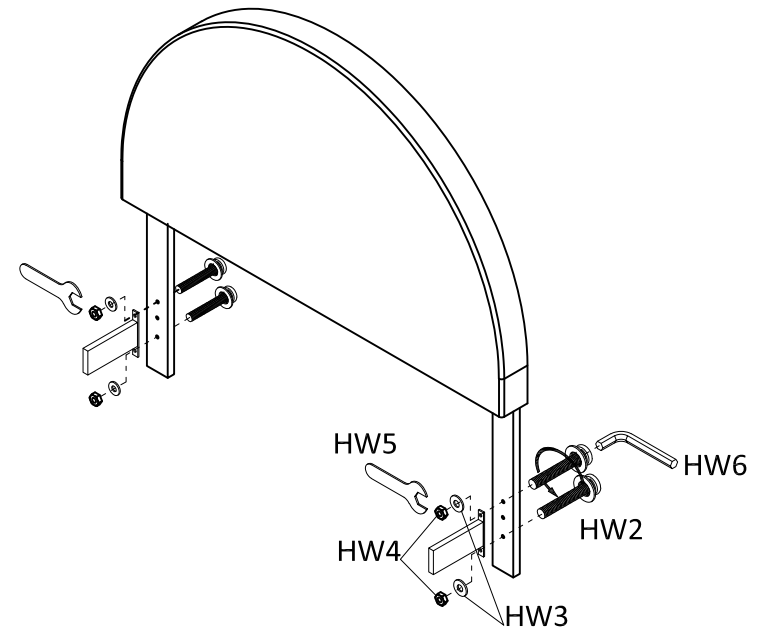

Step 2

To assemble Side Rail (not provided) with Headboard ==> Use Allen key (HW6) to lock 4*Hex Socket Bolt (HW2). Use Wrench (HW5) to lock into assembled headboard/post with Flat Washer (HW3) and Nut (HW4) from the other side. Reference image above.
Assembly is completed.