
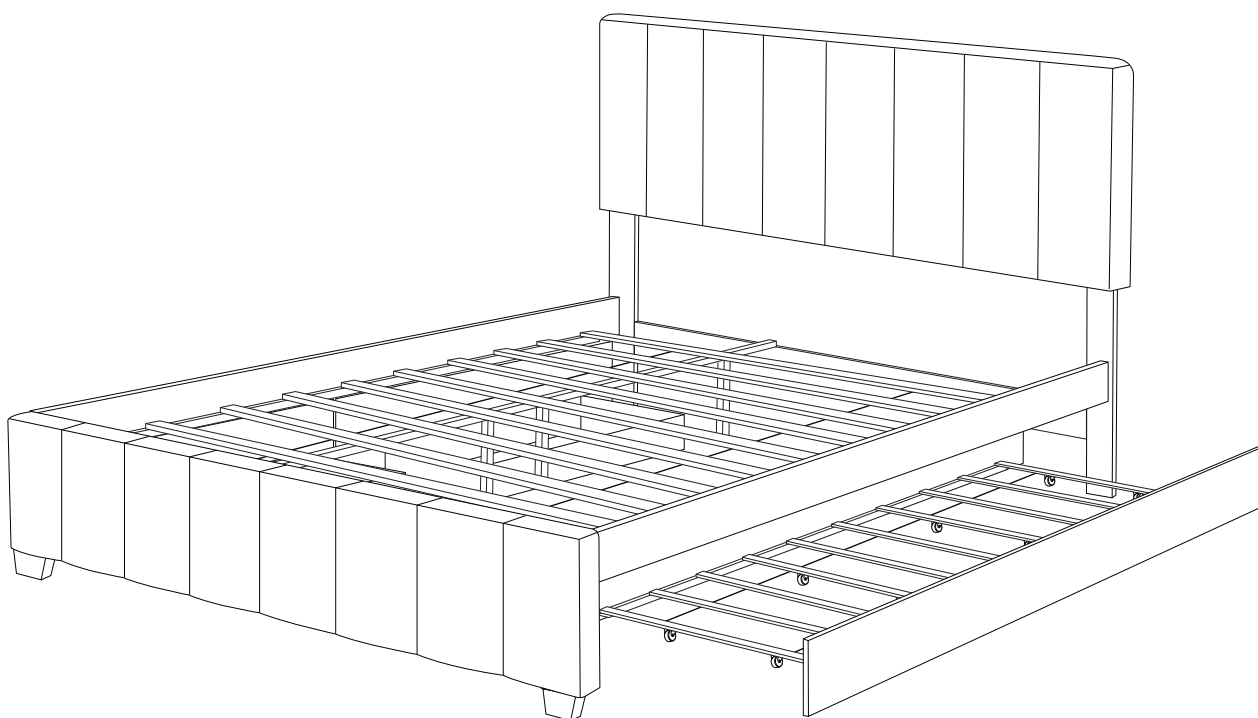







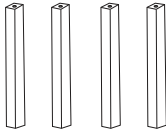



# ASSEMBLY INSTRUCTION









SKU CODE : WF 302150 / WF302151
















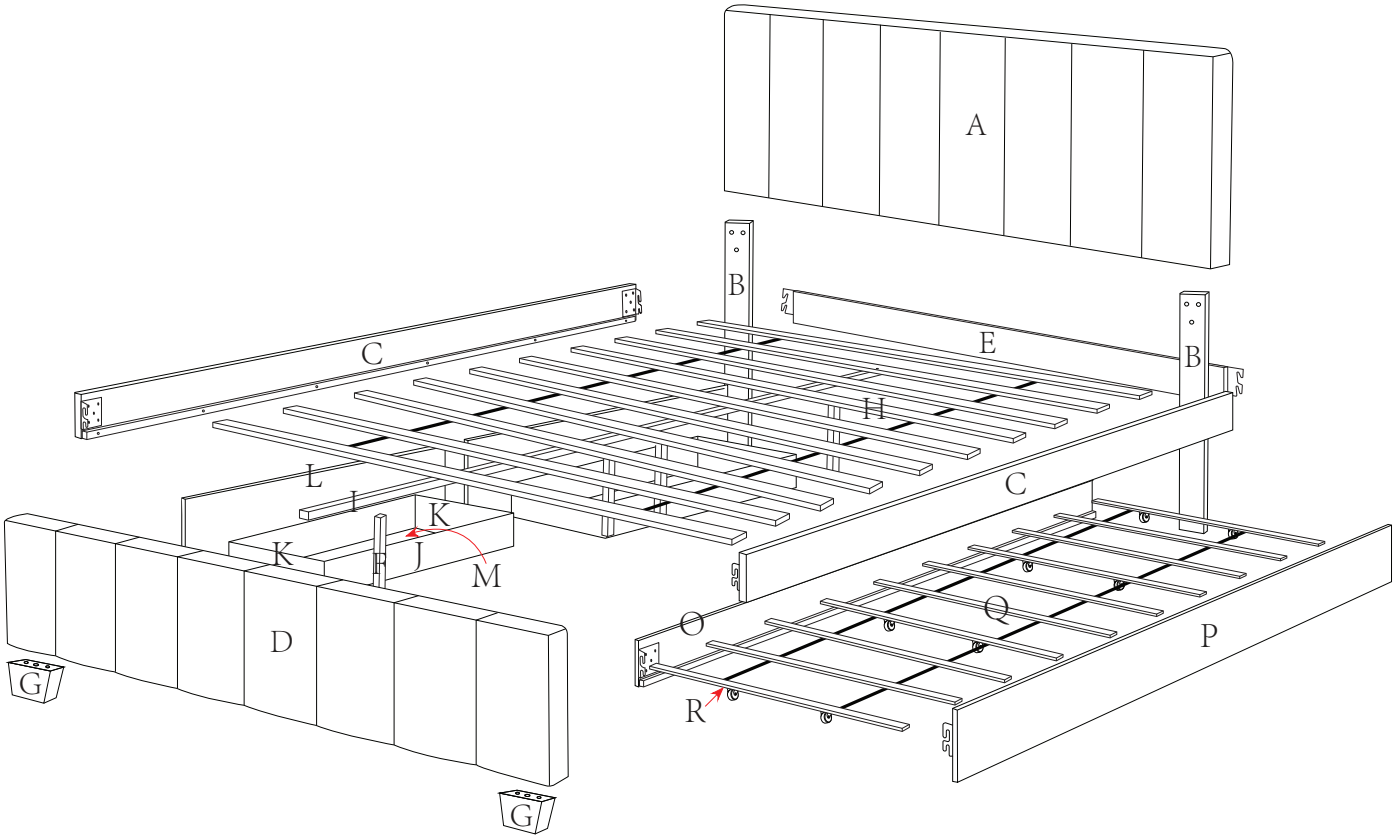


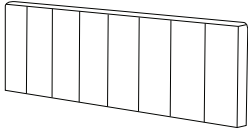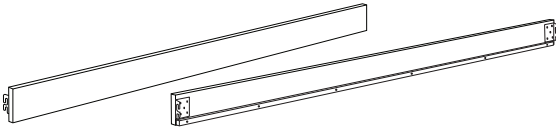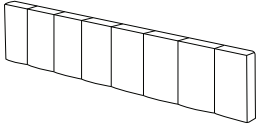
Detail View - TRUNDLE BED (QUEEN)

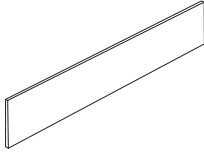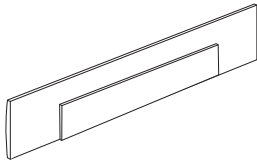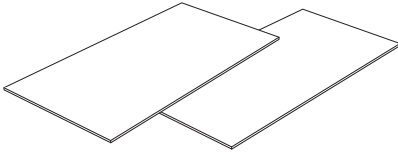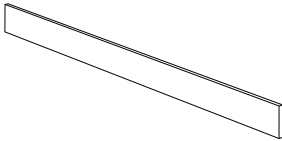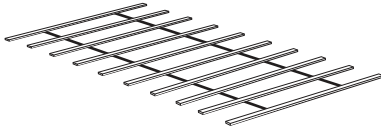

NO	PART LIST	QTY
A	Headboard 	1 pc
B	Headboard Leg 	2 pcs
C	Side Rail 	2 pcs
D	Footboard 	1 pc
E	Headboard Support Bar 	1 pc
F	Center Support Leg 	4 pcs
G	Bed Leg 	2 pcs
H	Bed Slat Queen 	10 pcs
I	Center Support Rail 	1 pc

NO	PART LIST	QTY
J	Drawer Back Panel 	2 pcs
K	Drawer Side Panel 	4 pcs
L	Drawer Front Panel 	2 pcs
M	Drawer Bottom Panel 	2 pcs
O	Trundle Long Panel (i) 	1 pc
P	Trundle Long Panel (ii) 	1 pc
Q	Trundle Bed Slat 	10 pcs
R	Trundle Slat Cube 	8 pcs



NO	HARDWARE LIST	QTY
1	JCBB M8 x 20mm 	8 pcs
2	JCBC M6 x 70mm 	2 pcs
3	JCBC M6 x 60mm 	4 pcs
4	JCBC M6 x 45mm 	7 pcs
5	JCBB M8 x 25mm 	4 pcs
6	Flat Washer M6 	7 pcs
7	Dowel M8 	4 pcs
8	Adjuster M6 	4 pcs
9	CSK M4 x 20mm 	4 pcs
10	U-Bracket 	1 pc
11	CSK M3.5 x 16mm 	56 pcs
12	CSK M4 x 30mm 	40 pcs
13	Allen Key M4(100mm) 	1 pc

NO	HARDWARE LIST	QTY
14	Allen Key M5(65mm) 	1 pc
15	CSK M4 x 38mm 	16 pcs
16	Wheel 	16 pcs
17	CSK M4 x 32mm 	16 pcs


Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat surface, such as carpet or rug, to prevent from being scratched.

CAUTION :


1. Do not Full Tighten the nut or screw until all ready to assemble.
2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
3. Keep all hardware part out reach of children.

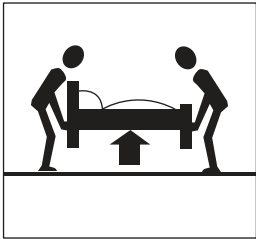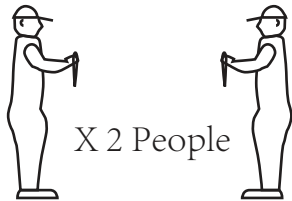

## STEP 1 Trundle Bed x 1 pc

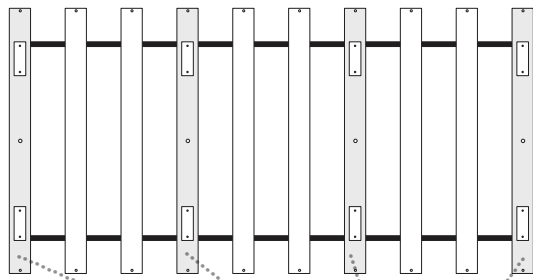


Step 1

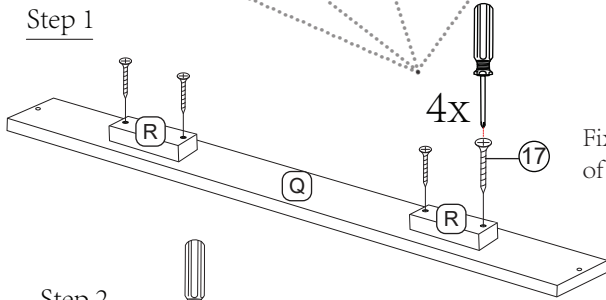


Fix the cube at the bottom of 1st, 4th, 7th, and 10th slat.

Step 2

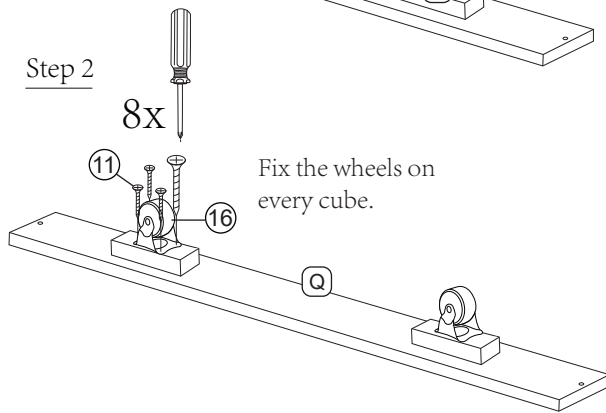


11	12	16	17
32 pcs	20 pcs	8 pcs	16 pcs

COMPLETED ASSEMBLY

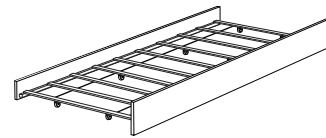


Step 3

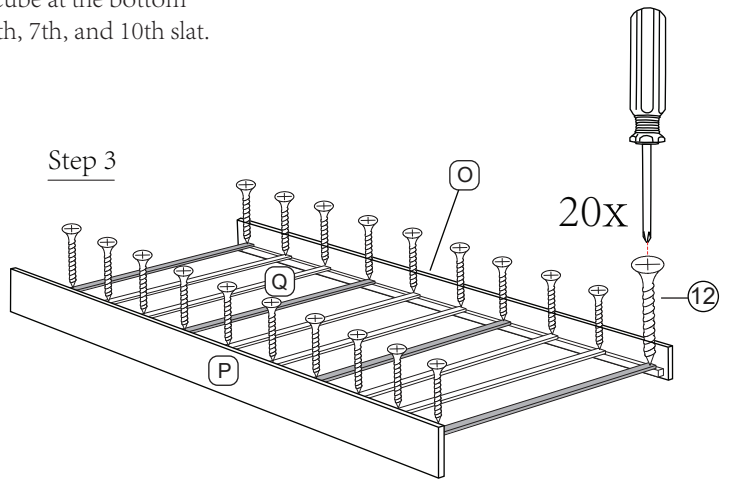


## STEP 2 Drawer x 2 pcs

Step 1

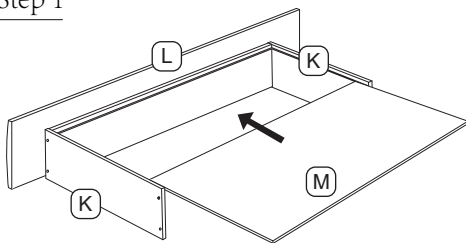


Step 2

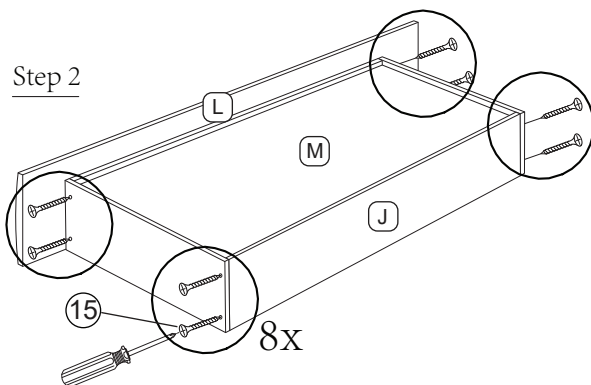


11	15	16
24 pcs	16 pcs	8 pcs





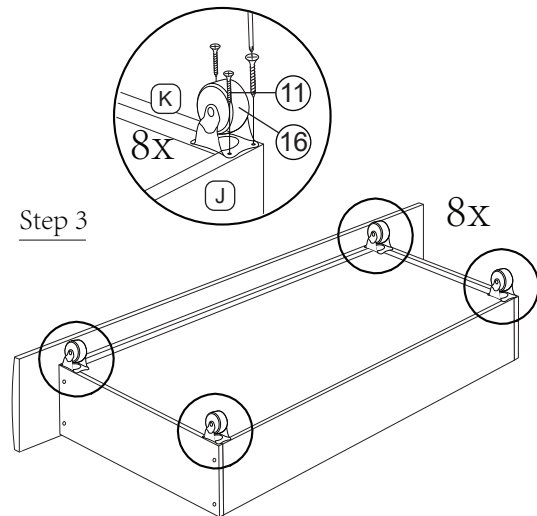Step 3




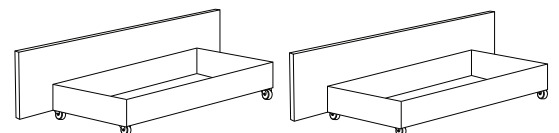


COMPLETED ASSEMBLY






STEP 3

2	4	6	7
			
2 pcs	6 pcs	6 pcs	4 pcs

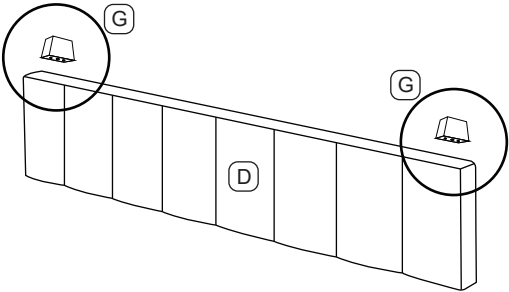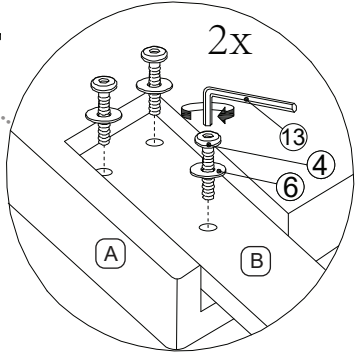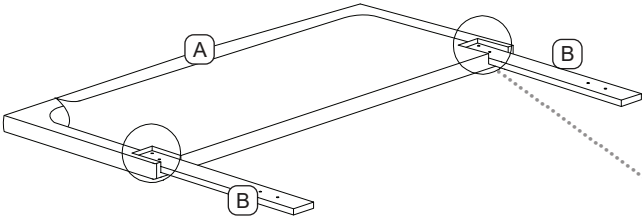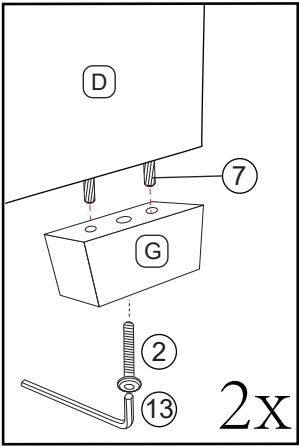

STEP 4


1

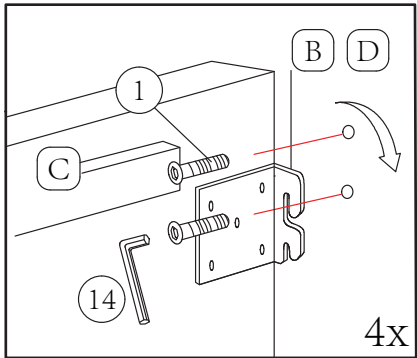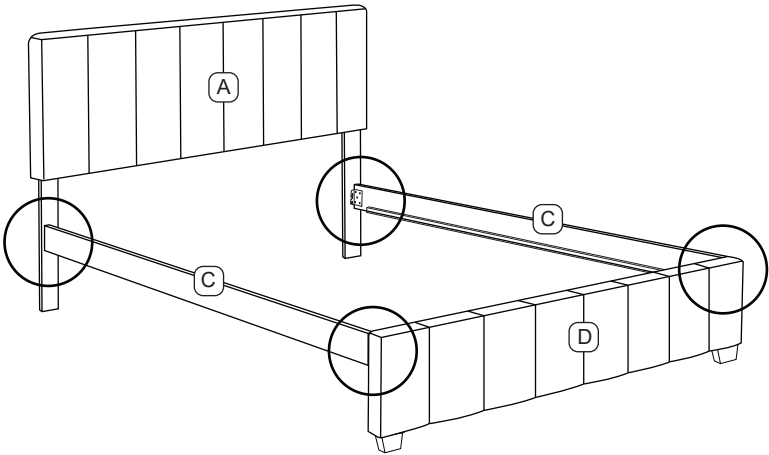8 pcs






# STEP 5

5



4 pcs

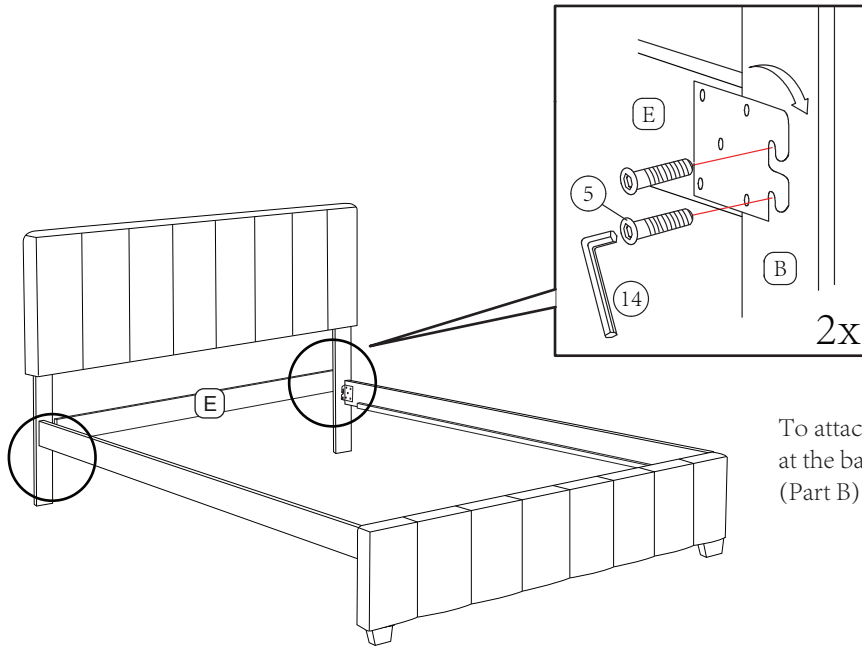


To attach the Headboard Support Bar at the backside to the Headboard Leg (Part B).

# STEP 6



Decide the side for trundle bed & drawers

4	6	9	10
1 pc	1 pc	4 pcs	1 pc

Option 1

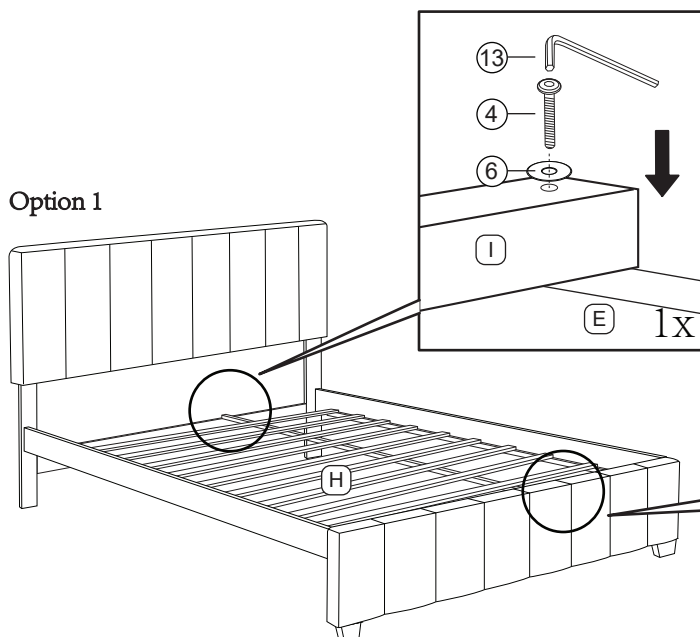


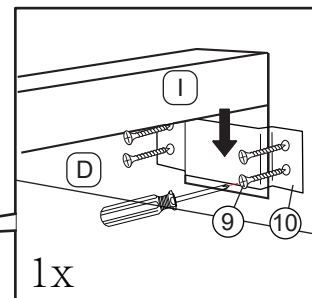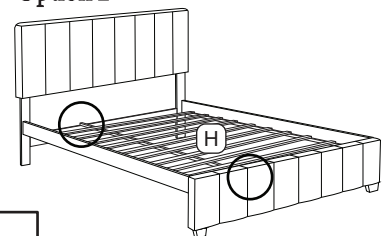




Option 2



Follow the marking to attach the U-Bracket with Screw 20mm (4PCS) at Footboard.


STEP 7

3	8	12
		
4 pcs	4 pcs	20 pcs

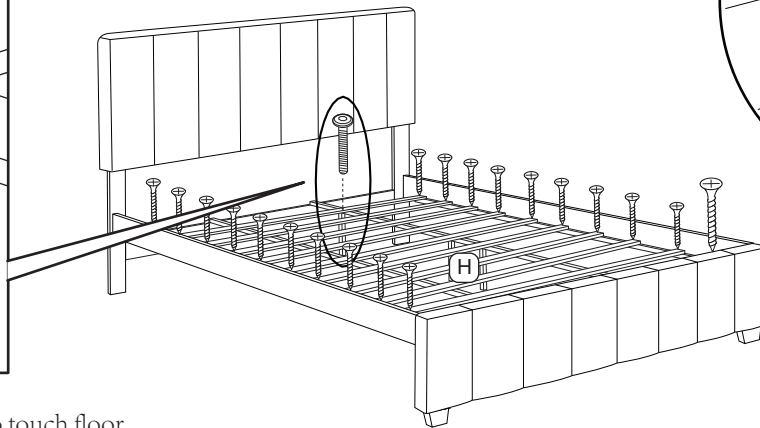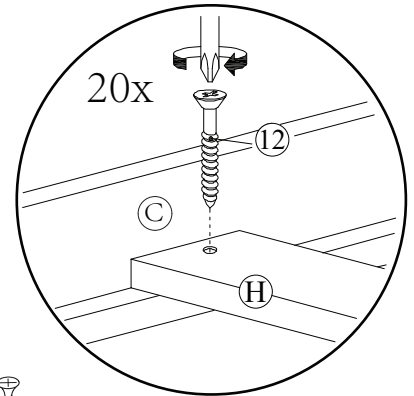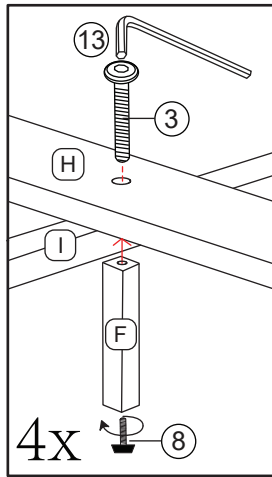

Adjust slat leveling feet to touch floor.

Lastly, place the trundle bed & drawers inside.

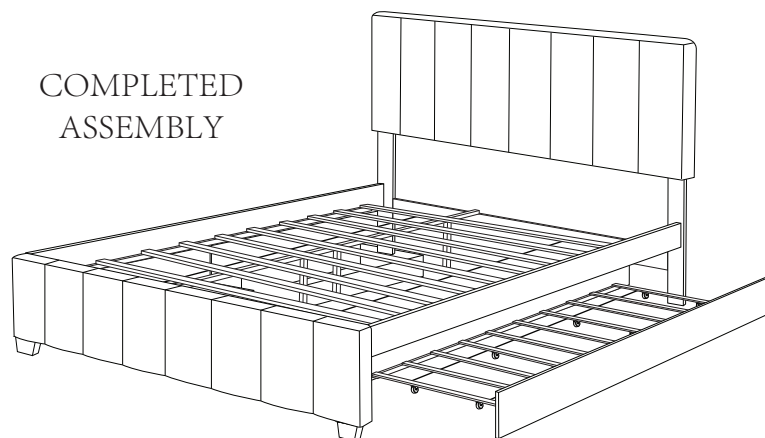

 Box Spring Recommended