
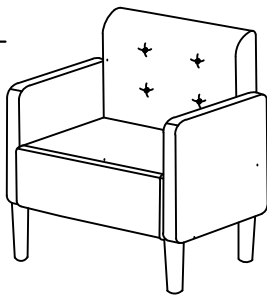



## ASSEMBLY INSTRUCTIONS




## HARDWARE

CODE	DESCRIPTION	QTY
1	 M8 x 30MM JCBB BOLT	4
2	 M5 ALLEN KEY	1

## Parts supplied for assembly


SOFA BACK PANEL

(A) 1 PC

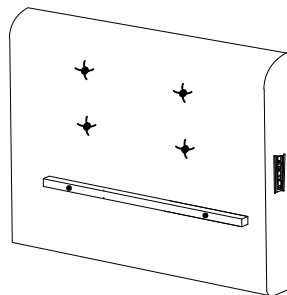


SOFA SIDE PANEL

(B) 2 PCS

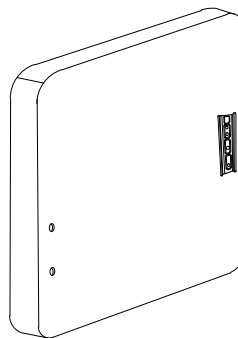


SOFA FRONT PANEL

(C) 1 PC

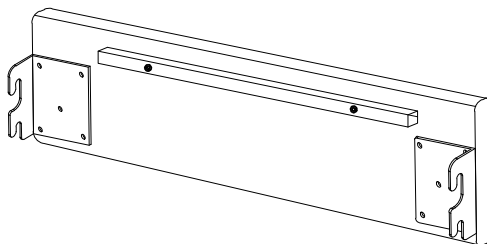

SOFA SEAT

(D) 1 PC

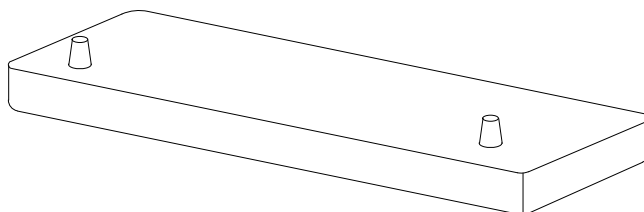


SOFA SEAT LEG


(E) 4 PCS




## STEP 1

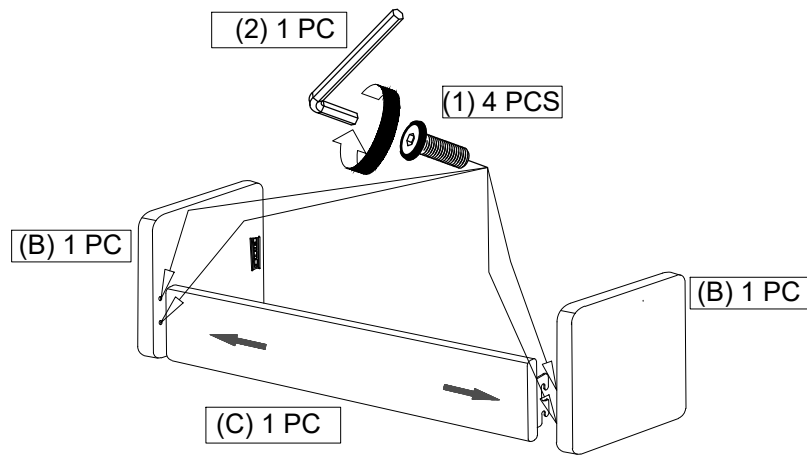



## STEP 2

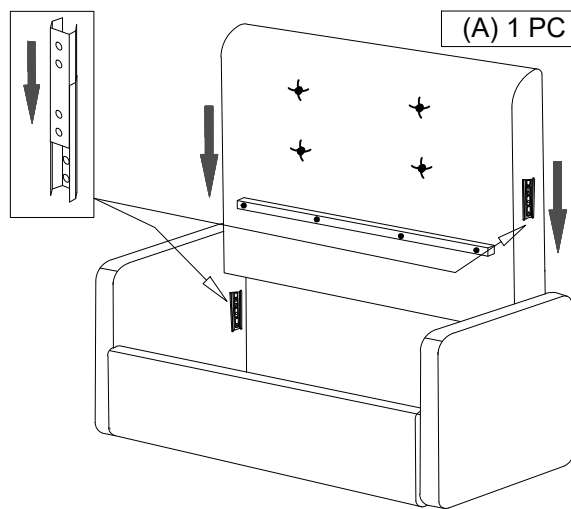

## STEP 3


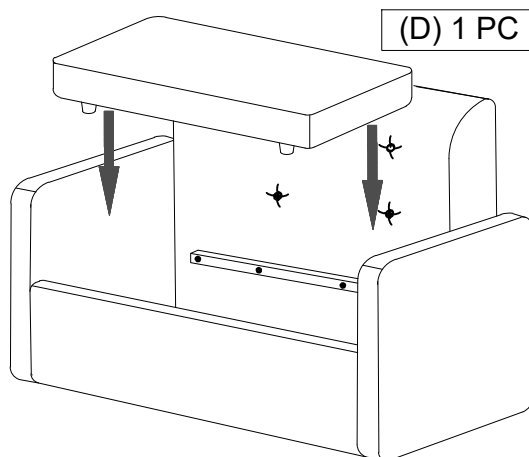


## STEP 4

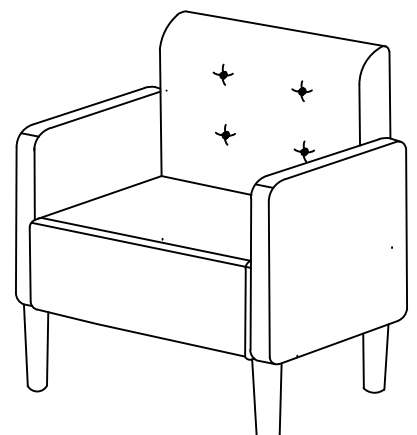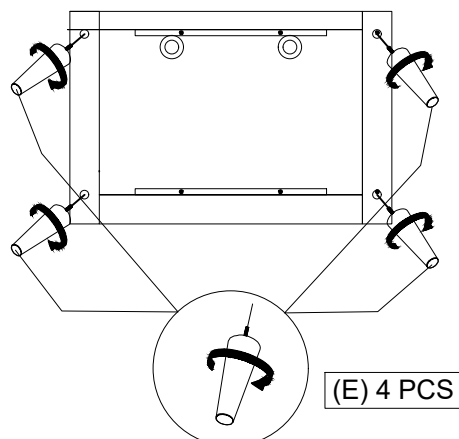

PART LIST


CODE	QTY
A	2
B	2
C	2
D	2
E	2
F	1

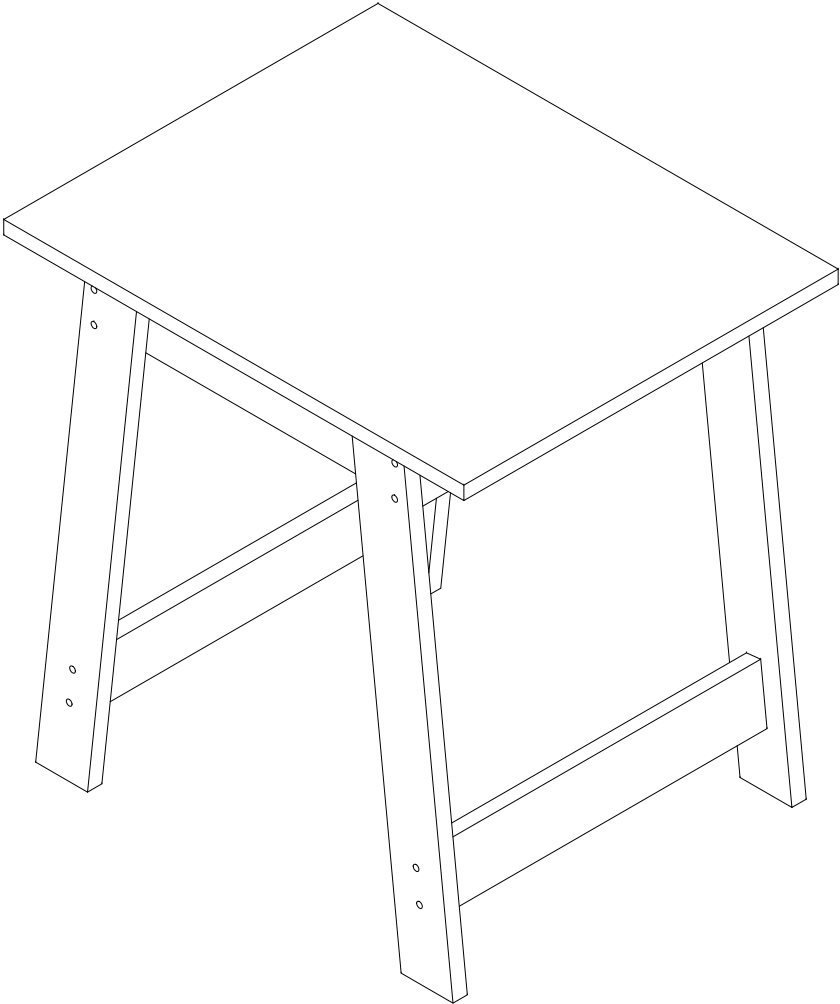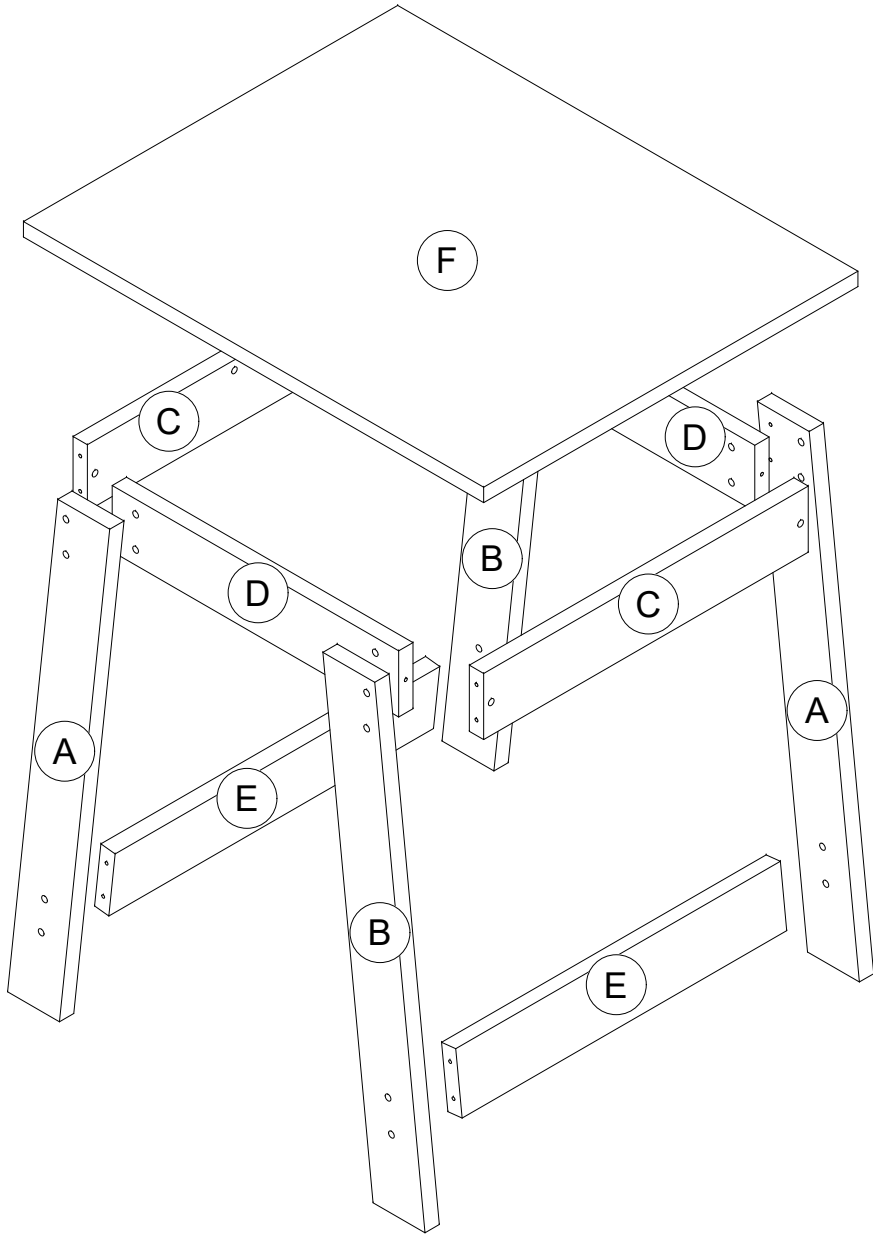


ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURINGS ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKE A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.


# HARDWARE LIST

1		Screw $\phi 4 \times 45 \text{mm}$	20 pcs
2		Screw $\phi 4 \times 28 \text{mm}$	8 pcs
3		PVC Nail With Pin	4 pcs
4		PVC Bracket	4 pcs
5		Tapping Screw $\phi 8 \times 1''$	8 pcs
6		Seal Sticker - 15mm	20 pcs


## STEP 1

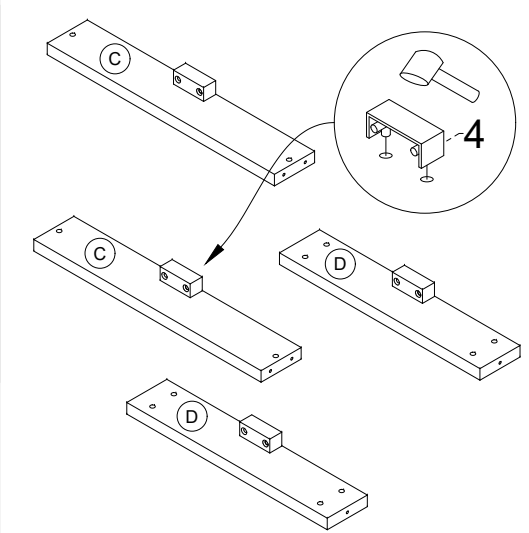


## STEP 2

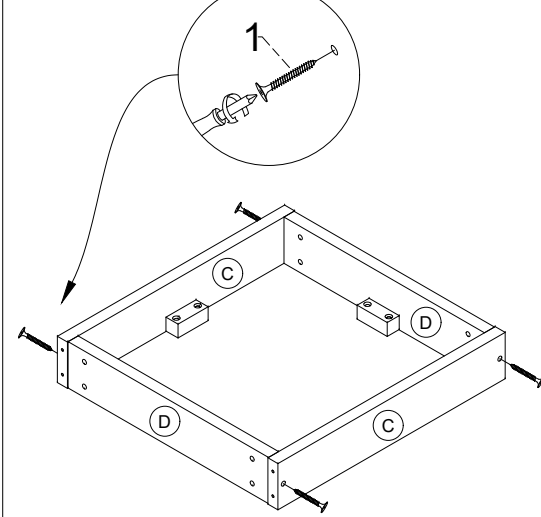


## STEP 3

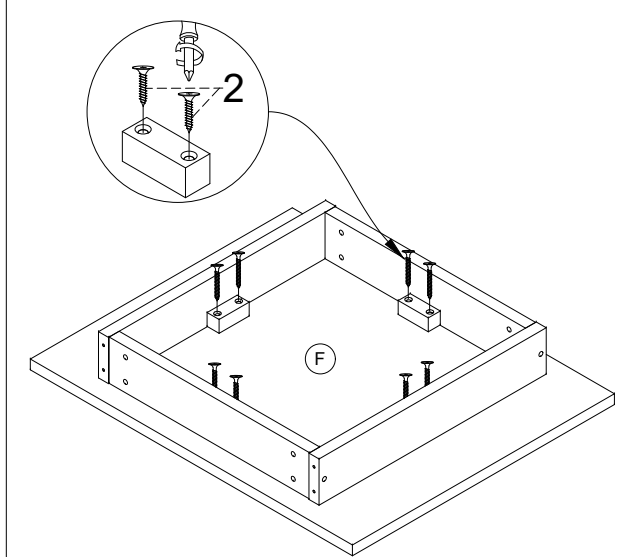

## STEP 4

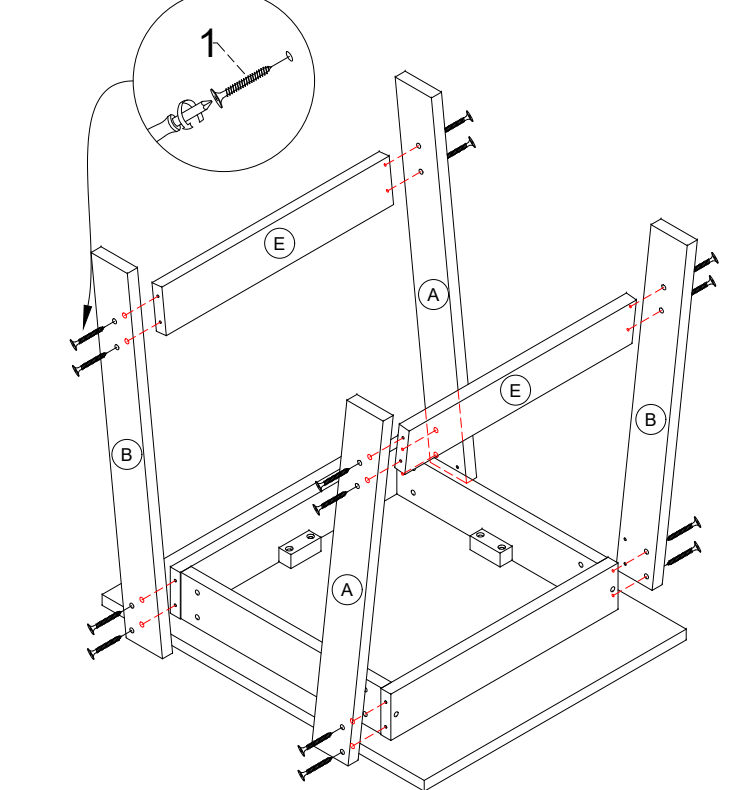

## STEP 5

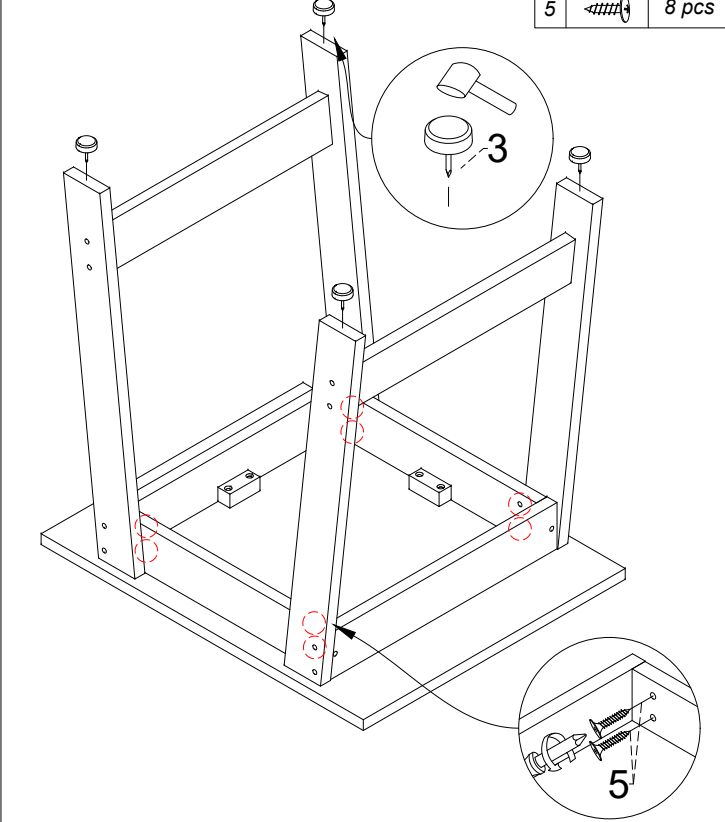

## STEP 6

