


MORDEN FORT

G10 SERIES-chair

ASSEMBLY INSTRUCTIONS

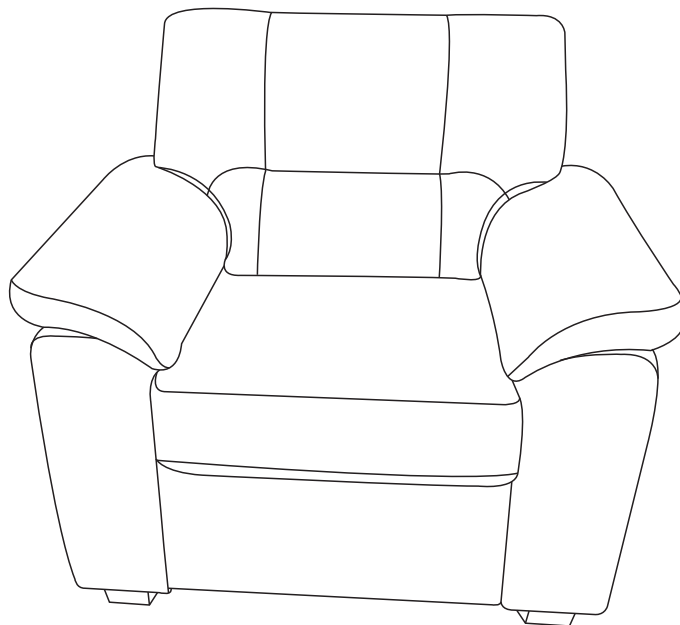


ITEM: G10 SERIES-chair ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







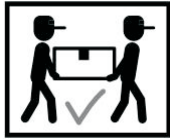

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

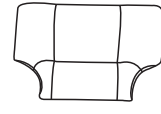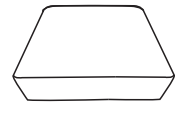

ASSEMBLY TIME 12 MINUTES


Chair is packed in 2 cases

CARTON	PARTS IDENTIFICATION	QUANTITY
CHAIR	A  SEAT BACK BOTTON RAIL	1PC
	B  SEAT FRONT BOTTON RAIL	1PC
	C  BACK CUSHION	1PC
	D  SEAT BASE	1PC
	E  BACK FRAM	1PC
	F  LEGS	4PCS
ARM	G  LEFT ARM	1PC
	H  RIGHT ARM	1PC


ITEM: G10 SERIES-chair

ASSEMBLY INSTRUCTIONS

STEP 1

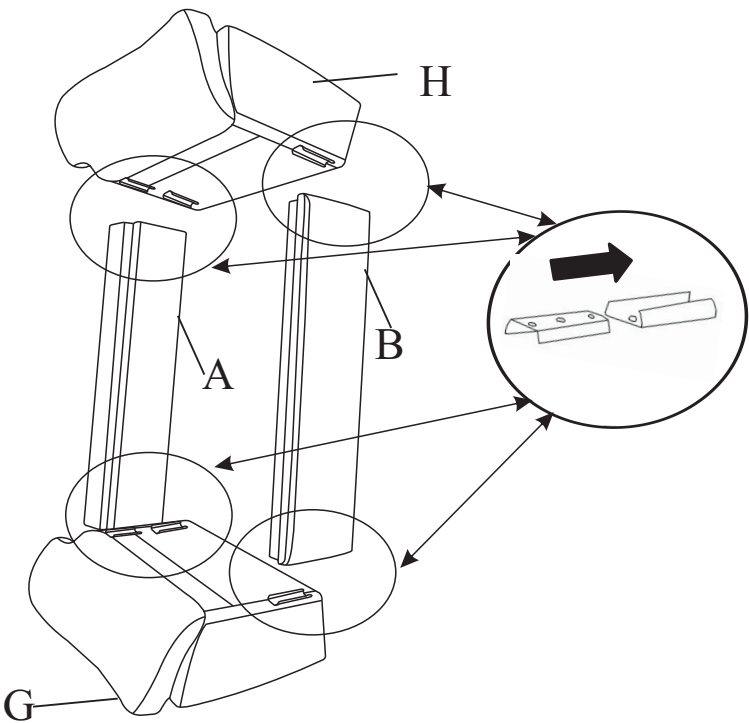


STEP 2

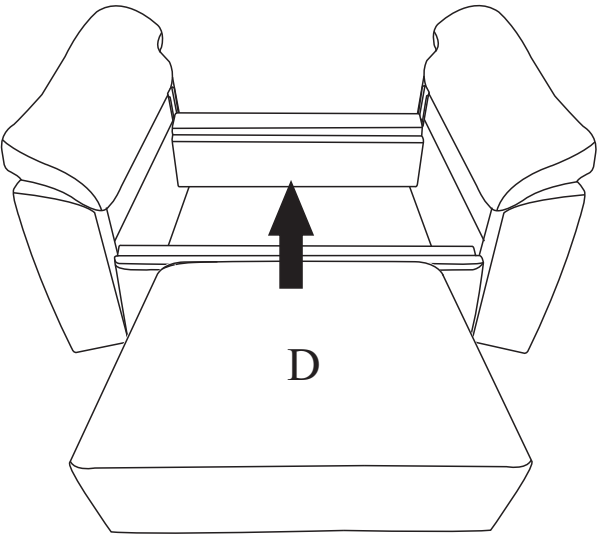


ITEM: G10 SERIES-chair

ASSEMBLY INSTRUCTIONS


STEP 3

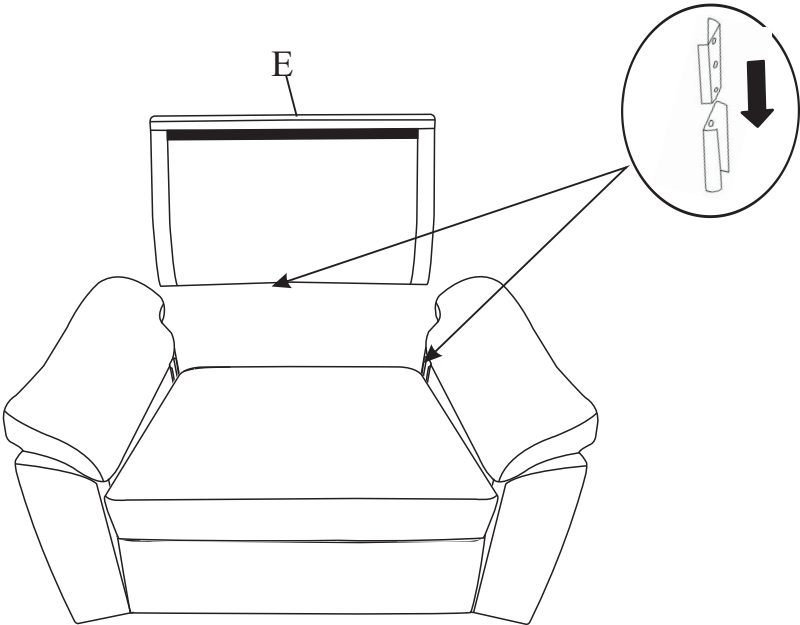

STEP 4

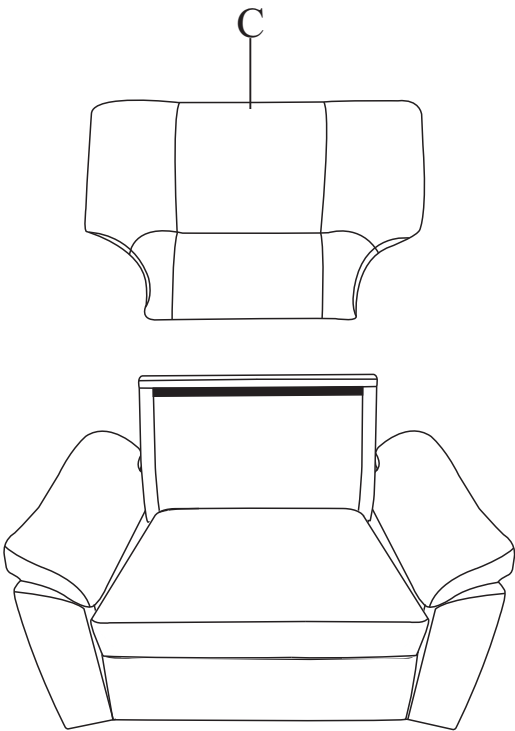

ITEM: G10 SERIES-chair
ASSEMBLY INSTRUCTIONS
STEP 5

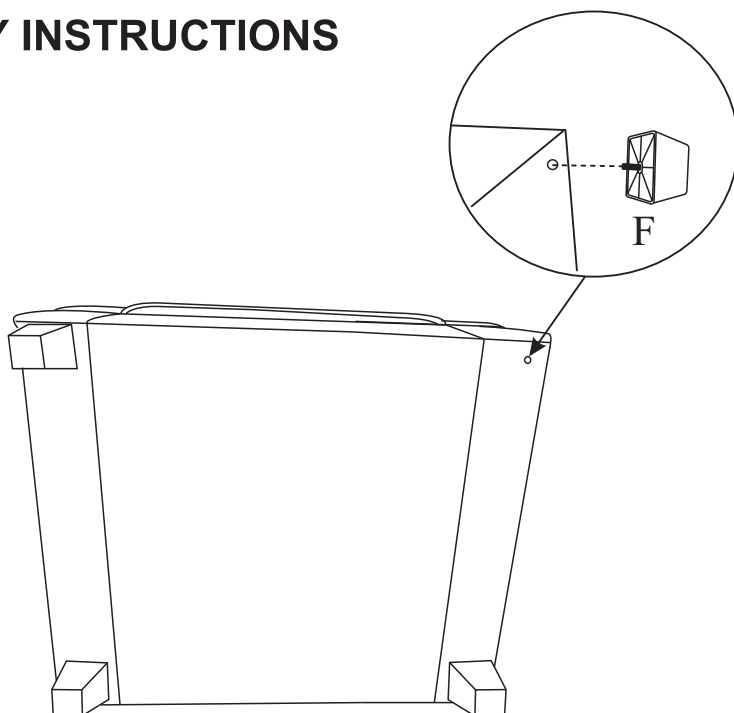

STEP 6

