

## NOTICE

---

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

---

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Wrench & L Key

## CARE AND MAINTENANCE

---


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

# SAFAVIEH







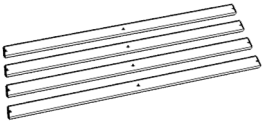






## COUTURE

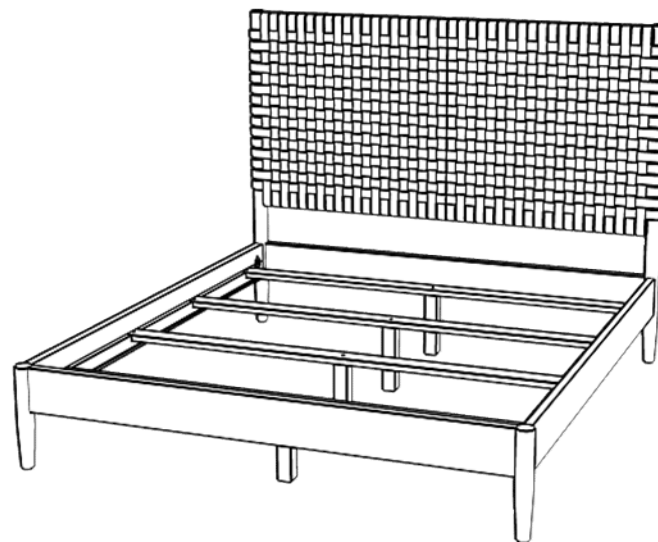Item ID : SFV8200A-K

Product Dimensions: W: 79.2" x D: 83.8 x H: 50.7"

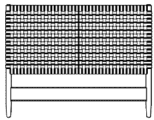

### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Headboard		1X	HW1	Long Bolt 8 x 0,5 x 80 mm		4X
B	Bed End Frame		1X	HW2	Curve Iron Plate 20 x 8 x 45 mm		4X
C	Long Side Frame		2X	HW3	Split Washer Ø 8mm		4X
D	Cross Slat		4X	HW4	Washer Ø 8mm		4X
E	Center Support Leg		4X	HW5	Hex Nuts Ø 8mm		4X
				HW6	Hex Bolt 13 x 0,2 x 42 mm		12X
				HW7	Wrench L Key 12		1X
				HW8	Allen Key 0,4 mm		1X

## PREPARATION

\*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 30 minutes.

\*Tools Required for Assembly (included): Wrench & Allen Key


\*If you are having difficulty, our friendly Customer Care team is always here to help.

Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

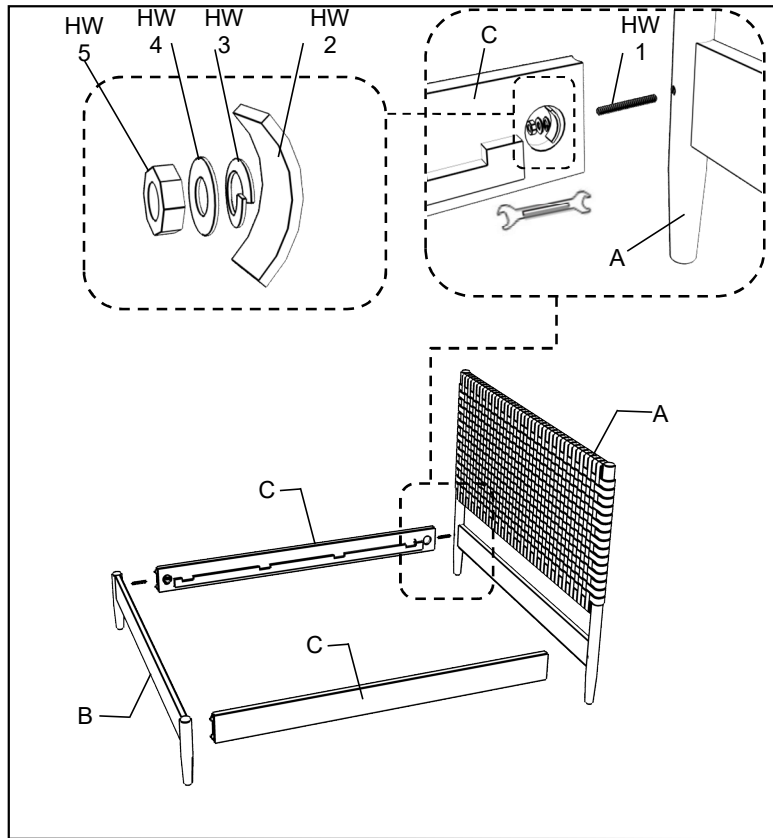

### STEP 1 :

Assemble Headboard (A) and Long side frame (C) with Long bolt (HW1), Curve iron plate (HW2), Split washer (HW3), Washer (HW4), and Hex Nuts (HW5) and fasten it by Wrench (HW7).

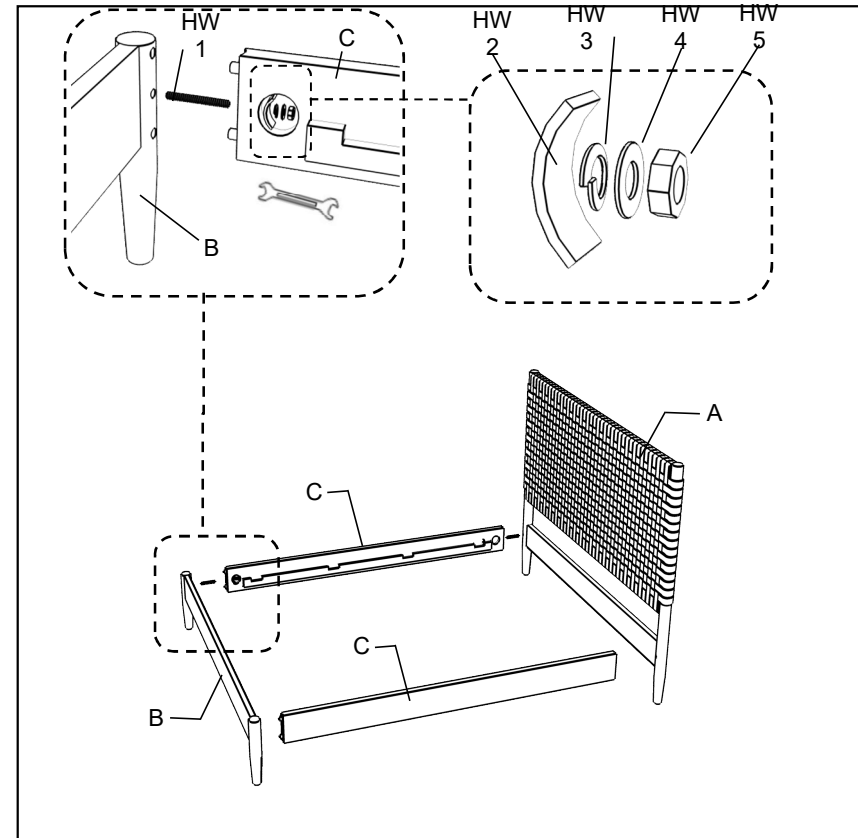

### STEP 2 :

Assemble Bed end frame (B) and Long side frame (C) with Long bolt (HW1), Curve iron plate (HW2), Split washer (HW3), Washer (HW4), and Hex Nuts (HW5) and fasten it by Wrench (HW7).

## PREPARATION

\*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 30 minutes.

\*Tools Required for Assembly (included): Wrench & Allen Key


\*If you are having difficulty, our friendly Customer Care team is always here to help.

Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

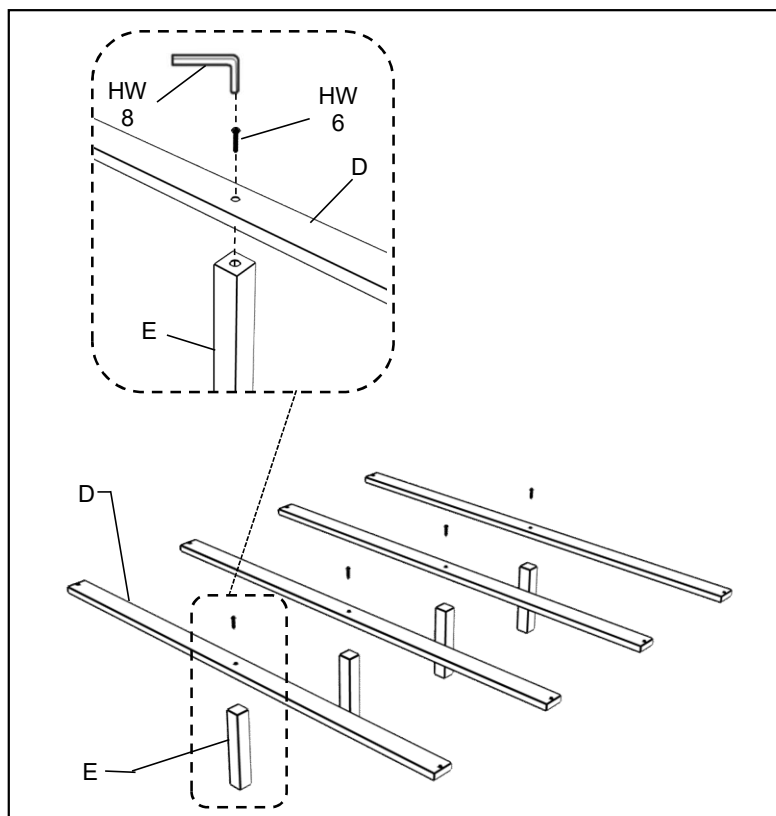

### STEP 3 :

Assemble Cross slat (D) and Center support leg (E) with Hex bolt (HW6), and fasten it by Allen key (HW8).

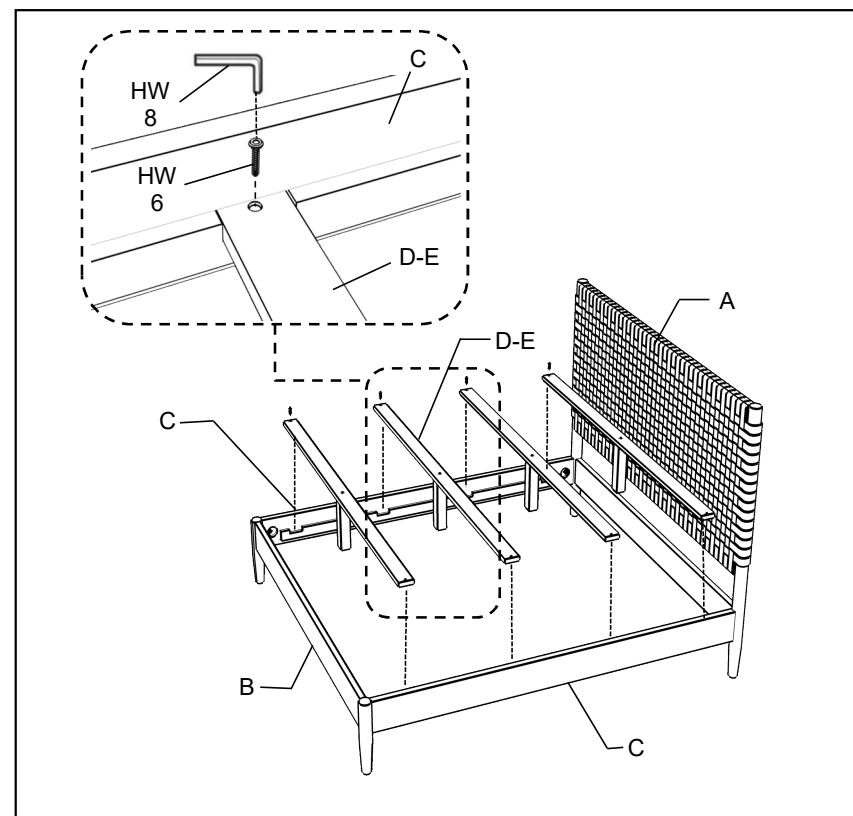

### STEP 4 :

Assemble Cross slat (D) - Center support leg (E) and Long side frame (C) with Hex bolt (HW6), and fasten it by Allen key (HW8).