

Square Bathroom Mirror(Vertically/Horizontally)



Tape Measure



Pencil



Drill



Hammer



Screwdriver



Screw Kit (Set)




1.Measure the distance of the bathroom mirror hook.




2.Lift the bathroom mirror up to confirm the best mounting height




3.Mark the wall with a pencil

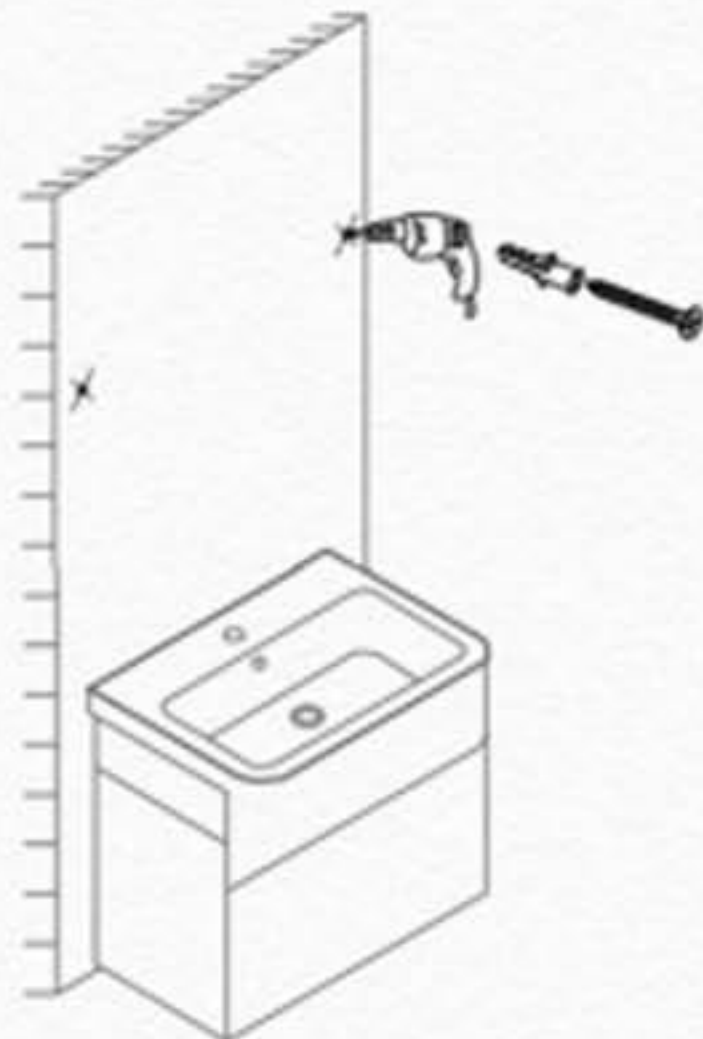


4.Drill the marks with an electric drill. Drive a screw and an expansion plug into the hole.

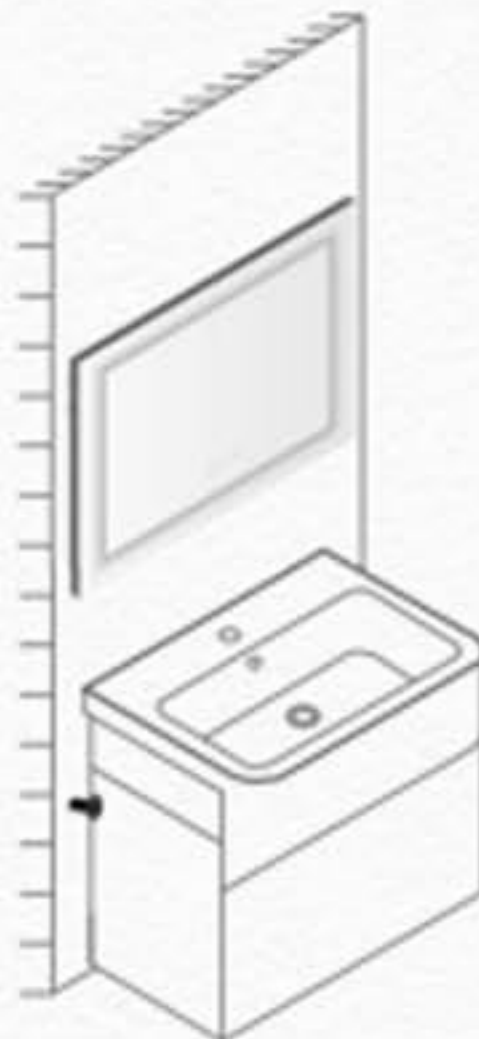

5.Hang up the bathroom mirror.

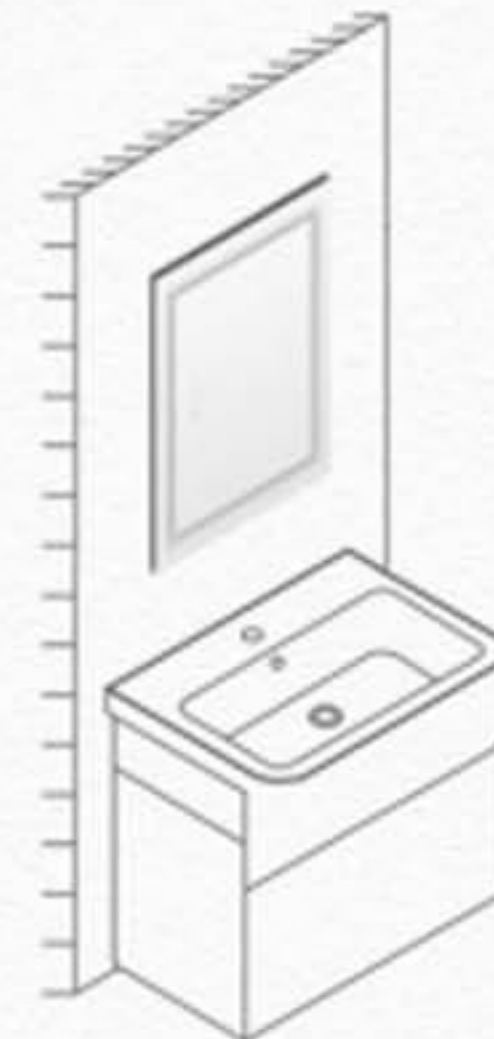

You can hang it vertically in the same way

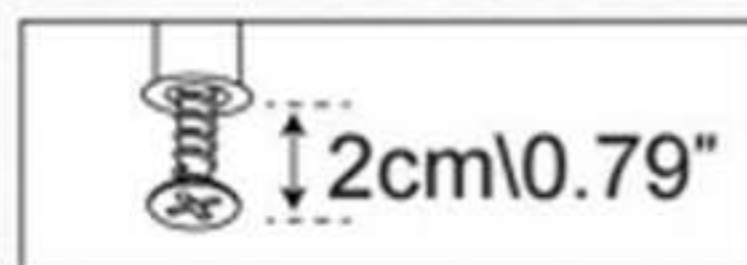

Screw reserved in 2cm to hang the mirror up